


**RFID System**  
**V680S Series**  
**Reader/Writer**  
**EtherNet/IP™**

**User's Manual**

**V680S-HMD63-EIP**  
**V680S-HMD64-EIP**  
**V680S-HMD66-EIP**

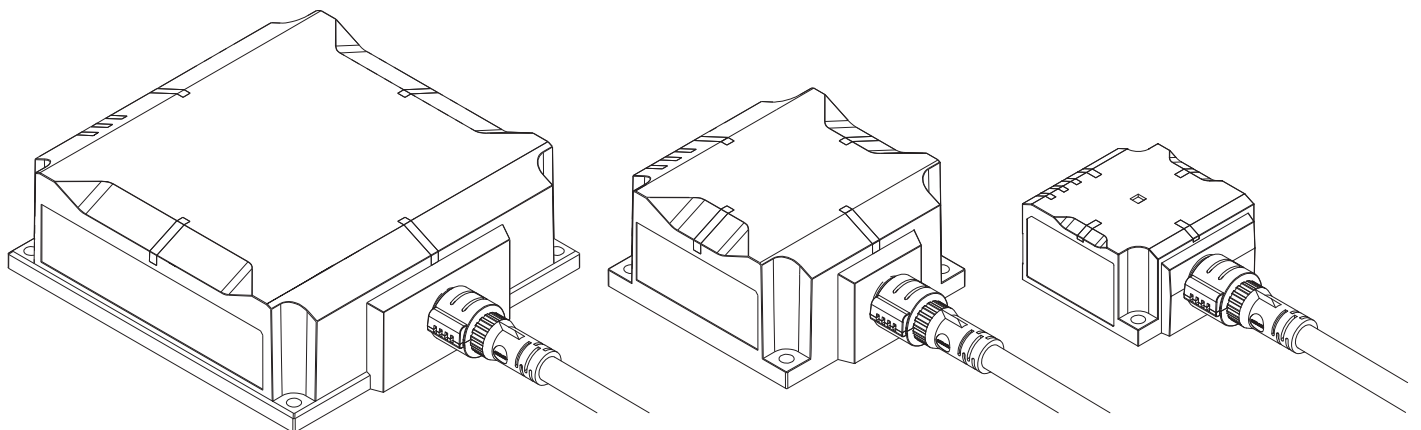

**Trademarks**

- Microsoft, Windows, Edge, Internet Explorer are either registered trademarks or trademarks of Microsoft Corporation in the USA and other countries.
- ODVA and EtherNet/IP are trademarks of the ODVA.
- Java and other trademarks that contain “Java” are the registered trademarks of Oracle Corporation or its related companies.
- Google Chrome is trademarks or registered trademarks of Google LLC.

Other system names and product names used in this manual are the trademarks or registered trademarks of the respective companies.

**Copyrights**

Microsoft product screen shots used with permission from Microsoft.

# Introduction

---

Thank you for purchasing a V680S-series RFID System. This manual describes the functions, performance, and application methods needed for optimum use of the V680S-series RFID System. Allow the V680S-series RFID System to be installed and operated only by qualified specialists with a sufficient knowledge of electrical systems.

Read and understand this manual before attempting to use the RFID System and use the RFID System correctly.

Keep this manual in a safe and accessible location so that it is available for reference when required.

## Intended Audience

This manual is intended for the following personnel, who must also have knowledge of electrical systems (an electrical engineer or the equivalent).

- Personnel in charge of introducing barcoding systems.
- Personnel in charge of designing barcoding systems.
- Personnel in charge of installing and maintaining barcoding systems.
- Personnel in charge of managing barcoding systems and facilities.

## Applicable Products


This manual covers the following products.

- V680S-HMD63-EIP Reader/Writer
- V680S-HMD64-EIP Reader/Writer
- V680S-HMD66-EIP Reader/Writer

# Manual Structure

## Page Structure

The following page structure is used in this manual.

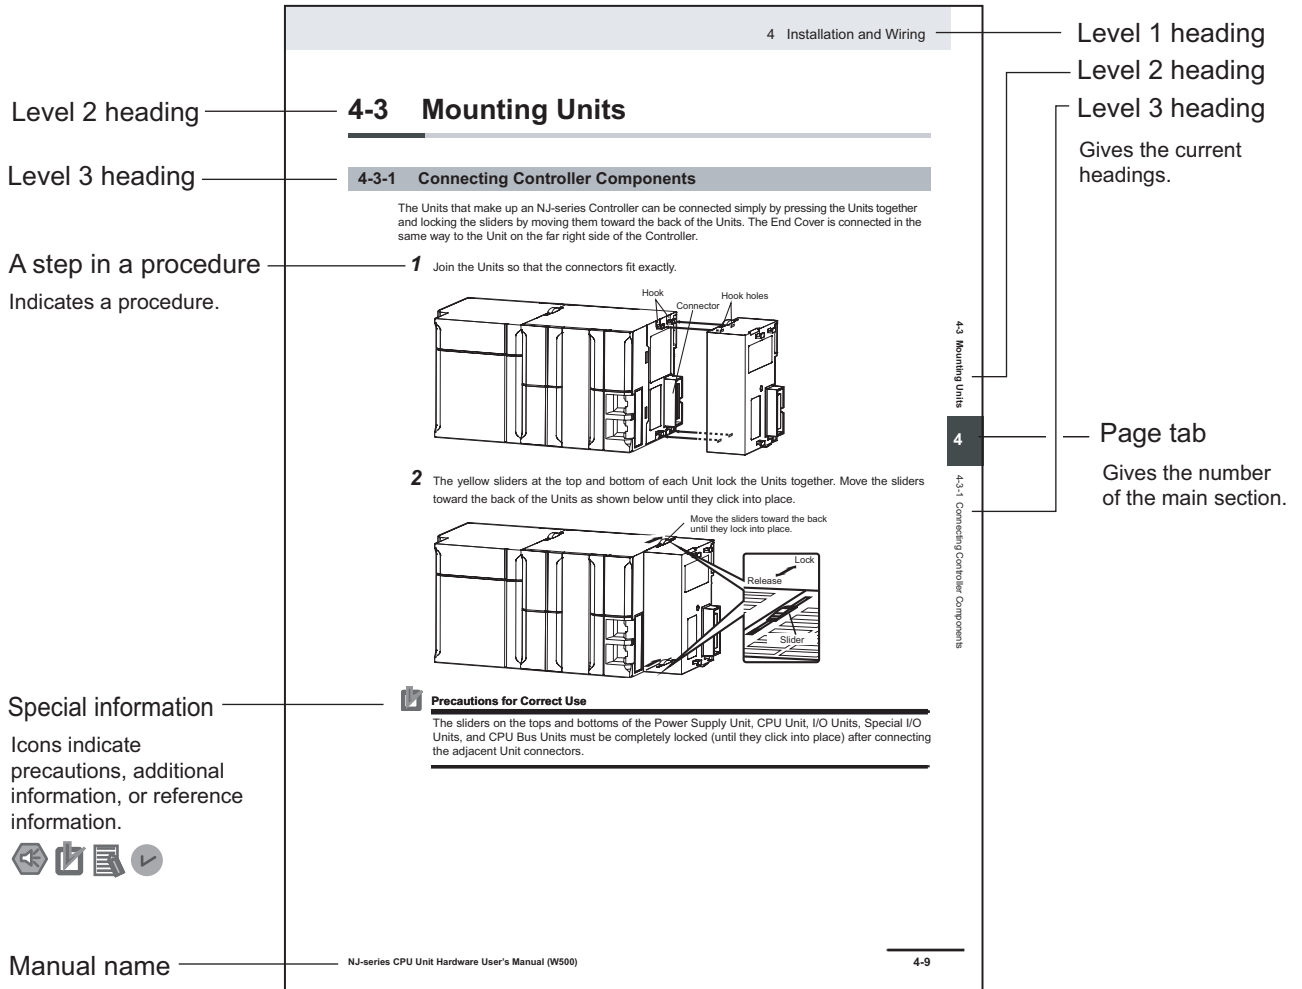

**Note :** This page is a sample for the purpose of describing the page structure. It differs in its actual content.

## Icons

The icons used in this manual have the following meanings.



---

**Precautions for Safe Use**

---

Precautions on what to do and what to avoid doing to ensure the safe use of the product.



---

**Precautions for Correct Use**

---

Precautions on what to do and what to avoid doing to ensure proper operation and performance.



---

**Additional Information**

---

Additional information to read as required.  
This information is provided to increase understanding or make operation easier.



---

**Version Information**

---

Information on differences in specifications and functionality between versions is given.



# Sections in this Manual

<b>1</b>	<b>Product Overview</b>	<b>10</b>	<b>Maintenance and Inspection</b>	<b>1</b>	<b>10</b>
<b>2</b>	<b>System Configuration</b>	<b>A</b>	<b>Appendices</b>	<b>2</b>	<b>A</b>
<b>3</b>	<b>Names and Functions of Components</b>	<b>I</b>	<b>Index</b>	<b>3</b>	<b>I</b>
<b>4</b>	<b>Installation and Connections</b>			<b>4</b>	
<b>5</b>	<b>Preparations for Communications</b>			<b>5</b>	
<b>6</b>	<b>Functions</b>			<b>6</b>	
<b>7</b>	<b>Host Communications Specifications</b>			<b>7</b>	
<b>8</b>	<b>Web Browser Interface</b>			<b>8</b>	
<b>9</b>	<b>Troubleshooting</b>			<b>9</b>	

# CONTENTS

---

<b>Introduction .....</b>	<b>1</b>
Intended Audience .....	1
Applicable Products .....	1
<b>Manual Structure.....</b>	<b>2</b>
Page Structure .....	2
Icons .....	3
<b>Sections in this Manual .....</b>	<b>5</b>
<b>Terms and Conditions Agreement.....</b>	<b>12</b>
Warranty, Limitations of Liability .....	12
Application Considerations .....	13
Disclaimers .....	13
Statement of security responsibilities for assumed use cases and against threats.....	14
<b>Safety Precautions.....</b>	<b>15</b>
Definition of Precautionary Information.....	15
Alert Symbols.....	15
WARNING.....	15
<b>Precautions for Safe Use .....</b>	<b>17</b>
Installation and Storage Environment.....	17
Installation and Removal .....	17
Application Methods .....	17
Cleaning.....	18
Disposal .....	18
<b>Precautions for Correct Use .....</b>	<b>19</b>
Installation and Storage Environment.....	19
Installation.....	19
Application Methods .....	19
Maintenance .....	19
<b>Revision History.....</b>	<b>20</b>

## Section 1 Product Overview

---

<b>1-1 Features .....</b>	<b>1-2</b>
1-1-1 Integrated Structure .....	1-2
1-1-2 Simple Installation .....	1-3
1-1-3 Stable Operation .....	1-3
1-1-4 Simple Connection with EtherNet/IP .....	1-4
1-1-5 Easy Operation .....	1-5
1-1-6 Security Compliance .....	1-5
<b>1-2 Application Flowchart .....</b>	<b>1-6</b>
<b>1-3 Product Specifications .....</b>	<b>1-12</b>
1-3-1 Reader/Writer .....	1-12
1-3-2 Connector Cover (Slim Type).....	1-16
1-3-3 RF Tag.....	1-17
<b>1-4 Data Characteristics .....</b>	<b>1-31</b>
1-4-1 Communications Range Specifications.....	1-31

## Section 2 System Configuration

<b>2-1 System Configuration.....</b>	<b>2-2</b>
2-1-1 One Reader/Writer is connected to the Host device (e.g., PLC).....	2-2
2-1-2 The plural Reader/Writer's are connected to the Host device (e.g., PLC) .....	2-3
2-1-3 The computer is connected to monitor the results of communications diagnostics .....	2-4
2-1-4 About the Ethernet communication abnormality .....	2-5

## Section 3 Names and Functions of Components

<b>3-1 Reader/Writer .....</b>	<b>3-2</b>
3-1-1 Component Names .....	3-2
3-1-2 Operation Indicators .....	3-4
3-1-3 Connector.....	3-5
<b>3-2 RF Tag .....</b>	<b>3-7</b>
3-2-1 V680-D1KP54T .....	3-7
3-2-2 V680-D1KP66T/-D1KP66MT .....	3-7
3-2-3 V680-D1KP66T-SP .....	3-7
3-2-4 V680-D1KP58HTN.....	3-8
3-2-5 V680S-D2KF67/-D2KF67M/-D8KF67/-D8KF67M .....	3-8
3-2-6 V680S-D2KF68/-D2KF68M/-D8KF68/-D8KF68M .....	3-8

## Section 4 Installation and Connections

<b>4-1 Installation .....</b>	<b>4-2</b>
4-1-1 Reader/Writer .....	4-2
4-1-2 Connector Cover .....	4-5
4-1-3 RF Tag.....	4-7
<b>4-2 Connections and Wiring.....</b>	<b>4-14</b>
4-2-1 Connecting and Removing the Reader/Writer Power Cable and Ethernet Cable .....	4-14

## Section 5 Preparations for Communications

<b>5-1 Starting the Reader/Writer .....</b>	<b>5-2</b>
5-1-1 Reader/Writer Starting Procedure .....	5-2
<b>5-2 Setting Communications Conditions.....</b>	<b>5-3</b>
5-2-1 Preparations for Work .....	5-3
5-2-2 Setting the IP Address of the Reader/Writer from a Web Browser .....	5-5
5-2-3 Setting the IP Address of the Reader/Writer on the Network Configurator .....	5-9
<b>5-3 Setting Tag Data Links .....</b>	<b>5-12</b>

## Section 6 Functions

<b>6-1 Security Guide.....</b>	<b>6-3</b>
6-1-1 Necessity of Security Response .....	6-3
6-1-2 Purposes of Security Response .....	6-3
6-1-3 V680S-series Compliance.....	6-4
<b>6-2 Security Functions.....</b>	<b>6-6</b>
<b>6-3 Password Authentication Function.....</b>	<b>6-7</b>
6-3-1 Overview .....	6-7
6-3-2 Authentication Method .....	6-8
6-3-3 Web Password Setting Method .....	6-9
6-3-4 Password Specifications .....	6-11

6-3-5	Password Authentication Operation Range .....	6-12
6-3-6	Lock Function .....	6-12
6-3-7	Password Handling Methods .....	6-13
<b>6-4</b>	<b>Operation Mode.....</b>	<b>6-14</b>
6-4-1	Run Mode .....	6-14
6-4-2	Safe Mode .....	6-14
<b>6-5</b>	<b>RF Tag Communications .....</b>	<b>6-15</b>
6-5-1	Communications Options .....	6-15
6-5-2	Normal RF Tag Communications .....	6-20
6-5-3	Tag Memory Management .....	6-20
<b>6-6</b>	<b>Reader/Writer Controls.....</b>	<b>6-22</b>
6-6-1	RESET .....	6-22
<b>6-7</b>	<b>Maintenance .....</b>	<b>6-23</b>
6-7-1	Reading Device Information .....	6-23
6-7-2	Noise Measurement .....	6-23
<b>6-8</b>	<b>Setting Functions.....</b>	<b>6-25</b>
6-8-1	Initialization .....	6-25
6-8-2	Setting Communications Conditions .....	6-27
6-8-3	Network Settings .....	6-29
<b>6-9</b>	<b>Error Logs.....</b>	<b>6-37</b>
6-9-1	Command Error Log.....	6-37
6-9-2	System Error Log .....	6-38
6-9-3	Security Log .....	6-39
<b>6-10</b>	<b>Web Server .....</b>	<b>6-47</b>
6-10-1	Status Monitoring, Setting, and Confirmation.....	6-47
6-10-2	Importing and Exporting Settings .....	6-47
6-10-3	Convenient Functions .....	6-55
<b>6-11</b>	<b>RFID System Maintenance.....</b>	<b>6-56</b>
6-11-1	Communication Diagnostic .....	6-56
6-11-2	RF Analyzer .....	6-59
<b>6-12</b>	<b>Multi-Reader/Writer Operation.....</b>	<b>6-61</b>
6-12-1	Field Extension Mode.....	6-63
6-12-2	High-speed Traveling Mode .....	6-64
<b>6-13</b>	<b>Using Communication Diagnostic and the RF Analyzer.....</b>	<b>6-66</b>
6-13-1	Using the Web Server .....	6-66
<b>6-14</b>	<b>Using Multi-Reader/Writer Operation.....</b>	<b>6-73</b>
6-14-1	Using Field Extension Mode .....	6-73
6-14-2	Using High-speed Traveling Mode .....	6-85

## Section 7 Host Communications Specifications

<b>7-1</b>	<b>EtherNet/IP Communications Protocol.....</b>	<b>7-2</b>
7-1-1	Data Exchange with Ethernet/IP .....	7-2
7-1-2	EtherNet/IP Communications with the Reader/Writer .....	7-3
7-1-3	Tag Data Link Setting Methods .....	7-4
7-1-4	Memory Assignments.....	7-7
7-1-5	V680S Commands .....	7-9
<b>7-2</b>	<b>V680S Command Details.....</b>	<b>7-13</b>
7-2-1	READ ID.....	7-13
7-2-2	READ DATA .....	7-14
7-2-3	WRITE DATA.....	7-15
7-2-4	LOCK .....	7-16
7-2-5	DATA FILL .....	7-17
7-2-6	RF TAG OVERWRITE COUNT CONTROL .....	7-18
7-2-7	RESTORE DATA.....	7-19
7-2-8	COPY DATA .....	7-20

7-2-9	INITIALIZE .....	7-22
7-2-10	SET RF TAG COMMUNICATIONS .....	7-23
7-2-11	GET RF TAG COMMUNICATIONS SETTINGS .....	7-24
7-2-12	GET MODEL INFORMATION .....	7-25
7-2-13	GET FIRMWARE VERSION .....	7-26
7-2-14	GET OPERATING TIME .....	7-27
7-2-15	GET COMMAND ERROR LOG .....	7-28
7-2-16	GET RESTORE INFORMATION .....	7-30
7-2-17	MEASURE NOISE .....	7-32
7-2-18	RESET .....	7-33
7-2-19	SET MULTI-READER/WRITER OPERATION .....	7-34
7-2-20	GET MULTI-READER/WRITER SETTINGS .....	7-36
7-2-21	GET MULTI-READER/WRITER STATUS .....	7-38
<b>7-3</b>	<b>Time Charts .....</b>	<b>7-40</b>
7-3-1	Executing RF Tag Communications Commands .....	7-40
7-3-2	Executing Other Commands .....	7-43

## Section 8 Web Browser Interface

<b>8-1</b>	<b>Web Browser Overview .....</b>	<b>8-2</b>
8-1-1	Overview .....	8-2
8-1-2	System Environment .....	8-2
8-1-3	Procedure to Display the Browser Window .....	8-3
<b>8-2</b>	<b>Web Browser Functions .....</b>	<b>8-4</b>
8-2-1	Windows List .....	8-4
8-2-2	Window Transitions .....	8-6
8-2-3	Window Configuration .....	8-7
<b>8-3</b>	<b>Operation Interface .....</b>	<b>8-8</b>
8-3-1	Password Window .....	8-8
8-3-2	Status Window .....	8-10
8-3-3	Network Settings Window .....	8-11
8-3-4	RF Tag Communications Settings Window .....	8-17
8-3-5	Multi Reader/Writer Settings Window .....	8-18
8-3-6	RF Tag Communications Window .....	8-19
8-3-7	Log View Window .....	8-21
8-3-8	Noise Monitor .....	8-26
8-3-9	RF Analyzer Window .....	8-27
8-3-10	Reboot .....	8-31
8-3-11	Configuration Window .....	8-32
<b>8-4</b>	<b>Root Certificate Installation Procedure .....</b>	<b>8-35</b>

## Section 9 Troubleshooting

<b>9-1</b>	<b>Error Descriptions .....</b>	<b>9-2</b>
9-1-1	Fatal Errors .....	9-2
9-1-2	Nonfatal Errors .....	9-3
<b>9-2</b>	<b>Errors and Indicator Status .....</b>	<b>9-4</b>
9-2-1	Fatal Errors .....	9-4
9-2-2	Nonfatal Errors .....	9-5
9-2-3	Tag Data Links Error .....	9-5
<b>9-3</b>	<b>Errors and Countermeasures .....</b>	<b>9-6</b>
9-3-1	Reader/Writer Operation Errors .....	9-6
9-3-2	IP Address Duplication Error .....	9-6
9-3-3	System Errors .....	9-7
9-3-4	V680S Command Errors .....	9-8
9-3-5	RF Tag Communications Errors .....	9-9
<b>9-4</b>	<b>Troubleshooting Flowcharts .....</b>	<b>9-10</b>

9-4-1	Main Check Flowchart.....	9-10
9-4-2	System Connections Check Flowchart .....	9-11
9-4-3	Operating Conditions and External Environment Check Flowchart .....	9-12
9-4-4	Host Device Communications Check Flowchart .....	9-13
9-4-5	RF Tag Communications Check Flow .....	9-14
<b>9-5</b>	<b>About The Ethernet Communication Abnormality .....</b>	<b>9-15</b>
<b>9-6</b>	<b>How to deal with browser interface problems .....</b>	<b>9-17</b>
9-6-1	When the Web browser screen is not displayed or the screen layout is strange.....	9-17
9-6-2	Google Chrome.....	9-17
9-6-3	Internet explorer11 .....	9-19
9-6-4	Microsoft Edge .....	9-20
<b>9-7</b>	<b>Safe Mode.....</b>	<b>9-22</b>
9-7-1	Starting in Safe Mode.....	9-22

## Section 10 Maintenance and Inspection

<b>10-1</b>	<b>Maintenance and Inspection.....</b>	<b>10-2</b>
10-1-1	Inspection Items .....	10-2

## Appendices

<b>A-1</b>	<b>Data Characteristics .....</b>	<b>A-3</b>
A-1-1	RF Tag Communications Range (for Reference Only).....	A-3
A-1-2	RF Tag Communications Time (for Reference Only) .....	A-11
<b>A-2</b>	<b>Reader/Writer Installation Precautions.....</b>	<b>A-16</b>
A-2-1	V680S-HMD63-EIP .....	A-16
A-2-2	V680S-HMD64-EIP .....	A-18
A-2-3	V680S-HMD66-EIP .....	A-20
<b>A-3</b>	<b>RF Tag Installation Precautions .....</b>	<b>A-22</b>
A-3-1	V680-D1KP54T .....	A-22
A-3-2	V680-D1KP66T .....	A-25
A-3-3	V680-D1KP66MT .....	A-28
A-3-4	V680-D1KP66T-SP .....	A-31
A-3-5	V680-D1KP58HTN.....	A-35
A-3-6	V680S-D2KF67 .....	A-38
A-3-7	V680S-D2KF67M .....	A-41
A-3-8	V680S-D8KF67 .....	A-44
A-3-9	V680S-D8KF67M .....	A-47
A-3-10	V680S-D2KF68 .....	A-50
A-3-11	V680S-D2KF68M .....	A-53
A-3-12	V680S-D8KF68 .....	A-56
A-3-13	V680S-D8KF68M .....	A-59
<b>A-4</b>	<b>RF Tag Memory Capacities and Memory Types.....</b>	<b>A-62</b>
<b>A-5</b>	<b>RF Tag Memory Map.....</b>	<b>A-63</b>
A-5-1	V680-D1KP□□ RF Tags .....	A-63
A-5-2	V680S-D2KF6□ RF Tags .....	A-64
A-5-3	V680S-D8KF6□ RF Tags .....	A-65
<b>A-6</b>	<b>Chemical Resistance of the Reader/Writers and RF Tags .....</b>	<b>A-66</b>
A-6-1	Chemical Resistance of the Reader/Writers .....	A-66
A-6-2	Chemical Resistance of RF Tags .....	A-67
<b>A-7</b>	<b>Degree of Protection.....</b>	<b>A-70</b>
A-7-1	IEC (International Electrotechnical Commission) IEC 60529.....	A-70
A-7-2	Oil Resistance (OMRON in-house standard) .....	A-72
<b>A-8</b>	<b>Differences in Address and Size Specifications between V680 and V680S Reader/Writers .....</b>	<b>A-73</b>

<b>A-9 For Customers Using Reader/Writer Earlier Than Firmware Ver.5.00.....</b>	<b>A-74</b>
A-9-1 Web Browser Operation Window .....	A-74
A-9-2 Password Entry View .....	A-76
A-9-3 Configuration.....	A-77
A-9-4 Configuration File .....	A-82
<b>A-10 For Customers Using Reader/Writer Earlier Than Firmware Ver.4.00.....</b>	<b>A-83</b>
A-10-1 Operating environment when using a web browser. ....	A-83
A-10-2 Cannot Display the Web Browser Operation Window.....	A-84
<b>A-11 Use of Open Source Software (OSS) .....</b>	<b>A-93</b>
A-11-1 Copyright Notices.....	A-93
<b>A-12 Firmware Version Update History .....</b>	<b>A-98</b>

## Index

---

# Terms and Conditions Agreement

## Warranty, Limitations of Liability

### Warranties

#### ● Exclusive Warranty

Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

#### ● Limitations

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right.

#### ● Buyer Remedy

Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See <https://www.omron.com/global/> or contact your Omron representative for published information.

### Limitation on Liability; Etc

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY

WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

## Application Considerations

### Suitability of Use

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

### Programmable Products

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

## Disclaimers

### Performance Data

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

### Change in Specifications

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may

be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

### **Errors and Omissions**

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

### **Statement of security responsibilities for assumed use cases and against threats**

OMRON SHALL NOT BE RESPONSIBLE AND/OR LIABLE FOR ANY LOSS, DAMAGE, OR EXPENSES DIRECTLY OR INDIRECTLY RESULTING FROM THE INFECTION OF OMRON PRODUCTS, ANY SOFTWARE INSTALLED THEREON OR ANY COMPUTER EQUIPMENT, COMPUTER PROGRAMS, NETWORKS, DATABASES OR OTHER PROPRIETARY MATERIAL CONNECTED THERETO BY DISTRIBUTED DENIAL OF SERVICE ATTACK, COMPUTER VIRUSES, OTHER TECHNOLOGICALLY HARMFUL MATERIAL AND/OR UNAUTHORIZED ACCESS.

It shall be the users sole responsibility to determine and use adequate measures and checkpoints to satisfy the users particular requirements for (i) antivirus protection, (ii) data input and output, (iii) maintaining a means for reconstruction of lost data, (iv) preventing Omron Products and/or software installed thereon from being infected with computer viruses and (v) protecting Omron Products from unauthorized access.

# Safety Precautions

## Definition of Precautionary Information

The following notation and alert symbols are used in this User's Manual to provide precautions required to ensure safe usage of a V680S-series Reader/Writer.

The safety precautions that are provided are extremely important to safety. Always read and heed the information provided in all safety precautions.

The following signal words are used in this manual.



Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally there may be significant property damage.

## Alert Symbols



The ●filled circle symbol indicates operations that you must do. The specific operation is shown in the ●circle and explained in text. This example shows a general precaution for something that you must do.

## WARNING



## Security Measures

### Anti-virus protection

Install the latest commercial-quality antivirus software on the computer connected to the control system and maintain to keep the software up-to-date.



### Security measures to prevent unauthorized access

Take the following measures to prevent unauthorized access to our products.

- Install physical controls so that only authorized personnel can access control systems and equipment.
- Reduce connections to control systems and equipment via networks to prevent access from untrusted devices.
- Install firewalls to shut down unused communications ports and limit communications hosts and isolate control systems and equipment from the IT network.
- Use a virtual private network (VPN) for remote access to control systems and equipment.
- Adopt multifactor authentication to devices with remote access to control systems and equipment.
- Set strong passwords and change them frequently.
- Scan virus to ensure safety of USB drives or other external storages before connecting them to control systems and equipment.



---

**Data input and output protection**

Validate backups and ranges to cope with unintentional modification of input/output data to control systems and equipment.

- Checking the scope of data
- Checking validity of backups and preparing data for restore in case of falsification and abnormalities
- Safety design, such as emergency shutdown and fail-soft operation in case of data tampering and abnormalities



---

**Data recovery**

Backup data and keep the data up-to-date periodically to prepare for data loss.



---

When using an intranet environment through a global address, connecting to a SCADA or an unauthorized terminal such as an HMI or to an unauthorized server may result in network security issues such as spoofing and tampering. You must take sufficient measures such as restricting access to the terminal, using a terminal equipped with a secure function, and locking the installation area by yourself.



---

When constructing an intranet, communication failure may occur due to cable disconnection or the influence of unauthorized network equipment. Take adequate measures, such as restricting physical access to network devices, by means such as locking the installation area.



---

When using a device equipped with the SD Memory Card function, there is a security risk that a third party may acquire, alter, or replace the files and data in the removable media by removing the removable media or unmounting the removable media. Please take sufficient measures, such as restricting physical access to the Controller or taking appropriate management measures for removable media, by means of locking the installation area, entrance management, etc., by yourself.

---



# Precautions for Safe Use

Observe the following precautions to ensure safe use of the Product.

## Installation and Storage Environment

- Do not install the Product near any equipment that generates a large amount of heat (such as heaters, transformers, and large-capacity resistors).
- If multiple Reader/Writers are installed near each other, communications performance may decrease due to mutual interference. Refer to *Mutual Interference of Reader/Writers* on page A-16 in *A-2 Reader/Writer Installation Precautions* on page A-16 in Appendices and check to make sure there is no mutual interference between Reader/Writers.

## Installation and Removal

- Never use an AC power supply. Doing so may result in rupture.
- Wire the Product correctly. Incorrect wiring may result in rupture or burning.
- Connect the Ethernet Cable to a host device (e.g., Switching Hub or PLC) that supports STP and ground the host device to 100  $\Omega$  or less.
- The communications range is adversely affected if there is any metal material around the RF Tag.
- Transmission will not be possible if the front and back panels are mistakenly reversed and the Unit is mounted to a metallic surface.  
V680-D1KP66MT  
V680S-D2KF67M/-D8KF67M  
V680S-D2KF68M/-D8KF68M
- The transmission distance will be reduced when the Unit is not mounted to a metallic surface.  
V680-D1KP66MT  
V680S-D2KF67M/-D8KF67M  
V680S-D2KF68M/-D8KF68M
- The maximum communications range can be obtained when the Antenna faces the RF tag directly. When the RF tag is installed at a tilt, the communications range is reduced. Consider the effect of the RF tag at tilt when installing the RF Tag.
- Provide the mounting distances between plural RF tags to prevent them from malfunctions due to mutual interference.
- if the central axis of an antenna and RF tag shifts, a communications range will fall.
- Do not touch the product immediately after usage at high temperatures, Doing so may occasionally result in burning.

## Application Methods

- Do not bend the Cable to a bending radius of 40 mm or less. Doing so may break the wires.
- If an error is detected in the Product, immediately stop operation and turn OFF the power supply. Consult with an OMRON representative.

## Cleaning

- Do not clean the Product with paint thinner, benzene, acetone, or kerosene.

## Disposal

- Dispose of the Product as industrial waste.

# Precautions for Correct Use

Always observe the following precautions to prevent operation failures, malfunctions, and adverse effects on performance and equipment.

## Installation and Storage Environment

Do not use or store the Product in the following locations.

- Locations subject to combustible gases, explosive gases, corrosive gases, dust, dirt, metal powder, or salt
- Locations where the specified ambient temperature range or ambient humidity range is exceeded
- Locations subject to extreme temperature changes that may result in condensation
- Locations subject to direct vibration or shock outside the specified ranges

## Installation

- This Product uses a frequency band of 13.56 MHz to communicate with RF Tags. Some transceivers, motors, inverters, switch-mode power supplies, and other devices generate electrical noise that will affect these communications. If any of these devices are located in the vicinity of the Product, they may affect communications with RF Tags, and may possibly damage the RF Tags. Prior to using the Product in the vicinity of any of these devices, perform a test to determine whether the Product can be used under the resulting influence.
- Connect the control signal to the positive and negative sides of the power supply. The control signal is used to change the operation mode of the Reader/Writer.  
Refer to *3-1-3 Connector* on page 3-5.
- Do not exceed the rated voltage range. Doing so may result in Product destruction or burning.
- Tighten the mounting screws to a torque of 1.2 N·m.
- Tighten the Cable connector to a torque of 0.39 to 0.49 N·m.
- Mount the two-way Branch Cable with an M4 screw.

## Application Methods

- Do not drop the Product.
- Do not pull on the Cables with excessive force.
- Do not attempt to disassemble, repair, or modify the Product.
- If you use the products in an environment that will subject them to oil, confirm that the oil that is used will not adversely affect the resins used in the products.

## Maintenance

- Perform inspections both daily and periodically.  
Refer to *10-1 Maintenance and Inspection* on page 10-2 for the items to inspect.

# Revision History

A manual revision code appears as a suffix to the catalog number at the bottom of the front and rear pages.

Man. No.: Z353-E1-17

↑  
Revision code

Revision code	Date	Revised contents
01	January 2015	Original production
02	March 2015	Changed the timing chart for Using the Repeat or FIFO Repeat Communications Option and made other minor changes.
03	August 2015	Changed model numbers of the recommended cable for Ethernet cable and Power cable, and changed the information for RF Tag Communications Time.
04	September 2015	Added information on RF Tag Communications Time. Made other minor changes.
05	April 2016	Added information on Compliance standards and Frequency to the General Specifications of the Reader/Writer's. Added information on Compliance standards, Ambient operating temperature, Ambient storage humidity, and Dimensions to the General Specifications of the RF Tags. Added the information to the system configuration Changed the information on the mounting bracket of Reader/Writer, V680-D1KP66MT, and V680-D8KF67M. Added information on the delaying and the stopping of the Ethernet packet. Made other minor changes.
06	July 2016	Changed the configuration of the section.
07	October 2016	Change the description of the operating environment of the Web browser. Added the information for "Firmware Version Update History". Changed the information for "Mutual Interference of Reader/Writers (for Reference Only)" of the V680S-HMD63-EIP and V680S-HMD64-EIP.
08	February 2017	Changed the information for "FIFO Repeat".
09	April 2017	Addition of description of communication function "Auto", "FIFO Repeat (Without ID code check)" and "FIFO Repeat (With ID code check)" The layout change of Web browser.
10	July 2019	Changed the description of Java version. Added items for the V680S-A63-S, and V680-A64-S. Deleted items for V680-D8KF67, V680-D8KF67M, and V680-D8KF68A RF Tags,
11	December 2019	Changed the configuration for setting communication conditions (Addition of setting procedure for IP address of the personal computer) Made other minor changes.
12	December 2020	Change of recommended operating environment of Web browser Changes in the appearance and layout of the Web browser interface
13	March 2021	Added information of Java version earlier than firmware Ver.4.00.
14	June 2022	Added information of Windows11.
15	September 2022	Added description of Safety Precautions and added information about Security Measures.
16	November 2025	Compliant with the Security Requirements for Radio Equipment Directive

Revision code	Date	Revised contents
17	April 2026	<ul style="list-style-type: none"><li>• Added "Use of Open Source Software (OSS)".</li><li>• Corrected mistakes.</li></ul>



# 1

## Product Overview


This section provides an overview of the product, including features, Applications, and product specifications of the V680S-series Reader/Writer.

---

<b>1-1</b>	<b>Features .....</b>	<b>1-2</b>
1-1-1	Integrated Structure.....	1-2
1-1-2	Simple Installation .....	1-3
1-1-3	Stable Operation .....	1-3
1-1-4	Simple Connection with EtherNet/IP .....	1-4
1-1-5	Easy Operation .....	1-5
1-1-6	Security Compliance .....	1-5
<b>1-2</b>	<b>Application Flowchart.....</b>	<b>1-6</b>
<b>1-3</b>	<b>Product Specifications .....</b>	<b>1-12</b>
1-3-1	Reader/Writer .....	1-12
1-3-2	Connector Cover (Slim Type).....	1-16
1-3-3	RF Tag.....	1-17
<b>1-4</b>	<b>Data Characteristics .....</b>	<b>1-31</b>
1-4-1	Communications Range Specifications.....	1-31


# 1-1 Features

The integrated V680S-series Reader/Writers (V680S-HMD6□-EIP) perform communications with RF Tags according to command from a host device.

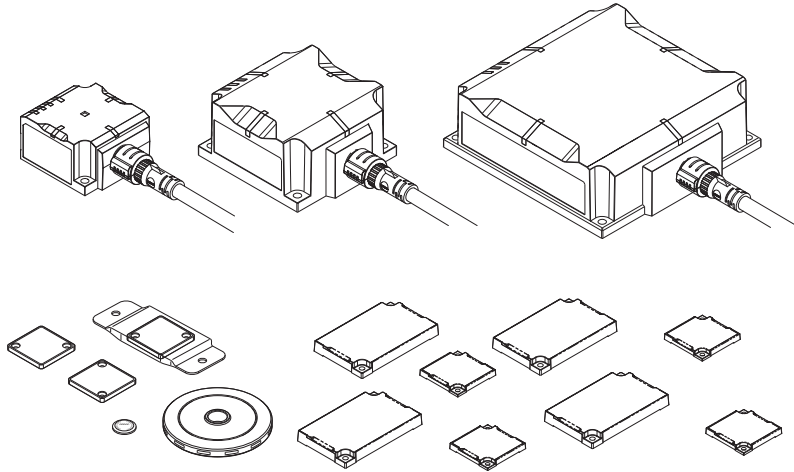


## 1-1-1 Integrated Structure

The controller, amplifier, and antenna are integrated into the Reader/Writer for a simple structure.

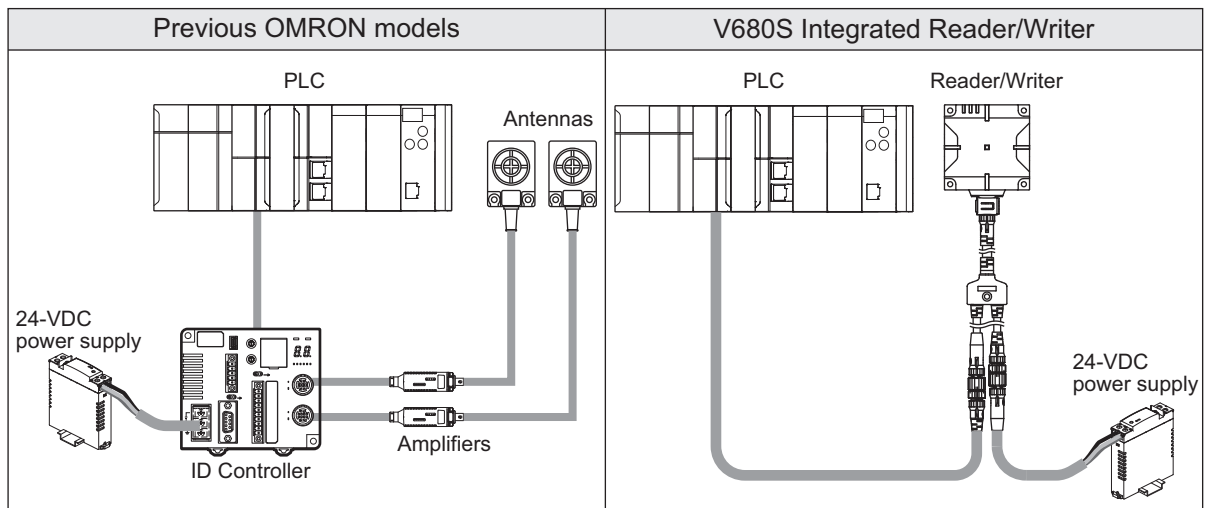

### 1-1-2 Simple Installation

The Reader/Writer is automatically set to the best parameters according to the RF Tags to achieve stable communications with more consistent communications and less omissions of RF Tags in the communications field.

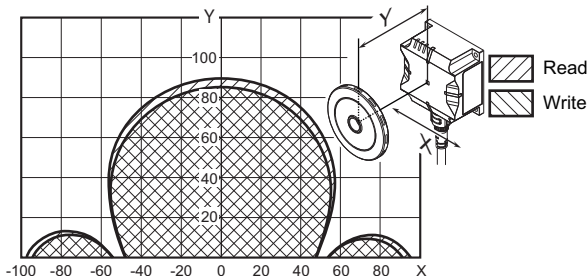


### 1-1-3 Stable Operation

When the Reader/Writer communicates with an RF Tag, it diagnoses the communications leeway and reports the result. You can check the communications leeway to appropriately install the Reader/Writer and RF Tags to achieve stable operation of your OMRON RFID System.

For details, refer to 6-13 *Using Communication Diagnostic and the RF Analyzer* on page 6-66.


If you use the RFID System under installation conditions that provide a high communications leeway, you can reduce communications troubles during system operation and achieve stable line operation.

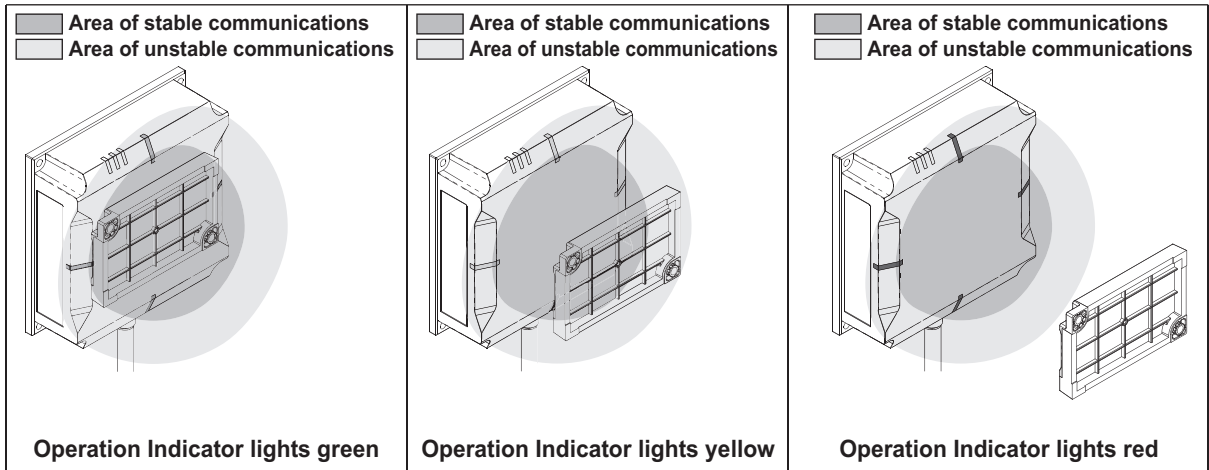

### 1-1-4 Simple Connection with EtherNet/IP

The Reader/Writer communicates with the host device through EtherNet/IP. EtherNet/IP is an industrial multi-vendor network that uses Ethernet. The EtherNet/IP specifications are open standards managed by the ODVA (Open DeviceNet Vendor Association). EtherNet/IP is used by a wide range of industrial devices.

Because EtherNet/IP uses standard Ethernet technology, various general-purpose Ethernet devices can be used in the network. You can easily increase the number of Reader/Writers by using a Switching Hub.

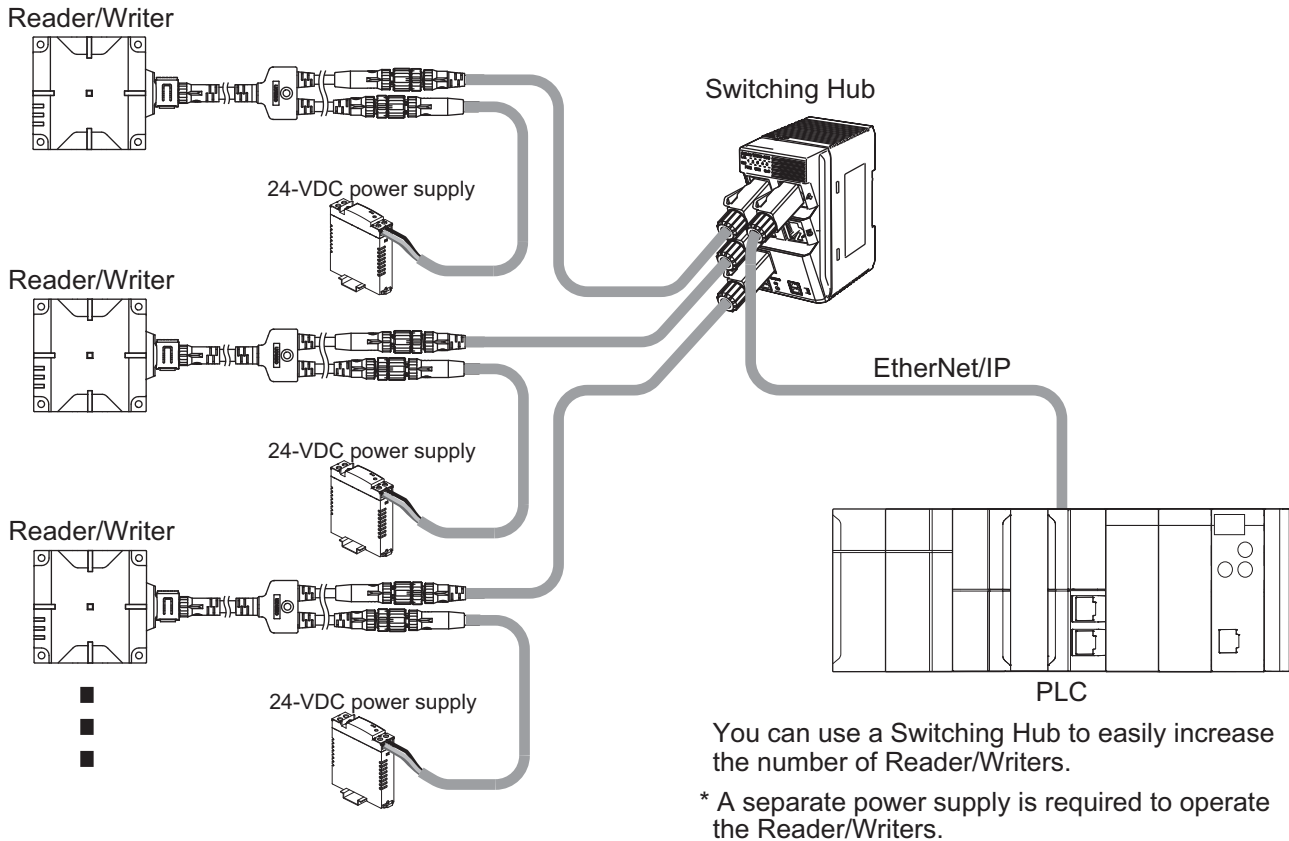

#### Additional Information

To connect more than one Reader/Writer, all devices must be set to a unique IP address.

EtherNet/IP has mainly the following features.

#### **High-speed, High-capacity Data Exchange through Tag Data Links (Cyclic Communications)**

The EtherNet/IP protocol supports implicit communications, which allows cyclic communications called tag data links with EtherNet/IP devices.


#### **Tag Data Links (Cyclic Communications) at a Specified Communications Cycle for Each Application Regardless of the Number of Nodes**

Tag data links (cyclic communications) operate at the cyclic period that is specified for each application, regardless of the number of nodes. Data is exchanged over the network at the refresh cycle that is set for each connection. The communications refresh cycle will not increase even if the number of nodes is increased, i.e., the concurrency of the connection's data is maintained.

Because the refresh cycle can be set for each connection, each application can communicate at its ideal refresh cycle. For example, interprocess interlocks can be transferred at high speed, while the production commands and the status information are transferred at low speed.

### 1-1-5 Easy Operation

A Web server is provided so that you can easily perform setup and status monitoring by connecting to a computer, without the need for any special software.

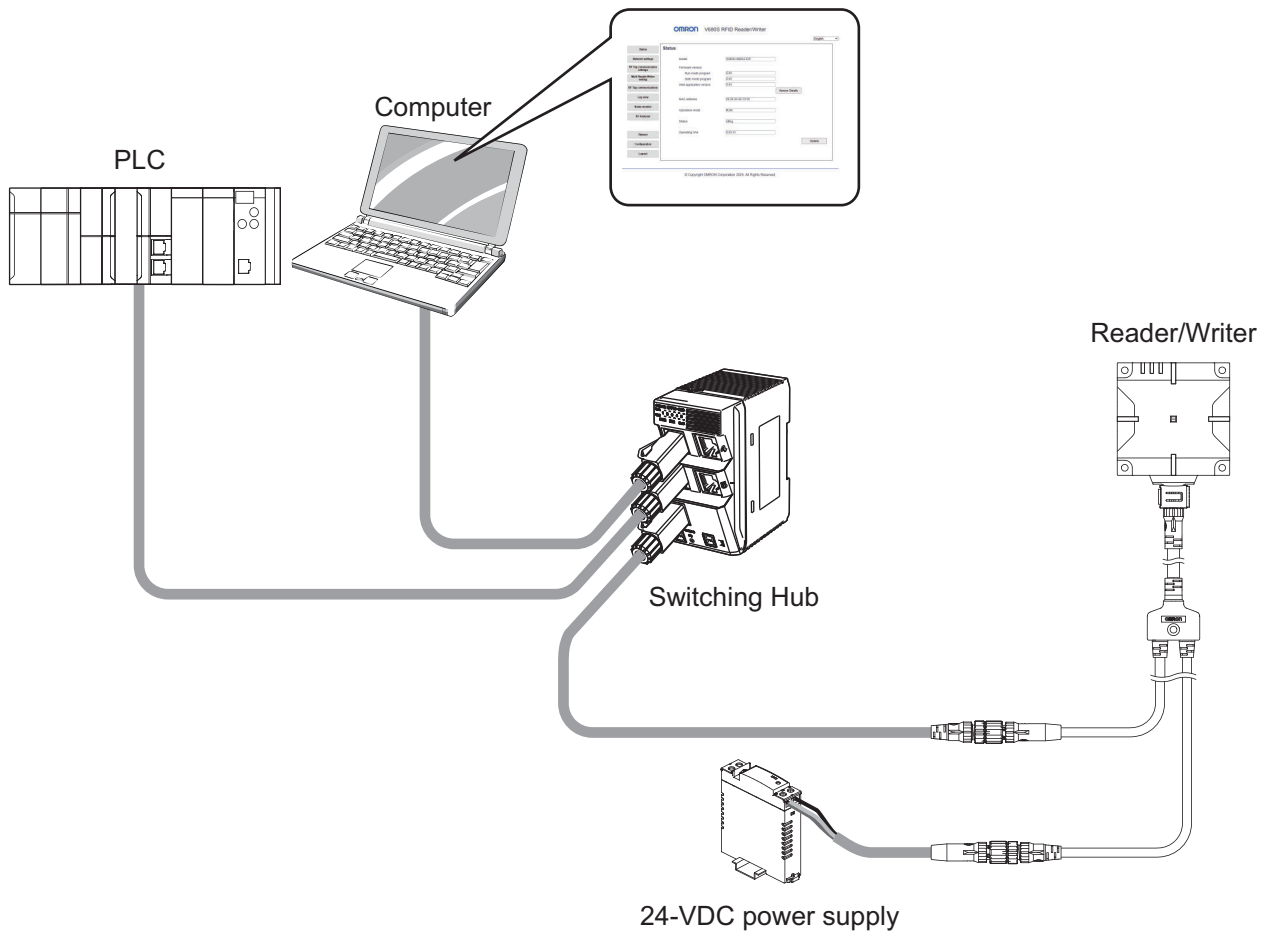

You can connect a computer to the Switching Hub to easily set up the Reader/Writers and check the status of the Reader/Writers.

### 1-1-6 Security Compliance

The RFID System V680S-series complies with the EN 18031-1 with Reader/Writers with firmware version "5.00" or higher.

For security guides, see *6-1 Security Guide* on page 6-3.

For security functions, see *6-2 Security Functions* on page 6-6.

# 1-2 Application Flowchart

A simple application flowchart is described below. For correct application methods and details, refer to the reference page or section given for each step.

## Preparations

### Checking the Installation Environment page A-16


Refer to *A-2 Reader/Writer Installation Precautions* on page A-16 to confirm the conditions under which the RFID System will not be influenced by surrounding metal on the Reader/Writer or mutual interference between Reader/Writers.

### Installation page 4-2

Install the Reader/Writer with four M4 screws.


V680S-HMD63-EIP: Use two screws.

V680S-HMD64-EIP/-HMD66-EIP: Use four screws.

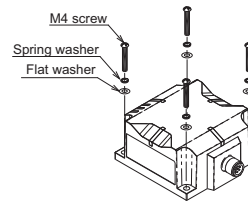


### Connections and Wiring page 4-14

Insert the Power Cable into the power supply connector on the Reader/Writer (M12 A-Coding, female) and turn the cable connector on the Reader/Writer end clockwise to lock it in place.

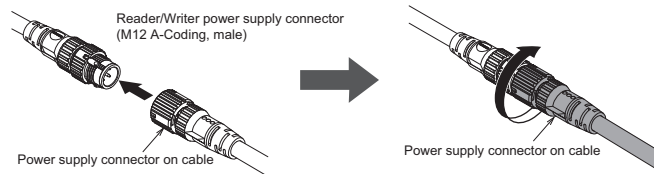


Insert the Ethernet Cable into the Ethernet connector on the Reader/Writer (M12 D-Coding, male) and turn the cable connector on the Reader/Writer end clockwise to lock it in place.

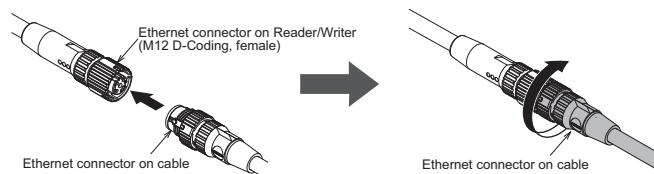

Mount the Branch Cable with one M4 screw.

Recommended tightening torque: 0.39 to 0.49 N·m

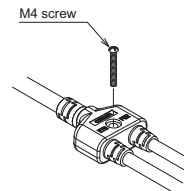

Connect the Power Cable to a 24-VDC power supply.

Connect the Ethernet Cable to the host device (PLC) or Switching Hub.



## Communications Preparations

### Setting Reader/Writer Communications Conditions page 5-3

The default network settings for the Reader/Writer are listed in the following table.

<b>IP address</b>	192.168.1.200 (fixed settings)
<b>Subnet mask</b>	255.255.255.0
<b>Default gateway</b>	192.168.1.254
<b>Port number for Web browser*1</b>	https 443 (fixed) https (WebSocket) 8443 (Settings can be changed)
<b>Web Password</b>	In the factory default settings, an initial password is registered. The initial password is printed on the label on the Reader/Writer itself.

\*1. The port number for Reader/Writers earlier than firmware version "5.00" is "7090".

Change the network settings of the host device to match those of the Reader/Writer.

Host Device Setting Example

IP address: 192.168.1.100


Subnet mask: 255.255.255.0



## Trial Operation

### Communications Test with Host Device page A-74

Start a Web browser (Microsoft Edge, Google Chrome) on the host computer, enter `https://192.168.1.200/` in the address box of the Web Browser, and press the Enter Key. The password screen will appear, so enter your Web Password. Communications will be possible if the following window appears.

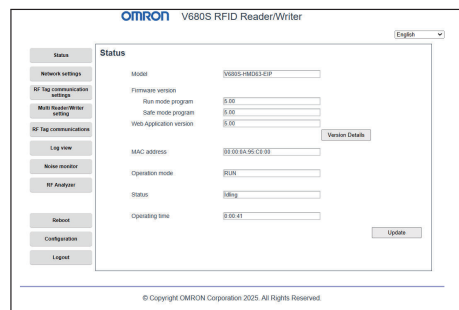

### Precautions for Correct Use

- If you enter the IP address in the address field of the Web Browser, a security warning will be displayed. By installing the root certificate on your computer and setting the domain name of the Reader/Writers, you can establish a secure connection with the Reader/Writers.

For details, see *8-4 Root Certificate Installation Procedure* on page 8-35.

The following explains how to enter the factory default IP address ("`https://192.168.1.200/`"), but the above precautions apply.




### Version Information


- For Reader/Writers earlier than firmware version "5.00", start a Web Browser (Internet Explorer, Microsoft Edge, Google Chrome) on the host computer, enter `http://192.168.1.200/` in the address box and press the Enter Key. Communications will be possible if the Status window appears.

**Using Communication Diagnostic to Check Communications Leeway** page 6-66

1. Connect the Ethernet cable, turn ON the power supply to the Reader/Writer, and then start a Web Browser on a computer.
2. Specify the IP address of the Reader/Writer in the address field of the Web Browser.  
Enter "https://192.168.1.200/" if you are using the default IP address.

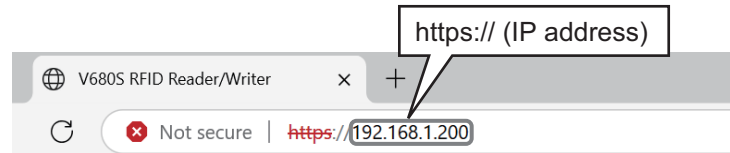

3. The **RF Tag communications settings** View will be displayed.

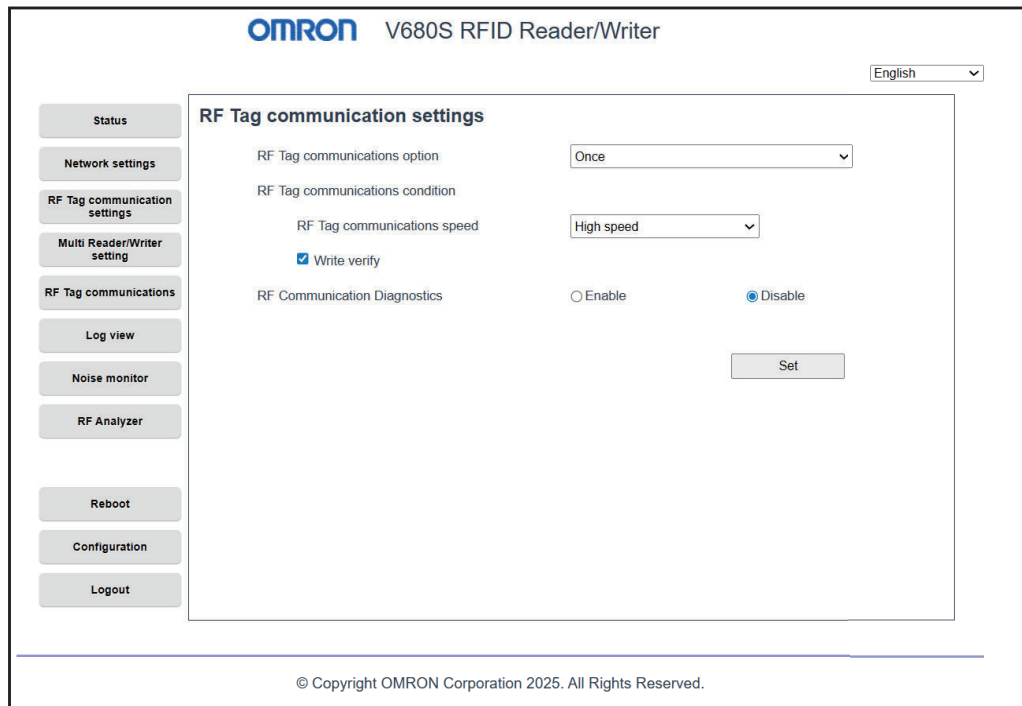

Using the RF Analyzer to Check the Results of Communication Diagnostic Checking with the RF Analyzer and Implementing Corrections on page 6-71

1. Display the RF Analyzer View.

**OMRON** V680S RFID Reader/Writer

English

**RF Analyzer**      Total : 4      Warning : 1      Error : 2     

No	Time	Command	Result	UID
1	0:01:22	Read ID	Error	0000000000000000
2	0:01:23	Read ID	Stable	43D3F4FF150108E0
3	0:01:25	Read ID	Error	0000000000000000
4	0:01:27	Read ID	Warning	43D3F4FF150108E0

No	4		
Command	Read ID		
Diagnostic description	0001 : The Signal Level is low.		
Signal Level	9	Noise	0

The Signal Level is low. Push the "Display" button on the right, and follow the instruction.

© Copyright OMRON Corporation 2025. All Rights Reserved.


2. Click the **Display** Button in the Details column and follow the guidance to check the assumed causes and corrections.

**The Signal Level is low.**


Follow the instruction in below.

There is a possibility the positioning and posture of the Reader/Writer and the RF tag is not proper.  
 Make a position so that the Reader/Writer and the RF tag surface in face to face, then execute the RF communication diagnostics.  
 The inclination of the RF tag surface to the Reader/Writer may cause the deterioration of RF communication .

3. In this example, the position of the Tag is corrected according to the guidance.

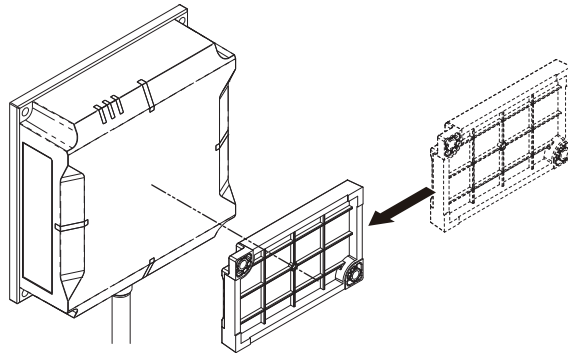

4. You can check the **graph display** to check quantitative information on the "degree of instability".

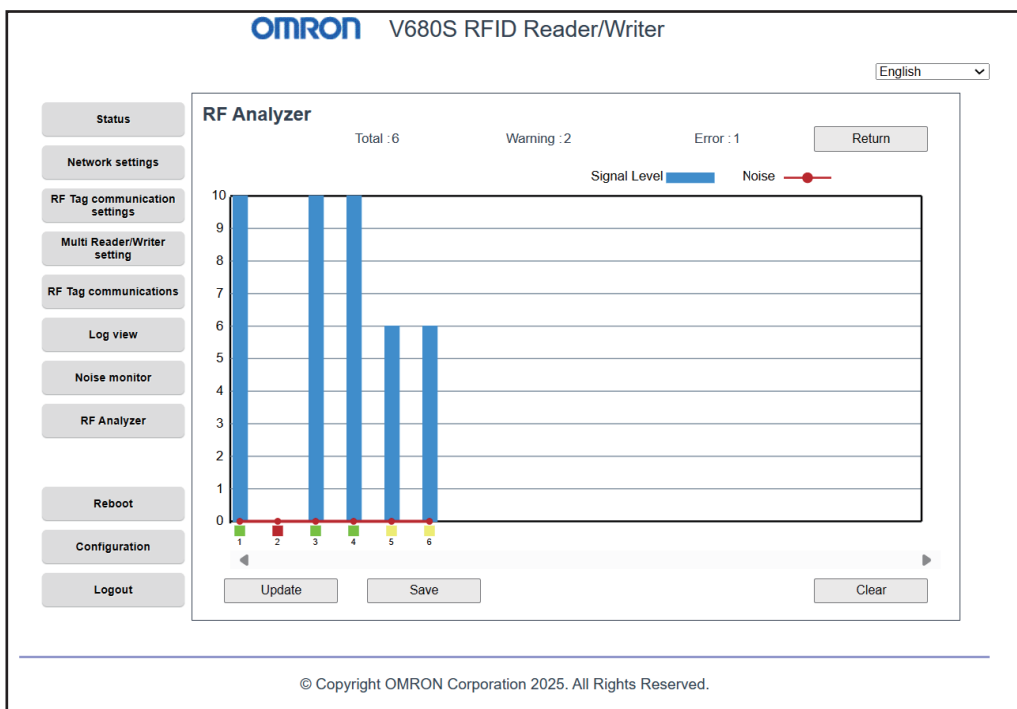

When you are finished, perform the step to *Communicating with an RF Tag* on page 6-69 again and check to see if stable communications have been achieved.



## RF Tag Communications

### Communications with RF Tags for Commands from the Host Device Using Tag Data Linkss.

page 7-14

The Reader/Writer can perform various types of communications with RF Tags.

Communications command name	Description	Page
READ DATA	Reads data from an RF Tag in the communications field.	page 7-14
WRITE DATA	Writes data to an RF Tag in the communications field.	page 7-15
READ ID	Reads the ID code from an RF Tag in the communications field.	page 7-13
COPY DATA	Uses two Reader/Writers to copy data from the memory of an RF Tag in the communications field of one Reader/Writer (A) to the memory of the RF Tag in the communications field of another Reader/Writer (B).	page 7-20
DATA FILL	Writes the specified data to the specified number of words beginning from the specified start address. The specifications are made in the command.	page 7-17
LOCK	This command locks the specified memory in the RF Tag. It will no longer be possible to write data to the locked memory. The lock cannot be released.	page 7-16
RF TAG OVER-WRITE COUNT CONTROL	Used to manage the number of times data is written to an RF Tag. You can use this command for RF Tags with EEPROM memory.	page 7-18
RESTORE DATA	This command reads the restore information from the Reader/Writer. You can restore RF Tag data only when the RF Tag in the communications field matches the held RF Tag ID.	page 7-19



### Additional Information

If you Encounter a Problem...

- *Error Codes* on page 7-10
- *3-1-2 Operation Indicators* on page 3-4
- *9-4 Troubleshooting Flowcharts* on page 9-10

# 1-3 Product Specifications

## 1-3-1 Reader/Writer

### General Specifications

Item	V680S-HMD63-EIP	V680S-HMD64-EIP	V680S-HMD66-EIP
Compliance standards	ISO/IEC 18000-3 (15693)		
Frequency	13.56 MHz		
Dimensions	50 × 50 × 30 mm (W × H × D, excluding protruding parts and cables)	75 × 75 × 40 mm (W × H × D, excluding protruding parts and cables)	120 × 120 × 40 mm (W × H × D, excluding protruding parts and cables)
Power supply voltage	24 VDC (-15% to +10%)		
Consumption current	0.2A max.		
Ambient operating temperature	-10 to 55°C (with no icing)		
Ambient operating humidity	25% to 85% (with no condensation)		
Ambient storage temperature	-25 to 70°C (with no icing)		
Ambient storage humidity	25% to 85% (with no condensation)		
Insulation resistance	20 MΩ min. (at 500 VDC) between cable terminals and case		
Dielectric strength	1,000 VAC, 50/60 Hz for 1 min between cable terminals and case		
Vibration resistance	No abnormality after application of 10 to 500 Hz, 1.5-mm double amplitude, acceleration: 100 m/s <sup>2</sup> , 10 sweeps in each of 3 axis directions (up/down, left/right, and forward/backward) for 11 minutes each		
Shock resistance	No abnormality after application of 500 m/s <sup>2</sup> , 3 times each in 6 directions (Total: 18 times)		
Degree of protection	IP67 (IEC 60529: 2001) Oil resistance equivalent to IP67F (JIS C 0920:2003, Appendix 1)* <sup>1</sup>		
Materials	Case: PBT resin, Filled resin: Urethane resin		
Mass	Approx. 240 g	Approx. 390 g	Approx. 760 g
Installation method	Reader/Writer body: Two M4 screws* <sup>2</sup> Cable branching section: One M4 screw	Four M4 screws* <sup>2</sup>	
Startup time	Approx. 15 seconds		
Host communications interface	Ethernet 10BASE-T/100BASE-TX		
Host device communications protocol	EtherNet/IP		
Accessories	Instruction Sheet Copy of EC Self Declaration IP address label		


\*1. Oil resistance has been tested using a specific oil as defined in the OMRON test method.

\*2. Use a screw of 12 mm or more in length.

# Dimensions


## ● V680S-HMD63-EIP

(Unit: mm)

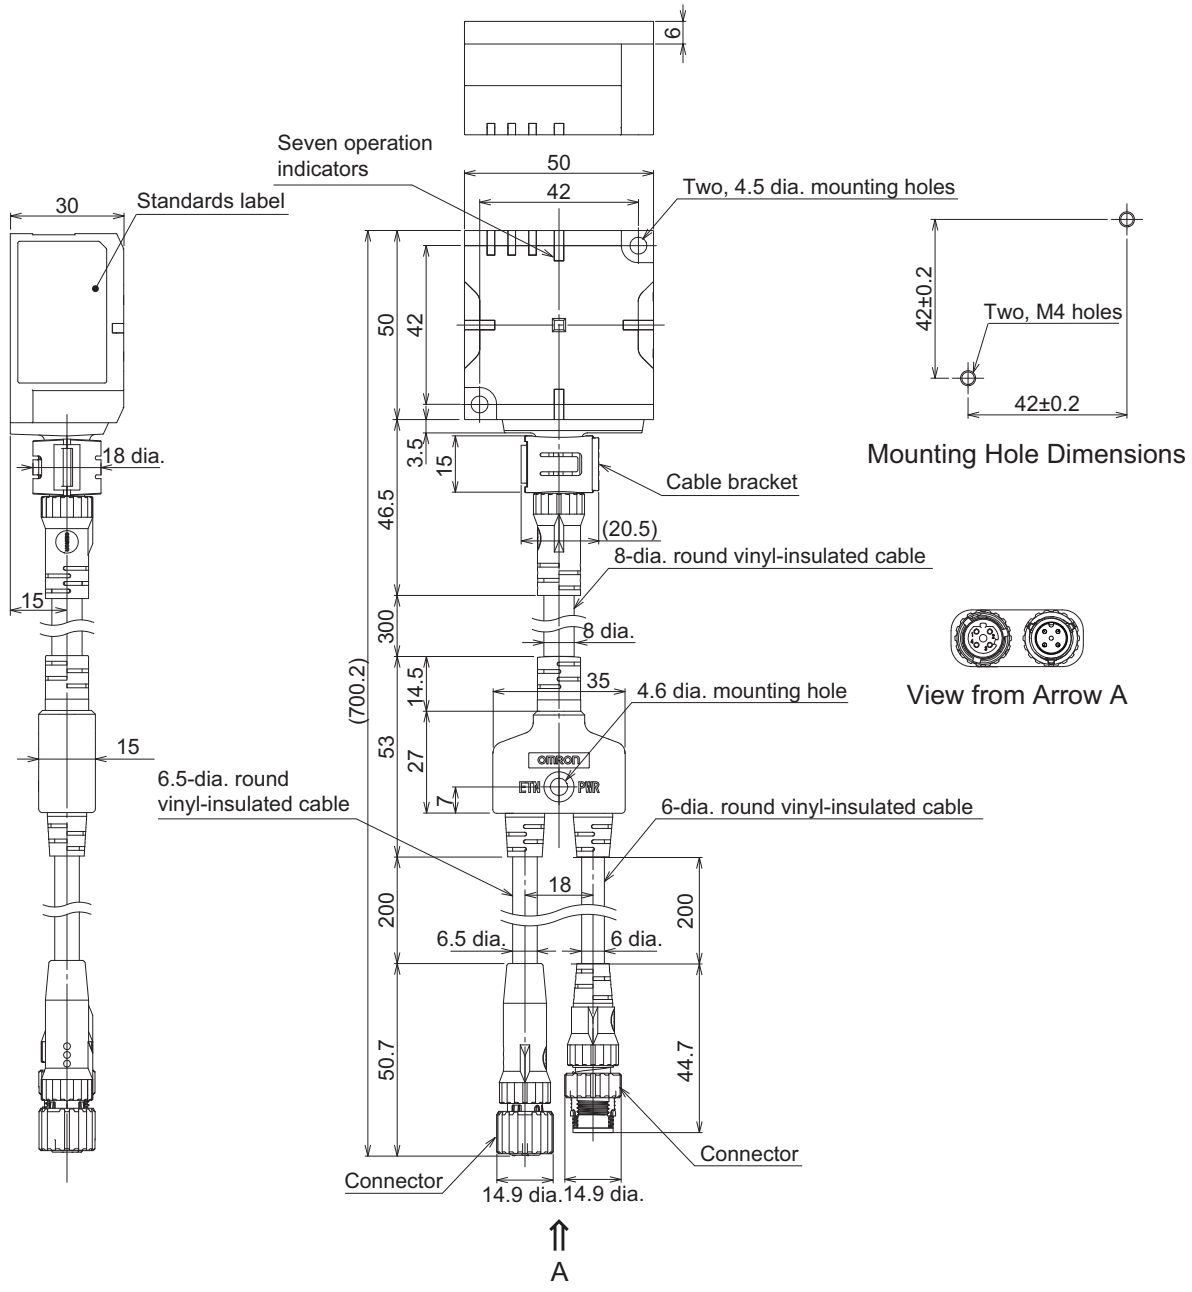


● V680S-HMD64-EIP

(Unit: mm)

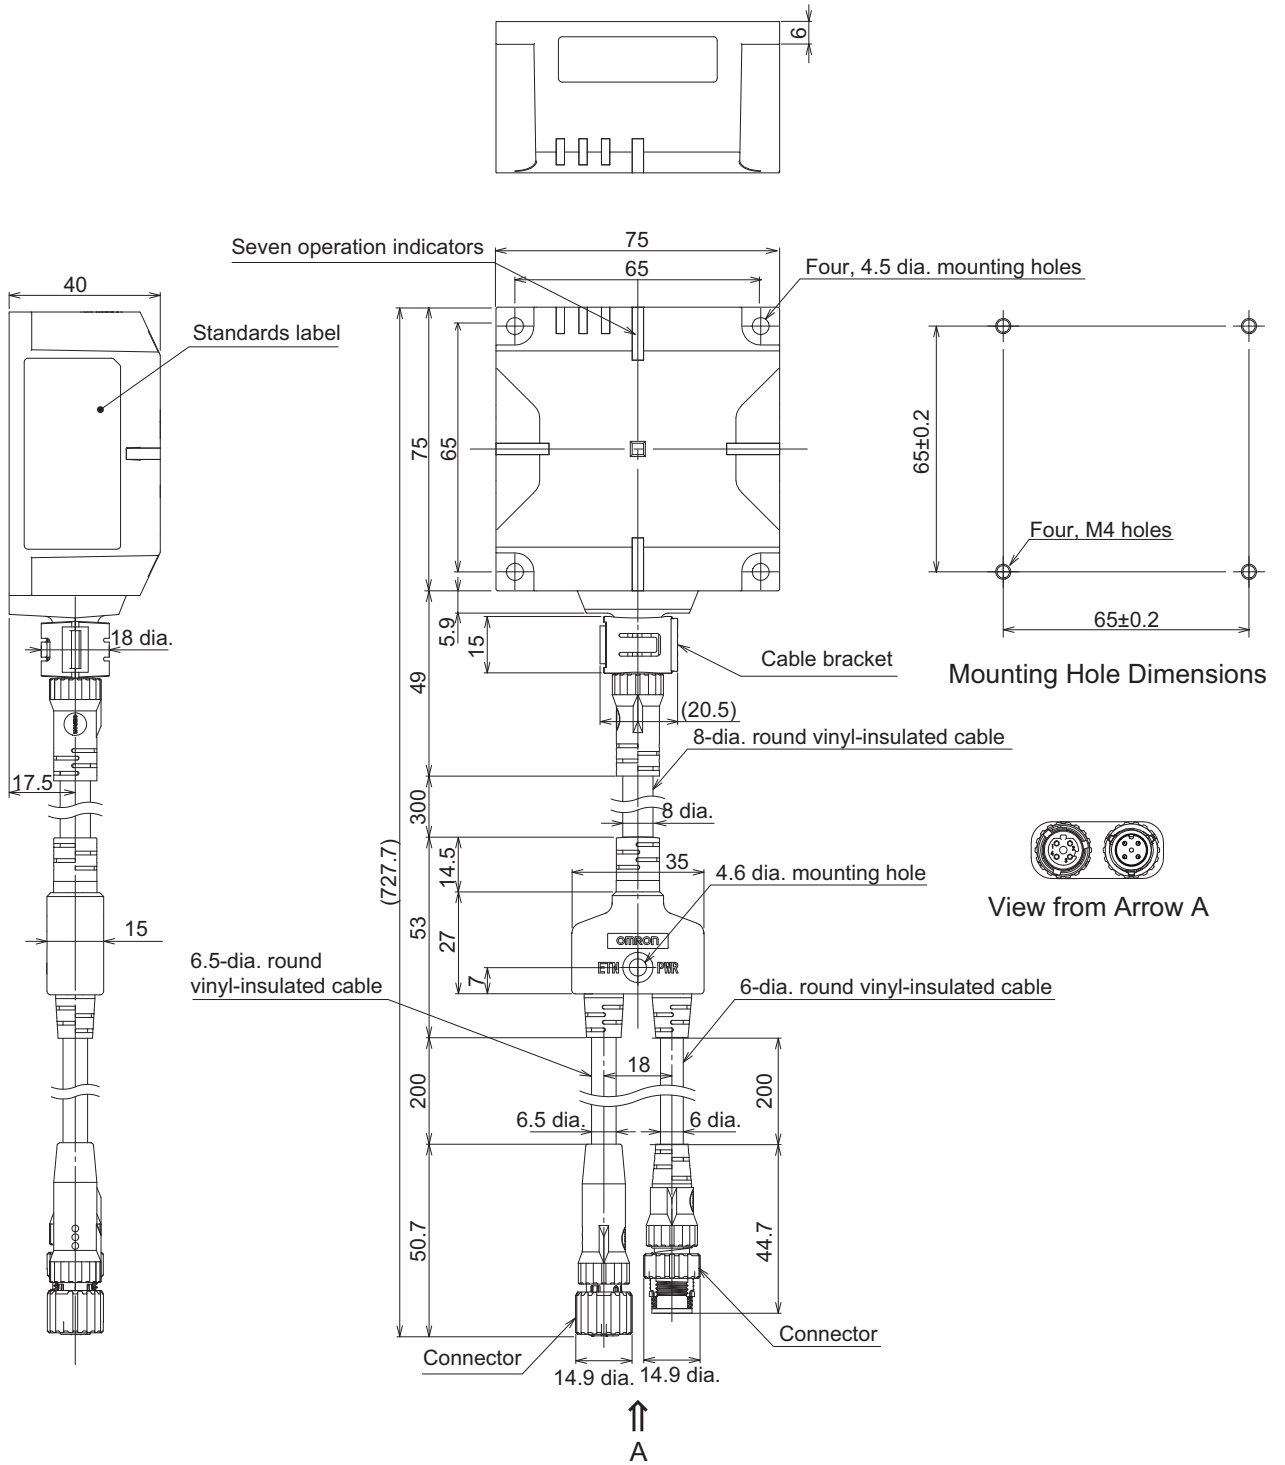

● V680S-HMD66-EIP

(Unit: mm)

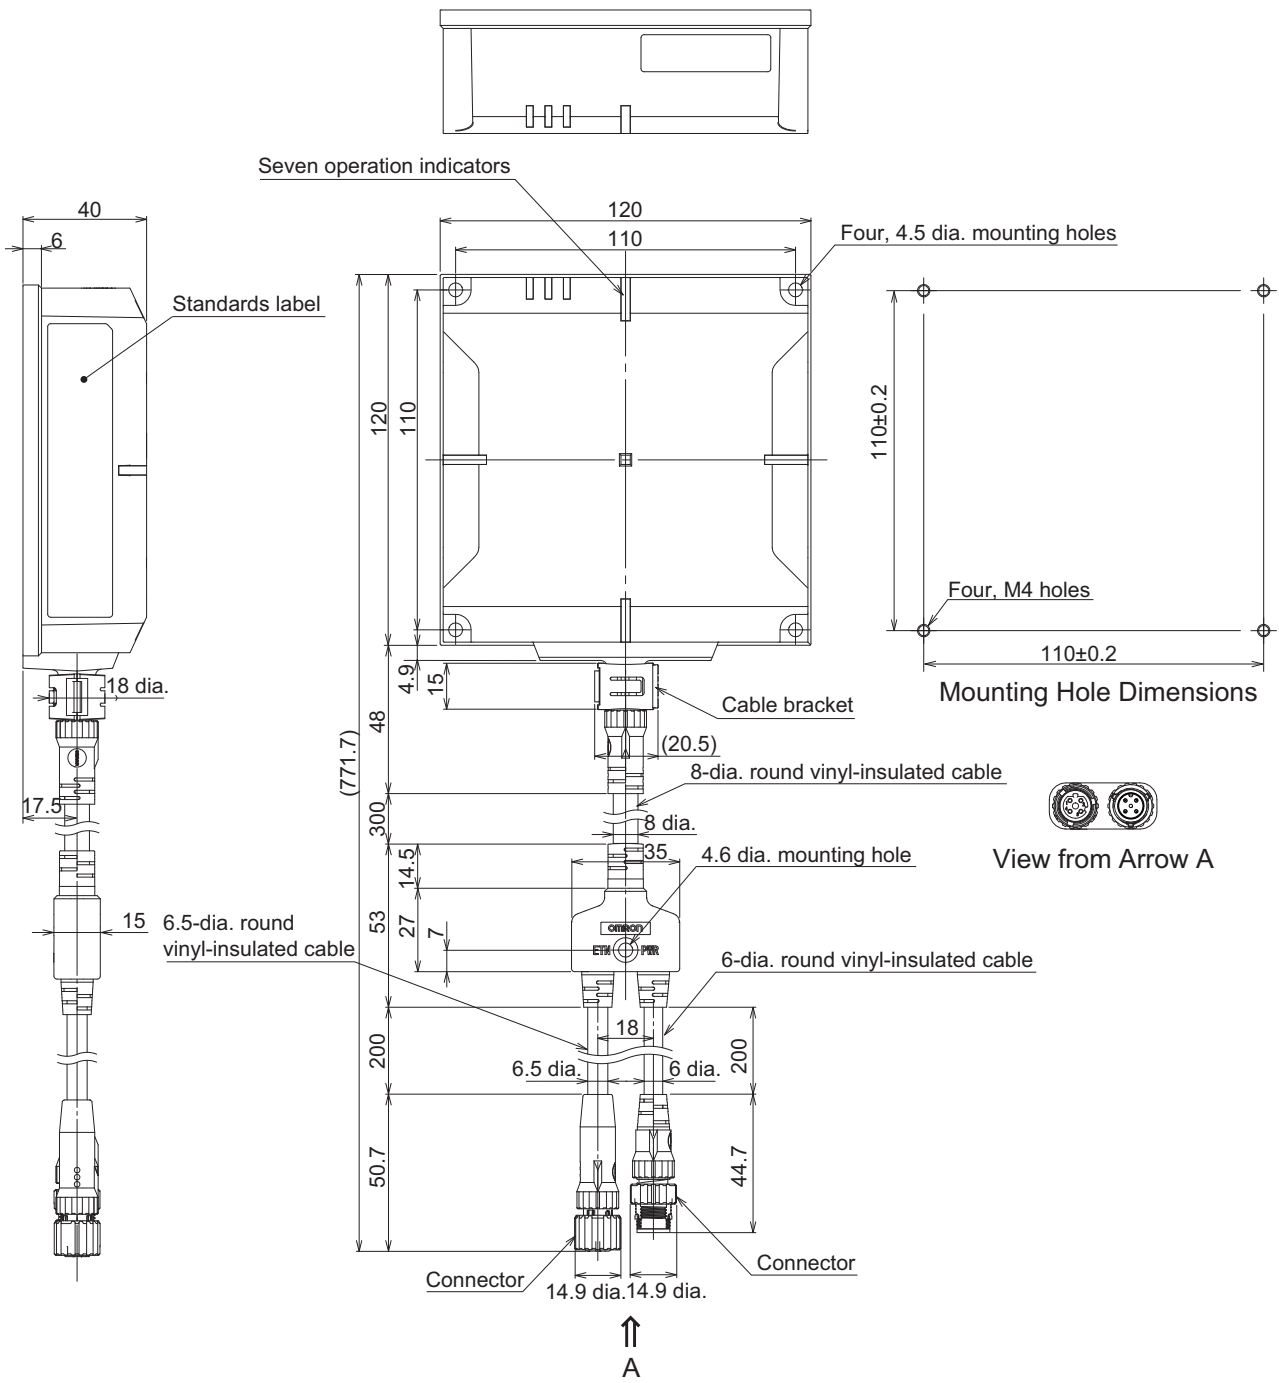

## 1-3-2 Connector Cover (Slim Type)

### General Specifications


Item	V680S-A63-S	V680S-A64-S
Ambient operating temperature	-10 to 55°C (with no icing)	
Ambient operating humidity	25% to 85% (with no condensation)	
Ambient storage temperature	-25 to 70°C (with no icing)	
Ambient storage humidity	25% to 85% (with no condensation)	
Materials	PBT resin	
Installation method	Fixing screws in two locations*1	

\*1. In addition to the reader/writer mounting holes, two mounting holes are required for the connector cover.

### Dimensions


#### ● V680S-A63-S

(Unit: mm)

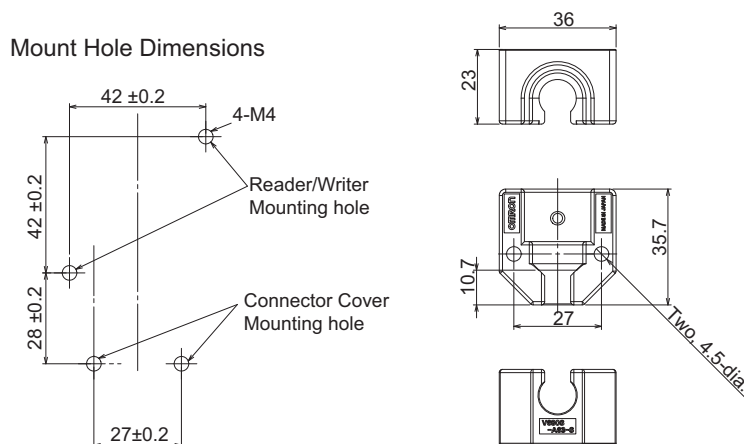

## ● V680S-A64-S

(Unit: mm)

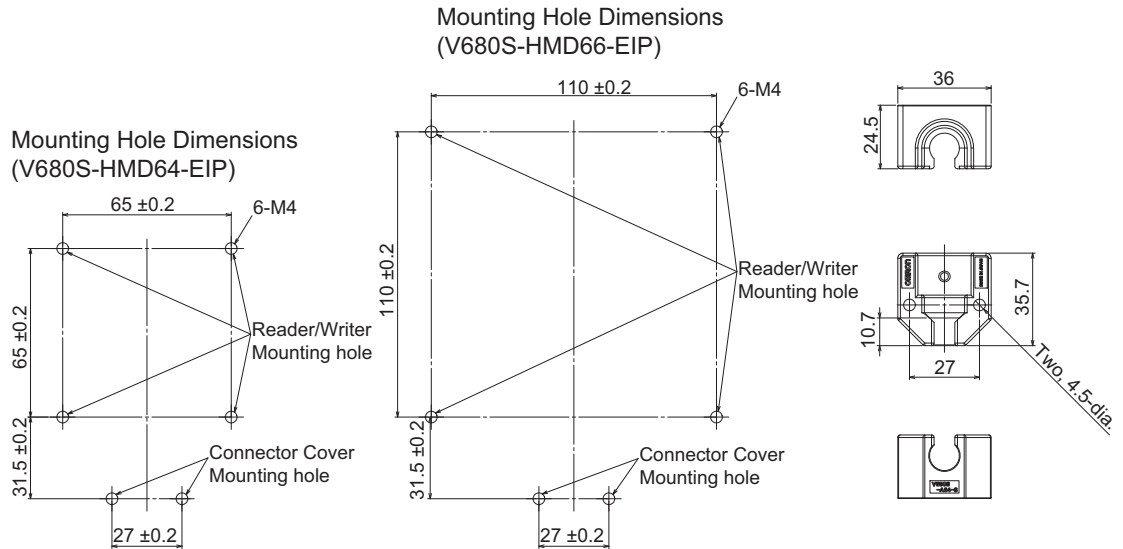

### 1-3-3 RF Tag

## V680-D1KP54T

### ● General Specifications

Item	V680-D1KP54T
Compliance standards	ISO/IEC 18000-3 (15693)
Memory capacity	1,000 bytes (user area)
Memory type	EEPROM
Data retention	10 years after writing (85°C or less), 0.5 years after writing (85 to 125°C) Total data retention at high temperatures exceeding 125°C is 10 hours.* <sup>1</sup>
Write endurance	100,000 writes for each block (25°C)
Ambient operating temperature	-25 to 85°C (with no icing)
Ambient operating humidity	35% to 95%
Ambient storage temperature	-40 to 125°C (with no icing)
Ambient storage humidity	35% to 95%
Degree of protection	IP67 (IEC 60529:2001) Oil resistance equivalent to IP67G (JIS C 0920:2003, Appendix 1). <sup>*2</sup>
Vibration resistance	No abnormality after application of 10 to 2,000 Hz, 1.5-mm double amplitude, acceleration: 150 m/s <sup>2</sup> , 10 sweeps each in X, Y, and Z directions for 15 minutes each
Shock resistance	acceleration: 150 m/s <sup>2</sup> , 10 sweeps each in X, Y, and Z directions for 15 minutes each
Dimensions	20 dia. × 2.7 mm
Materials	PPS resin
Mass	Approx. 2 g
Metal countermeasures	None


\*1. After storing RF Tags at high temperatures, rewrite the data even if changes are not required. High temperatures are those between 125 and 180°C.

\*2. Oil resistance has been tested using a specific oil as defined in the OMRON test method.

● Dimensions

■ V680-D1KP54T

(Unit: mm)

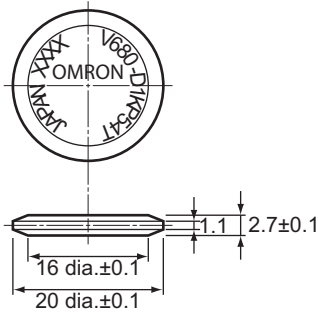

Case material: PPS resin




**Precautions for Correct Use**

- The V680-D1KP54T RF Tag can be placed in the Attachment in either direction. The direction does not affect operation.
- The ID code is written in the memory of the RF Tag and may be affected by data retention characteristics at high temperatures. Take suitable precautions when using the READ ID command for RF Tags operating at high temperatures.
- You cannot use FIFO Repeat communications.

■ V700-A80 Attachment

(Unit: mm)

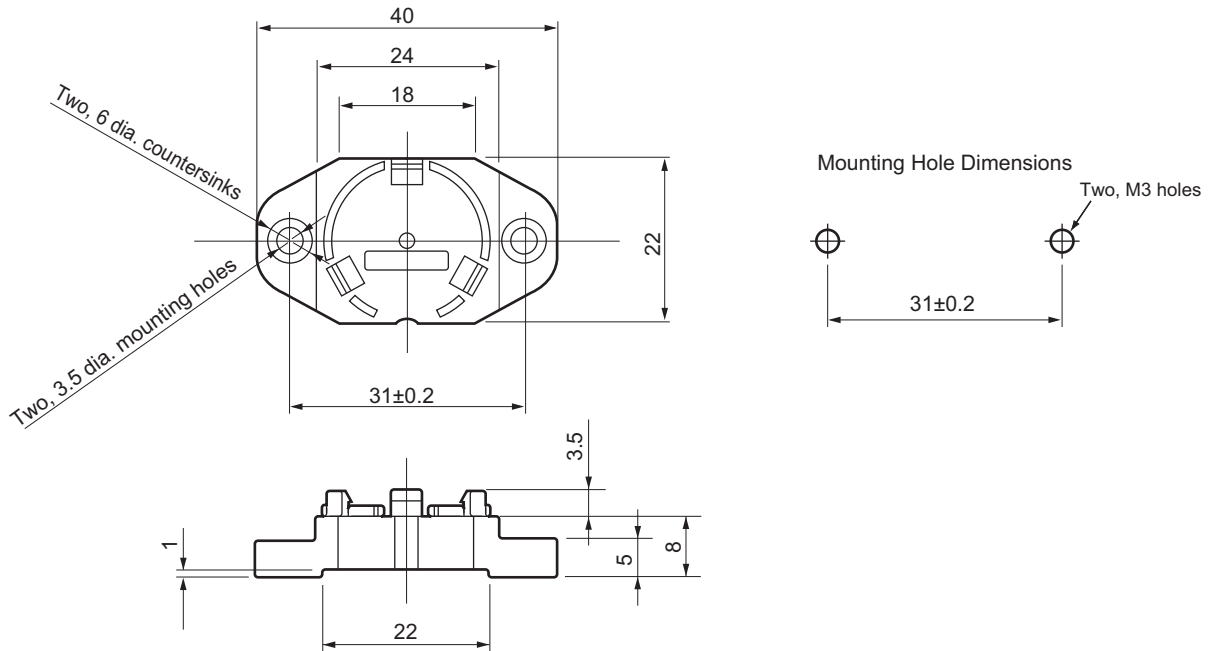

Materials: PPS resin

## ● RF Tag Heat Resistance

- Storing RF Tags under high temperatures or under heat cycles will adversely affect the performance of the internal parts and the service life of the RF Tags.
- An LTPD of 10% was used for evaluation of RF Tags that reached the end of their service life after testing under the following test conditions.

Heat cycle:	1,000 cycles of 30 minutes each between -10 and 150°C. No failures occurred in 22 samples. 200 cycles of 30 minutes each between -10 and 180°C. No failures occurred in 22 samples.
High-temperature storage:	1,000 hours at 150°C. No failures occurred in 22 samples. 200 hours at 180°C. No failures occurred in 22 samples.



### **Precautions for Correct Use**

---

LTPD: Lot Tolerance Percent Defective

The lower limit of the malfunction rate for lots to be considered unacceptable during reliability testing.

---

## V680-D1KP66T/-D1KP66MT

### ● General Specifications

Item	V680-D1KP66T	V680-D1KP66MT
Compliance standards	ISO/IEC 18000-3 (15693)	
Memory capacity	1,000 bytes (user area)	
Memory type	EEPROM	
Data retention	10 years after writing (85°C or less), 0.5 years after writing (85 to 125°C) Total data retention at high temperatures exceeding 125°C is 10 hours*1	
Write endurance	100,000 writes for each block (25°C)	
Ambient operating temperature	-25 to 85°C (with no icing)	
Ambient operating humidity	35% to 95%	
Ambient storage temperature	-40 to 125°C (with no icing)	
Ambient storage humidity	35% to 95%	
Degree of protection	IP68 (IEC 60529:2001) Oil resistance equivalent to IP67G (JIS C 0920:2003, Appendix 1)*2	
Vibration resistance	No abnormality after application of 10 to 2,000 Hz, 1.5-mm double amplitude, acceleration: 150 m/s <sup>2</sup> , 10 sweeps each in X, Y, and Z directions for 15 minutes each	
Shock resistance	No abnormality after application of 500 m/s <sup>2</sup> , 3 times each in X, Y, and Z directions (Total: 18 times)	
Dimensions	34 × 34 × 3.5 mm (W × H × D)	
Materials	PPS resin	
Mass	Approx. 6 g	Approx. 7.5 g
Metal countermeasures	None	Provided

\*1. After storing RF Tags at high temperatures, rewrite the data even if changes are not required. High temperatures are those between 125 and 180°C.


\*2. 2. Oil resistance has been tested using a specific oil as defined in the OMRON test method.

The V680-D1KP66MT must be mounted on a metallic surface. The markings on the V680-D1KP66T and V680-D1KP66MT are shown below.

#### ●V680-D1KP66MT



#### ●V680-D1KP66T

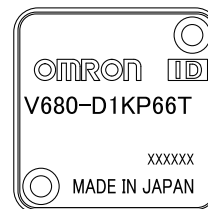


### Precautions for Correct Use

- The marked surface is the communications surface. When mounting the RF Tag, face the marked surface toward the Reader/Writer.
- The ID code is written in the memory of the RF Tag and may be affected by data retention characteristics at high temperatures. Take suitable precautions when using the READ ID command for RF Tags operating at high temperatures.
- You cannot use FIFO Repeat communications.

## ● Dimensions

### ■ V680-D1KP66T/-D1KP66MT


(Unit: mm)

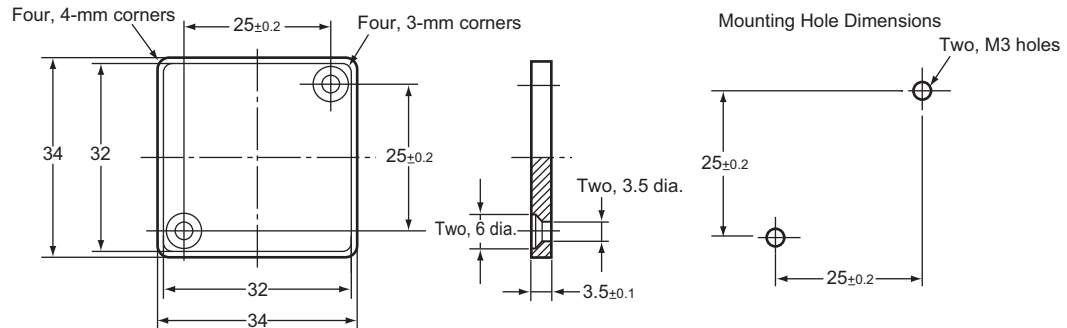

Case material: PPS resin

### ■ V600-A86 Attachment

(Unit: mm)

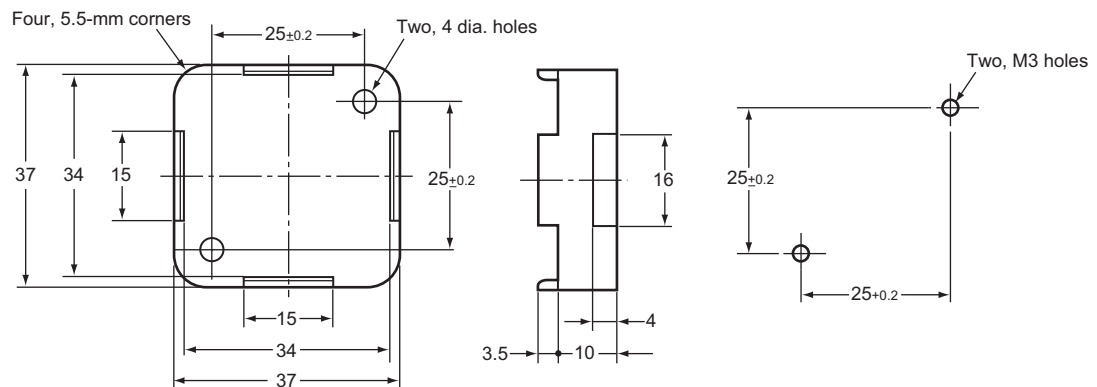

Case material: PPS resin

## ● RF Tag Heat Resistance

- Storing RF Tags under high temperatures or under heat cycles will adversely affect the performance of the internal parts and the service life of the RF Tags.
- An LTPD of 10% was used for evaluation of RF Tags that reached the end of their service life after testing under the following test conditions.

Heat cycle: 1,000 cycles of 30 minutes each between -10 and 150°C. No failures occurred in 22 samples.  
200 cycles of 30 minutes each between -10 and 180°C. No failures occurred in 22 samples.

High-temperature storage: 1,000 hours at 150°C. No failures occurred in 22 samples.

200 hours at 180°C. No failures occurred in 22 samples.



### Precautions for Correct Use

LTPD: Lot Tolerance Percent Defective

The lower limit of the malfunction rate for lots to be considered unacceptable during reliability testing.


## V680-D1KP66T-SP

### ● General Specifications

Item	V680-D1KP66T-SP
Compliance standards	ISO/IEC 18000-3 (15693)
Memory capacity	1,000 bytes
Memory type	EEPROM
Data retention	10 years (85°C or less)
Write endurance	100,000 writes for each block (25°C)
Ambient operating temperature	-25 to 70°C (with no icing)
Ambient operating humidity	35% to 95% (with no condensation)
Ambient storage temperature	-40 to 110°C (with no icing)
Ambient storage humidity	35% to 95% (with no condensation)
Vibration resistance	10 to 2,000 Hz, 1.5-mm double amplitude, acceleration: 150 m/s <sup>2</sup> , 10 sweeps each in 3 directions for 15 minutes each
Shock resistance	No abnormality after application of 500 m/s <sup>2</sup> , 3 times each in X, Y, and Z directions (Total: 18 times)
Dimensions	95 × 36.5 × 6.5 mm (W × H × D, excluding protruding parts)
Degree of protection	IP67
Materials	Exterior: PFA fluororesin RF Tag filling: PPS resin
Mass	Approx. 20 g
Installation method	Two M5 screws
Metal countermeasures	None

### ● Dimensions

(Unit: mm)

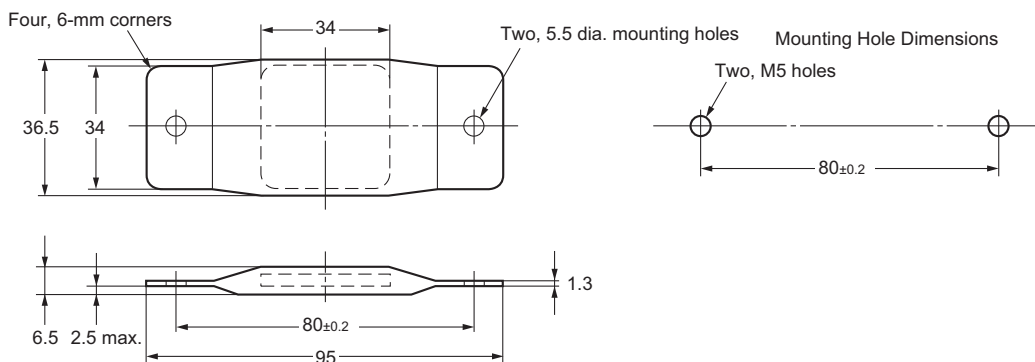

Case material: PFA resin



### Precautions for Correct Use

- The marked surface is the communications surface. When mounting the RF Tag, face the marked surface toward the Reader/Writer.
- You cannot use FIFO Repeat communications.

## V680-D1KP58HTN

### ● General Specifications

Item	V680-D1KP58HTN
Compliance standards	ISO/IEC 18000-3 (15693)
Memory capacity	1,000 bytes (user area)
Memory type	EEPROM
Data retention	10 years after writing (85°C or less), 0.5 years after writing (85 to 125°C) Total data retention at high temperatures exceeding 125°C is 10 hours* <sup>1</sup>
Write endurance	100,000 writes for each block (25°C)
Ambient operating temperature	-25 to 85°C (with no icing)
Ambient operating humidity	No restrictions.
Ambient storage temperature	-40 to 250°C (with no icing) (Data retention: -40 to 125°C)
Ambient storage humidity	No restrictions.
Degree of protection	IP67 (IEC 60529:2001) Oil resistance equivalent to IP67G (JIS C 0920:2003, Appendix 1)* <sup>2</sup>
Vibration resistance	No abnormality after application of 10 to 2,000 Hz, 1.5-mm double amplitude, acceleration: 150 m/s <sup>2</sup> , 10 sweeps each in X, Y, and Z directions for 15 minutes each
Shock resistance	No abnormality after application of 500 m/s <sup>2</sup> , 3 times each in X, Y, and Z directions (Total: 18 times)
Dimensions	80 dia. × 10 mm
Materials	PPS resin
Mass	Approx. 70 g


\*1. After storing RF Tags at high temperatures, rewrite the data even if changes are not required. High temperatures are those between 125 and 250°C.

\*2. Oil resistance has been tested using a specific oil as defined in the OMRON test method.

### ● Dimensions

#### ■ V680-D1KP58HTN

(Unit: mm)

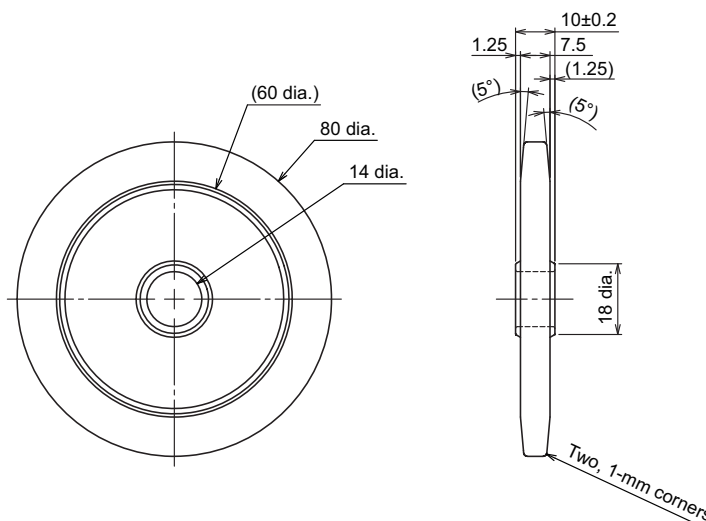

Case material: PPS resin



### Precautions for Correct Use


The RF Tag can be placed in the Attachment in either direction. The direction does not affect operation.

### ■ V680-A80 Attachment

This Attachment is used to hold V680-D1KP58HTN ID Tags.

Applicable model: V680-D1KP58HTN

(Unit: mm)

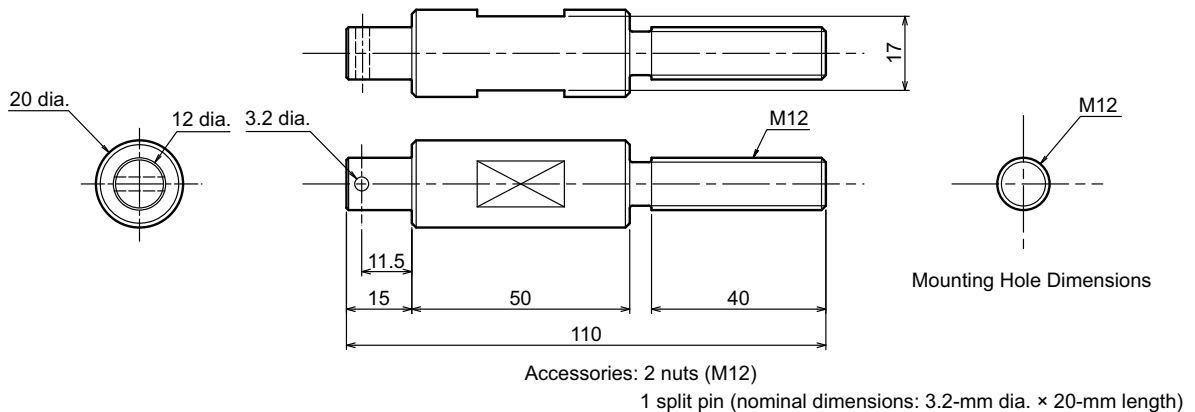

## ● High-temperature Applications (V680-D1KP58HTN)

### ■ Data Retention

- Due to the characteristics of EEPROM, any data that is written to an RF Tag may be lost if it is used in a high-temperature environment that exceeds 125°C for a total of more than 10 hours. Always reset the data holding time before a total of 10 hours is reached.
- Communications between the Reader/Writer and RF Tags may fail in high-temperature environments of 85°C or higher. Do not perform communications between the Reader/Writer and RF Tag in a high-temperature environment of 85°C or higher.
- Due to the characteristics of EEPROM, the UID (RF Tag ID code) may be lost if an RF Tag is used in a high-temperature environment that exceeds 125°C. Do not use commands that use the UID in high-temperature environments that exceed 125°C.
  - Do not use the ID READ command.
  - You cannot use FIFO Repeat communications.

■ Total Usage Time

This section gives the total time that an RF Tag can be placed at high temperatures.

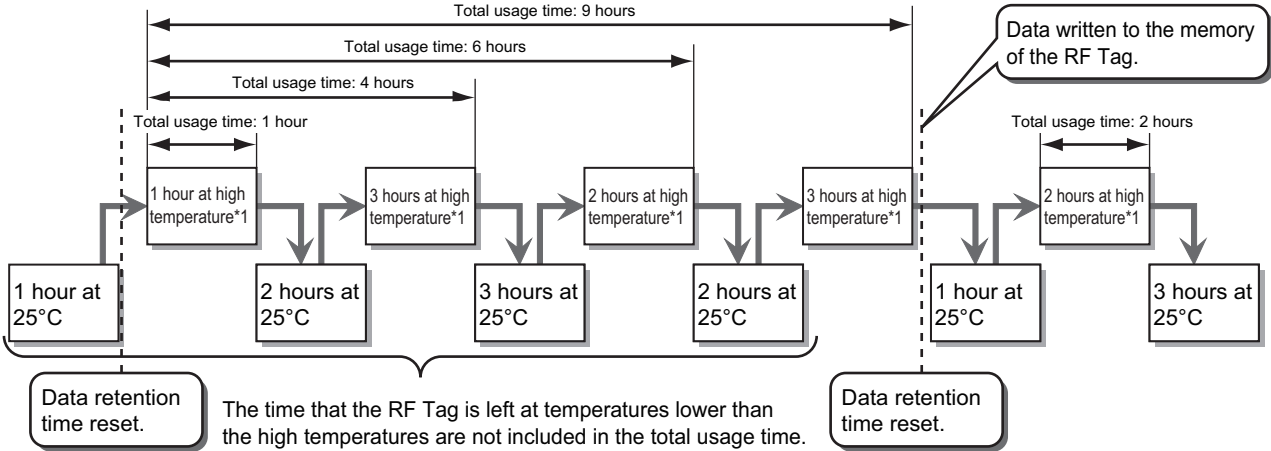


Fig. Conceptual Diagram of Resetting the Data Retention Time


\*1 A "high temperature" is one between 125°C and 250°C.

## ■ Data Retention Time Reset Procedure


Always use the following procedure to reset the data holding time before a total of 10 hours is reached.

### When Using RF Tag Memory Addresses 0010 to 0015 hex

- 1 Read the data from RF Tag addresses 0010 to 0015 hex.

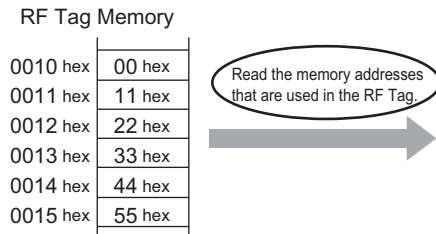

- 2 Write the read data to RF Tag memory addresses 0010 to 0015 hex.

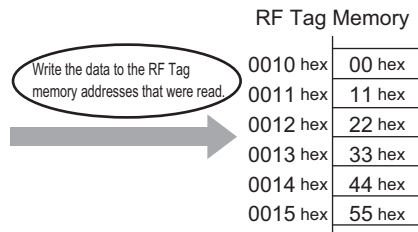

### Precautions for Correct Use

- The data retention time is reset only for the RF Tag memory addresses that are written.
- To reset the data retention time, write the same data to all of the memory addresses that are used in the RF Tag.

## ■ Heat Resistance

Storing RF Tags under high temperatures or under heat cycles will adversely affect the performance of the internal parts and the service life of the RF Tags.

The RF Tag were placed in the following high temperatures and then evaluated in-house. It was confirmed that no problems occurred.

- 1) 2,000 cycles of 30 minutes each between room temperature and 200°C
- 2) 500 hours at 250°C

## V680S-D2KF67/-D2KF67M/-D8KF67/-D8KF67M

### ● General Specifications

Item	V680S-D2KF67	V680S-D2KF67M	V680S-D8KF67	V680S-D8KF67M
Compliance standards	ISO/IEC 18000-3 (15693)			
Memory capacity	2,000 bytes (user area)		8,192 bytes (user area)	
Memory type	FRAM			
Data retention	10 years after writing (85°C or less)			
Write endurance	One trillion times per block (85°C or less), Access frequency <sup>*1</sup> : One trillion times			
Ambient operating temperature	-20 to 85°C (with no icing)			
Ambient operating humidity	35% to 85%			
Ambient storage temperature	-40 to 125°C (with no icing)			
Ambient storage humidity	35% to 85%			
Degree of protection	IP68 (IEC 60529:2001), Oil resistance equivalent to IP67G (JIS C 0920:2003, Appendix 1) <sup>*2</sup> IPX9K (DIN 40 050)			
Vibration resistance	No abnormality after application of 10 to 2,000 Hz, 1.5-mm double amplitude, acceleration: 150 m/s <sup>2</sup> , 10 sweeps each in X, Y, and Z directions for 15 minutes each			
Shock resistance	No abnormality after application of 500 m/s <sup>2</sup> , 3 times each in X, Y, and Z directions (Total: 18 times)			
Dimensions	40 × 40 × 5 mm (W × H × D)			
Materials	PPS resin			
Mass	Approx. 11.5 g	Approx. 12 g	Approx. 11.5 g	Approx. 12 g
Metal countermeasures	None	Provided	None	Provided


\*1. Note 1. The number of accesses is the total number of reads and writes.

\*2. 2. Oil resistance has been tested using a specific oil as defined in the OMRON test method.


The V680S-D2KF67M/-D8KF67M must be mounted on a metallic surface.

The markings on the V680-D2KF67/-D8KF67 and V680-D2KF67M/-D8KF67M are shown below.

#### ●V680S-D2KF67M/-D8KF67M

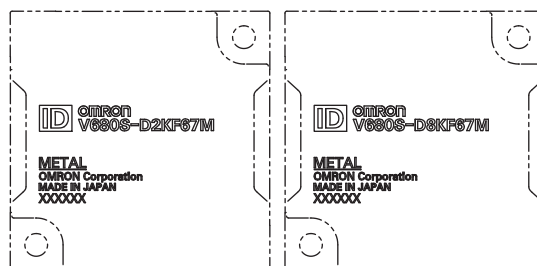

#### ●V680S-D2KF67/-D8KF67

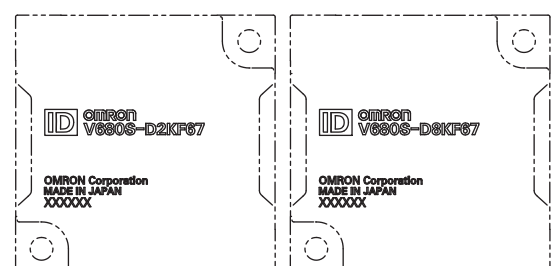


### Precautions for Correct Use

- The marked surface is the communications surface. When mounting the RF Tag, face the marked surface toward the Reader/Writer.
- You can use the V680S-D8KF67□ with Reader/Writers with firmware version 2.00 or higher.

● Dimensions

■ V680S-D2KF67/-D2KF67M/-D8KF67/-D8KF67M

(Unit: mm)

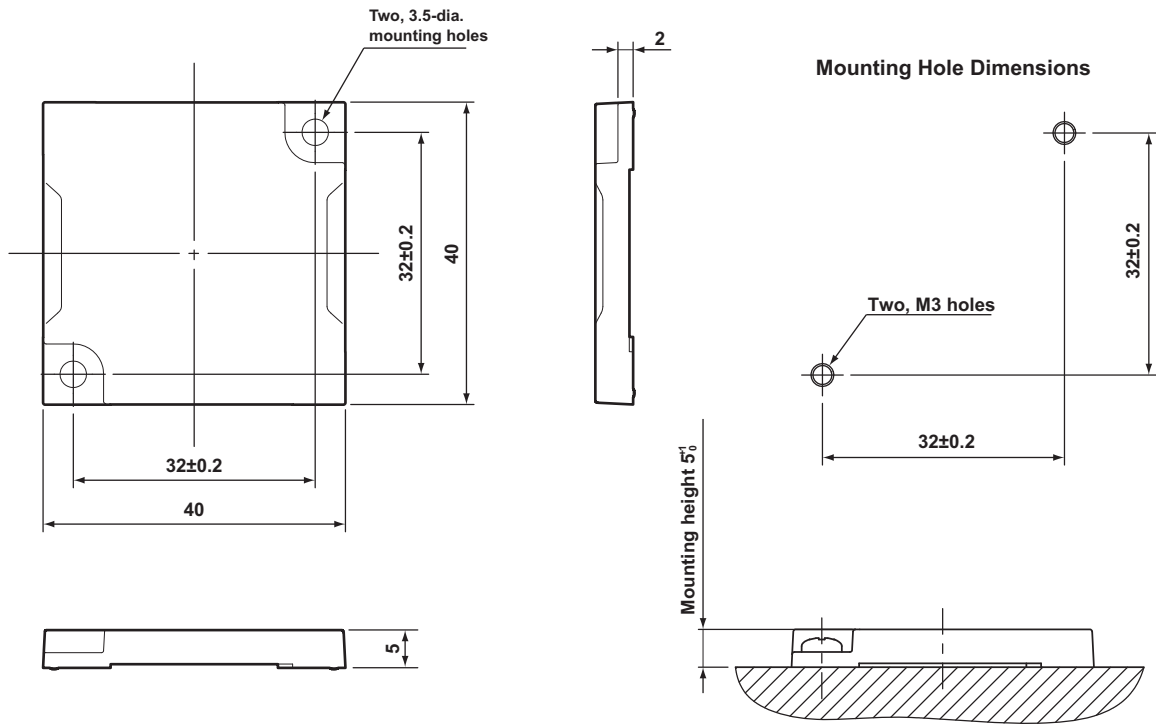

Case material: PPS resin

## V680S-D2KF68/-D2KF68M/-D8KF68/-D8KF68M

### ● General Specifications

Item	V680S-D2KF68	V680S-D2KF68M	V680S-D8KF68	V680S-D8KF68M
Compliance standards	ISO/IEC 18000-3 (15693)			
Memory capacity	2,000 bytes (user area)		8,192 bytes (user area)	
Memory type	FRAM			
Data retention	10 years after writing (85°C or less)			
Write endurance	One trillion times per block (85°C or less), Access frequency <sup>*1</sup> : One trillion times			
Ambient operating temperature	-20 to 85°C (with no icing)			
Ambient operating humidity	35% to 85%			
Ambient storage temperature	-40 to 125°C (with no icing)			
Ambient storage humidity	35% to 85%			
Degree of protection	IP68 (IEC 60529), Oil resistance equivalent to IP67G (JIS C 0920:2003, Appendix 1) <sup>*2</sup> IPX9K (DIN 40 050)			
Vibration resistance	No abnormality after application of 10 to 500 Hz, 1.5-mm double amplitude, acceleration: 100 m/s <sup>2</sup> , 10 sweeps each in X, Y, and Z directions for 11 minutes each			
Shock resistance	No abnormality after application of 500 m/s <sup>2</sup> , 3 times each in X, Y, and Z directions (Total: 18 times)			
Dimensions	86 × 54 × 10 mm (W × H × D)			
Materials	PPS resin			
Mass	Approx. 44 g	Approx. 46 g	Approx. 44 g	Approx. 46 g
Metal countermeasures	None	Provided	None	Provided

\*1. Note 1. The number of accesses is the total number of reads and writes.


\*2. 2. Oil resistance has been tested using a specific oil as defined in the OMRON test method.

The V680S-D2KF68M/-D8KF68M must be mounted on a metallic surface.

The markings on the V680-D2KF68/-D8KF68 and V680-D2KF68M/-D8KF68M are shown below.

●V680S-D2KF68M/-D8KF68M

●V680S-D2KF68/-D8KF68

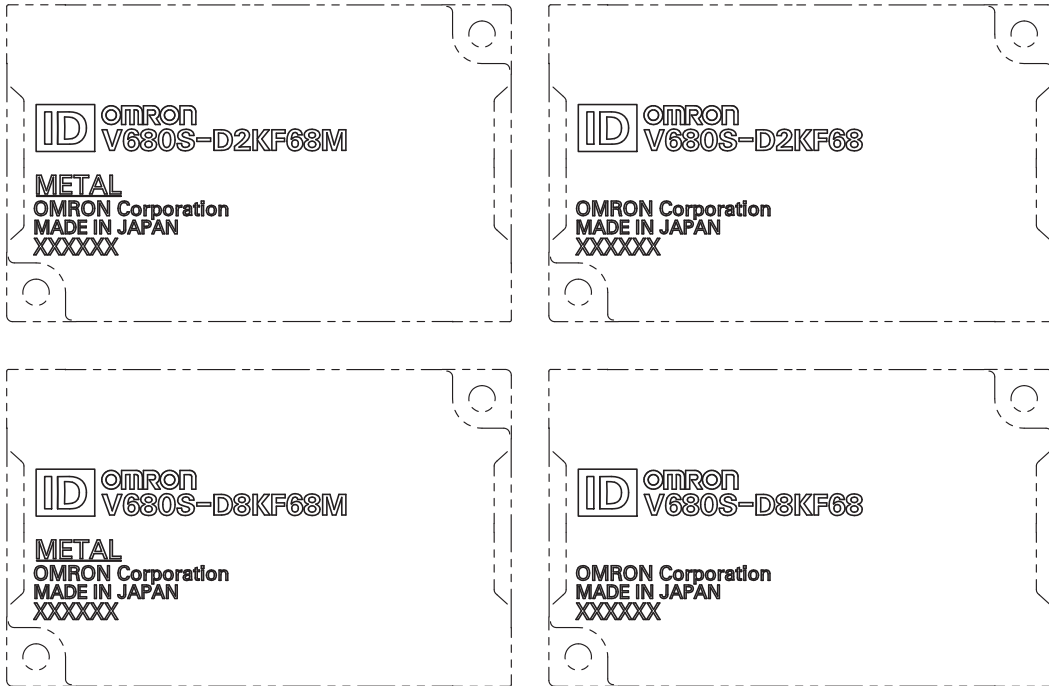


**Precautions for Correct Use**

- The marked surface is the communications surface. When mounting the RF Tag, face the marked surface toward the Reader/Writer.
- You can use the V680S-D8KF68□ with Reader/Writers with firmware version 2.00 or higher.

● **Dimensions**

■ **V680S-D2KF68/-D2KF68M/-D8KF68/-D8KF68M**

(Unit: mm)

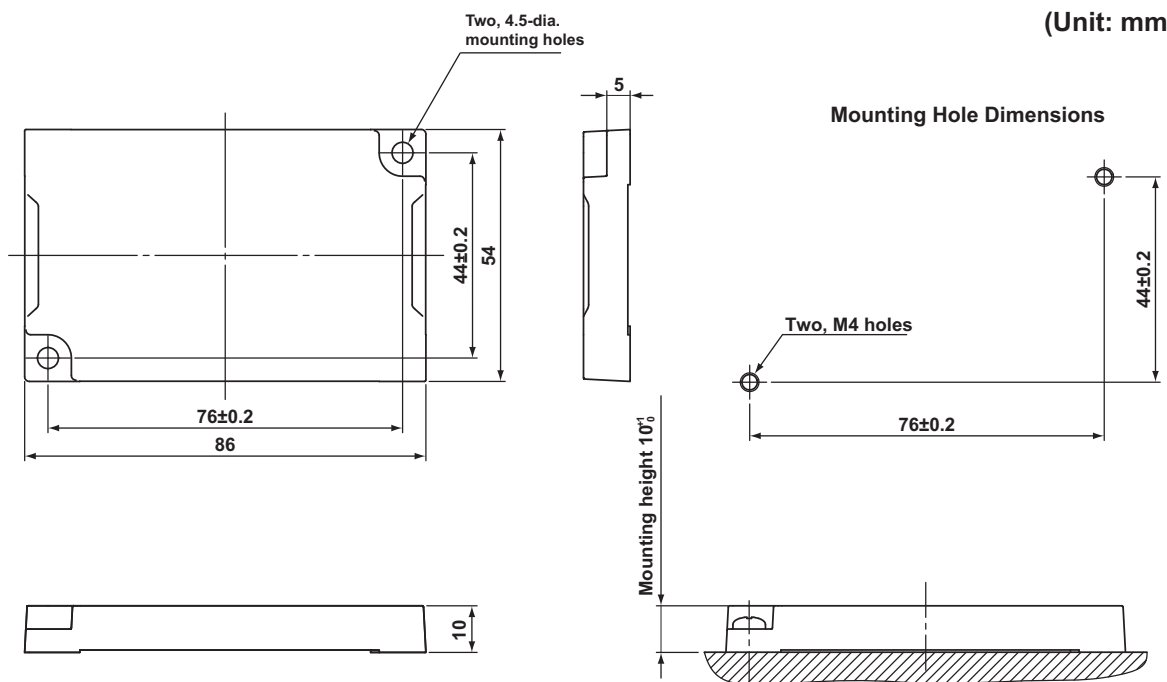

Case material: PPS resin







# 1-4 Data Characteristics

## 1-4-1 Communications Range Specifications

### V680S-HMD63-EIP

Reader/Writer	RF Tag	Communications Range Specification	
V680S-HMD63-EIP (mounted to metallic material)	V680-D1KP54T (mounted to non-metallic material)	Read	0.0 to 24.0 mm (axis offset: $\pm 10$ mm)
		Write	0.0 to 20.0 mm (axis offset: $\pm 10$ mm)
	V680-D1KP66T (mounted to non-metallic material)	Read	0.0 to 30.0 mm (axis offset: $\pm 10$ mm)
		Write	0.0 to 25.0 mm (axis offset: $\pm 10$ mm)
	V680-D1KP66MT (mounted to metallic material)	Read	0.0 to 25.0 mm (axis offset: $\pm 10$ mm)
		Write	0.0 to 20.0 mm (axis offset: $\pm 10$ mm)
	V680-D1KP66T-SP (mounted to non-metallic material)	Read	0.0 to 25.0 mm (axis offset: $\pm 10$ mm)
		Write	0.0 to 20.0 mm (axis offset: $\pm 10$ mm)
	V680S-D2KF67 (mounted to non-metallic material)	Read	7.0 to 40.0 mm (axis offset: $\pm 10$ mm)
		Write	7.0 to 40.0 mm (axis offset: $\pm 10$ mm)
	V680S-D2KF67M (mounted to metallic material)	Read	6.0 to 30.0 mm (axis offset: $\pm 10$ mm)
		Write	6.0 to 30.0 mm (axis offset: $\pm 10$ mm)
	V680S-D8KF67 (mounted to non-metallic material)	Read	7.0 to 40.0 mm (axis offset: $\pm 10$ mm)
		Write	7.0 to 40.0 mm (axis offset: $\pm 10$ mm)
V680S-D8KF67M (mounted to metallic material)	Read	6.0 to 30.0 mm (axis offset: $\pm 10$ mm)	
	Write	6.0 to 30.0 mm (axis offset: $\pm 10$ mm)	

● Installation Conditions

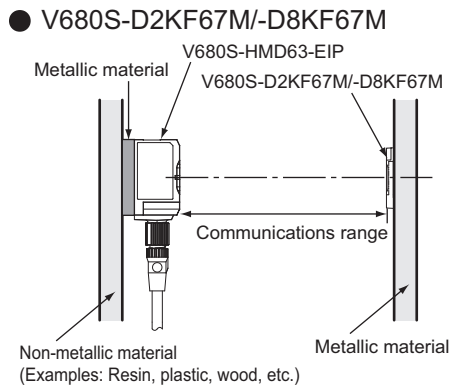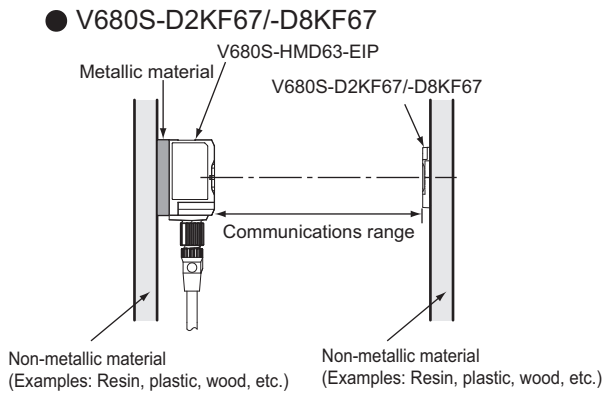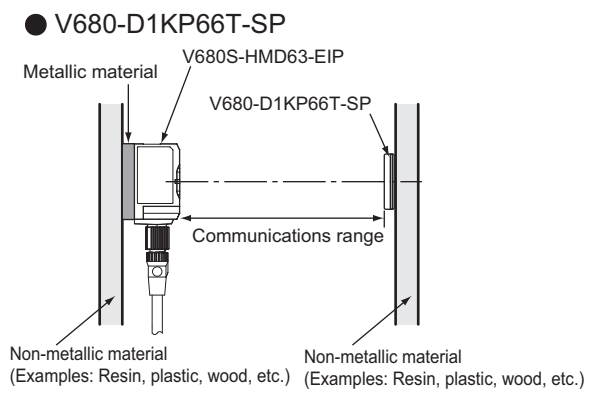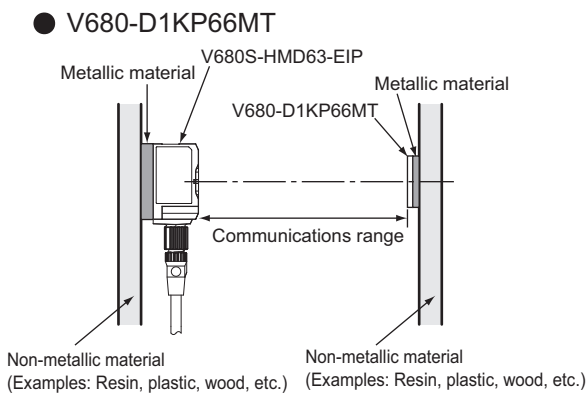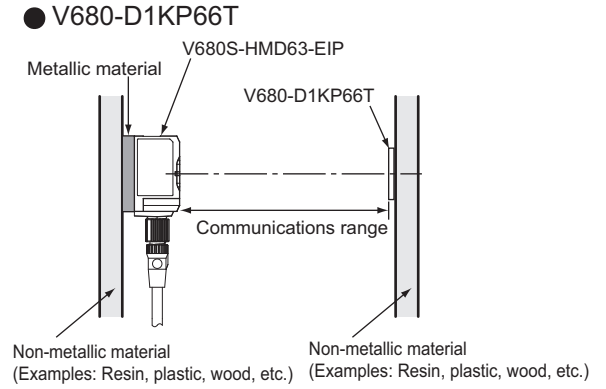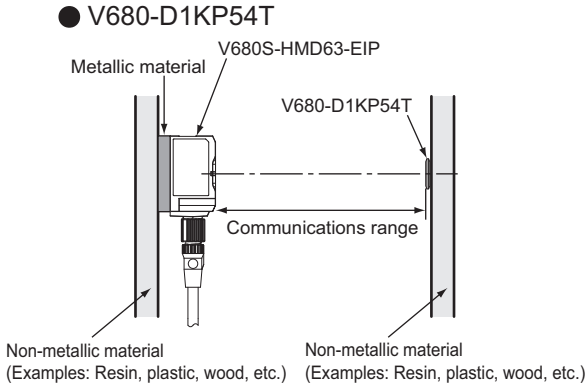


## V680S-HMD64-EIP


Reader/Writer	RF Tag	Communications Range Specification	
V680S-HMD64-EIP (mounted to metallic material)	V680-D1KP54T (mounted to non-metallic material)	Read	0.0 to 33.0 mm (axis offset: $\pm 10$ mm)
		Write	0.0 to 28.0 mm (axis offset: $\pm 10$ mm)
	V680-D1KP66T (mounted to non-metallic material)	Read	0.0 to 47.0 mm (axis offset: $\pm 10$ mm)
		Write	0.0 to 42.0 mm (axis offset: $\pm 10$ mm)
	V680-D1KP66MT (mounted to metallic material)	Read	0.0 to 35.0 mm (axis offset: $\pm 10$ mm)
		Write	0.0 to 30.0 mm (axis offset: $\pm 10$ mm)
	V680-D1KP66T-SP (mounted to non-metallic material)	Read	0.0 to 42.0 mm (axis offset: $\pm 10$ mm)
		Write	0.0 to 37.0 mm (axis offset: $\pm 10$ mm)
	V680-D1KP58HTN	Read	7.5 to 75.0 mm (axis offset: $\pm 10$ mm)
		Write	7.5 to 75.0 mm (axis offset: $\pm 10$ mm)
	V680S-D2KF67 (mounted to non-metallic material)	Read	5.0 to 65.0 mm (axis offset: $\pm 10$ mm)
		Write	5.0 to 65.0 mm (axis offset: $\pm 10$ mm)
	V680S-D2KF67M (mounted to metallic material)	Read	3.0 to 40.0 mm (axis offset: $\pm 10$ mm)
		Write	3.0 to 40.0 mm (axis offset: $\pm 10$ mm)
	V680S-D8KF67 (mounted to non-metallic material)	Read	5.0 to 65.0 mm (axis offset: $\pm 10$ mm)
		Write	5.0 to 65.0 mm (axis offset: $\pm 10$ mm)
	V680S-D8KF67M (mounted to metallic material)	Read	3.0 to 40.0 mm (axis offset: $\pm 10$ mm)
		Write	3.0 to 40.0 mm (axis offset: $\pm 10$ mm)
	V680S-D2KF68 (mounted to non-metallic material)	Read	7.5 to 75.0 mm (axis offset: $\pm 10$ mm)
		Write	7.5 to 75.0 mm (axis offset: $\pm 10$ mm)
	V680S-D2KF68M (mounted to metallic material)	Read	5.5 to 55.0 mm (axis offset: $\pm 10$ mm)
		Write	5.5 to 55.0 mm (axis offset: $\pm 10$ mm)
	V680S-D8KF68 (mounted to non-metallic material)	Read	7.5 to 75.0 mm (axis offset: $\pm 10$ mm)
		Write	7.5 to 75.0 mm (axis offset: $\pm 10$ mm)
	V680S-D8KF68M (mounted to metallic material)	Read	5.5 to 55.0 mm (axis offset: $\pm 10$ mm)
		Write	5.5 to 55.0 mm (axis offset: $\pm 10$ mm)

● Installation Conditions


● V680S-D2KF67/-D8KF67

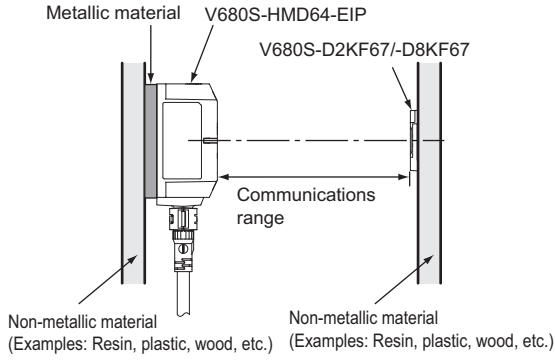


● V680S-D2KF67M/-D8KF67M

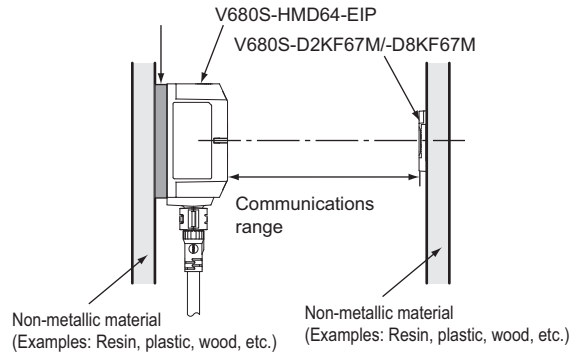


● V680S-D2KF68/-D8KF68

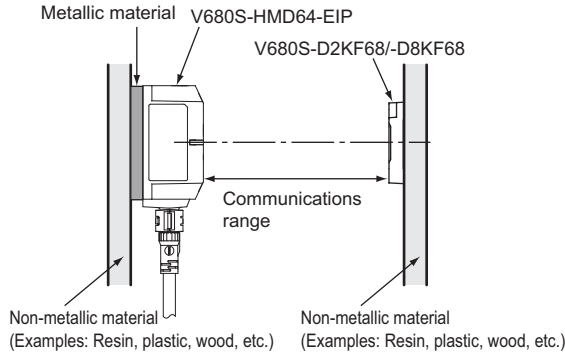


● V680S-D2KF68M/-D8KF68M

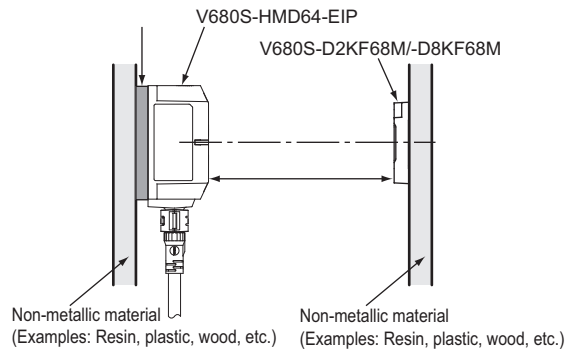


●V680-D1KP54T

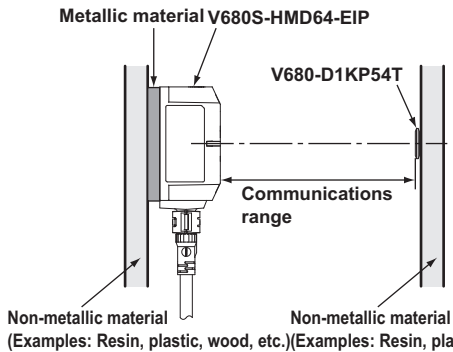


●V680-D1KP66T

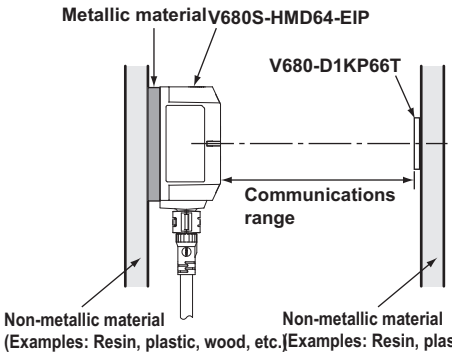


●V680-D1KP66MT

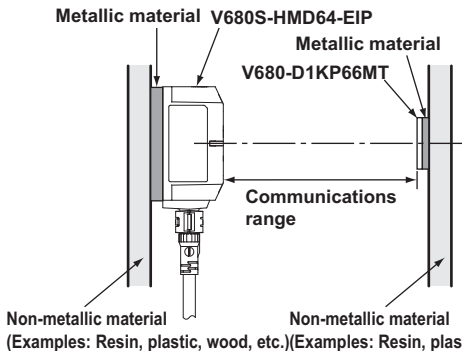

●V680-D1KP66T-SP

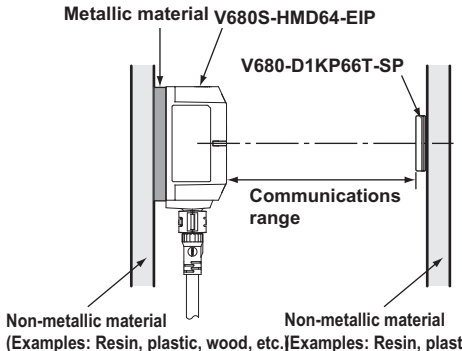

●V680-D1KP58HTN

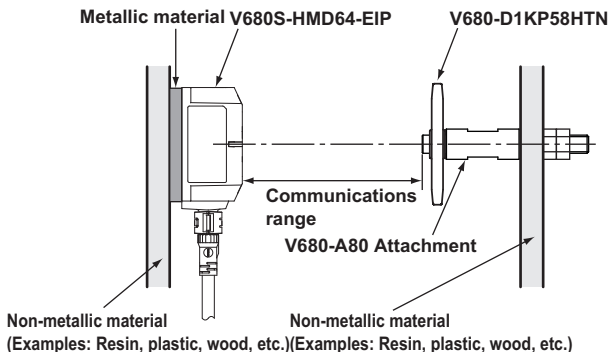

## V680S-HMD66-EIP

Reader/Writer	RF Tag	Communications Range Specification	
V680S-HMD66-EIP (mounted to metallic material)	V680-D1KP54T (mounted to non-metallic material)	Read	0.0 to 45.0 mm (axis offset: $\pm 10$ mm)
		Write	0.0 to 38.0 mm (axis offset: $\pm 10$ mm)
	V680-D1KP66T (mounted to non-metallic material)	Read	0.0 to 64.0 mm (axis offset: $\pm 10$ mm)
		Write	0.0 to 57.0 mm (axis offset: $\pm 10$ mm)
	V680-D1KP66MT (mounted to metallic material)	Read	0.0 to 37.0 mm (axis offset: $\pm 10$ mm)
		Write	0.0 to 30.0 mm (axis offset: $\pm 10$ mm)
	V680-D1KP66T-SP (mounted to non-metallic material)	Read	0.0 to 59.0 mm (axis offset: $\pm 10$ mm)
		Write	0.0 to 52.0 mm (axis offset: $\pm 10$ mm)
	V680-D1KP58HTN	Read	10.0 to 90.0 mm (axis offset: $\pm 10$ mm)
		Write	10.0 to 80.0 mm (axis offset: $\pm 10$ mm)
	V680S-D2KF67 (mounted to non-metallic material)	Read	7.0 to 85.0 mm (axis offset: $\pm 10$ mm)
		Write	7.0 to 85.0 mm (axis offset: $\pm 10$ mm)
	V680S-D2KF67M (mounted to metallic material)	Read	4.0 to 45.0 mm (axis offset: $\pm 10$ mm)
		Write	4.0 to 45.0 mm (axis offset: $\pm 10$ mm)
	V680S-D8KF67 (mounted to non-metallic material)	Read	7.0 to 85.0 mm (axis offset: $\pm 10$ mm)
		Write	7.0 to 85.0 mm (axis offset: $\pm 10$ mm)
	V680S-D8KF67M (mounted to metallic material)	Read	4.0 to 45.0 mm (axis offset: $\pm 10$ mm)
		Write	4.0 to 45.0 mm (axis offset: $\pm 10$ mm)
	V680S-D2KF68 (mounted to non-metallic material)	Read	10.0 to 115.0 mm (axis offset: $\pm 10$ mm)
		Write	10.0 to 115.0 mm (axis offset: $\pm 10$ mm)
	V680S-D2KF68M (mounted to metallic material)	Read	7.5 to 75.0 mm (axis offset: $\pm 10$ mm)
		Write	7.5 to 75.0 mm (axis offset: $\pm 10$ mm)
	V680S-D8KF68 (mounted to non-metallic material)	Read	10.0 to 115.0 mm (axis offset: $\pm 10$ mm)
		Write	10.0 to 115.0 mm (axis offset: $\pm 10$ mm)
	V680S-D8KF68M (mounted to metallic material)	Read	7.5 to 75.0 mm (axis offset: $\pm 10$ mm)
		Write	7.5 to 75.0 mm (axis offset: $\pm 10$ mm)




### Precautions for Correct Use


You can use the V680S-D8KF6□ with Reader/Writers with firmware version 2.00 or higher.

● Installation Conditions


● V680S-D2KF67/-D8KF67

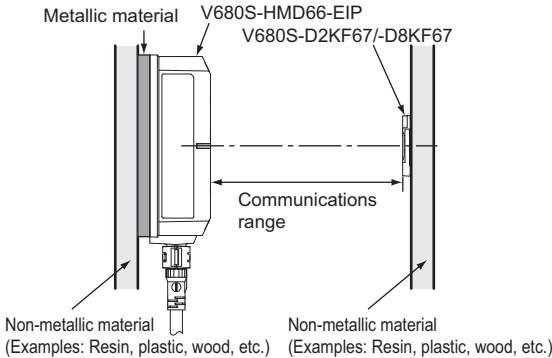


● V680S-D2KF67M/-D8KF67M

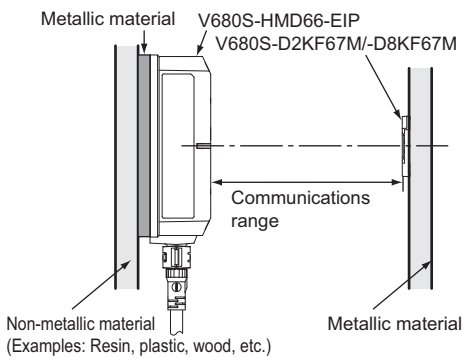


● V680S-D2KF68/-D8KF68

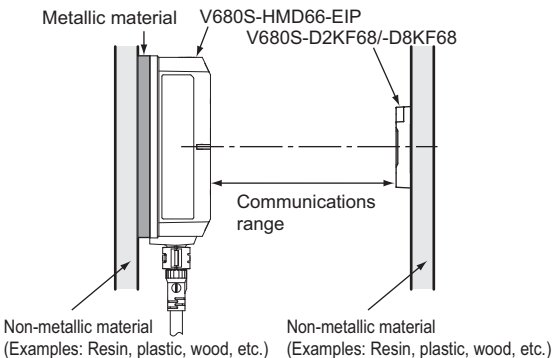


● V680S-D2KF68M/-D8KF68M

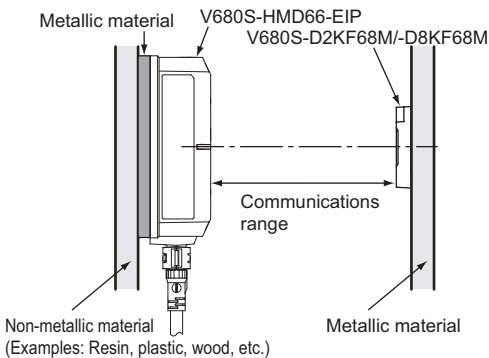


● **V680-D1KP54T**

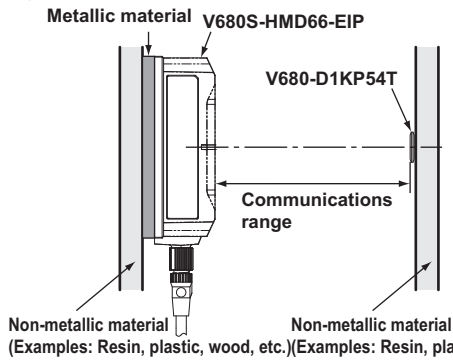


● **V680-D1KP66T**

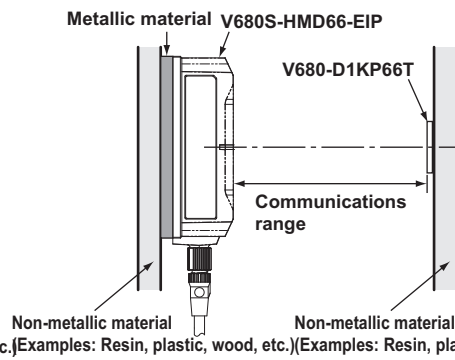


● **V680-D1KP66MT**

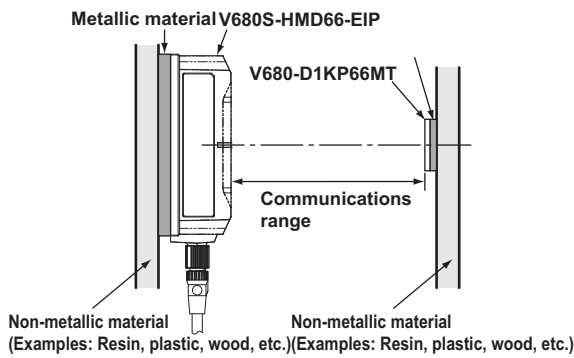

● **V680-D1KP66T-SP**

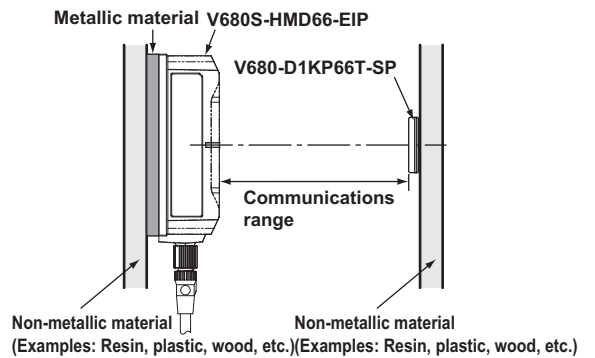

● **V680-D1KP58HTN**

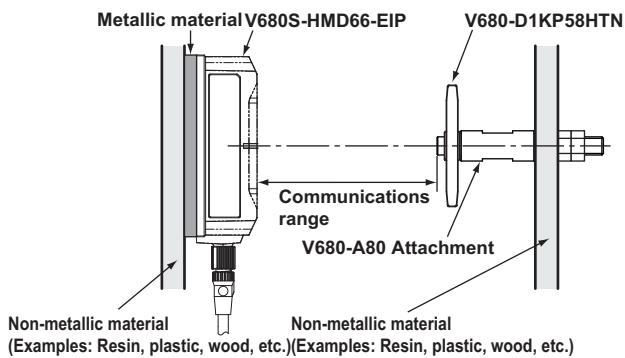

# 2

## System Configuration


This section describes the system configuration when the reader/writer is connected to a Host device such as a PLC or a personal computer for monitoring the communication diagnosis result.

---

<b>2-1</b>	<b>System Configuration .....</b>	<b>2-2</b>
2-1-1	One Reader/Writer is connected to the Host device (e.g., PLC).....	2-2
2-1-2	The plural Reader/Writer's are connected to the Host device (e.g., PLC) .....	2-3
2-1-3	The computer is connected to monitor the results of communications diagnostics .....	2-4
2-1-4	About the Ethernet communication abnormality.....	2-5


## 2-1 System Configuration

### 2-1-1 One Reader/Writer is connected to the Host device (e.g., PLC)

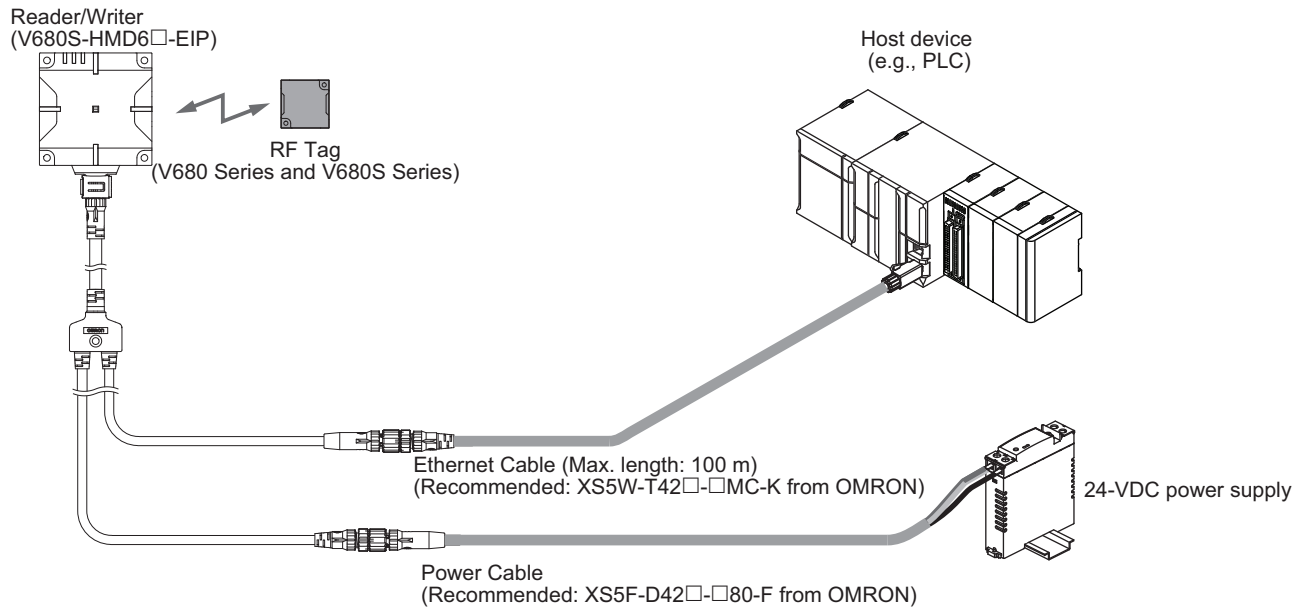

#### Precautions for Correct Use

- Connect the Ethernet Cable to a host device (e.g., Switching Hub or PLC) that supports STP and ground the host device to 100 W or less.
- Use a host device (PLC) that can set connections as the originator (i.e., the side that requests opening a communications line for tag data links).

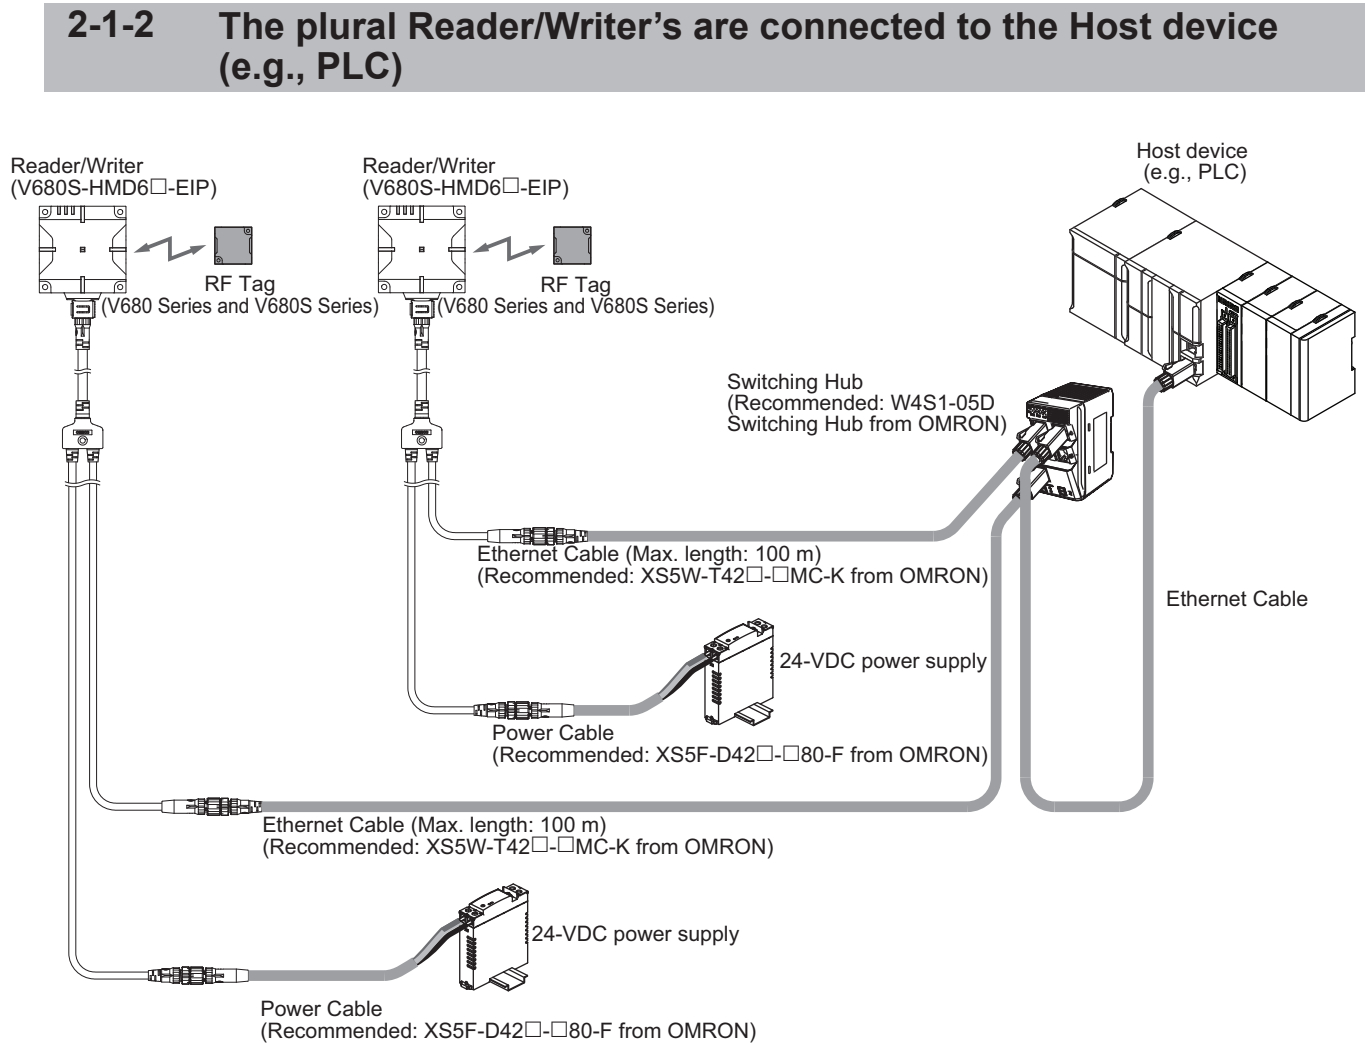


### Precautions for Correct Use

- Connect the Ethernet Cable to a host device (e.g., Switching Hub or PLC) that supports STP and ground the host device to 100  $\Omega$  or less.
- Use a host device (PLC) that can set connections as the originator (i.e., the side that requests opening a communications line for tag data links).

### 2-1-3 The computer is connected to monitor the results of communications diagnostics

The system requires the combination of OS and browser to use the Web browser.  
For details, refer to *Section 8 Web Browser Interface* on page 8-1.

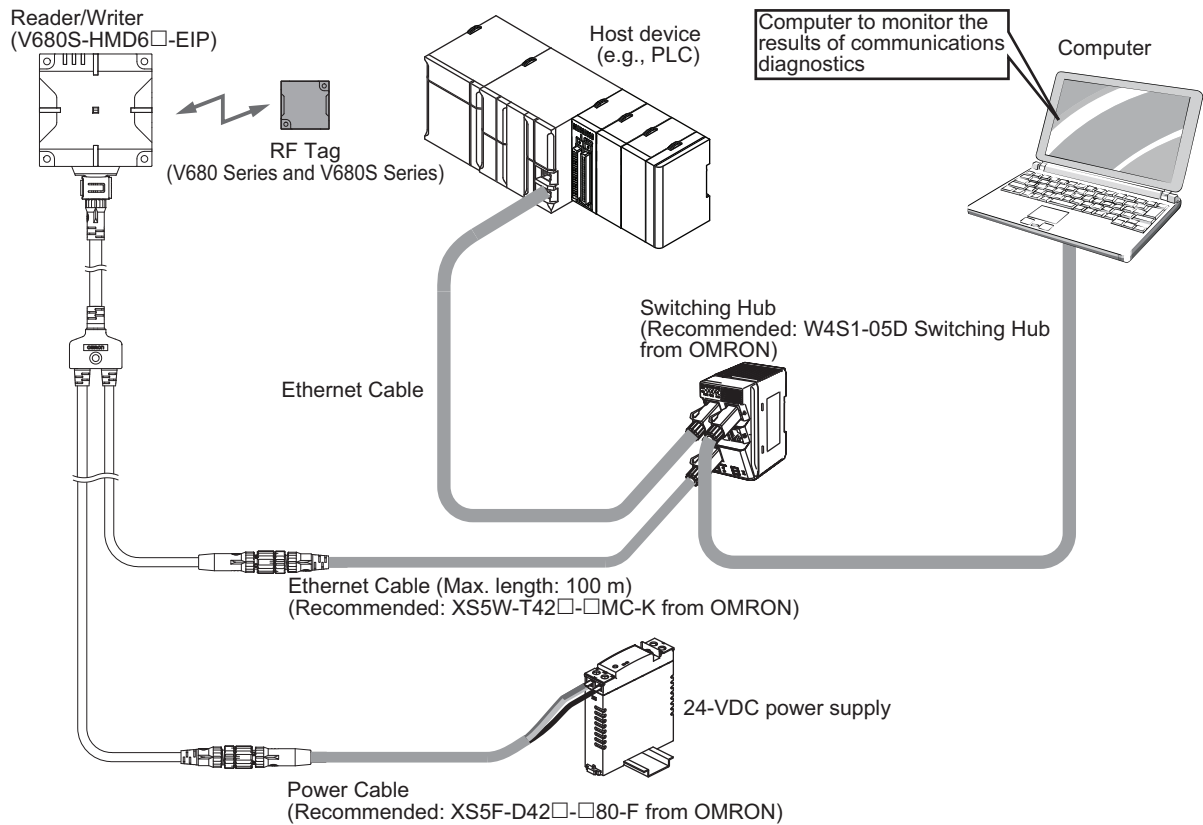

#### Precautions for Correct Use


- Connect the Ethernet Cable to a host device (e.g., Switching Hub or PLC) that supports STP and ground the host device to 100 Ω or less.
- Always use a Switching Hub on any network where tag data links are used.
- If you use a repeater hub on a network on which EtherNet/IP tag data links (cyclic communications) are used, the network communications load will increase causing frequent collisions and unstable communications.
- Use a host device (PLC) that can set connections as the originator (i.e., the side that requests opening a communications line for tag data links).

## 2-1-4 About the Ethernet communication abnormality



### Precautions for Correct Use

If an Ethernet network is configured into a loop as shown below, broadcast packets are accumulated in the band, and the communication is disabled. Therefore, do not configure the Ethernet network into a loop.

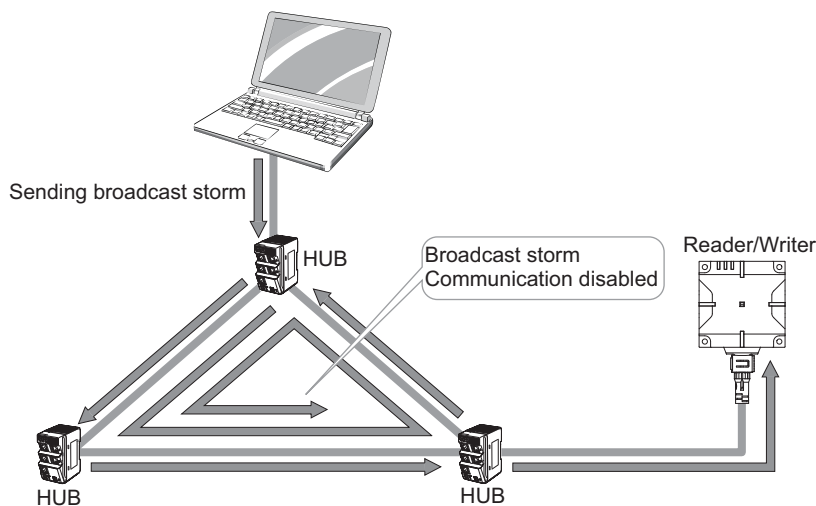

### Precautions for Correct Use

When a large amount of broadcast packets or multicast packets flow into the Ethernet network, Reader/Writers may stop its operation. Please do not send a large amount of packet. Please separate the Reader/Writers from the network segment that broadcast or multicast packets flow.




### Precautions for Correct Use

---

**When using in combination with Ethernet/IP devices such as PLC made by other manufacturers**

If communication is interrupted due to a disconnection of a connector or other reason and does not resume normally afterwards, try restarting the Ethernet/IP device.

---

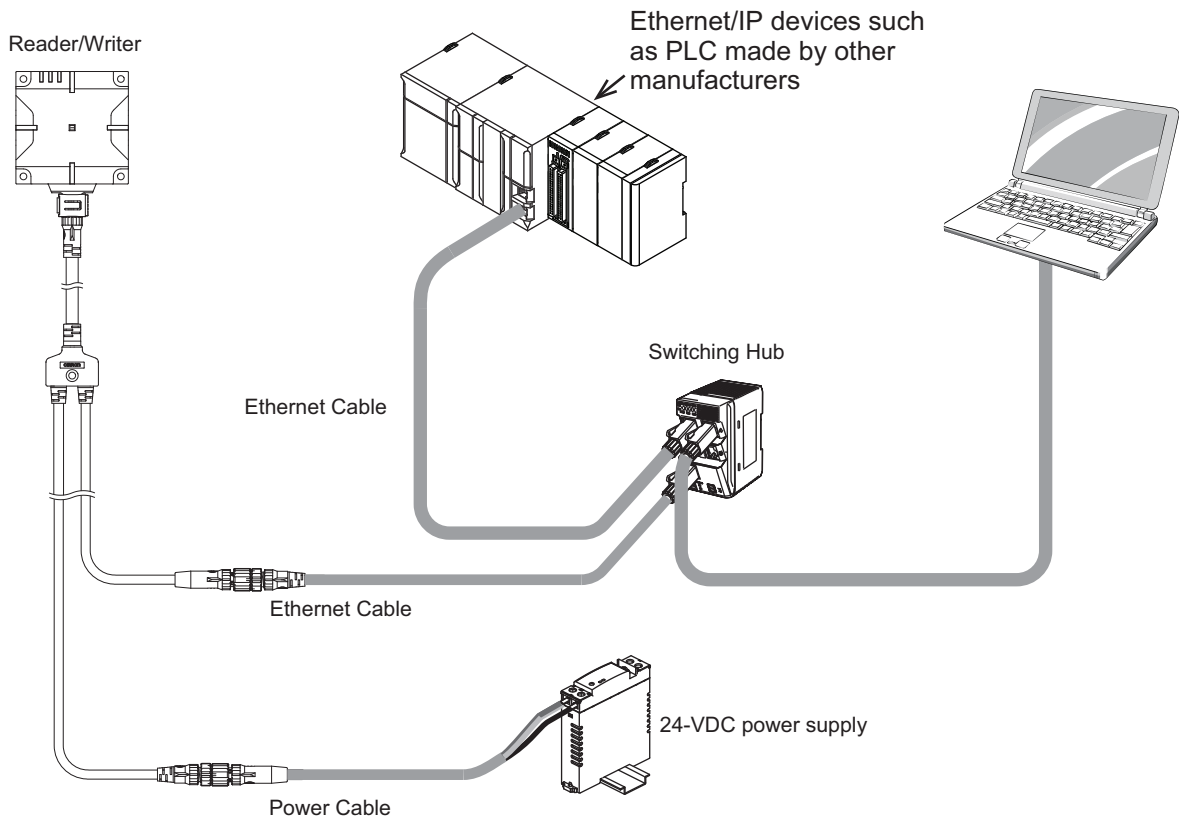

# 3

## Names and Functions of Components

This section describes the names of each part of the Reader/Writer, the operation indicators, the connectors, and the shape of the RF tags.


---

<b>3-1</b>	<b>Reader/Writer</b> .....	<b>3-2</b>
3-1-1	Component Names .....	3-2
3-1-2	Operation Indicators .....	3-4
3-1-3	Connector .....	3-5
<b>3-2</b>	<b>RF Tag</b> .....	<b>3-7</b>
3-2-1	V680-D1KP54T .....	3-7
3-2-2	V680-D1KP66T/-D1KP66MT .....	3-7
3-2-3	V680-D1KP66T-SP .....	3-7
3-2-4	V680-D1KP58HTN .....	3-8
3-2-5	V680S-D2KF67/-D2KF67M/-D8KF67/-D8KF67M .....	3-8
3-2-6	V680S-D2KF68/-D2KF68M/-D8KF68/-D8KF68M .....	3-8


# 3-1 Reader/Writer


## 3-1-1 Component Names

V680S-HMD63-EIP

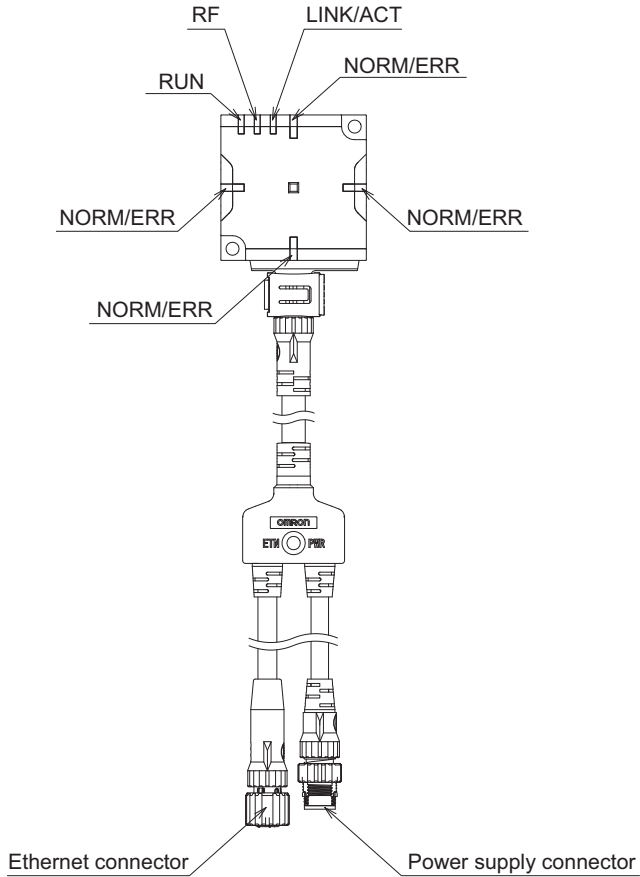

V680S-HMD64-EIP

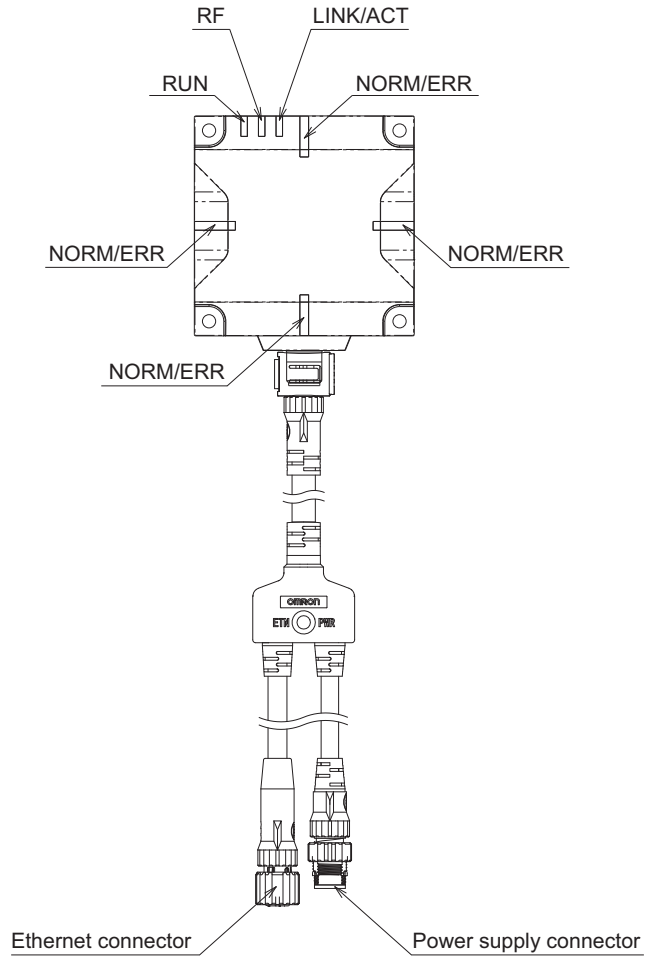

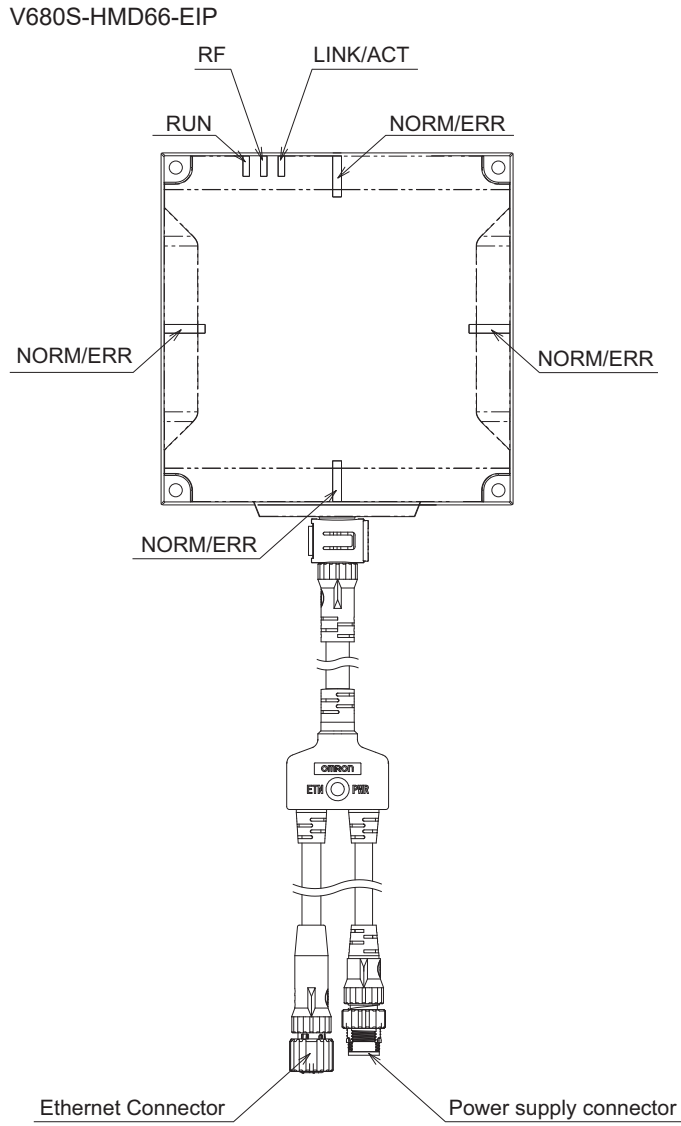

### 3-1-2 Operation Indicators

#### RUN

Status	Meaning
Lit green	Lighting while the Reader/Writer is operating normally.
Flashing green	Flashes during operation in Safe Mode. (Flashes at 1-s intervals.)
Flashing green quickly	The indicator will flash quickly in the following cases. (Flashes at 200-ms intervals.) <ul style="list-style-type: none"> <li>• During Reader/Writer initialization</li> <li>• While the Reader/Writer is in Run Mode and is waiting to establish a connection for tag data links from the originator</li> </ul>
Lit yellow	Lights yellow while the Reader/Writer is operating in Slave Mode.
Flashing yellow quickly	Flashes quickly while the Reader/Writer is in Slave Mode and is waiting to establish tag data links as the originator.
Not lit	Turn off when power is not supplied.

#### RF

Status	Meaning
Lit yellow	Lighting during communication for RF Tag.
Not lit	Turn off when not in communication with no error.

#### NORM/ERR

The NORM/ERR indicator shows the result of communications with an RF Tag.

Status	Meaning
Lit green	Lights once when processing a communications command or another command from the host device is completed normally. When communication diagnostic is enabled, this indicator will flash once each time a stable communication is detected.
Lit yellow	When communication diagnostic is enabled, this indicator will flash once each time an unstable communication is detected.
Flashing yellow quickly	Flashes quickly when a timeout is detected during tag data links. (A timeout occurs when tag data from the originator is not received within the time specified for the timeout value.)
Lit red	Lights once when processing a communications command or another command from the host device ends in an error. It continues to light if a system error occurred.
Flashing red	Flash when recoverable error occurs. (Configuration memory error, or Control signal wiring mistake, etc.)
Flashing red irregularly	The indicator will flash irregularly in the following cases. (It will repeatedly flash twice for 100 ms at 1-s intervals.) <ul style="list-style-type: none"> <li>• When the same IP address is detected for two different devices on the network at startup</li> <li>• When an error occurs when getting an IP address from the BOOTP server at startup (The BOOTP server does not respond. The IP address from the BOOTP server to set in the Reader/Writer is illegal.)</li> </ul>
Not lit	Turn off when the standby state.

 
#### LINK/ACT

Status	Meaning
Lit green	Lighting during linking normally.
Flashing green	Flash during detects a carrier.
Not lit	Turn off when the ethernet cable is not connected.

Refer to 9-2 *Errors and Indicator Status* on page 9-4 for information of Error content of the operation indicator.


## 3-1-3 Connector

## Power Supply Connector (M12 A-Coding, male)



Pin No.	Name	Description	I/O
1	24P	+24 V	---
2	CONT	Control signal (operating mode signal) * Run Mode: Connect to +24 V and then start the Reader/Writer. Safe Mode: Connect to 0 V and then start the Reader/Writer.	IN
3	24N	0 V	---
4	-	-	---

## Ethernet Connector (M12 D-Coding, female)

 


Pin No.	Name	Description	I/O
1	TD+	Ethernet send signal +	OUT
2	RD+	Ethernet receive signal +	IN
3	TD-	Ethernet send signal -	OUT
4	RD-	Ethernet receive signal -	IN
Housing	FG	Frame ground	---



#### Precautions for Correct Use

---

- If an Ethernet network is configured into a loop as shown below, broadcast packets are accumulated in the band, and the communication is disabled. Therefore, do not configure the Ethernet network into a loop.

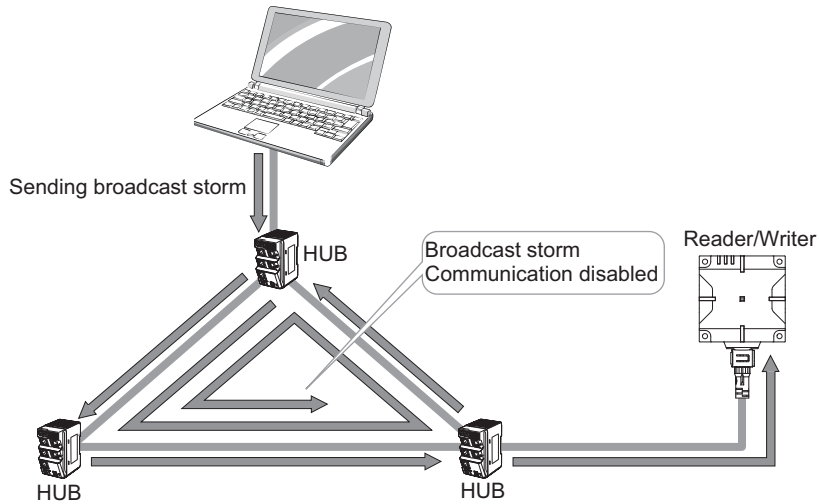

- When a large amount of broadcast packets or multicast packets flow into the Ethernet network, Reader/Writers may stop its operation. Please do not send a large amount of packet. Please separate the Reader/Writers from the network segment that broadcast or multicast packets flow.
-

## 3-2 RF Tag

The model numbers of the RF Tags that can communicate with the Reader/Writer are given in this section. For the communications range specifications, refer to *1-4-1 Communications Range Specifications* on page 1-31.


(Unit: mm)

### 3-2-1 V680-D1KP54T




Shape: 20 dia. × 2.7

### 3-2-2 V680-D1KP66T/-D1KP66MT

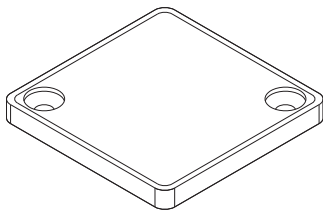


Shape: 34 × 34 × 3.5 (W × H × D)

### 3-2-3 V680-D1KP66T-SP

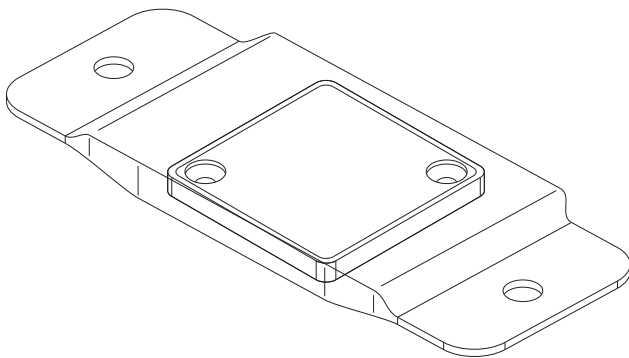


Shape: 95 × 36.5 × 6.5 (W × H × D)  
(excluding protruding parts)

**3-2-4 V680-D1KP58HTN**

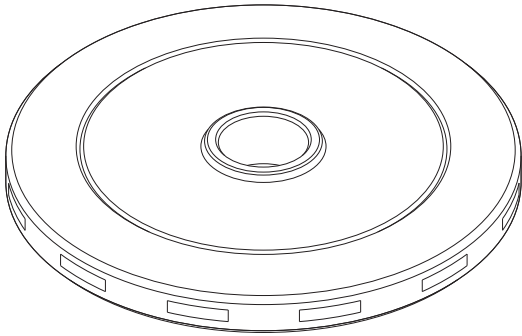


Shape: 80 dia. × 10

**3-2-5 V680S-D2KF67/-D2KF67M/-D8KF67/-D8KF67M**

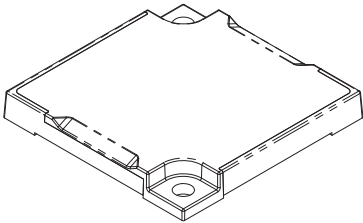

Shape: 40 × 40 × 5 (W × H × D)

**3-2-6 V680S-D2KF68/-D2KF68M/-D8KF68/-D8KF68M**

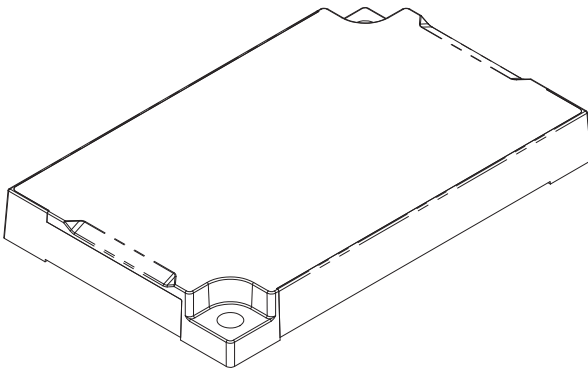

Shape: 86 × 54 × 10 (W × H × D)



**Precautions for Correct Use**

You can use the V680S-D8KF6□ with Reader/Writers with firmware version 2.00 or higher.



# Installation and Connections

This section describes the installation of the reader/writer, connector cover, RF tag, and the connection and wiring of the reader/writer, power cable, and Ethernet cable.

---


<b>4-1</b>	<b>Installation .....</b>	<b>4-2</b>
4-1-1	Reader/Writer .....	4-2
4-1-2	Connector Cover .....	4-5
4-1-3	RF Tag.....	4-7
<b>4-2</b>	<b>Connections and Wiring.....</b>	<b>4-14</b>
4-2-1	Connecting and Removing the Reader/Writer Power Cable and Ethernet Cable .....	4-14

# 4-1 Installation

## 4-1-1 Reader/Writer


### V680S-HMD63-EIP

Install the Reader/Writer with two M4 screws. Use both spring washers and flat washer.

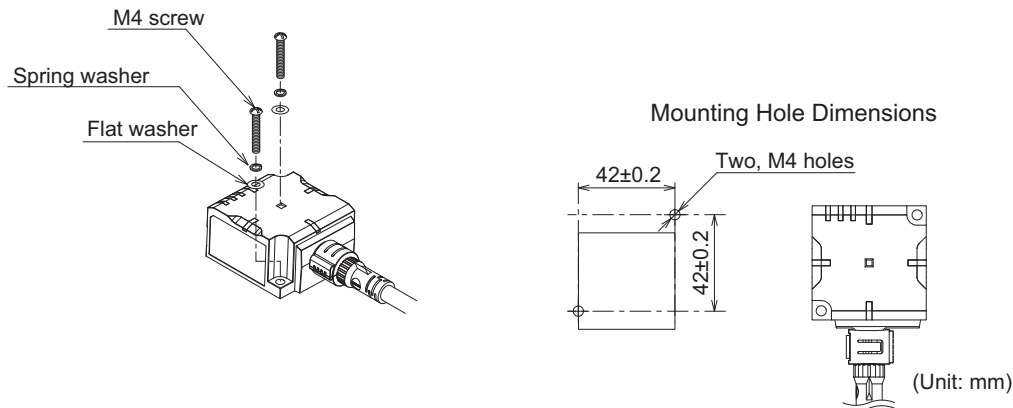

When you install the Reader/Writer, prepare the metal plate shown in the following figure. When the metal plates size is larger than the below illustration, communication range will change.

Material: Steel

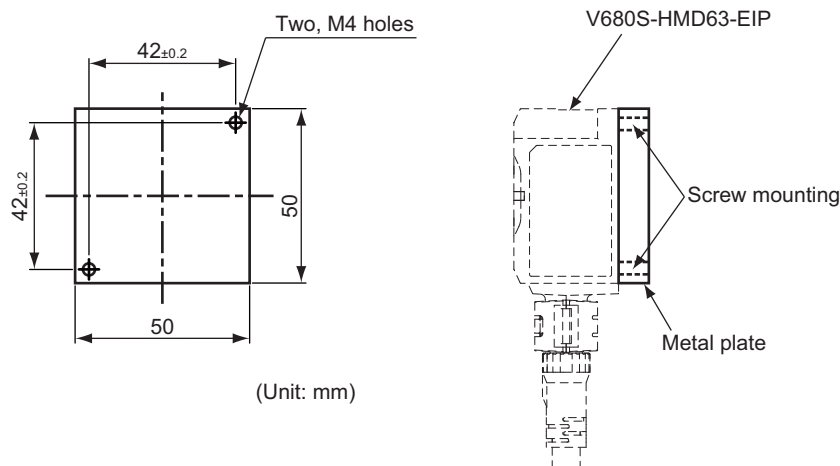


#### Precautions for Correct Use

- Although it is possible to use SUS, aluminum or brass in addition to steel as the metal plate, communications range is influenced by the material. Do not use resin as the metal plate.
- The recommended tightening torque for M4 screws is 1.2 N·m.


Refer to *A-2 Reader/Writer Installation Precautions* on page A-16 for information of surrounding metal and Mutual Interference of Reader/Writers.

## V680S-HMD64-EIP

Install the Reader/Writer with four M4 screws. Use both spring washers and flat washers.

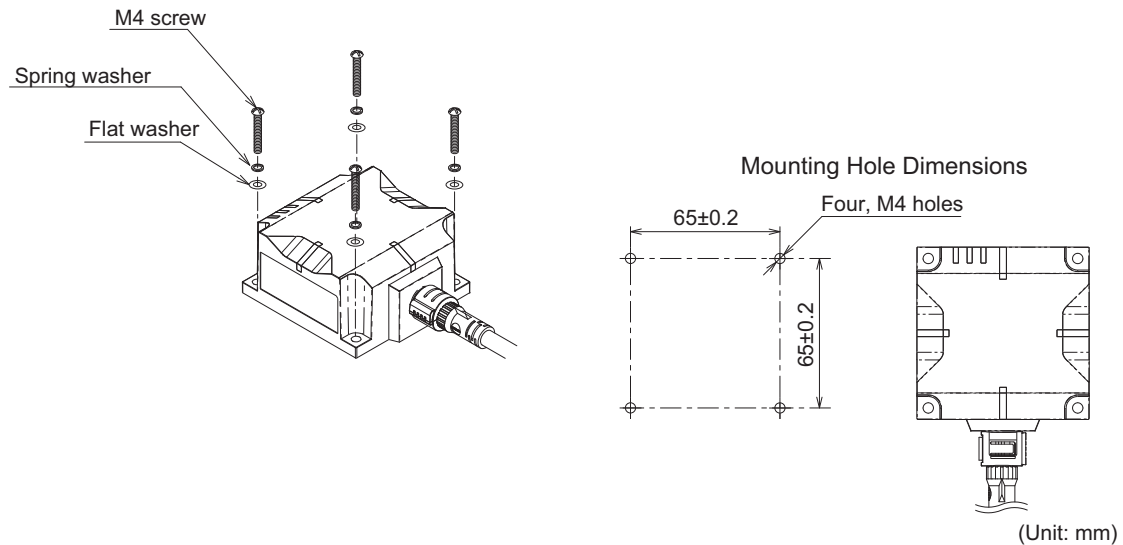

When you install the Reader/Writer, prepare the metal plate shown in the following figure. When the metal plates size is larger than the below illustration, communication range will change.

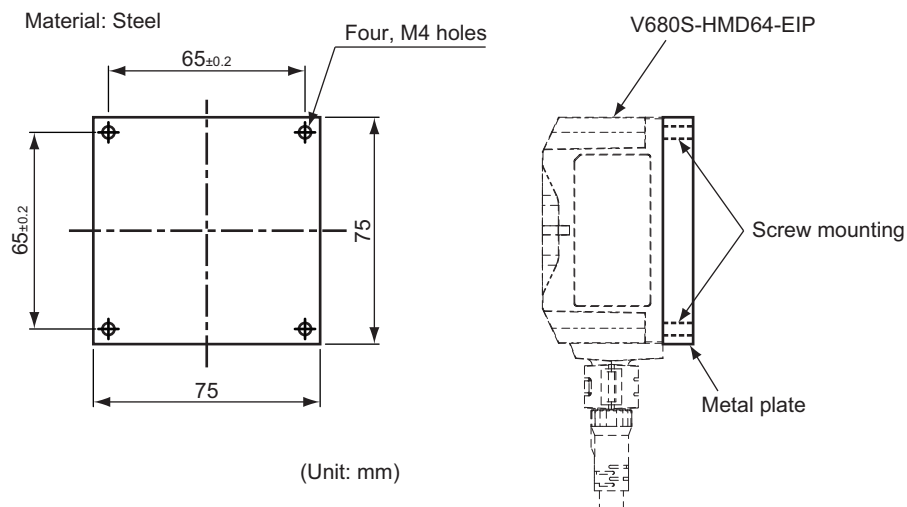


### Precautions for Correct Use

- Although it is possible to use SUS, aluminum or brass in addition to steel as the metal plate, communications range is influenced by the material. Do not use resin as the metal plate.
- The recommended tightening torque for M4 screws is 1.2 N·m.


Refer to *A-2 Reader/Writer Installation Precautions* on page A-16 for information of surrounding metal and Mutual Interference of Reader/Writers.

## V680S-HMD66-EIP

Install the Reader/Writer with four M4 screws. Use both spring washers and flat washers.

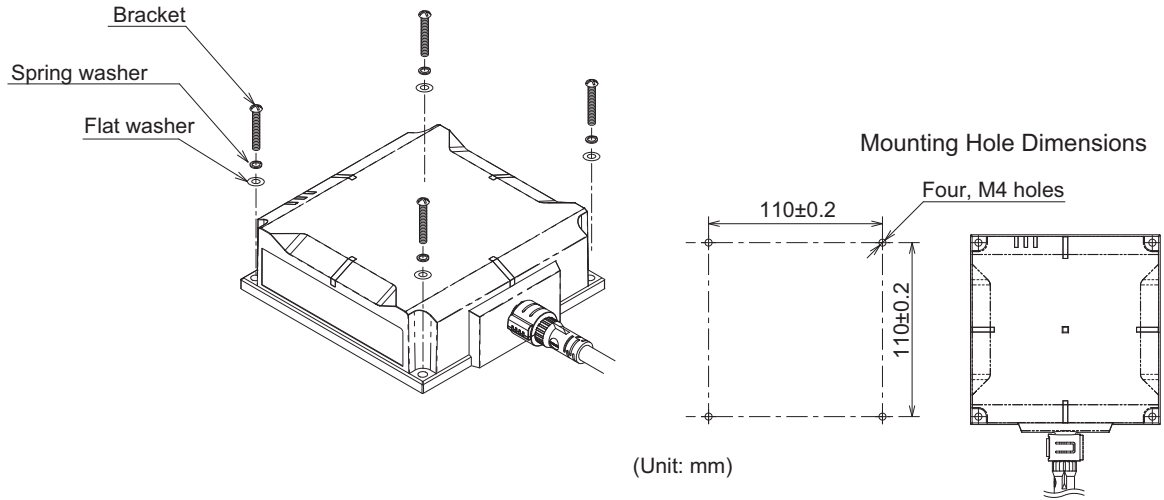

When you install the Reader/Writer, prepare the metal plate shown in the following figure. When the metal plates size is larger than the below illustration, communication range will change.

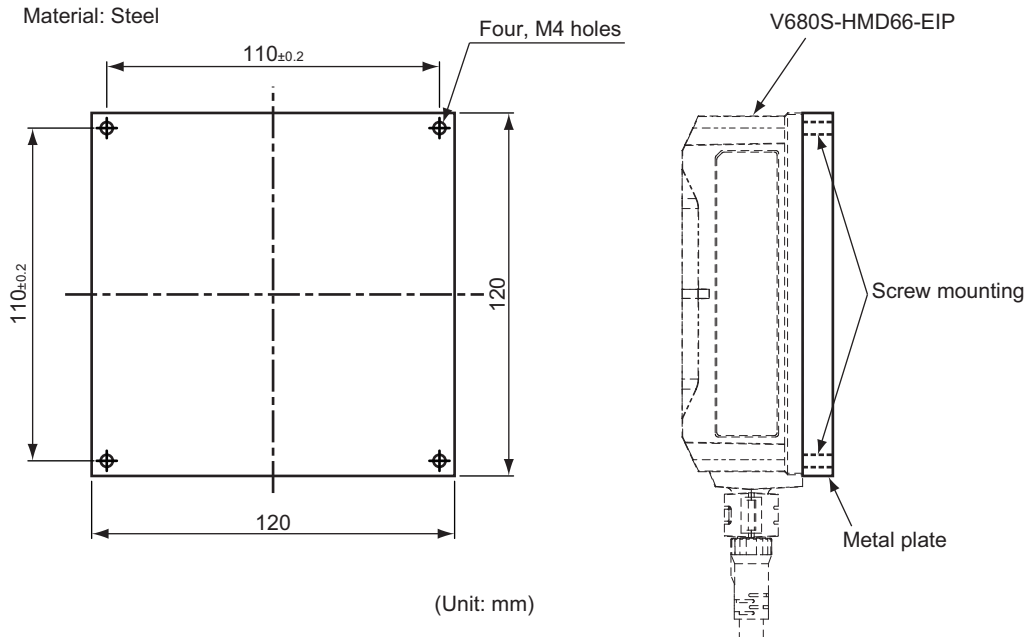

### Precautions for Correct Use

- Although it is possible to use SUS, aluminum or brass in addition to steel as the metal plate, communications range is influenced by the material. Do not use resin as the metal plate.
- The recommended tightening torque for M4 screws is 1.2 N·m.


Refer to *A-2 Reader/Writer Installation Precautions* on page A-16 for information of surrounding metal and Mutual Interference of Reader/Writers.

## 4-1-2 Connector Cover


### V680S-A63-S

Either use the V680S-A63-S Attachment to mount the Connector Cover with screws or permanently attach the RF Tags with adhesive.


- 1 Through a cord into a connector cover.

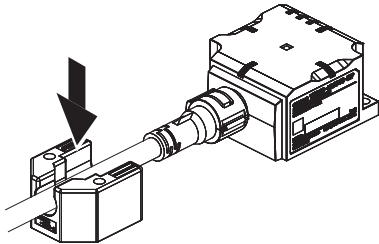

- 2 Press a connector cover up until it clicks.

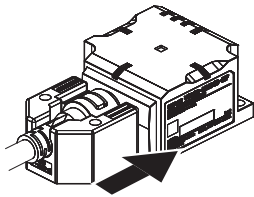

- 3 Install the connector cover with two M4 screws. Tightening torque: 1.2 N·m

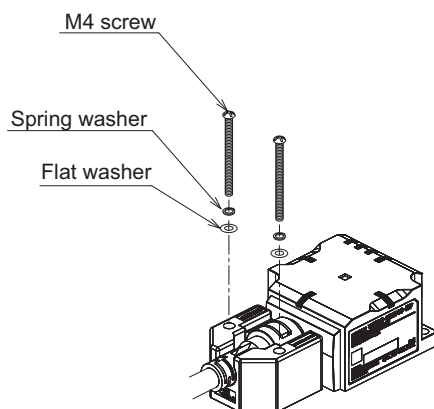

#### Precautions for Correct Use


When removing a connector, please remove the screw on which a connector cover is being fixed and shift a connector cover.

1., 2., 3. above-mentioned is reverse.


## V680S-A64-S

Either use the V680S-A64-S Attachment to mount the Connector Cover with screws or permanently attach the RF Tags with adhesive.


- 1 Through a cord into a connector cover.

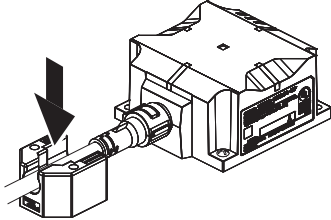

- 2 Press a connector cover up until it clicks.

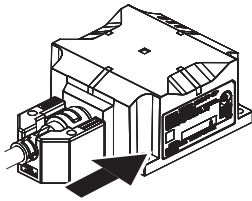

- 3 Install the connector cover with two M4 screws. Tightening torque: 1.2 N·m

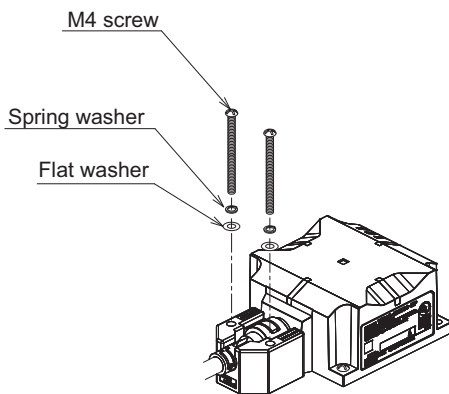

### Precautions for Correct Use

When removing a connector, please remove the screw on which a connector cover is being fixed and shift a connector cover.

1., 2., 3. above-mentioned is reverse.


## 4-1-3 RF Tag

**V680-D1KP54T**

Either use the V700-A80 Attachment to mount the RF Tags with screws or permanently attach the RF Tags with adhesive.

**Installation with the V700-A80 Attachment**


- 1 Place the V680-D1KP54T RF Tag in the Attachment.  
The V680-D1KP54T RF Tag can be placed in the Attachment in either direction. The direction does not affect operation.

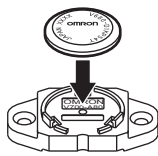**Precautions for Correct Use**

Do not repeatedly place the RF Tag in the Attachment and remove it from the Attachment. If you do so, the RF Tag will become loose or the Attachment will be damaged.

If you must remove an RF Tag from the Attachment, insert a flat-blade screwdriver in the gap under the RF Tag. Do not try to remove it with your bare hands. Doing so may result in injury.

- 2 Mount the Attachment with M3 screws.  
Tighten the screws to a suitable torque. Tightening torque: 0.3 to 0.5 N·m

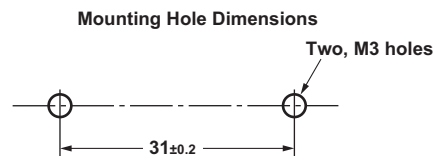**Installation with Adhesive**

Select an adhesive that is suitable for the materials. Use the correct application method and amount. Always confirm that the RF Tag is securely attached before you use it.

The RF Tags are made from PPS resin. We recommend epoxy adhesives to mount them on metal or hard plastic.

The epoxy adhesives that are listed in the following table are recommended for the given temperature ranges.

Ambient operating temperature	Product name	Manufacturer
-40 to 70°C	Two-part Epoxy Adhesive: TB2001 (main agent)/TB2105C (curing agent)	ThreeBond Co., Ltd.
	One-part Moisture-curing Elastic Adhesive: TB1530	ThreeBond Co., Ltd.
-40 to 110°C	Two-part Epoxy Adhesive: EP001	Cemedine Co. Ltd.

Ambient operating temperature	Product name	Manufacturer
-40 to 150°C	One-part Epoxy Adhesive: TB2285	ThreeBond Co., Ltd.
	Two-part Epoxy Adhesive: TB2087	ThreeBond Co., Ltd.



### Precautions for Correct Use


The above adhesives may not provide sufficient strength when attaching RF Tags to polyethylene, polypropylene, fluororesins, or silicon-based resins. Check applicability carefully in advance. Consult with the manufacturer for detailed information on adhesives.

## V680-D1KP66T

### Mounting on Non-metallic Material


Mount the RF Tag using M3 flat-head screws from the marked side.

Tighten the screws to a torque of 0.3 to 0.5 N·m.

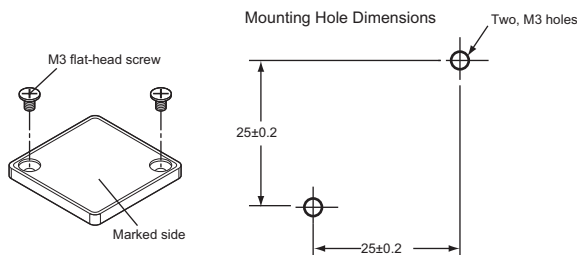

### Mounting on Metallic Material


The communications range will decrease if there is metal at the back of the V680-D1KP66T RF Tag. If the RF Tag is mounted on metallic material, use the V600-A86 Attachment (sold separately) or a non-metallic spacer (e.g., plastic or resin).

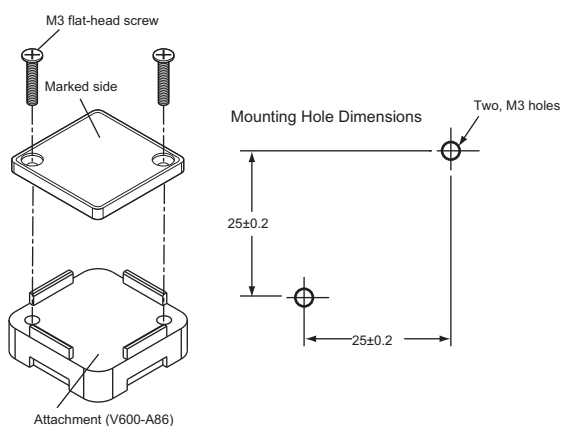

Refer to *A-3 RF Tag Installation Precautions* on page A-22 for information on the effect of metal at the back surface, Mutual Interference of RF Tags and Influence of Inclination of the V680-D1KP66T.


## V680-D1KP66MT

Mount the RF Tag using M3 flat-head screws from the marked side. Tighten the screws to a torque of 0.3 to 0.5 N·m.

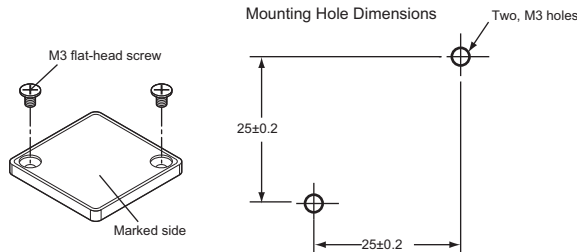

When you install the RF tag, prepare the metal plate as shown in the figure below. When the metal plates size is larger than the below illustration, communication range will change. Please confirm the influence well.

### Material: Steel

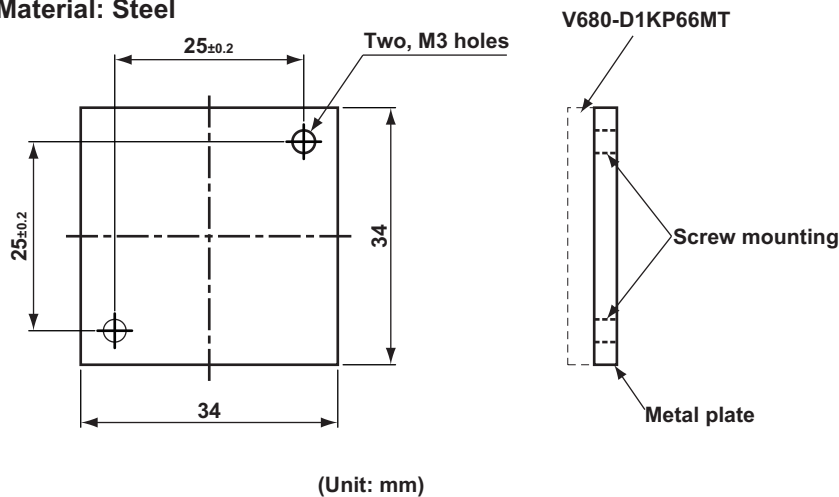

### Precautions for Correct Use


Although it is possible to use SUS, aluminum or brass in addition to steel as the metal plate, communications range is influenced by the material. Do not use resin as the metal plate.

Refer to *A-3 RF Tag Installation Precautions* on page A-22 for information on the effect of surrounding metal, Mutual Interference of RF Tags and Influence of Inclination on the V680-D1KP66MT.

## V680-D1KP66T-SP

Mount the RF Tag using M5 screws and washers. The tightening torque is 1.2 N·m.

There are no restrictions on the mounting direction for the RF Tag or the direction of RF Tag travel in respect to the Reader/Writer.

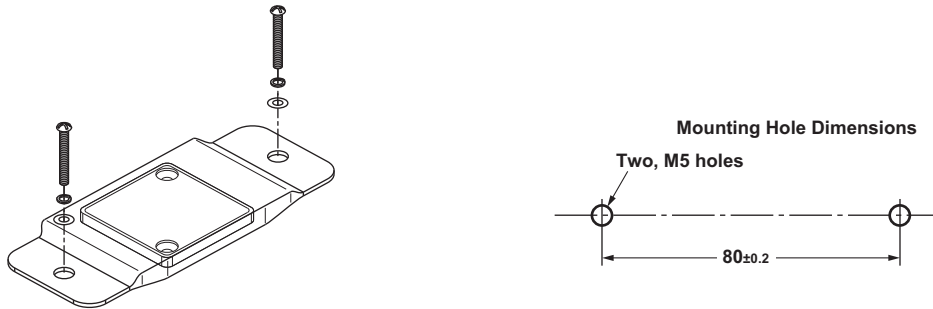


Refer to *A-3 RF Tag Installation Precautions* on page A-22 for information on the effect of metal at the back surface, Mutual Interference of RF Tags and Influence of Inclination of the V680-D1KP66T-SP.


## V680-D1KP58HTN

Use the following procedure to install an RF Tag with the V680-A80 Attachment.

- 1 Attach the Attachment to the workpiece.

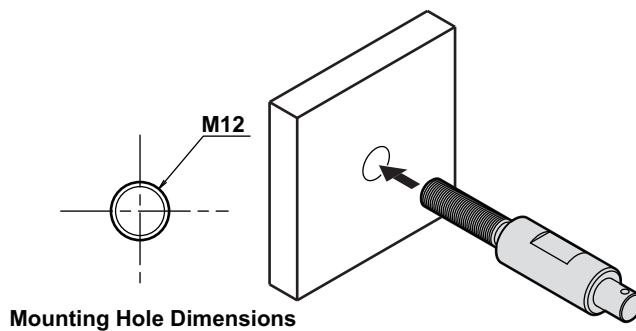


- 2 Tighten the lock nut.  
Use a tightening torque of 21 to 42 N·m.

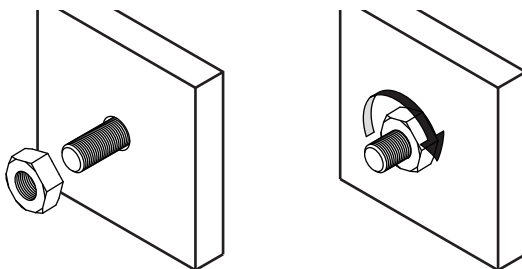


- 3 Place the RF Tag in the Attachment.

The RF Tag can be attached in either direction. The direction does not affect operation.

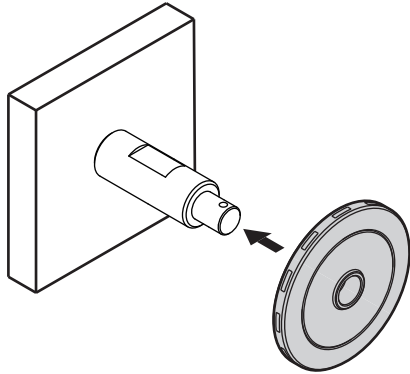

- 4** Insert the split pin into the 3.2-diameter hole and spread open the end of the pin to prevent it from coming out.

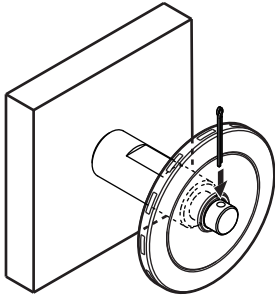

#### Precautions for Correct Use

Two nuts and one split pin are provided with the V680-A80 Attachment. You must provide any replacement split pins.


Split pin	Nominal dimensions: 3.2-mm dia. × 20-mm length
-----------	--

Refer to *A-3 RF Tag Installation Precautions* on page A-22 for information on the effect of metal at the back surface, Mutual Interference of RF Tags and Influence of Inclination of the V680-D1KP58HTN.

## V680S-D2KF67/-D8KF67

Mount the RF Tag with M3 screws.

Tighten the screws to a torque of 0.6 N·m.

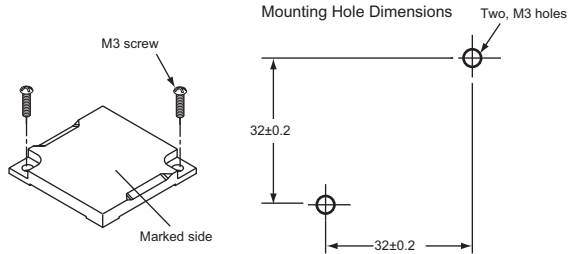

Refer to *A-3 RF Tag Installation Precautions* on page A-22 for information on the effect of metal at the back surface, Mutual Interference of RF Tags and Influence of Inclination of the V680S-D2KF67.

Refer to *A-3 RF Tag Installation Precautions* on page A-22 for information on the effect of metal at the back surface, Mutual Interference of RF Tags and Influence of Inclination of the V680S-D8KF67.



### Precautions for Correct Use


You can use the V680S-D8KF67 with Reader/Writers with firmware version 2.00 or higher.

## V680S-D2KF67M/-D8KF67M

Mount the V680-D8KF67M to a metal surface.

Mount the RF Tag with M3 screws.

Tighten the screws to a torque of 0.6 N·m.

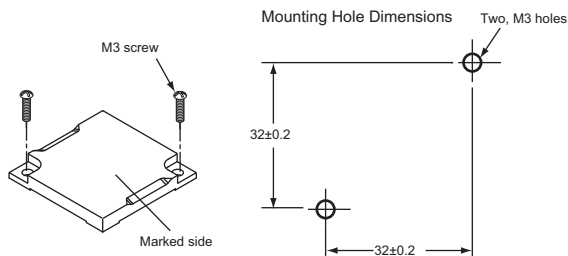

Refer to *A-3 RF Tag Installation Precautions* on page A-22 for information on the effect of surrounding metal, Mutual Interference of RF Tags and Influence of Inclination on the V680S-D2KF67M.

Refer to *A-3 RF Tag Installation Precautions* on page A-22 for information on the effect of surrounding metal, Mutual Interference of RF Tags and Influence of Inclination on the V680S-D8KF67M.




### Precautions for Correct Use

You can use the V680S-D8KF67M with Reader/Writers with firmware version 2.00 or higher.

## V680S-D2KF68/-D8KF68

Mount the RF Tag with M4 screws. Tighten the screws to a torque of 0.7 to 1.2 N·m.

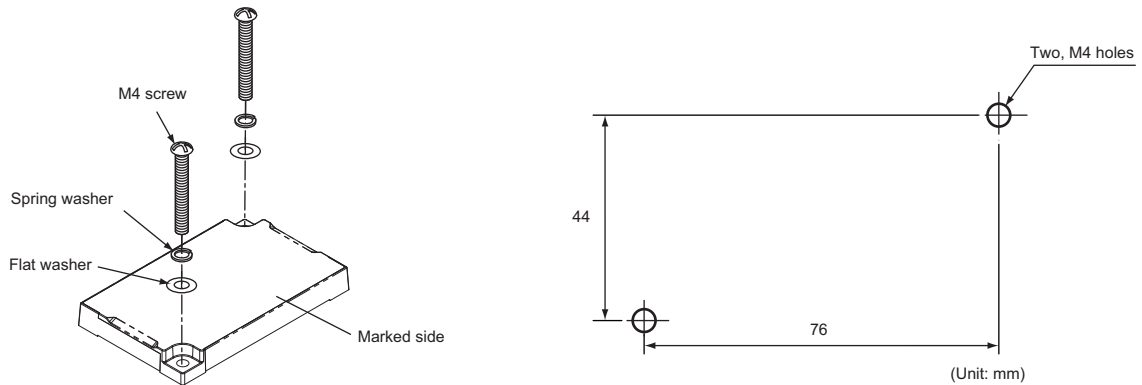

Refer to *A-3 RF Tag Installation Precautions* on page A-22 for information on the effect of metal at the back surface, Mutual Interference of RF Tags and Influence of Inclination of the V680S-D2KF68. Refer to *A-3 RF Tag Installation Precautions* on page A-22 for information on the effect of metal at the back surface, Mutual Interference of RF Tags and Influence of Inclination of the V680S-D8KF68.




### Precautions for Correct Use

You can use the V680S-D8KF68 with Reader/Writers with firmware version 2.00 or higher.

## V680S-D2KF68M/-D8KF68M

Mount the RF Tag with M4 screws. Tighten the screws to a torque of 0.7 to 1.2 N·m.

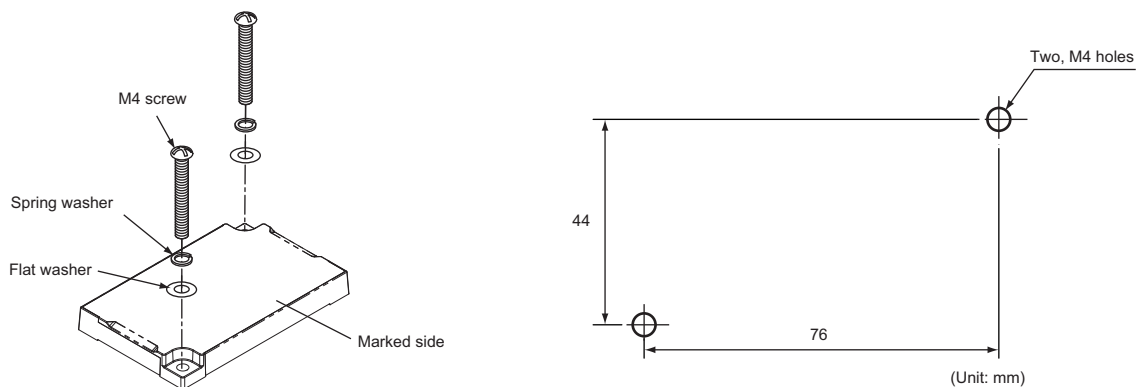

Refer to *A-3 RF Tag Installation Precautions* on page A-22 for information on the effect of surrounding metal, Mutual Interference of RF Tags and Influence of Inclination on the V680S-D2KF68M. Refer to *A-3 RF Tag Installation Precautions* on page A-22 for information on the effect of surrounding metal, Mutual Interference of RF Tags and Influence of Inclination on the V680S-D8KF68M.



### Precautions for Correct Use


You can use the V680S-D8KF68M with Reader/Writers with firmware version 2.00 or higher.

# 4-2 Connections and Wiring


## 4-2-1 Connecting and Removing the Reader/Writer Power Cable and Ethernet Cable

### Connecting Method


- 1 Hold onto the connector on the Power Cable and insert it into the power connector on the Reader/Writer.  
Do not apply more than 30 N·m of force to the connector on the Reader/Writer.

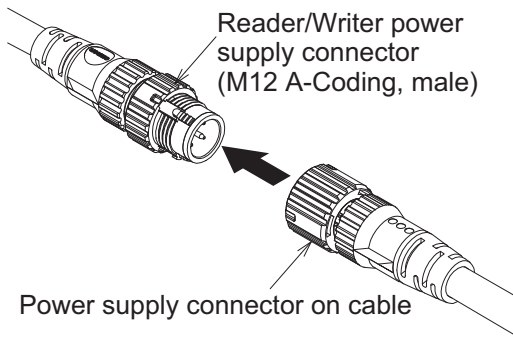

- 2 Turn the connector on the Power Cable clockwise to lock it in place.  
Recommended tightening torque: 0.39 to 0.49 N·m

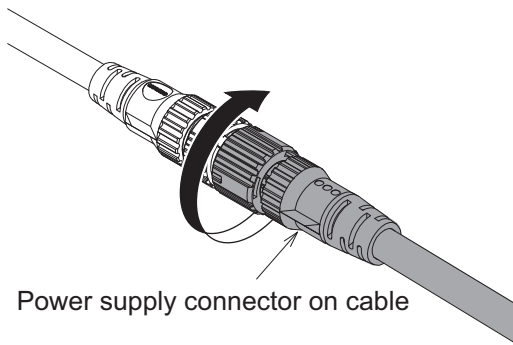

#### Contact arrangement of the Reader/Writer's power connector

 

Pin No.	Name	Description	I/O
1	24P	+24 V	---

Pin No.	Name	Description	I/O
2	CONT	Control signal (operating mode signal) * Run Mode: Connect to +24 V and then start the Reader/Writer. Safe Mode: Connect to 0 V and then start the Reader/Writer.	IN
3	24N	0 V	---
4	-	-	---


Refer to 6-4 *Operation Mode* on page 6-14 for information on the RUN mode, and Safe mode.

**Contact arrangement and wiring diagram of the recommended cable (Model XS5F-D42£-£80-F)**

Contact arrangement




Wiring cable (Four-core type)

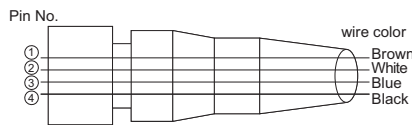


**Precautions for Correct Use**


Read and understand the power cable manual before attempting to connect the power cable.

- Hold onto the connector on the Ethernet Cable and insert it into the Ethernet connector on the Reader/Writer.  
Do not apply more than 30 N·m of force to the connector on the Reader/Writer.

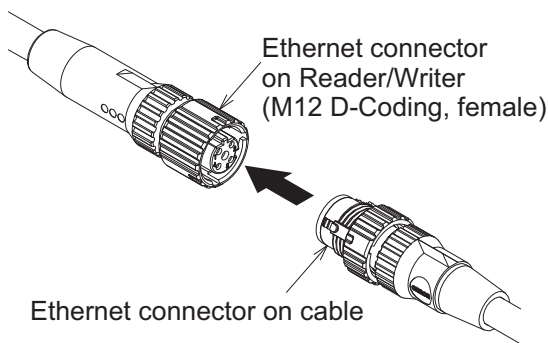

 
- Turn the connector on the Ethernet Cable clockwise to lock it in place.  
Recommended tightening torque: 0.39 to 0.49 N·m

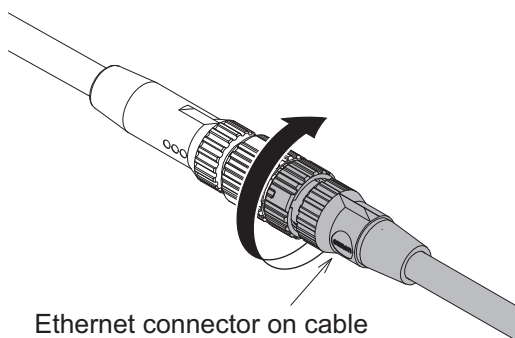

**Contact arrangement of the Reader/Writer's Ethernet connector**


Pin No.	Name	Description	I/O
1	TD+	Ethernet send signal +	OUT
2	RD+	Ethernet receive signal +	IN
3	TD-	Ethernet send signal -	OUT
4	RD-	Ethernet receive signal -	IN
Housing	FG	Frame ground	---

- 5** Mount the Branch Cable with one M4 screw.  
Recommended tightening torque: 0.39 to 0.49 N·m

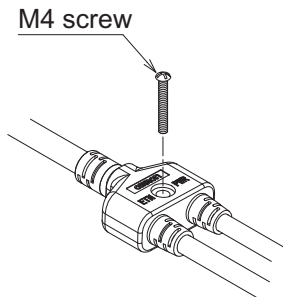

## Removal Method

- 1** Turn the connector on the Power Cable counterclockwise to unlock it.

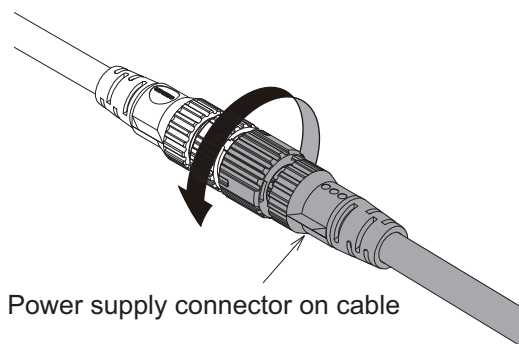


- 2** Hold onto the connector on the Power Cable and pull it straight out to remove it.




### Precautions for Correct Use

If the connector is difficult to remove, press on the Reader/Writer and pull on the connector. Never pull on the Cable with excessive force. Doing so may break the wires and cause malfunction.

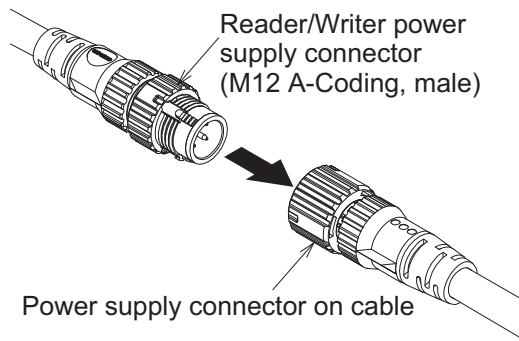

- 3** Turn the connector on the Ethernet Cable counterclockwise to unlock it.

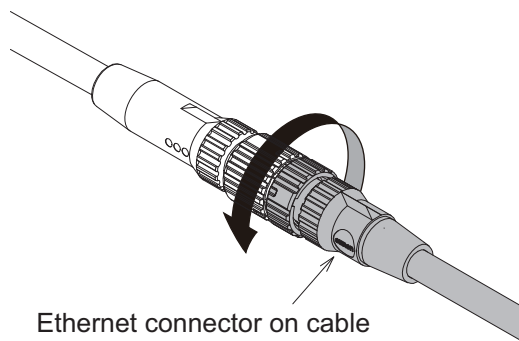


- 4** Hold onto the connector on the Ethernet Cable and pull it straight out to remove it.



#### Precautions for Correct Use

If the connector is difficult to remove, press on the Reader/Writer and pull on the connector. Never pull on the Cable with excessive force. Doing so may break the wires and cause malfunction.

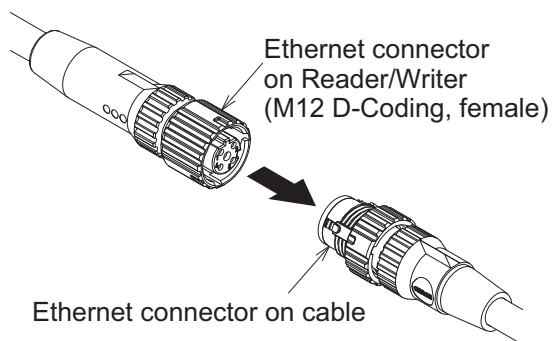




### Precautions for Correct Use

---

Do not remove the cable bracket from the Reader/Writer.

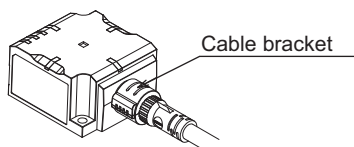

# 5

## Preparations for Communications

This section describes the procedure for communicating between the reader/writer and the personal computer.

---

<b>5-1</b>	<b>Starting the Reader/Writer</b> .....	<b>5-2</b>
5-1-1	Reader/Writer Starting Procedure .....	5-2
<b>5-2</b>	<b>Setting Communications Conditions</b> .....	<b>5-3</b>
5-2-1	Preparations for Work .....	5-3
5-2-2	Setting the IP Address of the Reader/Writer from a Web Browser.....	5-5
5-2-3	Setting the IP Address of the Reader/Writer on the Network Configurator .....	5-9
<b>5-3</b>	<b>Setting Tag Data Links</b> .....	<b>5-12</b>

## 5-1 Starting the Reader/Writer

---

### 5-1-1 Reader/Writer Starting Procedure


- 1** Connect the Cable to the Reader/Writer.  
Refer to *4-2-1 Connecting and Removing the Reader/Writer Power Cable and Ethernet Cable* on page 4-14 for the connector method.
- 2** Connect the power supply lines and the operation mode signal line in the Cable to the power source and connect the RJ45 connector to an Ethernet port on the host device.
- 3** Turn ON the power supply to start the Reader/Writer.  
If the Reader/Writer starts normally, the RUN indicator will light green.

## 5-2 Setting Communications Conditions

### 5-2-1 Preparations for Work

#### 1 Network Configuration

The network configuration that is described in this manual is shown in the following figure. Connect the Reader/Writer and the computer with an Ethernet Cable.

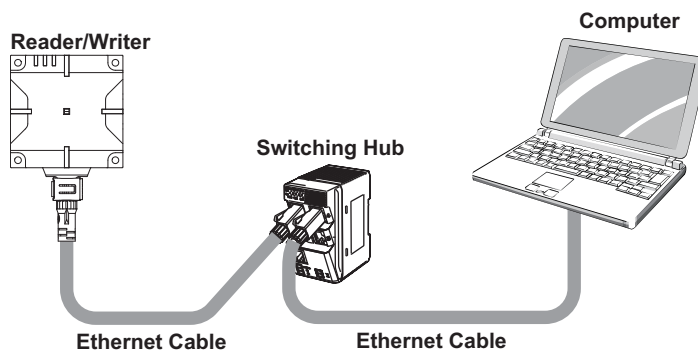

#### 2 Set the IP address on the computer.

Set the IP addresses on the computer.

The default IP addresses of the Reader/Writer are given in the following table.

Use these addresses to set the IP address on the computer. This example changes the last part of the IP address to a value other than 200 (i.e., to 1 to 199 or 201 to 254). Values of 0 and 255 cannot be used.

#### Default IP Addresses of the Reader/Writer

Setting	Default setting
IP address	192.168.1.200 (fixed setting)
Subnet mask	255.255.255.0 (fixed setting)
Default gateway	192.168.1.254 (fixed settings)
HTTPS port	443 (cannot be changed)
WebSocket port	8443

## Setting the IP Address on the Computer with Windows 10 or Windows 11

---

- 1** Open the Control Panel, and select Network and Internet and then Network and Sharing Center.
- 2** Select Change adapter settings and then right-click Ethernet.
- 3** Right-click Local Area Connection and select Properties.
- 4** Select Internet Protocol Version 4 (TCP/IPv4) and then click the Properties Button.
- 5** Select the Use the following IP address Option, make the following settings, and then click the OK Button.

### Host Device Setting Example

IP address : 192.168.1.100  
Subnet mask : 255.255.255.0  
Default gateway : 255.255.255.0



### Precautions for Correct Use

---


This example changes the last part of the IP address of the host device to a value other than 200 (i.e., 1 to 199 or 201 to 254). Values of 0 and 255 cannot be used.

---

- 6** Click the OK Button to close the Internet Protocol Version 4 (TCP/IPv4) Properties Dialog Box.


## 5-2-2 Setting the IP Address of the Reader/Writer from a Web Browser

- 1 Start the Web browser.  
Enter the IP address of the Reader/Writer in the address field of the Web browser to display the Web Browser Operation Window.  
Enter `https://192.168.1.200` if you are using the default IP address.

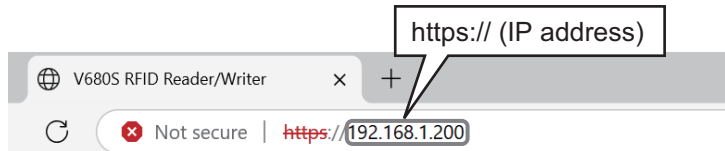


### Precautions for Correct Use

If you enter the IP address in the address field of the Web Browser, a security warning will be displayed.

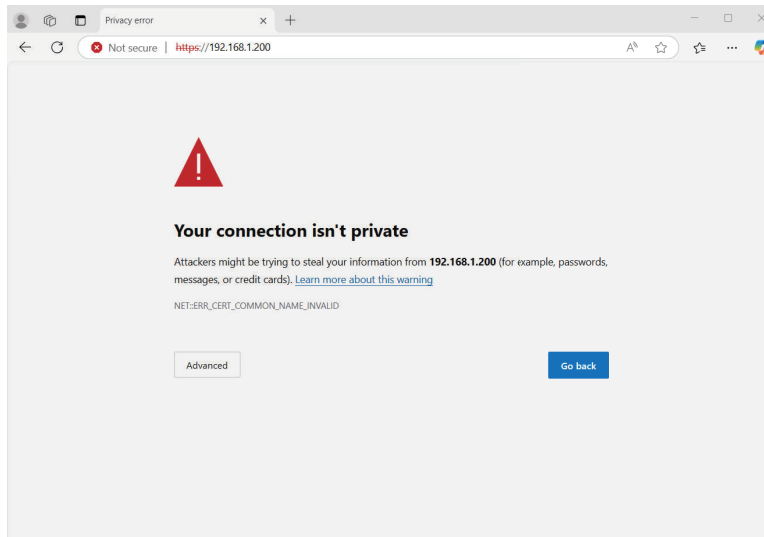

### Additional Information

By installing the root certificate on your computer and setting the domain name of the Reader/Writers, you can establish a secure connection with the Reader/Writers.

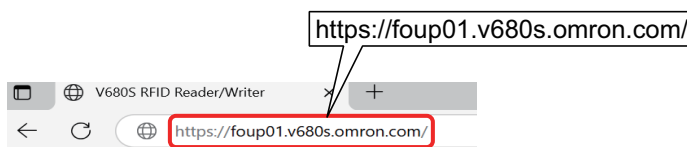


For instructions on installing a root certificate, see *8-4 Root Certificate Installation Procedure* on page 8-35.




### Version Information

For Reader/Writers earlier than firmware version "5.00", enter `http://192.168.1.200/` in the address field.

- 2** The Web Browser Password window will be displayed, so enter your Web Password. In the factory default settings, an initial password is registered. The initial password is printed on the label on the Reader/Writer itself.

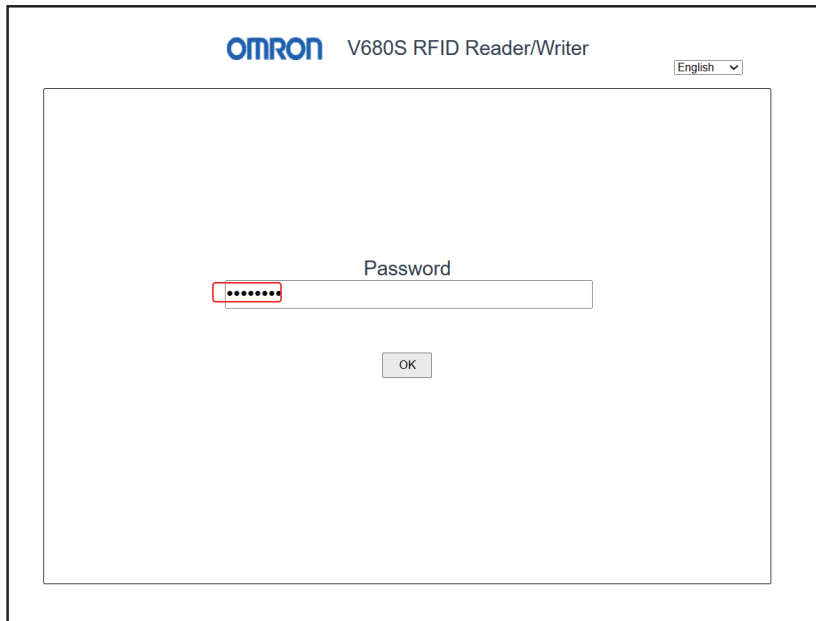

If the Web Password matches and authentication is successful, the following dialog will be displayed.

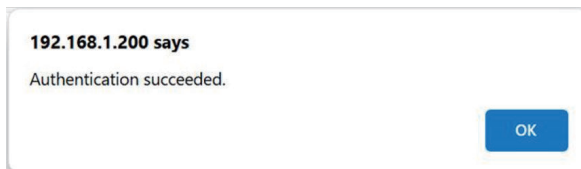

Then, the Status window will be displayed.

Parameter	Value
Model	V680S-HMD63-EIP
Firmware version	Run mode program: 5.00 Safe mode program: 5.00 Web Application version: 5.00
MAC address	00:00:0A:95:C0:00
Operation mode	RUN
Status	Idling
Operating time	0:00:41

© Copyright OMRON Corporation 2025. All Rights Reserved.

- 3** Set the IP address of the Reader/Writer.  
Click the **Network settings** Button at the upper left of the Web Browser Operation Window.

### Setting a Fixed IP Address

On the Network Settings View, select the **Fixed settings** Option, enter the *IP address*, *subnet mask*, and *Gateway address*, and then click the **Set** Button.

© Copyright OMRON Corporation 2025. All Rights Reserved.

### Getting an IP Address from a BOOTP Server

On the Network Settings View, select the **Obtain from BOOTP server** Option or the **Fix at the IP address which is obtained from BOOTP server** Option, and then click the **Set** Button.

The screenshot shows the 'Network settings' page for the OMRON V680S RFID Reader/Writer. The 'TCP/IP settings' tab is selected. Under 'TCP/IP settings', the 'Fixed setting' radio button is chosen. The IP address is set to 192.168.1.200, the subnet mask to 255.255.255.0, and the gateway address to 192.168.1.254. Below these, there are two radio button options: 'Obtain from BOOTP server' and 'Fix at the IP address which is obtained from BOOTP server'. A 'Device name' field is also present, and a 'Set' button is located at the bottom right of the settings area. The interface includes a sidebar with various system functions like Status, Network settings, and Reboot, and a footer with the copyright notice: © Copyright OMRON Corporation 2025. All Rights Reserved.




### Precautions for Correct Use

If you use the BOOTP client, the IP addresses that are used for the following Reader/Writer functions will change dynamically and may result in unexpected operation. Confirm that no problems will occur before you use the BOOTP client.


- IP address of the copy destination Reader/Writer for the data copy function
- IP addresses of the Slave Reader/Writers for multi-Reader/Writer operation

## 5-2-3 Setting the IP Address of the Reader/Writer on the Network Configurator


- 1 Start the Network Configurator.  
To start the Network Configurator, select **All Programs - OMRON - Sysmac Studio - Network Configurator for EtherNet/IP - Network Configurator** from the Windows Start Menu.  
The following window will be displayed when the Network Configurator starts.

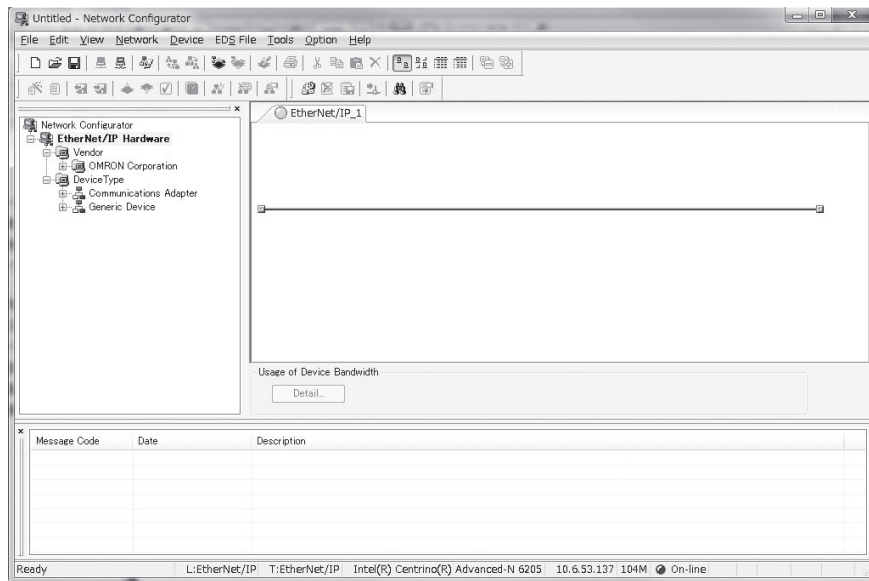


- 2 Go online with the network.  
Here, the Network Configurator is placed online through Ethernet.  
Select **Network - Connect**.

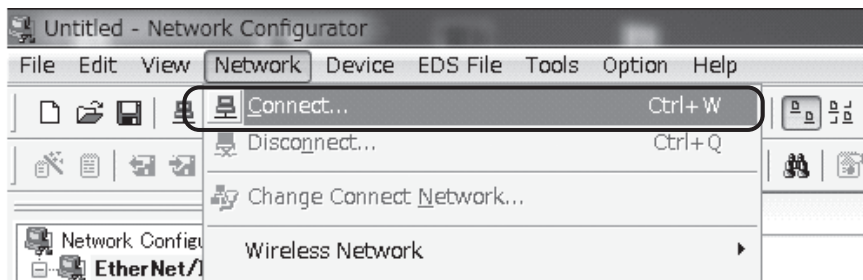

- 3** Set the IP address of the Reader/Writer.  
 Select **Tools - Setup TCP/IP Configuration** to open the Setup TCP/IP Configuration Dialog Box.

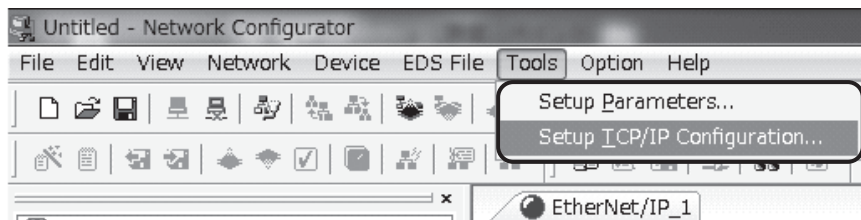


Enter the default IP address of the Reader/Writer (192.168.1.200) in the **Target IP Address** Box.

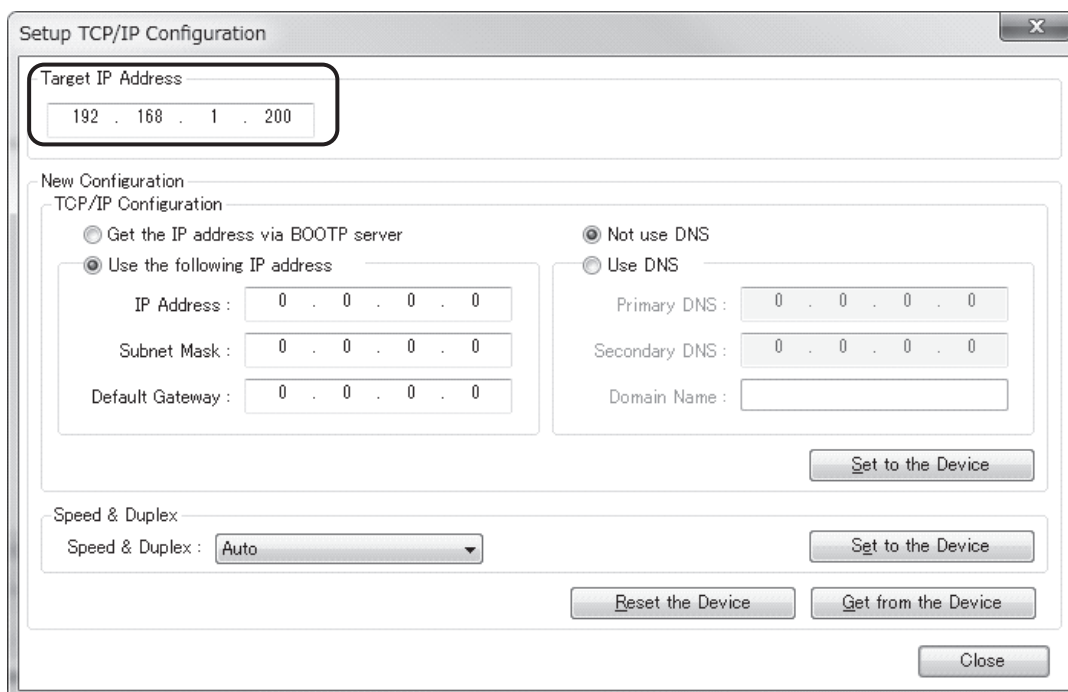


### Setting a Fixed IP Address

- 1) Enter the IP address, subnet mask, and default gateway.
- 2) Click the **Set to the Device** Button.
- 3) Click the **Reset the Device** Button to apply the IP address setting in the Reader/Writer.

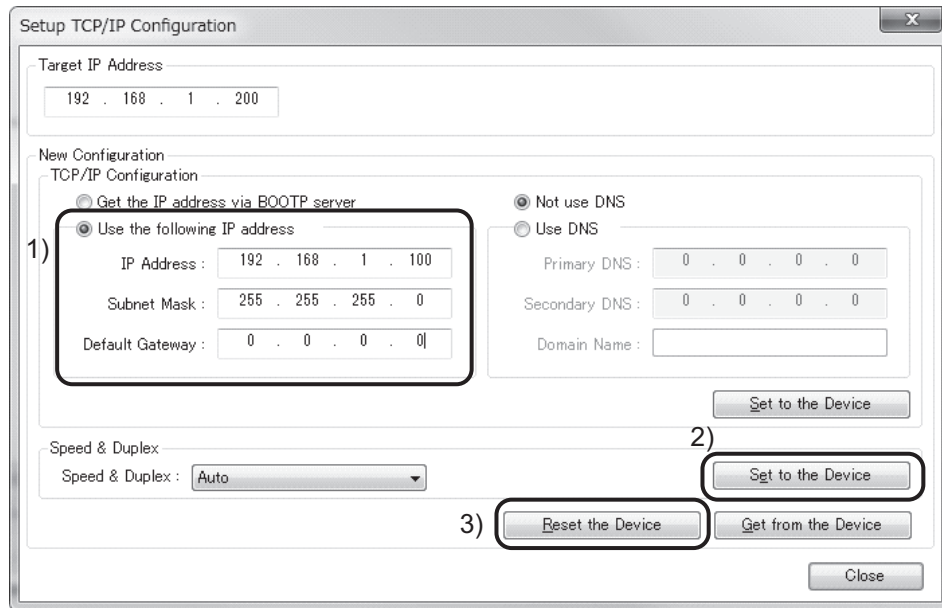

### Getting an IP Address from a BOOTP Server

- 1) Select the **Get the IP Address via BOOTP server** Option.
- 2) Click the **Set to the Device** Button.
- 3) Click the **Reset the Device** Button to apply the IP address setting in the Reader/Writer.

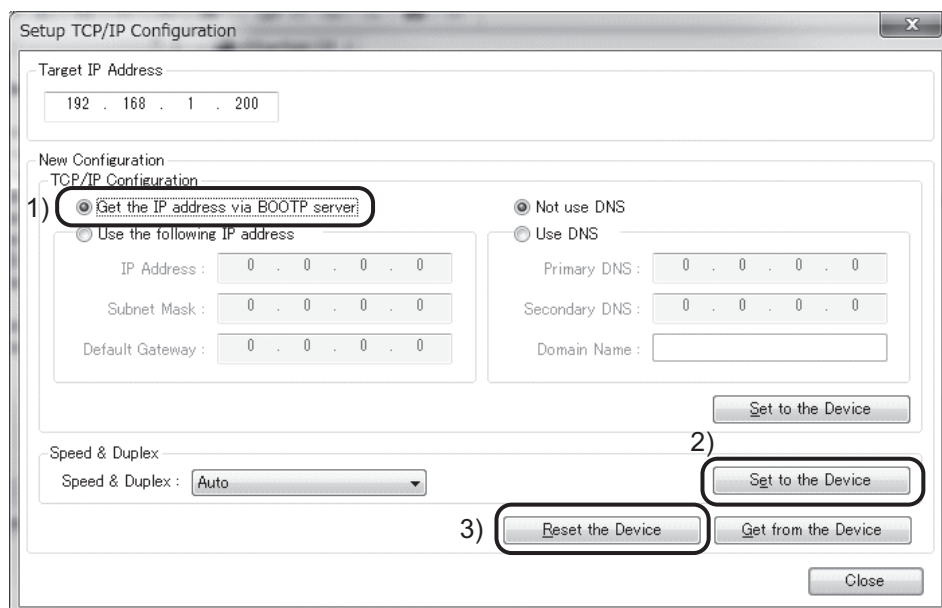

## 5-3 Setting Tag Data Links

---

Refer to *7-1-3 Tag Data Link Setting Methods* on page 7-4.

# 6

## Functions

This section describes the functions of the reader/writer.

<b>6-1</b>	<b>Security Guide</b> .....	<b>6-3</b>
6-1-1	Necessity of Security Response .....	6-3
6-1-2	Purposes of Security Response .....	6-3
6-1-3	V680S-series Compliance .....	6-4
<b>6-2</b>	<b>Security Functions</b> .....	<b>6-6</b>
<b>6-3</b>	<b>Password Authentication Function</b> .....	<b>6-7</b>
6-3-1	Overview .....	6-7
6-3-2	Authentication Method .....	6-8
6-3-3	Web Password Setting Method .....	6-9
6-3-4	Password Specifications .....	6-11
6-3-5	Password Authentication Operation Range .....	6-12
6-3-6	Lock Function .....	6-12
6-3-7	Password Handling Methods .....	6-13
<b>6-4</b>	<b>Operation Mode</b> .....	<b>6-14</b>
6-4-1	Run Mode .....	6-14
6-4-2	Safe Mode .....	6-14
<b>6-5</b>	<b>RF Tag Communications</b> .....	<b>6-15</b>
6-5-1	Communications Options .....	6-15
6-5-2	Normal RF Tag Communications .....	6-20
6-5-3	Tag Memory Management .....	6-20
<b>6-6</b>	<b>Reader/Writer Controls</b> .....	<b>6-22</b>
6-6-1	RESET .....	6-22
<b>6-7</b>	<b>Maintenance</b> .....	<b>6-23</b>
6-7-1	Reading Device Information .....	6-23
6-7-2	Noise Measurement .....	6-23
<b>6-8</b>	<b>Setting Functions</b> .....	<b>6-25</b>
6-8-1	Initialization .....	6-25
6-8-2	Setting Communications Conditions .....	6-27
6-8-3	Network Settings .....	6-29
<b>6-9</b>	<b>Error Logs</b> .....	<b>6-37</b>
6-9-1	Command Error Log .....	6-37
6-9-2	System Error Log .....	6-38
6-9-3	Security Log .....	6-39
<b>6-10</b>	<b>Web Server</b> .....	<b>6-47</b>
6-10-1	Status Monitoring, Setting, and Confirmation .....	6-47

6-10-2	Importing and Exporting Settings .....	6-47
6-10-3	Convenient Functions.....	6-55
<b>6-11</b>	<b>RFID System Maintenance .....</b>	<b>6-56</b>
6-11-1	Communication Diagnostic.....	6-56
6-11-2	RF Analyzer.....	6-59
<b>6-12</b>	<b>Multi-Reader/Writer Operation .....</b>	<b>6-61</b>
6-12-1	Field Extension Mode .....	6-63
6-12-2	High-speed Traveling Mode .....	6-64
<b>6-13</b>	<b>Using Communication Diagnostic and the RF Analyzer .....</b>	<b>6-66</b>
6-13-1	Using the Web Server .....	6-66
<b>6-14</b>	<b>Using Multi-Reader/Writer Operation .....</b>	<b>6-73</b>
6-14-1	Using Field Extension Mode.....	6-73
6-14-2	Using High-speed Traveling Mode .....	6-85

# 6-1 Security Guide

Lack of security is a major concern for society, especially for IoT equipment. With the ever increasing importance of product safety and quality and data in factory automation (hereinafter referred to as FA) devices, there has been an increase in the number of attacks targeting FA systems themselves, or using organizations and FA systems with inadequate security measures in the supply chain as a springboard.

Accordingly, countries are enacting cybersecurity-related laws and regulations, which cover FA system manufacturers and operators, FA systems and FA system components, whereas industries such as control system industry, semiconductor industry, and automotive industry are standardizing their security requirements. Thus, social demands for cybersecurity are increasingly growing.

The Radio Equipment Directive (RED) 2014/53/EU defines the regulations for radio equipment in Europe.

As *internet connected radio equipment*, RFID devices must comply with the essential requirements of Article 3(3)(d) of the Directive.

For Article 3(3)(d), the EN 18031-1 is applicable.

## 6-1-1 Necessity of Security Response

To ensure the security and safety of your FA system, in addition to the measures taken by OMRON for its FA products, you should also take security measures according to your roles.

To this end, it is important for you to correctly understand and assess the security risks involved in operations, services, and systems that you provide, and implement appropriate security measures throughout the lifecycle of the FA system.

## 6-1-2 Purposes of Security Response

It is important to indicate the purpose of security measures, goals, and the necessity of business security measures with clear grounds, and to proceed with agreement with management. Without these consensus, priority is given to other business requirements and it becomes difficult to get alignment and cooperation across divisions. Possible security objectives include the following.

1. Continue business and production
2. Keep the factory safe and ensure product quality
3. Ensure normal operation of FA systems
4. Protect information, know-how, and data related to products and production
5. Ensure the security quality of products and fulfill responsibilities as a manufacturer
6. Meet social demands from standards and external requirements
7. Maintain company's brand image and prevent loss of customer trust

From these security objectives, identify threats that have a particularly high business impact, calculate the cost of countermeasures, and reach agreement on your goals.

## Elements to Protect

It is easier to set goals if you clarify what will have a significant impact on your business in relation to the purpose of your security response. The objective of security measures is to ensure the three elements of security, which are *availability*, *integrity*, and *confidentiality* of operations, services, and products that your company provides.

	Ensuring Availability	Ensuring Integrity	Ensuring Confidentiality
<b>Objective</b>	Prevention of production equipment operation stop	Prevention of production equipment failure due to unauthorized overwriting of settings and data	Prevention of disclosure of important information such as production know-how and control programs
<b>Impact in case of compromise</b>	<ul style="list-style-type: none"> <li>• Business suspension</li> <li>• Delivery delays</li> <li>• Increased costs</li> </ul>	<ul style="list-style-type: none"> <li>• Quality degradation</li> <li>• Reduced safety</li> <li>• Adverse impact on health</li> <li>• Adverse impact on environment</li> </ul>	<ul style="list-style-type: none"> <li>• Damage to social trust</li> <li>• Loss of business advantage</li> <li>• Breach of laws and regulations</li> </ul>

The severity of the impact given by *availability*, *integrity*, and *confidentiality* differs depending on the industry, services and products that you provide, and the assets to protect. In addition, even in the same industry, it varies depending on the business role and the process. It is important to carefully consider which element your company should focus on and promote security measures.

It is important to carefully consider which element your RFID equipment should focus on and promote security measures.

For information about OMRON's product security initiatives and customer risk assessment procedures, see *Security Guideline for Factory Automation System(P162-E1)*.

### 6-1-3 V680S-series Compliance

The V680S-series complies with the EN 18031-1 from firmware version "5.00".

Utilizing the security element technologies required by standards increases the availability of the product itself and ensures the integrity and confidentiality of internal assets such as data and programs.

The V680S-series meets the following security function requirements:

Requirements	Purpose
Prevention of Misoperation	Prevents unauthorized persons or devices from operating RFID equipments by mistake and causing damage to the RFID equipments.
Prevention of Asset Theft	Prevents leakage of user data from RFID equipments.
Non-repudiability	Records log Information to prove that an operation was performed.
Recover	Restores RFID equipments to normal status.

The V680S-series protects the following assets.

Protected Assets	Contents
<b>Device Information</b>	<ul style="list-style-type: none"> <li>• Model</li> <li>• MAC Address</li> <li>• Version</li> <li>• Operating Mode</li> <li>• Status</li> </ul>

Protected Assets		Contents
User Settings	Network Settings	<ul style="list-style-type: none"> <li>• IP Address</li> <li>• Subnet Mask</li> <li>• Port Setting</li> </ul>
	Security Settings	<ul style="list-style-type: none"> <li>• Web Password</li> <li>• Permission Settings</li> <li>• IP Filtering</li> <li>• Port Disable Setting</li> </ul>
RF Tag Data *1		<ul style="list-style-type: none"> <li>• Production data stored in RF Tags</li> </ul>
Log Information		<ul style="list-style-type: none"> <li>• Communication Log (Total/Success/Error)</li> <li>• Security Log</li> </ul>
System Data		<ul style="list-style-type: none"> <li>• Firmware</li> <li>• Web Application</li> <li>• System Settings</li> </ul>

- \*1. There is no protection function such as encryption for communication with RF Tags. Integrity is ensured by verification when writing.  
When reading, check the integrity on the host device if necessary.

V680S-series uses the following protocols.

Service/Protocol	Authentication
EtherNet/IP	No*1
Multi-Reader/Writer Service	No*1
HTTPS*2	Yes
HTTPS (WebSocket)*2	Yes

- \*1. There is no authentication, but security can be ensured by Permission Settings, IP Filtering Settings, etc.  
\*2. A secure protocol is used to connect to and operate the Reader/Writer via the Web Browser.



### Precautions for Correct Use

The purpose of this security guide of this document is to propose the security measures that the users of the RFID equipments should take on their own.

The recommendations we make to our customers in this document are based on the results of our analysis and study. Appropriate security measures vary with customer environment, so these recommendations do not guarantee prevention of all security breaches in customer environments. Referring to this document, please consider and implement analysis and appropriate countermeasures in line with the customer's environment on your own.

## 6-2 Security Functions

This section explains the security functions available for the V680S-series.

The security functions can be used to protect the user programs and various data of the V680S-series to protect assets. You can also restrict operations on the Web Browser to prevent misoperations.



### Version Information

You can use the security functions with Reader/Writers with firmware version "5.00" or higher.

The V680S-series has the following security functions.

Security Functions	Purpose	Function Overview	Reference
Password Authentication Function	Prevention of Misoperation Prevention of Asset Theft	Authentication is performed for users when connecting to the Web Browser, and operations according to the user's authority are only possible.	6-3 Password Authentication Function on page 6-7
Access Permission Settings	Prevention of Misoperation Prevention of Asset Theft	By setting access authority from the host device to the Reader/Writer, you can restrict the commands that can be executed.	Access Permission Settings on page 6-33
IP Filtering Settings Function	Prevention of Asset Theft	This function restricts access from the host device by filtering IP packets during reception processing of the Ethernet port.	IP Filtering Function on page 6-30
Security Log	Non-repudiability	Operations performed on the Reader/Writer using the Web Browser are registered as Security Log. This allows you to check when and what operations were performed, and can be used to prevent repudiation when a problem occurs.	6-9-3 Security Log on page 6-39
Factory Reset Function	Prevention of Asset Theft Recover	Initializes various setting data in the Reader/Writer to the factory settings.	Factory Reset Function on page 6-25
Backup Function	Recover	You can back up the various settings data in the Reader/Writer by exporting them to your computer as a settings file. You can also restore the data by importing the backed up settings file back into the Reader/Writer and replacing them.	6-10-2 Importing and Exporting Settings on page 6-47



### Version Information

Even if the Reader/Writers with firmware version earlier than "5.00", you can return all of the set values in the Reader/Writer to their default values. In addition, the import/export configuration file function allows you to save Reader/Writer setting information on the computer or send it to the Reader/Writer.

## 6-3 Password Authentication Function

This section explains the Web Password Authentication function.



### Version Information

- You can use the Password Authentication function with Reader/Writers with firmware version "5.00" or higher.
- **The Reader/Writer with firmware version earlier than "5.00"**  
No password is set by default. If a Web Password is set, a dialog box requesting entry of the password will be displayed when the initial Web Browser is displayed. If the correct password is entered, the normal Web interface can be used.  
The Web Password can be set on the Web Password Settings tab on the Network Settings window.

### 6-3-1 Overview


You register the Web Password Authentication settings for each Reader/Writer. When you connect the Web Browser and Reader/Writer with secure communication (HTTPS), you will be requested to enter a password. If the password matches, you will be authenticated and will be able to operate from the Web Browser.

If you transfer and save the authentication settings to the Reader/Writer, operation authority can be authenticated even if you connect the Web Browser from another computer.

Authentication is performed by password only. User names and other information to identify the operating user are not managed. Therefore, you can only connect one Web Browser to the Reader/Writer at a time.


### 6-3-2 Authentication Method

When you connect the Web Browser to the Reader/Writer, the Password Window is displayed and the Web Password Authentication is confirmed.

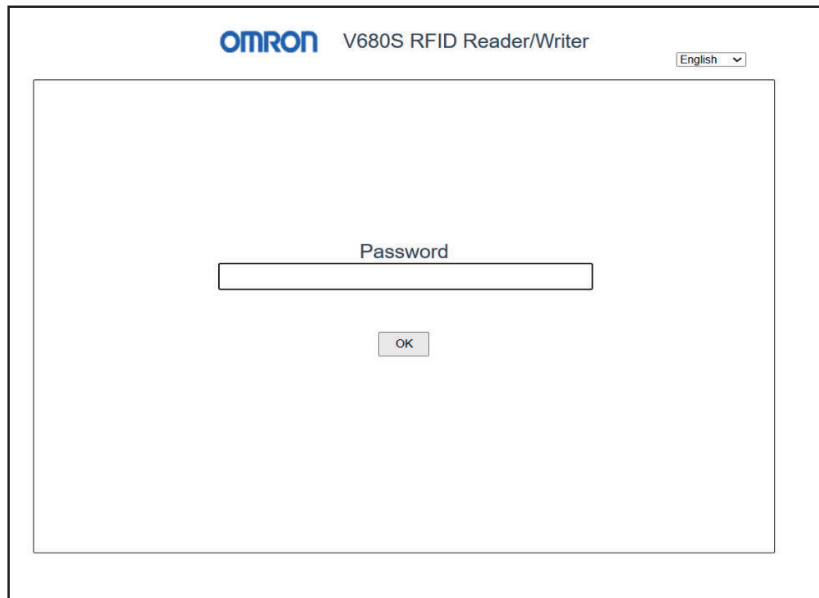


The screenshot shows the web interface for the OMRON V680S RFID Reader/Writer. At the top left is the OMRON logo, followed by the text "V680S RFID Reader/Writer". In the top right corner, there is a language selection dropdown menu currently set to "English". The main content area is a large white rectangle containing a text input field labeled "Password" and a small "OK" button centered below it.

If the entered Web Password matches and authentication is successful, the following dialog is displayed and you can operate from the Web Browser.

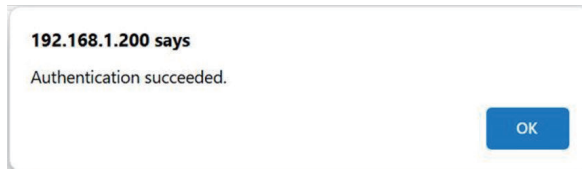

The screenshot shows a dialog box with a light gray border. At the top left, it says "192.168.1.200 says". Below that, the text "Authentication succeeded." is displayed. In the bottom right corner, there is a blue "OK" button.

If the Web Password does not match and authentication fails, you cannot operate from the Web Browser.

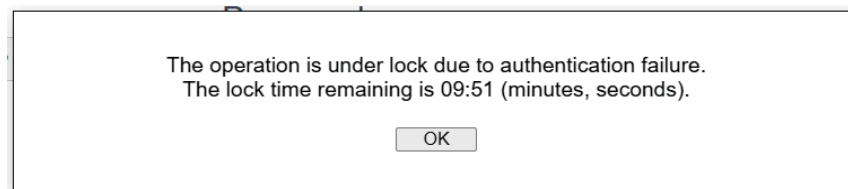


The screenshot shows a dialog box with a light gray border. The text inside reads: "The operation is under lock due to authentication failure." followed by "The lock time remaining is 09:51 (minutes, seconds)." centered below. At the bottom center, there is a small "OK" button.

### 6-3-3 Web Password Setting Method

In the factory default settings, a unique initial password is set for each Reader/Writer. To ensure confidentiality, change the Web Password when connecting for the first time.

- 1 Start the browser.
- 2 Enter the IP Address of the Reader/Writer in the browser's URL field.  
If the IP Address is the factory default, enter *https://192.168.1.200*.  
The Web Browser Password window will be displayed.

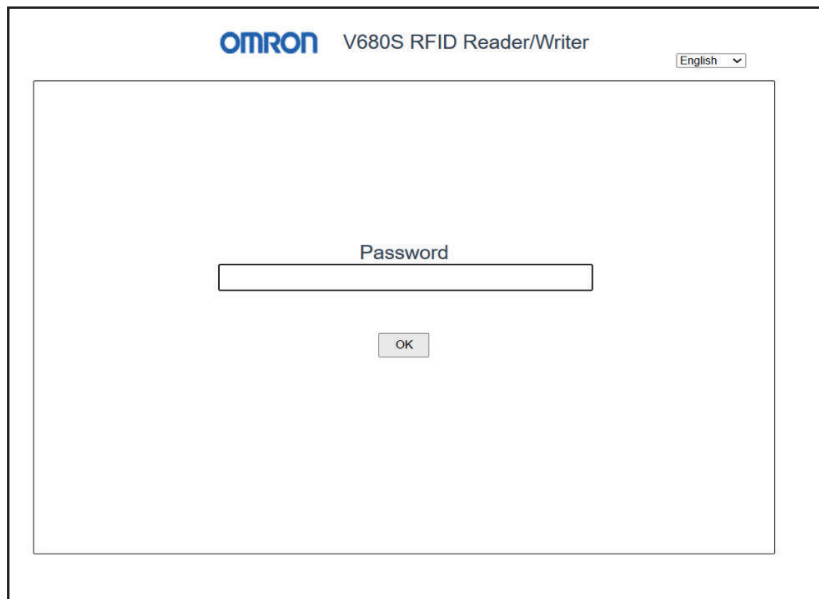

- 3 Enter the Web Password.




If the Web Password matches and authentication is successful, the following dialog will be displayed.

192.168.1.200 says  
Authentication succeeded.

OK

Then, the Status window will be displayed.

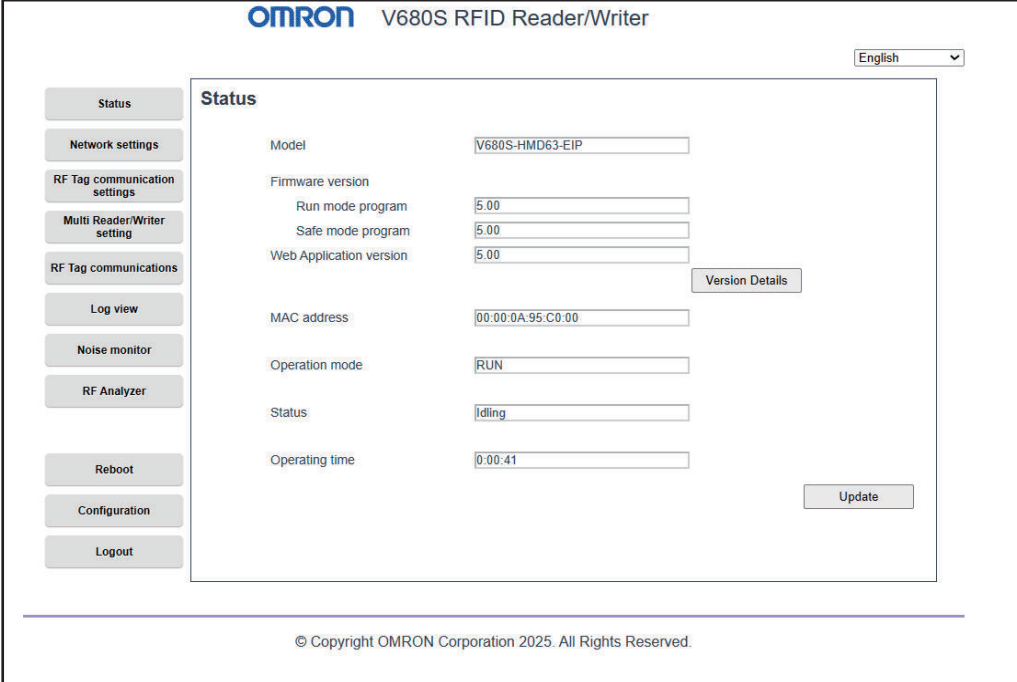

OMRON V680S RFID Reader/Writer

English

Status

Model: V680S-HMD63-EIP

Firmware version

Run mode program: 5.00

Safe mode program: 5.00

Web Application version: 5.00

Version Details

MAC address: 00:00:0A:95:C0:00

Operation mode: RUN

Status: Idling

Operating time: 0:00:41

Update

© Copyright OMRON Corporation 2025. All Rights Reserved.



### Precautions for Correct Use

- In the factory default settings, an initial password is registered. The initial password is printed on the label on the Reader/Writer itself.
- It is recommended that you change the initial password when connecting for the first time, as it may be known by a third party.
- Passwords are important information that is only for your use. Store the password properly so that it will not be known to third parties. Also, avoid setting a password that is easy for third parties to guess.
- To strengthen security, we recommend that you change your password regularly.

- 4 Click **Network Settings** in the Web Browser and select the **Web Password Settings** tab. The **Web Password Settings** tab of the **Network Settings** window will be displayed.

OMRON V680S RFID Reader/Writer

English

Network settings

TCP/IP settings | Port Settings | IP Filtering settings | Permission settings | **Web Password settings**

Web Password settings

Web Password

Password

Password (Confirmation)

Set

Operation Lock

Enable  Disable

Lock Time (60~3,600 sec)

Set

© Copyright OMRON Corporation 2025. All Rights Reserved.

- 5 Enter the password you want to change and click the **Set** button.
- 6 Restart the Reader/Writer.  
The changed Web Password will be effective from the next startup.

### 6-3-4 Password Specifications

The following are the possible settings for the Web Password used in the Password Authentication function.

Item	Content
Valid number of characters	8 characters or more and 32 characters or less <sup>*1</sup>
Usable characters	Half-width alphanumeric characters and symbols (case-sensitive) <sup>*2</sup>

\*1. Any value between 8 and 32 characters can be set.

\*2. Characters that can be used are ASCII characters 0x21 to 0x7E (0-9 A-Z a-z, '!"#\$%&()\* ,./:;?@[^\_`{|}~ +<=>).

#### Version Information

##### The Reader/Writer earlier than firmware Ver.5.00

Specify up to 15 ASCII characters. Specify "" (blank) for no password.

### 6-3-5 Password Authentication Operation Range

The range of operations that can be performed with the Web Browser varies depending on the operation mode of the Reader/Writer. The table below shows the respective operation ranges.

Web Browser Window			RUN Mode	Safe Mode
Window	Tab	Contents		
Status Window [Monitor]	---	Model, Firmware Version, Web application version, MAC address, Operation mode, Status, Operating time	○Yes	○Yes
Network Settings Window [Setting]	TCP/IP Settings	IP address, Subnet mask, Gateway address, BOOTP Option, Device name	○Yes	×No
	Port Setting	HTTPS Port (Read only) WebSocket Port Multi-Reader/Writer Port available	○Yes	×No
	IP Filtering Settings	Web Browser	○Yes	×No
	Permission Settings	Permission Settings	○Yes	×No
	Web Password Settings*1	Web Password, Web Password (Reenter), Operation Lock	○Yes	×No
RF Tag Communications Settings Window [Setting]	---	RF Tag Communications option, RF Tag Communications condition, RF Communication Diagnostics	○Yes	×No
Multi Reader/Writer Settings Window [Setting]	---	Multi Reader/Writer mode, Group setting	○Yes	×No
RF Tag Communications Window [Execute]	---	Command, Response	○Yes	×No
Log View Window [Monitor]	Command Error Log	Command Error Log	○Yes	○Yes
	System error log	System error log	○Yes	○Yes
	Security Log	Security Log	○Yes	○Yes
Noise Monitor Window [Execute]	---	Noise Monitor	○Yes	×No
RF Analyzer Window [Execute]	---	No., Time, Command, Result, UID, Diagnostic description, Update, Save, Display, Clear	○Yes	×No
Reboot [Execute]	---	Reboot	○Yes	○Yes
Configuration Window [Execute]	---	Export, Import	○Yes	×No
		Initialize	○Yes	○Yes

\*1. You cannot view the Web Password.

### 6-3-6 Lock Function

This section explains the Web Browser lock function. There are two types of lock function: Operation Lock (session timeout) and Authentication Locked.

## Operation Lock (Session Timeout)


When Operation Lock is enabled, unauthorized operations from the Web Browser can be prevented. After password authentication in the Web Browser, if you do not operate the Web Browser for a certain period of time, you will need to re-enter your password.

You can set Enable/Disable and the time until lock.

Item	Content	Setting range	Initial state
Enable/Disable	Sets whether to enable or disable the Operation Lock function.	Enable, Disable	Enable
Setting time	Time until operation is locked	1 to 60 minutes	10 minutes

## Authentication Locked

Protects assets from cyber attacks such as brute force attacks. If you enter the wrong password five times on the Web Browser Password window, the following dialog box will be displayed and Web Browser operations will be locked for 10 minutes. The lock will be released when the time has passed or the Reader/Writer is rebooted.

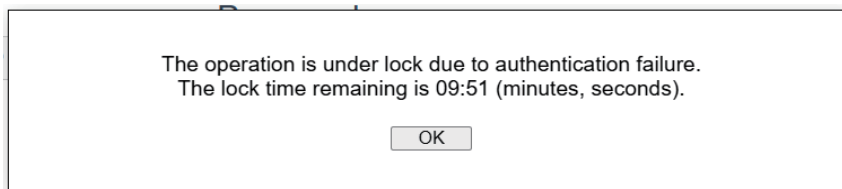

### 6-3-7 Password Handling Methods

This section explains how to erase the Web Password and what to do if you have forgotten the password.

## Password Erasure

The set Web Password can be returned to the factory default state by performing the initialization operation in the Configuration window of the Web Browser. This prevents information leakage when disposing of the Reader/Writer.

## What to Do If You Have Forgotten Your Password

If the administrator forgets the Web Password, there is no way to check the password. In addition, the password cannot be changed unless there is operation authority after password authentication. If the administrator forgets the Web Password, please handle it as follows.

Handling method	Status after handling
Start the Reader/Writer to be handled in Safe-Mode and perform the Factory Reset on the Configuration window to reset all of the Reader/writer settings, including the password, to factory default state. For details, see 9-7 <i>Safe Mode</i> on page 9-22.	The Web Password will be returned to the factory default state along with all the Reader /Writer settings.

## 6-4 Operation Mode

---

The Reader/Writer has two operation modes: Run Mode and Safe Mode.

You can use the control signal to the Reader/Writer connector to change between these modes.

### 6-4-1 Run Mode

When you connect the control signal to the 24-VDC side of the power supply and turn ON the power supply, the Reader/Writer will start in Run Mode.

Operation is performed in the modes specified in the commands from the host device and the results are returned to the host device as responses.

### 6-4-2 Safe Mode

When you connect the control signal to the 0-VDC side of the power supply and turn ON the power supply, the Reader/Writer will start in Safe Mode. The Safe Mode is used when you do not remember the IP address or password that is set in the Reader/Writer. In Safe Mode, the Reader/Writer will start with the following IP settings.

IP address: 192.168.1.200

Subnet mask: 255.255.255.0

For details of Safe Mode, refer to 9-7 *Safe Mode* on page 9-22.

## 6-5 RF Tag Communications

### 6-5-1 Communications Options

Communications with the RF Tag are performed according to one of the communications options that are listed in the following table.

The setting of the communications option is effective immediately after it is changed. It is saved in internal memory in the Reader/Writer even after the power supply is turned OFF.

Name	Description
Once	When the Reader/Writer receives a command, it communicates with an RF Tag and returns a response.
Auto	After the Reader/Writer receives a command, the Reader/Writer automatically detects an RF Tag that enters the communications field and communicates with it. Communication can be carried out without confirming the existence of an RF tag by a sensor or the like.
Repeat	When the Reader/Writer receives a command, it repeatedly communicates with RF Tags and returns a response when communicating with an RF Tag was possible. Until the Reader/Writer communicates with another RF tag, the Reader/Writer cannot communicate with the RF tag once communicated.
FIFO Repeat	When the Reader/Writer receives a command, it repeatedly communicates with RF Tags and returns a response when communicating with an RF Tag was possible. The Reader/Writer can communicate with the another RF tag when the new RF tag comes in the communication area, because the Reader/Writer stops the operation of the RF tag once communicated. The Reader/Writer does not communicate with the RF tag once communicated until the following conditions are satisfied. (1) The RF tag goes out of the communication area. (2) The Reader/Writer communicates with another RF tag. FIFO Repeat has the following two setting modes. <ul style="list-style-type: none"> <li>Without ID code check Repeat communication with RF tags without ID code check. Compared "With ID code check", communication time becomes shorter. However, if the next tag enters the communication area during communication processing with the RF tag, there is a possibility of reading the data of the next RF tag. It is the same communication function as the FIFO repeat of the Reader/Writer of firmware version "3.01 or earlier".</li> <li>With ID code check Repeat Communication with RF tag is processed with ID code check. Even if the next tag enters the communication area during communication processing with the RF tag, it will not read the data of the next RF tag. RF tags can be installed at narrow pitch. However, compared with "Without ID code check", communication time will be longer. Therefore, in order to ensure reliable communication with the RF tag you want to communicate, we recommend "With ID code check". It can be used with a Reader/Writer with firmware version "3.02 or later".</li> </ul>



#### Precautions for Correct Use


"ID code" is a unique ID previously stored in each RF tag. By performing ID code check, even if an RF tag with another ID code enters the communication area during communication processing, it does not communicate with that RF tag.

Refer to *A-1-2 RF Tag Communications Time (for Reference Only)* on page A-11 for details of Communications Time.

## Once

The Reader/Writer communicates with RF Tags for command execution requests from the host device. When the Reader/Writer is finished communicating with an RF Tag, it returns the communications results to the host device and waits for another command.

If there is no RF Tag in the communications field when the Reader/Writer receives the command from the host device, an RF Tag missing error will occur. It is therefore necessary to use a sensor or other device to detect the presence of an RF Tag before you request command execution.

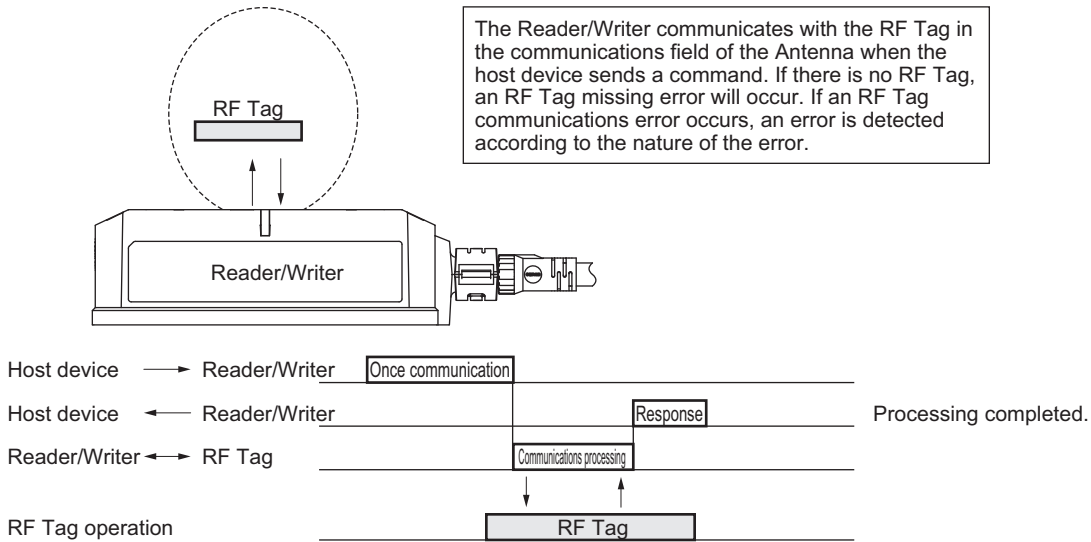


Refer to 7-3 Time Charts on page 7-40 for details of Time charts of each communications options.

## Auto

The Reader/Writer automatically detects an RF Tag and communicates with it.

After the host device sends the command, the Reader/Writer automatically detects an RF Tag that enters the communications field and communicates with it.

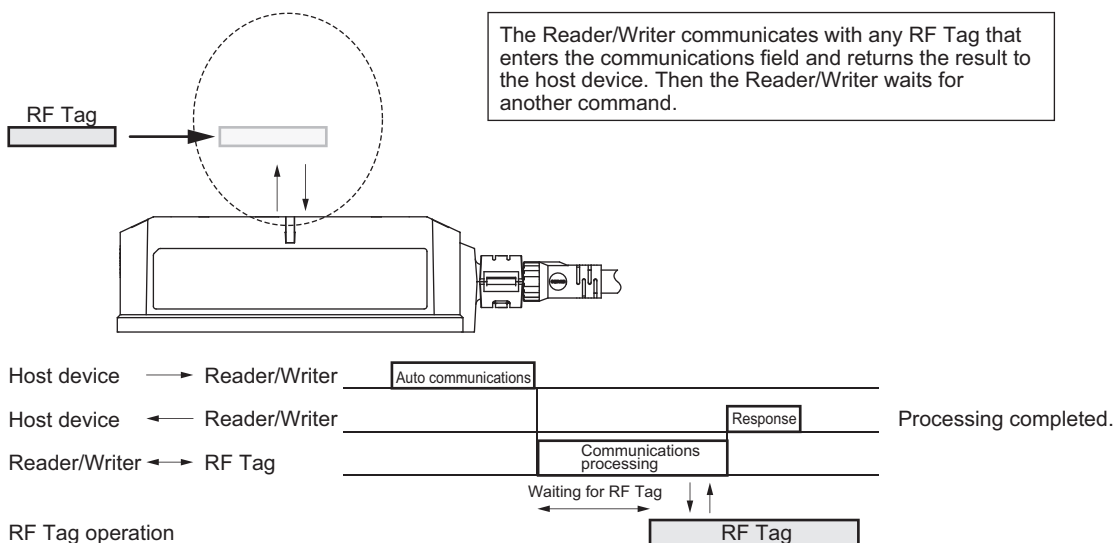


Refer to 7-3 Time Charts on page 7-40 for details of Time charts of each communications options.

## Repeat

When the Reader/Writer receives a command execution request from the host device, it automatically detects RF Tags in the communications field and communicates with them. This process is repeated until the execution request is cleared.

Communications are not performed for RF Tags that have returned communications results to the host device until the Reader/Writer has to communicate with another RF Tags.

You can use this specification to perform communications with RF Tags in order as they move past the Reader/Writer. However, if there is more than one RF Tag in the communications field of the Antenna at the same time, normal communications will not be possible. Make sure that there is never more than one RF Tag in the communications field of the Antenna at the same time.

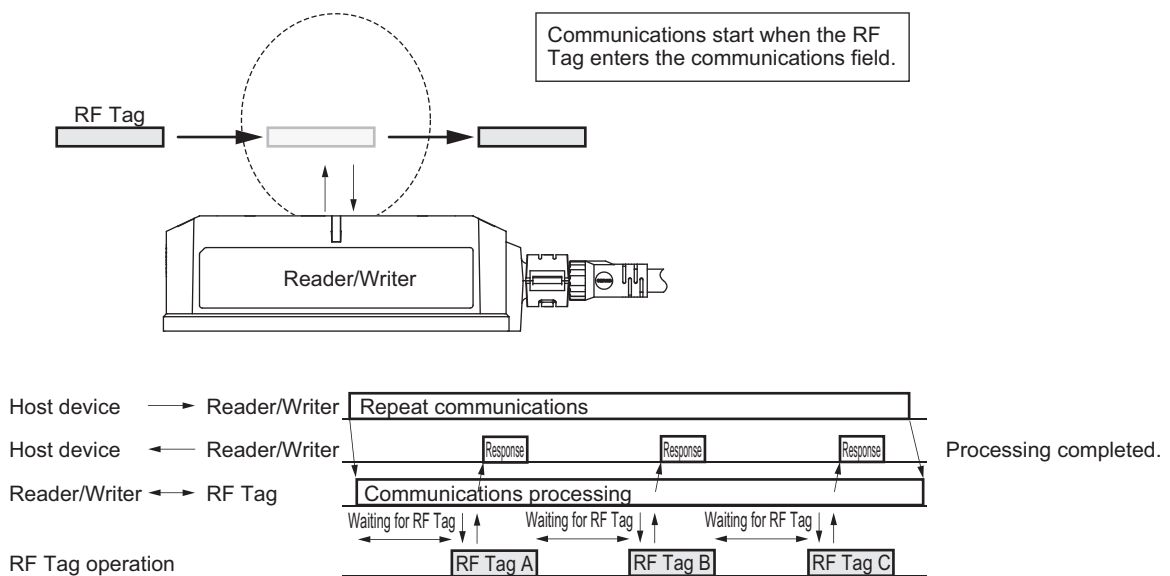

### Precautions for Correct Use

When the communications option is “Repeat”, no notice (error response) is sent to the host device even if an RF Tag missing error or communications error occurs.


Refer to 7-3 *Time Charts* on page 7-40 for details of Time charts of each communications options.

## FIFO Repeat

When the Reader/Writer receives a command execution request from the host device, it automatically detects RF Tags in the communications field and communicates with them. After successfully communicating with an RF Tag once, operation for that RF Tag is stopped. This process is repeated until the execution request is cleared. The Reader/Writer does not communicate with the RF tag that has completed communication until the RF tag is out of the communication area. The Reader/Writer does not communicate with the RF tag once communicated until the following conditions are satisfied.

(1) The RF tag goes out of the communication area. (2) The Reader/Writer communicates with another RF tag.

You can use the FIFO Repeat communications option to perform communications with RF Tags in order as they move past the Reader/Writer even when there is limited space between the RF Tags. If there is more than one RF Tag for which operation is possible in the communications field of the Antenna at the same time, normal communications will not be possible. Make sure that there is never more than one RF Tag for which operation is possible in the communications field of the Antenna at the same time.

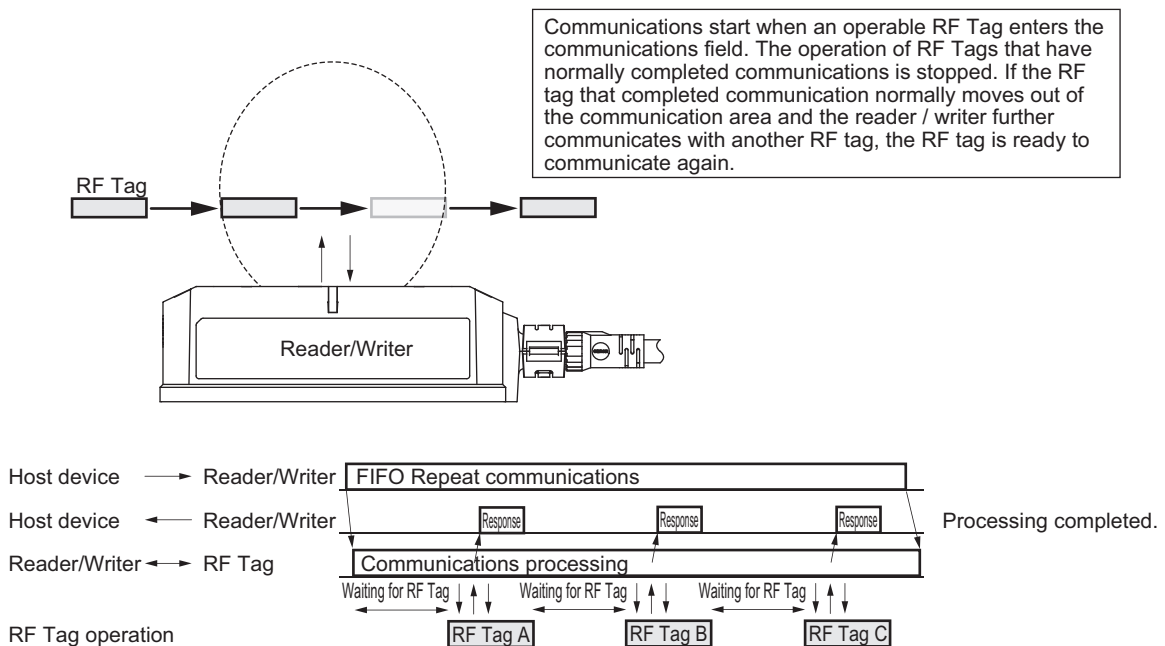

### Precautions for Correct Use


- FIFO Repeat communications cannot be used for communicating with V680-D1KP££ RF Tags.
- When the communications option is “FIFO Repeat”, no notice (error response) is sent to the host device even if an RF Tag missing error or communications error occurs.

Refer to 7-3 *Time Charts* on page 7-40 for details of Time charts of each communications options.

The FIFO Repeat detects the RF tag in the sequence of “1. RF tag detection processing” and executes read/write with the RF tag detected in the sequence of “2. communication processing”.

**<Without ID code check>**


When using FIFO Repeat (Without ID code check), please do not put the next RF tag B in the communication area until communication with the detected RF tag is completed. (See the figure below) \*

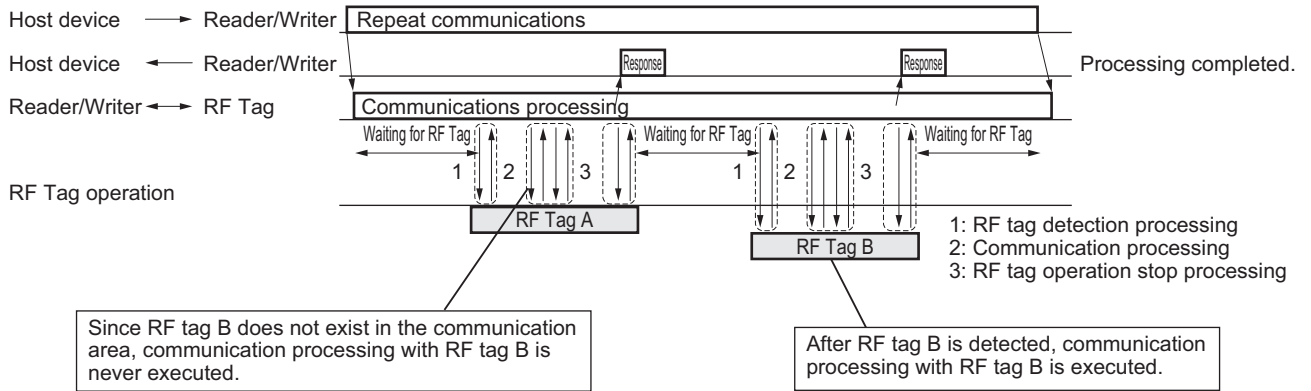

\* When using FIFO Repeat (Without ID code check), the ID code of the RF tag is not checked. Therefore communication time will be shorter than FIFO Repeat (With ID code check). However, if the next RF tag enters the communication area during “2. communication processing” with the detected RF tag, there is a possibility of reading / writing the next RF tag.

**<With ID code check>**

When FIFO Repeat (With ID code check) is used, even if the next RF tag enters the communication area before communication with the detected RF tag is completed, it can read / write without any problem I will. \*

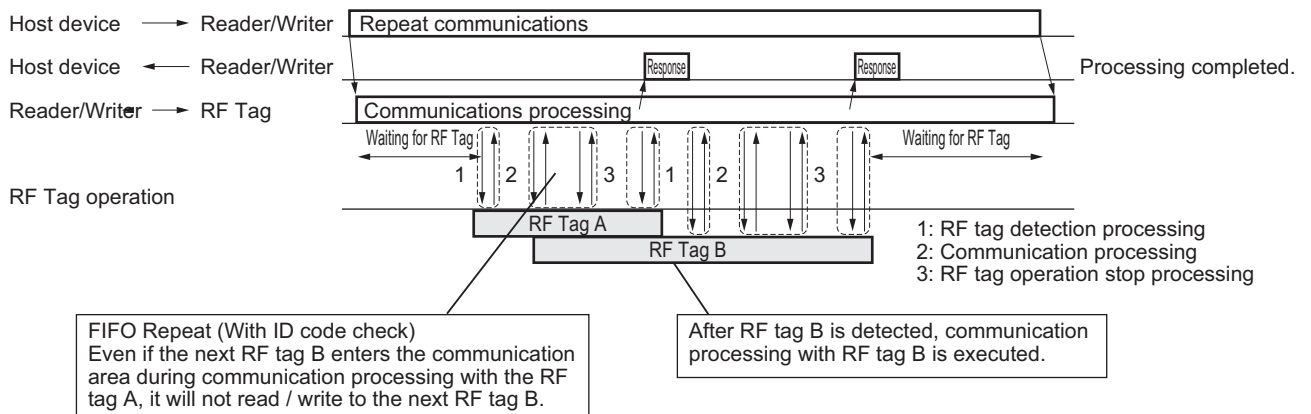

\* When using FIFO Repeat (With ID code check), the ID code of the RF tag is checked. Even if the next RF tag enters the communication area during “2. communication processing” with the detected RF tag, there is no possibility of reading / writing the next RF tag. However, compared with “Without ID code check”, communication time will be longer.



### Precautions for Correct Use

“ID code” is a unique ID previously stored in each RF tag. By performing ID code check, even if an RF tag with another ID code enters the communication area during communication processing, it does not communicate with that RF tag.

Refer to *A-1-2 RF Tag Communications Time (for Reference Only)* on page A-11 for details of Communications Time.

## 6-5-2 Normal RF Tag Communications

The commands in the following table perform communications with RF Tags.


Name	Description	Page
READ DATA	Reads data from an RF Tag.	page 7-14
WRITE DATA	Writes data to the memory of the RF Tag.	page 7-15
READ ID	Reads the RF Tag's ID code.	page 7-13
DATA FILL	Writes the specified data to the specified number of words beginning from the specified start address. The specifications are made in the command.	page 7-17
LOCK	Locks the specified memory block in the RF Tag. It will no longer be possible to write data to the locked memory block. The lock cannot be released.	page 7-16
RESTORE DATA	This command restores the RF Tag data that is held in the Reader/Writer. You can restore RF Tag data only when the RF Tag in the communications field matches the held RF Tag ID.	page 7-19
COPY DATA	Reads data from the memory of an RF Tag using one Reader/Writer (A) and writes it to the memory of the RF Tag in the communications field of another Reader/Writer (B).	page 7-20

## 6-5-3 Tag Memory Management

### RF TAG OVERWRITE COUNT CONTROL

This command can be used to determine whether the RF Tag overwrite limit has been exceeded.

- With the RF TAG OVERWRITE COUNT CONTROL command with a subtraction specification, the overwrite count is subtracted from the data in the user-specified overwrite count control area to determine whether the number of overwrites has been exceeded.
- With the RF TAG OVERWRITE COUNT CONTROL command with an addition specification, the overwrite count command is added to the data in the user-specified overwrite count control area to determine whether the number of overwrites has exceeded 100,000. The RF TAG OVERWRITE COUNT CONTROL command with an addition specification is designed for use with an RF Tag write life of 100,000. The overwrite count control area must be set so that it is all within one block.

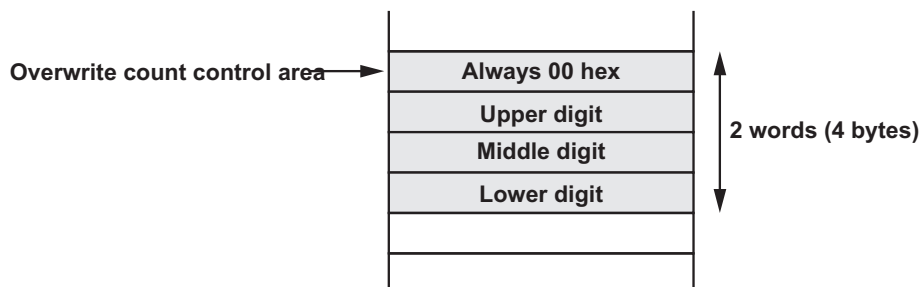

**RF TAG OVERWRITE COUNT CONTROL Command with a Subtraction Specification**

The overwrite count control area consists of 4 bytes from the specified start address. The decrement value is subtracted from the overwrite count and then written to this area. When the value reaches 0 (i.e., 00 hex), a warning code is returned. Therefore, to enable control of the number of overwrites, the maximum number of overwrites must be written to the overwrite count control area beforehand. You can set any number of overwrites up to 16,700,000.

You can read the overwrite count control area with a read command. If the control area data is already 0, the control area value will not be refreshed, and a warning code will be returned as a response.

When the refresh count is set to 0000 hex, the count will not be updated, and only an overwrite count check will be performed.

**RF TAG OVERWRITE COUNT CONTROL Command with a Addition Specification**

The overwrite count control area consists of 4 bytes from the specified start address. The increment value is added to the overwrite count and then written to this area. When the value reaches 100,000 (i.e., 0186A0 hex), a warning code is returned.

You can read the overwrite count control area with a read command. If the control area data is already 100,000, the control area value will not be refreshed, and a warning code will be returned as a response.

When the refresh count is set to 0000 hex, the count will not be updated, and only an overwrite count check will be performed.

## 6-6 Reader/Writer Controls

### 6-6-1 RESET

You can restart the Reader/Writer.

You can restart the Reader/Writer by using a RESET command or by using a CIP message (specifically, by issuing the Reset service to the Identity object) from a Web browser. The Reader/Writer will return the execution results and reset itself.



#### Precautions for Correct Use

If you reset the Reader/Writer during tag data links communications, the connection will be broken and must be re-established from the originator.



#### Version Information

For Reader/Writers with firmware version "5.00" or higher, when executing the "RESET" command from the host device, due to security reasons, you must set the **Permission Settings** tab in the **Network Settings** Window to **Permission** by checking the **Execute** box for the **Reader/Writer operation control command**.

## 6-7 Maintenance

### 6-7-1 Reading Device Information

You can read the device information given in the following table from the Reader/Writer.

You can send a command from the host device or access the information from a Web browser to read the device information.

Device information	Description
Model	Gives the model number of the Reader/Writer.
Firmware version	Gives the firmware version in the Reader/Writer.
Web Application Version* <sup>1</sup>	Displays the Web Application Version. * Not supported for the command.
MAC address	Gives the MAC address that is assigned to the Reader/Writer. * Not supported for the command.
Reader/Writer operating status	Gives the operating status of the Reader/Writer. The operating status include idle (waiting for a command), communicating, other processing, etc. * Not supported for the command.
Operating time	Gives the elapsed time in milliseconds since the Reader/Writer was started. * 0 to 4,294,967,295 (FFFF FFFF hex)

\*1. You can use the **Web Application Version** with Reader/Writers with firmware version 5.00 or higher.

### 6-7-2 Noise Measurement

Communication performance will be reduced when the RF tag or the Reader/Writer are influenced by ambient noise. The Reader/Writer responds the ambient noise level by using noise monitor function. The response data includes the following parameters. By checking the noise level, you can check the influence on the performance of communication with the RF tag in advance. You can also check the noise level when the trouble occurs.

Noise level (Average)	This represents the average value of the measured noise level. 00 to 99
Noise level (Maximum)	This represents the Maximum value of the measured noise level. 00 to 99
Noise level (Minimum)	This represents the minimum value of the measured noise level. 00 to 99

The noise monitor can be performed by means of the following two.

#### **Measuring Noise with a Command from the Host Device**

You can send the MEASURE NOISE command to the Reader/Writer to obtain the numerical ambient noise level around the Reader/Writer.

Refer to 7-2-17 *MEASURE NOISE* on page 7-32 for details on the Noise measurement command.

#### **Noise measurement using Web browser.**

You can check the transition graph of the noise level using Web browser. By selecting the type of the RF tag, you are also able to visually confirm the stability of communication.

Refer to 8-3-8 *Noise Monitor* on page 8-26 for more information.

If the noise level that was confirmed by Web browser screen may affect the performance of communication, do the following actions.

- If the other Reader/Writers are operating close to the Reader/Writer, ensure the distance between the Reader/Writers.

For the distance between the Reader/Writers, refer to page A-16, page A-18, page A-20.

- If the equipment close to the Reader/Writer, become a source of noise transceivers, motors, inverters, and switching power supply is running, ensure the distance until the amount of noise is sufficiently reduced. Take action, such as enclosing the noise source by metal object.

## 6-8 Setting Functions

You can use a Web browser to set the operating conditions of the Reader/Writer according to the application environment.

You can save the settings so that they are stored in internal memory in the Reader/Writer even after the power supply is turned OFF.

The settings for Setting Communications Conditions, Permission Settings, and Web Password Settings are effective immediately after they are changed. For any changes to all other settings, you must first save them and then reset the Reader/Writer to enable using them.

Refer to 7-2 *V680S Command Details* on page 7-13 for the setting command.



### Version Information

You can use the following settings with Reader/Writers with firmware version 5.00 or higher.

- Permission Settings
- Operation Lock on the Web Password Settings Tab

Refer to 8-3 *Operation Interface* on page 8-8 for the setting procedure for the Web browser interface.

### 6-8-1 Initialization

Initialization returns the set values in the Reader/Writer to their default values.

You can send a command from the host device or execute setting initialization from a Web browser.



### Version Information

For Reader/Writers with firmware version "5.00" or higher, when executing the "INITIALIZE" command from the host device, due to security reasons, you must set **Write** for the **Reader/Writer Settings** to **Permission** on the **Permission Settings** tab in the **Network Settings** Window.

If you execute the command without setting it to **Permission**, a command parameter error will occur.

## Factory Reset Function


This section describes the Factory Reset function, which is intended to prevent theft and restore assets when disposing of the Reader/Writer.

This explanation applies to the Factory Reset function on the Configuration window used in Reader/Writers with firmware version "5.00" or higher.

For the Configuration window of Reader/Writers with firmware version earlier than 5.00, see A-9-3 *Configuration* on page A-77 in A-9 *For Customers Using Reader/Writer Earlier Than Firmware Ver. 5.00.* on page A-74.


● Overview

You can use the Web Browser to reset the various setting data in the Reader/Writer to the factory settings.

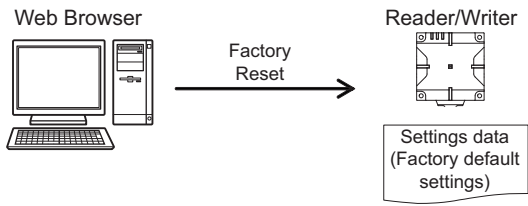

● Operation Method

After password authentication, execute the operation in the Factory Reset section of the Configuration window in the Web Browser. The settings will be saved in the Reader/Writer itself. The settings after initialization will be reflected after rebooting the Reader/Writer.

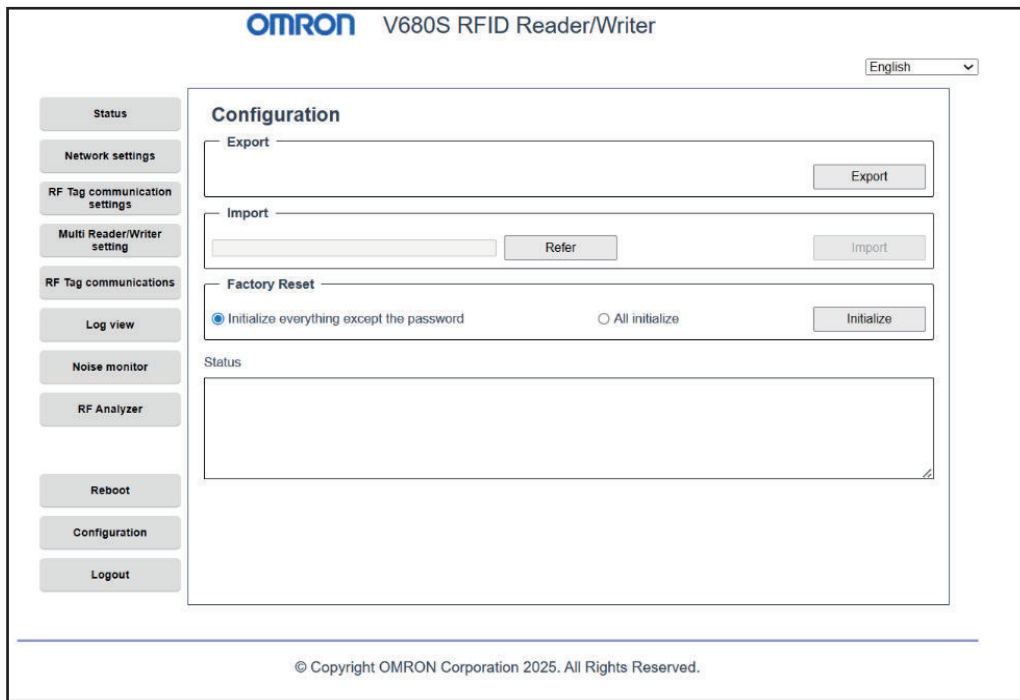

## 6-8-2 Setting Communications Conditions

This command sets parameters that are related to the operation of communications with RF Tags. Any changes to the settings that are made with this command are effective immediately. (There is no need to reset the Reader/Writer to save the settings.)

### Communications Option Setting

You can set the communications option of the Reader/Writer to Once, Repeat, or FIFO Repeat.

Name	Description
Once	When the Reader/Writer receives a command, it communicates with an RF Tag and returns a response.
Auto	After the Reader/Writer receives a command, the Reader/Writer automatically detects an RF Tag that enters the communications field and communicates with it. Communication can be carried out without confirming the existence of an RF tag by a sensor or the like.
Repeat	When the Reader/Writer receives a command, it repeatedly communicates with RF Tags and returns a response when communicating with an RF Tag was possible. Until the Reader/Writer communicates with another RF tag, the Reader/Writer cannot communicate with the RF tag once communicated.
FIFO Repeat	When the Reader/Writer receives a command, it repeatedly communicates with RF Tags and returns a response when communicating with an RF Tag was possible. The Reader/Writer can communicate with the another RF tag when the new RF tag comes in the communication area, because the Reader/Writer stops the operation of the RF tag once communicated. The Reader/Writer does not communicate with the RF tag once communicated until the following conditions are satisfied. (1) The RF tag goes out of the communication area. (2) The Reader/Writer communicates with another RF tag. FIFO Repeat has the following two setting modes. <ul style="list-style-type: none"> <li>Without ID code check Repeat communication with RF tags without ID code check. Compared "With ID code check", communication time becomes shorter. However, if the next tag enters the communication area during communication processing with the RF tag, there is a possibility of reading the data of the next RF tag. It is the same communication function as the FIFO repeat of the Reader/Writer of firmware version "3.01 or earlier".</li> <li>With ID code check Repeat Communication with RF tag is processed with ID code check. Even if the next tag enters the communication area during communication processing with the RF tag, it will not read the data of the next RF tag. RF tags can be installed at narrow pitch. However, compared with "Without ID code check", communication time will be longer. Therefore, in order to ensure reliable communication with the RF tag you want to communicate, we recommend "With ID code check". It can be used with a Reader/Writer with firmware version "3.02 or later".</li> </ul>



#### Precautions for Correct Use

"ID code" is a unique ID previously stored in each RF tag. By performing ID code check, even if an RF tag with another ID code enters the communication area during communication processing, it does not communicate with that RF tag.

Refer to *A-1-2 RF Tag Communications Time (for Reference Only)* on page A-11 for details of Communications Time.

## RF Tag Communications Speed Setting

You can set the speed for communications between the Reader/Writer and RF Tags.

High speed (default)	This setting reduces the communications time by reading more than one block at the same time with an air interface. However, if errors are detected during communications due to ambient noise or other factors, processing is redone from the beginning, which can actually increase the communications time.
Normal speed	This setting provides more stable communications quality by reading one block at a time, in the same way as for the earlier V680. Although the normal communications time is longer, processing can be continued during communications if errors are detected due to ambient noise or other factors, which can actually reduce the communications time.

## Write Verification

You can set whether to verify write processing.

Enabled (default)	After processing a write operation, the memory area that was written in the RF Tag is read and verified to confirm that the write operation was performed normally.
Disabled	Write processing is not verified.

## Communications Diagnostic

You can set whether to the communications diagnostic of the Reader/Writer.

Disable (default)	The Reader/Writer does not perform communications diagnostic.
Enable	This function diagnoses the communications leeway whenever the Reader/Writer communicates with an RF Tag, displays the results on an operation indicator, and reports the results to the host device. It will help you achieve a more stable Reader/Writer and RF Tag installation and enable monitoring the status of operations.


## 6-8-3 Network Settings

You can set the parameters for communications between the Reader/Writer and the host device. If you change the settings, you must reset the Reader/Writer to enable the new settings.

### IP Address, Subnet Mask, and Default Gateway

You can use any of the following methods to set the IP address, subnet mask, and default gateway for the Reader/Writer.

Setting method	Description
Fixed settings	You can set the IP address, subnet mask, and default gateway as required. The default settings are as follows: <ul style="list-style-type: none"> <li>IP address: 192.168.1.200</li> <li>Subnet mask: 255.255.255.0</li> <li>Default gateway: 192.168.1.254</li> </ul>
Obtain from BOOTP server	The IP address, subnet mask, and default gateway are obtained from the BOOTP server every time the power supply is turned ON.
Obtain from BOOTP server as fixed settings	The IP address, subnet mask, and default gateway are obtained from the BOOTP server when the power supply is turned ON and then they are used as fixed settings whenever the Reader/Writer is started after that.

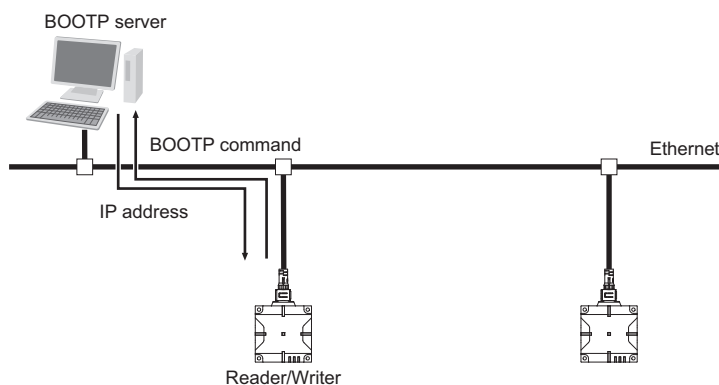

#### Precautions for Correct Use

- If you select Obtain from BOOTP server as fixed settings, the settings will automatically be changed to fixed settings after the IP address is obtained from the BOOTP server.
- To stop obtaining the settings from the BOOTP server, select fixed settings and then manually set the IP address, subnet mask, and gateway address.
- If you use multi-Reader/Writer operation, do not change the IP address of a slave Reader/Writer directly. To change it, change the multi-Reader/Writer settings on the master Reader/Writer.

### Port Setting Function

You can change the port number for the WebSocket communication port used by the Web browser. You can also set whether or not to use the Multi-Reader/Writer.

For details, refer to *Network Settings Window (Port Setting)* on page 8-13.

## IP Filtering Function

This section explains the IP filtering function to prevent unauthorized access and theft of assets.



### Version Information


You can use the IP Filtering Function with Reader/Writers with firmware version "5.00" or higher.

### Overview

This function filters IP packets received at the Reader/Writer's Ethernet port. IP filtering is a technology that determines whether communication is permitted or not based on IP (Internet Protocol) information.

When you enable IP filtering, only host devices with registered IP addresses can access the unit, and access from devices with unregistered IP addresses can be restricted.


The IP filtering function allows you to select packets to be permitted for each service/protocol supported by the Reader/Writer. This allows communication only with permitted devices and prevents unnecessary packets from being received.

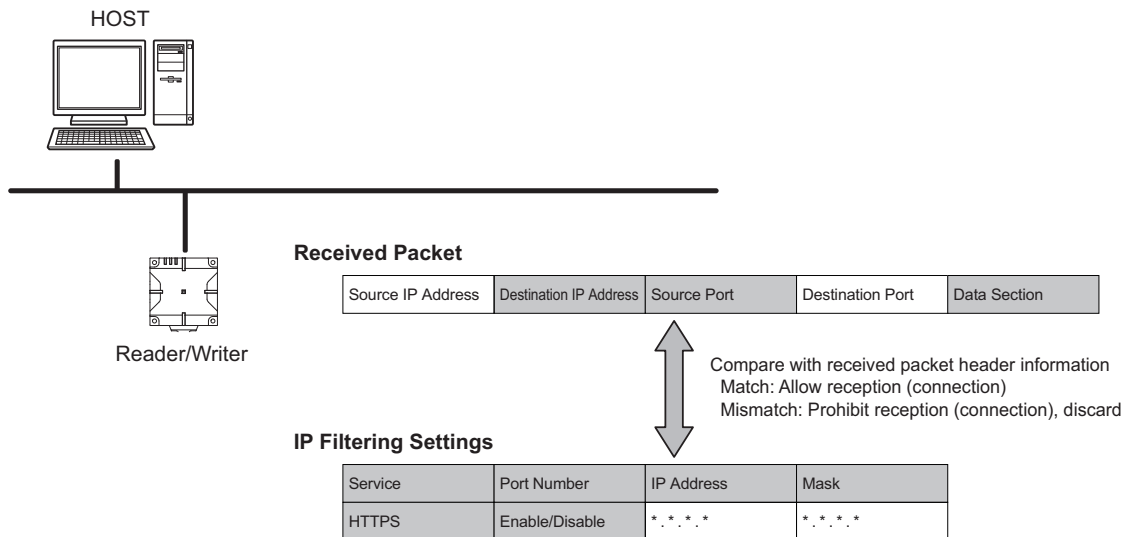

## ● Setup Method

After password authentication, select the IP Filtering Settings tab on the Network Settings window of your Web Browser and set Enable/Disable and the IP Address. The settings are saved in the Reader/Writer itself.

The set values are reflected after the Reader/Writer is rebooted.

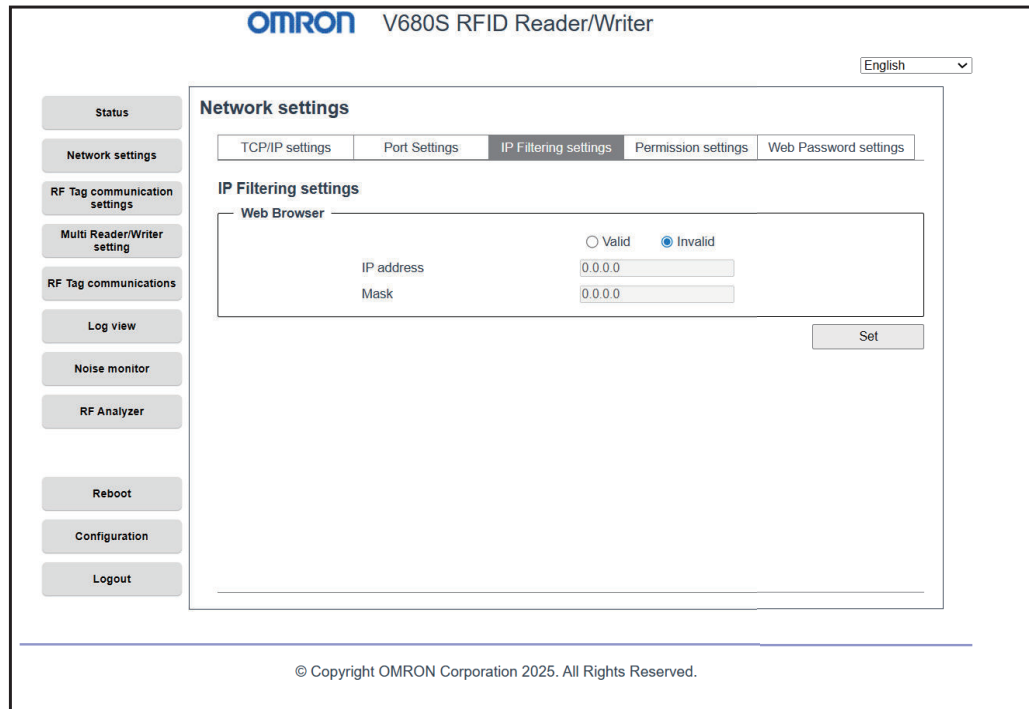

Target	Item	Content	Setting range	Initial state
Web Browser	Enable/Disable	Enable/Disable IP filtering function for Web Browser	Enable, Disable	Disable
	IP Address	Setting the IP address to allow connection *1	*.*.*.*	None
	Mask	Setting the mask of the IP address to allow connection *2	*.*.*.*	None

- \*1. The allowed IP address is calculated by the logical AND of the **IP address** and the **Mask**. If you want to allow more than one IP address, mask a part of the IP address by setting the **Mask**. In this case, set 0 to the bits to be masked in the **IP address** and **Mask**.  
The following is an example of how to calculate the allowed IP addresses.

### Example 1. Allowing IP address 192.168.250.1

If you want to allow one IP address, set 255.255.255.255 to the mask.

Setting	Decimal notation	Binary notation
IP address	192.168.250.1	11000000.10101000.11111010.00000001
Mask	255.255.255.255	11111111.11111111.11111111.11111111

### Example 2. Allowing IP address 192.168.250.\*\*\*

Set 255.255.255.0 to the mask to mask the lower 8 bits of the IP address.

Setting	Decimal notation	Binary notation
IP address	192.168.250.0	11000000.10101000.11111010.00000000
Mask	255.255.255.0	11111111.11111111.11111111.00000000

**Example 3. Allowing IP address 192.168.250.1 to 192.168.250.31**

Set 255.255.255.224 to the mask to mask the lower 5 bits if the IP address.

Setting	Decimal notation	Binary notation
IP address	192.168.250.0	11000000.10101000.11111010.00000000
Mask	255.255.255.224	11111111.11111111.11111111.11100000

- \*2. Set 0 to the bits to be masked in **Mask**. Multiple bits can be masked, but only bits from the least significant can be masked. It is not possible to mask the higher bits, such as 0.255.255.255, or the middle bits, such as 255.0.255.255.

The following are examples of setting a mask.

**Example 1. Masking the lower 8 bits**

Set 0 to the lower 8 bits.

Setting	Decimal notation	Binary notation
Mask	255.255.255.0	11111111.11111111.11111111.00000000

**Example 2. Masking the lower 24 bits**

Set 0 to the lower 24 bits.

Setting	Decimal notation	Binary notation
Mask	255.0.0.0	11111111.00000000.00000000.00000000

**Precautions for Correct Use**

- If you enable the IP filtering function of the Web Browser, computers with unregistered IP addresses cannot connect to the Web Browser. Please make sure that the IP addresses of the computers you want to allow connection to are registered correctly before enabling this function.
- If you forget the registered IP address and cannot connect to the Web Browser, you can disable this function tentatively by starting in Safe Mode.

## Access Permission Settings

This section explains how to set access permissions for commands as protected assets.

### Version Information

You can use the Access Permission Settings with Reader/Writers with firmware version "5.00" or higher.

### Overview

By setting access permissions from the host device to the Reader/Writer, you can restrict the commands that can be executed.

When setting access permissions, select the access permission to be allowed for each target command. To access a command with restricted access, you must grant access permission.

### Access Permission Types


The commands that are subject to access permissions and the types of access permissions are shown below.

(○: Target ---: Not applicable)

Command Category	Access permission		
	Read	Write	Execute
RF Tag communications	○	○	---
Reader/Writer settings	○	○	---
Reader/Writer information acquisition	○	---	---
Reader/Writer operation control	---	---	○
Multi-Reader/Writer Operation	○	○	---

● **Setting Method**

After password authentication, select the Permission Settings tab on the Network Settings window of the Web Browser and set Prohibit/Permission. The settings are saved in the Reader/Writer itself.

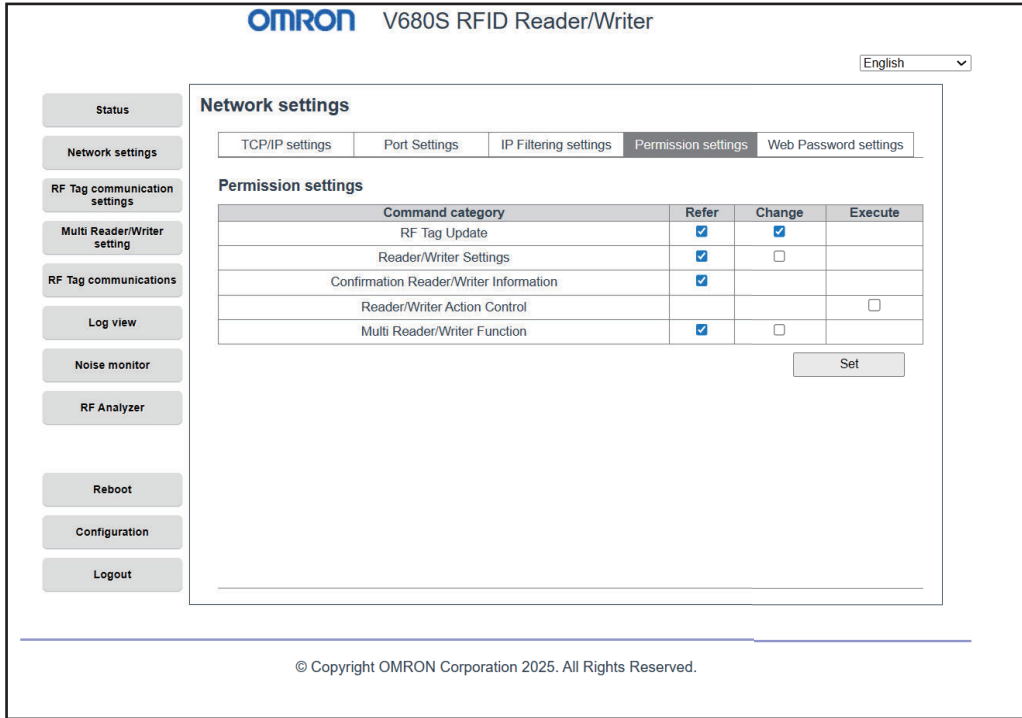

Command Category	Permission	Content	Setting range	Initial state
RF Tag communications	Read	Access permission for RF Tag communications	Prohibit, Permission	Permission
	Write		Prohibit, Permission	Permission
Reader/Writer settings	Read	Access permission for Reader/Writer settings	Prohibit, Permission	Permission
	Write		Prohibit, Permission	Prohibit
Reader/Writer information acquisition	Read	Access permission for Reader/Writer information acquisition	Prohibit, Permission	Permission
Reader/Writer operation control	Execute	Access permission for Reader/Writer operation control	Prohibit, Permission	Prohibit
Multi-Reader/Writer Operation	Read	Access permission for Multi-Reader/Writer Operation	Prohibit, Permission	Permission
	Write		Prohibit, Permission	Prohibit

## ● Access Permission Target Command

The commands for which access permissions can be set are shown below.

Command Category	Code value	Command name	Permission
RF Tag communications	0001 hex	READ ID	Read
	0002 hex	READ DATA	Read
	0003 hex	WRITE DATA	Write
	0004 hex	LOCK	Write
	0005 hex	DATA FILL	Write
	0006 hex	RF TAG OVERWRITE COUNT CONTROL	Write
	0007 hex	RESTORE DATA	Write
	0008 hex	COPY DATA	Write
Reader/Writer settings	1000 hex	INITIALIZE	Write
	1001 hex	SET RF TAG COMMUNICA- TIONS	Write
	1002 hex	GET RF TAG COMMUNICA- TIONS SETTINGS	Read
Reader/Writer information acquisition	2000 hex	GET MODEL INFORMATION	Read
	2001 hex	GET FIRMWARE VERSION	Read
	2002 hex	GET OPERATING TIME	Read
	2004 hex	GET COMMAND ERROR LOG	Read
	2005 hex	GET RESTORE INFORMA- TION	Read
Reader/Writer operation control	2003 hex	MEASURE NOISE	Execute
	3000 hex	RESET	Execute
Multi-Reader/Writer operation	1003 hex	SET MULTI-READER/WRIT- ER OPERATION	Write
	1004 hex	GET MULTI-READER/WRIT- ER SETTINGS	Read
	2006 hex	GET MULTI-READER/WRIT- ER STATUS	Read

### ■ Command Behavior without Access Permissions

If the command for which access is not permitted is issued from the host device, the "Execution status error" (Error code: 1006 hex) will occur.

## Setting the Web Password

---

You can set the Web Password and Operation Lock to be used with the Password Authentication Function.

For details on Web Password and Operation Lock, see *6-3 Password Authentication Function* on page 6-7.



### Version Information

---

#### **The Reader/Writer earlier than firmware Ver.5.00**

- You can set a password for logging in from a Web interface. The password can be up to 15 ASCII characters. No password is set by default.
  - If a Web password is set, a dialog box requesting entry of the password will be displayed when the initial Web server interface is displayed. If the correct password is entered, the normal Web interface can be used.
  - There is no Operation Lock setting.
-

## 6-9 Error Logs

The Reader/Writer manages errors and security-related events that occur during operation in logs. The error logs are saved until the power supply to the Reader/Writer is turned OFF. You can read the error logs by sending commands from the host device or by using a Web browser.

The following logs are saved.

Category	Description
Command error log	This log contains up to 16 errors detected for command execution for tag data links. They are given in chronological order. If more than 16 errors occur, the oldest errors are deleted in order.
System error log	This log contains up to eight fatal errors that were detected by the Reader/Writer. They are given in chronological order. If more than eight system errors occur, the oldest records are deleted in order.
Security Log	You can check the Log View of changes and controls made to the Reader/Writer by the host device, and operations made to the Reader/Writer by the user using the Web Browser. This log contains up to 64 items. If more than 65 items occur, the oldest records are deleted in order.



### Version Information

You can use the Security Log with Reader/Writers with firmware version 5.00 or higher.

### 6-9-1 Command Error Log

Each record consists of 16 bytes in the format that is shown in the following table. Up to 16 records are recorded. To read the command error log, either send a GET COMMAND ERROR LOG command or read it from a Web browser.

Field	Description
Operating time	Gives the operating time of the Reader/Writer when the error occurred. * The operating time is the elapsed time in milliseconds from when the Reader/Writer was started.
IP address	Gives the IP address of the host device that sent the command.
Command code	Gives the command code of the command received by the Reader/Writer.
Error code	Gives the error code from the response returned by the Reader/Writer.
Response information 1	Gives response information 1 from the response returned by the Reader/Writer.
Response information 2	Gives response information 2 from the response returned by the Reader/Writer.



### Precautions for Correct Use

Errors that occur during RF Tag communications from a Web browser are not recorded in the command error log. Only errors that occur in command execution for tag data links are recorded.

Refer to *Error Codes* on page 7-10, *Device Information* on page 7-12, and *Communications Diagnostics Results* on page 7-12 for detailed information on error codes, response information 1, and response information 2.

## 6-9-2 System Error Log

Each record in the system error log consists of 16 bytes in the format that is shown in the following table. Up to eight records are recorded. To read the system error log, either send a GET SYSTEM ERROR LOG command or read it from a Web browser.

Field	Description
Operating time	This is the operating time of the Reader/Writer when the error occurred. * The operating time is the elapsed time in milliseconds from when the Reader/Writer was started.
Error code	This code is used to identify the error.
Attached information 1	These codes provide additional information on the error. <ul style="list-style-type: none"> <li>• 00000001 hex: Network settings</li> <li>• 00000002 hex: RF Tag communication settings</li> <li>• 00000003 hex: Multi-Reader/Writer settings</li> </ul>
Attached information 2	This code provides additional information on the error. This field is always 00000000 hex.

Refer to *Error Codes* on page 7-10 for detailed information on error codes, attached information 1, and attached information 2.

## 6-9-3 Security Log

This section describes the function for registering operations performed on the Web Browser as Security Log.



### Version Information

You can use the Security Log with Reader/Writers with firmware version "5.00" or higher.

## Overview

Changes and controls made to the Reader/Writer by the host device, and operations performed on the Reader/Writer by the user using the Web Browser are registered as Security Log. In the Security Log function, these auditable matters are called events.

Events include the IP Address of the communication partner, Source (protocol/service), and PowerOn-Time. Since you can check who performed what operation, when, and what, you can prevent denial when a security problem occurs.



### Precautions for Correct Use

This Security Log function does not record events that the Reader/Writer does not recognize, such as errors on the network line. If necessary, record them on the host device.

## Log Information

The following information is registered in the Security Log.

Item	Content
PowerOnTime	Time information when the event occurred. The accumulated power-on time (hour, minutes, seconds) in the Reader/Writer is registered.
Source	Type of the route on which the event occurred. (Control Signal/Web Browser/V680S Command) For communication routes (Web Browser/V680S Command), the service/protocol type and the IP address of the communication partner are registered.
Category	The event category is registered.
Event	The contents of the event are displayed.
Result	The result of the change, control, or operation that caused the event.
Additional Info 1-2	Additional information on the event result.

The following types of sources are available.

Source type	Code	Description
None	0x00	Event caused by Security Log Clear
Control Signal	0x11	Events caused by executing safe mode by manipulating the control signal
Web Browser	0x20	Event caused by Web Browser
V680S Command	0x30	Event caused by V680S Command

The rules for Event codes are as follows:

First 4 digits	Last 4 digits
xxxxHex	xxxxHex
Event category	Event type

The event categories are as follows:

Event category	Code	Description
Access Control	0001Hex	Events to which access control is applied Ex.) Password Authentication, Password Change
Control System	0002Hex	Events that affect system operation Ex.) Changing Operation Mode, Reboot( Restart), etc.
Configuration * Export/Import	0003Hex	Events that affect the overall system configuration Ex.) Factory Reset, performing Export/Import
Configuration Changes	0004Hex	Events that change system setting parameters
Audit Log Events	0005Hex	Events related to Security Log Ex.) Clearing Log, Changing log

## Event List

The list of events detected by the Reader/Writer is as follows:

Category	Event code	Event name	Source	See
Access Control Events	0001_0001Hex	Password Authentication	Web Browser	page 6-41
	0001_0002Hex	Password Change	Web Browser	page 6-41
	0001_0010Hex	Operation Lock Change	Web Browser	page 6-41
	0001_0020Hex	Access Permissions Change	Web Browser	page 6-42
Control System Events	0002_0001Hex	Operating Mode Change	Control Signal	page 6-42
	0002_0002Hex	Reboot	Web Browser V680S Command	page 6-42
Configuration Events	0003_0001Hex	Factory Reset	Web Browser V680S Command	page 6-43
	0003_0002Hex	Export	Web Browser	page 6-43
	0003_0003Hex	Import	Web Browser	page 6-43
	0003_0004Hex	EEPROM Memory Change	V680S Command	page 6-43
Configuration Changes Events	0004_0001Hex	TCP/IP Setting Change	Web Browser V680S Command	page 6-44
	0004_0014Hex	WebSocket port Change	Web Browser	page 6-44
	0004_0022Hex	IP Filtering Change (HTTPS)	Web Browser	page 6-44
Audit Log Events	0005_FFFFHex	Security Log Clear	None	page 6-44

## Event Descriptions

### ● How to Read the Event Descriptions

The meaning of each item in the table used in the description of each event is shown in brackets [ ].

<b>Event name</b>	[Event name]	<b>Event code</b>	[Event code]
<b>Meaning</b>	[Event content]		
<b>Detection timing</b>	[Event detection timing]	<b>Source</b>	[Event occurrence source]
<b>Results</b>	[Event result]		
<b>Additional Info1-2</b>	[Additional information on event result]		
<b>Precautions/ Remarks</b>	[Notes, Restrictions, Supplementary explanations, etc.]		

### ● Access Control Events

<b>Event name</b>	Password Authentication	<b>Event code</b>	0001_0001Hex
<b>Meaning</b>	Web Browser Password Authentication occurred		
<b>Detection timing</b>	At Login	<b>Source</b>	Web Browser
<b>Results</b>	Authentication Successful: 00Hex, Authentication Failed: 01Hex, Authentication Locked: 0x0F		
<b>Additional Info1-2</b>	None		
<b>Precautions/ Remarks</b>	---		

<b>Event name</b>	Password Change	<b>Event code</b>	0001_0002Hex
<b>Meaning</b>	Web Browser password changed		
<b>Detection timing</b>	Configuration Changes operation	<b>Source</b>	Web Browser
<b>Results</b>	Normal end: 00Hex		
<b>Additional Info1-2</b>	None		
<b>Precautions/ Remarks</b>	---		

<b>Event name</b>	Operation Lock Change	<b>Event code</b>	0001_0010Hex
<b>Meaning</b>	Web Browser Operation Lock setting changed		
<b>Detection timing</b>	Configuration Changes operation	<b>Source</b>	Web Browser
<b>Results</b>	Disable: 00Hex, Enable: 01Hex		
<b>Additional Info1-2</b>	Additional Info1: Lock Time (60 to 3,600 sec)		
<b>Precautions/ Remarks</b>	---		

<b>Event name</b>	Access Permissions Change	<b>Event code</b>	0001_0020Hex
<b>Meaning</b>	Access Permissions settings have been changed		
<b>Detection timing</b>	Configuration Changes operation	<b>Source</b>	Web Browser
<b>Results</b>	Normal end: 00Hex		
<b>Additional Info1-2</b>	Allocates 1 byte for each target Command Category*1 Readable = 0x04, Writable = 0x02, Executable = 0x01 logical OR, No permission = 0x00		
<b>Precautions/Remarks</b>	---		

\*1. The contents of the Additional Information are as follows.

	1st byte	2nd byte	3rd byte	4th byte
<b>Additional Info1</b>	RF Tag Communications	Reader/Writer settings	Reader/Writer information acquisition	Reader/Writer operation control
<b>Additional Info2</b>	(Reserved)	Multi-Reader/Writer Operation	(Reserved)	(Reserved)

## ● Control System Events

<b>Event name</b>	Operating Mode Change	<b>Event code</b>	0002_0001Hex
<b>Meaning</b>	Reader/Writer Operation Mode has been changed		
<b>Detection timing</b>	At startup	<b>Source</b>	DIP Switch
<b>Results</b>	RUN-Mode: 01Hex, Safe-Mode: 02Hex		
<b>Additional Info1-2</b>	None		
<b>Precautions/Remarks</b>	Detects if the Operation Mode has changed from the previous startup		

<b>Event name</b>	Reboot	<b>Event code</b>	0002_0002Hex
<b>Meaning</b>	Reader/Writer has been rebooted		
<b>Detection timing</b>	Reboot operation, Receive command	<b>Source</b>	Web Browser, V680S Command
<b>Results</b>	Normal end: 00Hex		
<b>Additional Info1-2</b>	None		
<b>Precautions/Remarks</b>	---		

## ● Configuration Events

<b>Event name</b>	Factory Reset	<b>Event code</b>	0003_0001Hex
<b>Meaning</b>	Factory Reset operation performed		
<b>Detection timing</b>	Configuration operation	<b>Source</b>	Web Browser, V680S Command
<b>Results</b>	Successful: 00Hex, Failed: 01Hex		
<b>Additional Info1-2</b>	Additional Info 1: All initialize (0x0000), Initialize without password (0x0001)		
<b>Precautions/Remarks</b>	---		

<b>Event name</b>	Export	<b>Event code</b>	0003_0002Hex
<b>Meaning</b>	Export performed		
<b>Detection timing</b>	Configuration operation	<b>Source</b>	Web Browser
<b>Results</b>	Successful: 00Hex, Failed: 01Hex		
<b>Additional Info1-2</b>	None		
<b>Precautions/Remarks</b>	---		

<b>Event name</b>	Import	<b>Event code</b>	0003_0003Hex
<b>Meaning</b>	Import performed		
<b>Detection timing</b>	Configuration operation	<b>Source</b>	Web Browser
<b>Results</b>	Successful: 00Hex, Failed: 01Hex		
<b>Additional Info1-2</b>	None		
<b>Precautions/Remarks</b>	---		

<b>Event name</b>	EEPROM Memory Change	<b>Event code</b>	0003_0004Hex
<b>Meaning</b>	EEPROM memory changed		
<b>Detection timing</b>	Receive command	<b>Source</b>	V680S Command
<b>Results</b>	Successful: 00Hex, Failed: 01Hex		
<b>Additional Info1-2</b>	Write address		
<b>Precautions/Remarks</b>	---		

## ● Configuration Changes Events

<b>Event name</b>	TCP/IP Setting Change	<b>Event code</b>	0004_0001Hex
<b>Meaning</b>	TCP/IP Settings have been changed		
<b>Detection timing</b>	Configuration Changes operation, Receive command	<b>Source</b>	Web Browser, V680S Command
<b>Results</b>	Normal end: 00Hex		
<b>Additional Info1-2</b>	Additional Info 1: Changed Type IP Address: 0001Hex Subnet Mask: 0002Hex Default Gateway: 0003Hex Additional Info 2: Changed Value (IP Address, Subnet Mask, etc.)		
<b>Precautions/ Remarks</b>	---		

<b>Event name</b>	WebSocket port change	<b>Event code</b>	0004_0014Hex
<b>Meaning</b>	WebSocket port settings have been changed		
<b>Detection timing</b>	Configuration Changes operation	<b>Source</b>	Web Browser
<b>Results</b>	Normal end: 00Hex		
<b>Additional Info1-2</b>	Additional Info 1: Port Enable/Disable Additional Info 2: Port number		
<b>Precautions/ Remarks</b>	---		

<b>Event name</b>	IP Filtering Change (HTTPS)	<b>Event code</b>	0004_0022Hex
<b>Meaning</b>	IP Filtering Settings have been changed		
<b>Detection timing</b>	Configuration Changes operation	<b>Source</b>	Web Browser
<b>Results</b>	Disable: 00Hex, Enable: 01Hex		
<b>Additional Info1-2</b>	Additional Info 1: Changed IP Address Additional Info 2: Changed Mask		
<b>Precautions/ Remarks</b>	---		

## ● Audit Log Events

<b>Event name</b>	Security Log Clear	<b>Event code</b>	0005_FFFFHex
<b>Meaning</b>	Security Log data error (tampering) detected		
<b>Detection timing</b>	Log data error detected	<b>Source</b>	None (0x00)
<b>Results</b>	None (0x00)		
<b>Additional Info1-2</b>	None		
<b>Precautions/ Remarks</b>	---		

## Log Capacity and Storage Conditions

The Security Log is stored in the non-volatile memory of the Reader/Writer.

Item	Content
Number of saved items	64 items
Storage method	Ring buffer method (oldest contents are overwritten with newest contents)
Storage destination	Non-volatile memory of the Reader/Writer

## Operation Method

The Security Log can be viewed on the **Security Log** tab of the Log view window of the Web Browser. Click the **Export** button to save the Security Log to your computer as a CSV file.

The screenshot displays the OMRON V680S RFID Reader/Writer web interface. At the top, the OMRON logo and 'V680S RFID Reader/Writer' are visible, along with a language dropdown set to 'English'. On the left, a vertical sidebar contains navigation buttons for Status, Network settings, RF Tag communication settings, Multi Reader/Writer setting, RF Tag communications, Log view (highlighted), Noise monitor, RF Analyzer, Reboot, Configuration, and Logout. The main content area is titled 'Log view' and features three tabs: 'Command error log', 'System error log', and 'Security log' (selected). Below the tabs, the 'Security log' section contains a table with the following headers: 'PowerOnTime', 'Source', 'Category', and 'Event'. The table body is currently empty. Below the table, there is a horizontal scrollbar and two buttons: 'File Export' and 'Update'.

© Copyright OMRON Corporation 2025. All Rights Reserved.

## PowerOnTime

The PowerOnTime registered in the Security Log is the time information accumulated while the Reader/Writer is powered on, and is saved in the non-volatile memory of the Reader/Writer.

The PowerOnTime is saved at the following times.

Saving timing	Content
Regular interval	Saved to non-volatile memory once an hour
When Security Log is saved	Saved to non-volatile memory according to the log registration when an event occurs



### Precautions for Correct Use

- The PowerOnTime does not represent an exact time. Please use it as a guideline for maintenance.
- Since it is saved every hour, there may be an error of up to 59 minutes and 59 seconds depending on the timing of powering off the Reader/Writer. Also, if the Reader/Writer is frequently turned off at intervals of less than one hour, the time may not accumulate correctly.

# 6-10 Web Server

The following functions are provided in the Web server interface.

## 6-10-1 Status Monitoring, Setting, and Confirmation

### Status Monitoring

You can monitor the status of the Reader/Writer. The Reader/Writer status includes the firmware versions, MAC address, network settings, operating status, and other status information.

### Setting


You can set any of the settable parameters from the Web server interface. This includes the network settings, RF Tag communications settings, etc.

## 6-10-2 Importing and Exporting Settings

You can import and export the Reader/Writer setting information. You can store or view the configuration file on a computer. You can use importing to simplify setting up more than one Reader/Writer and you can use exporting to store and restore settings information as a countermeasure for problems.

### Overview

You can use the Web Browser to save (export) various setting data in the Reader/Writer as a configuration file on your computer. You can also transfer (import) the settings in the configuration file to the Reader/Writer to replace them.

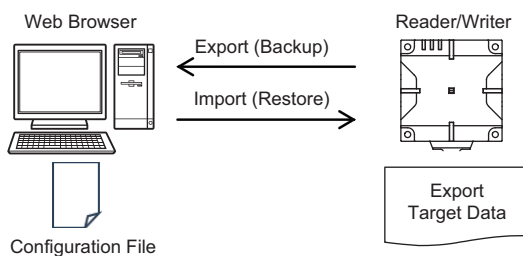

## Target Data

The setting data that is targeted by the export (backup) function is shown below.

Group	Setting data	Export (Backup)	Import (Restore)
Device Specific Information	Model* <sup>1</sup>	<input type="radio"/> Yes	<input checked="" type="radio"/> No
	Firmware version (Run Mode Program)* <sup>1</sup>	<input type="radio"/> Yes	<input checked="" type="radio"/> No
	Firmware version (Safe Mode Program)* <sup>1</sup>	<input type="radio"/> Yes	<input checked="" type="radio"/> No
	Web Application Version* <sup>1</sup>	<input type="radio"/> Yes	<input checked="" type="radio"/> No
	MAC Address* <sup>1</sup>	<input type="radio"/> Yes	<input checked="" type="radio"/> No
	Operation mode	<input checked="" type="radio"/> No	<input checked="" type="radio"/> No
	Status	<input checked="" type="radio"/> No	<input checked="" type="radio"/> No
	Operating time	<input checked="" type="radio"/> No	<input checked="" type="radio"/> No
Network Settings	IP Address	<input type="radio"/> Yes	<input type="radio"/> Yes
	Subnet Mask	<input type="radio"/> Yes	<input type="radio"/> Yes
	Gateway address	<input type="radio"/> Yes	<input type="radio"/> Yes
	BOOTP Options	<input type="radio"/> Yes	<input type="radio"/> Yes
	Device name	<input type="radio"/> Yes	<input type="radio"/> Yes
	Password* <sup>2</sup>	<input checked="" type="radio"/> No	<input checked="" type="radio"/> No
	Web port number	<input type="radio"/> Yes	<input type="radio"/> Yes
	Permission settings* <sup>1</sup>	<input type="radio"/> Yes	<input type="radio"/> Yes
	HTTPS port number setting* <sup>1</sup>	<input type="radio"/> Yes	<input checked="" type="radio"/> No
	WebSocket port number setting* <sup>1</sup>	<input type="radio"/> Yes	<input type="radio"/> Yes
	Multi-Reader/Writer port availability* <sup>1</sup>	<input type="radio"/> Yes	<input type="radio"/> Yes
	IP Filtering Settings Enable/Disable (HTTPS)* <sup>1</sup>	<input type="radio"/> Yes	<input type="radio"/> Yes
	IP Filtering Settings IP address (HTTPS)* <sup>1</sup>	<input type="radio"/> Yes	<input type="radio"/> Yes
	IP Filtering Settings mask (HTTPS)* <sup>1</sup>	<input type="radio"/> Yes	<input type="radio"/> Yes
Security Settings	Web Operation Lock settings* <sup>1</sup>	<input type="radio"/> Yes	<input type="radio"/> Yes
	Permission Settings RF Tag Communication* <sup>1</sup>	<input type="radio"/> Yes	<input type="radio"/> Yes
	Permission Settings Reader/Writer Settings* <sup>1</sup>	<input type="radio"/> Yes	<input type="radio"/> Yes
	Permission Settings Reader/Writer information acquisition* <sup>1</sup>	<input type="radio"/> Yes	<input type="radio"/> Yes
	Permission Settings Reader/Writer operation control* <sup>1</sup>	<input type="radio"/> Yes	<input type="radio"/> Yes
	Permission Settings RFID maintenance* <sup>1</sup>	<input type="radio"/> Yes	<input type="radio"/> Yes
	Permission Settings Multi-Reader/Writer operation* <sup>1</sup>	<input type="radio"/> Yes	<input type="radio"/> Yes
RF Tag Communications Settings	RF Tag Communications Speed	<input type="radio"/> Yes	<input type="radio"/> Yes
	Write Verify	<input type="radio"/> Yes	<input type="radio"/> Yes
	Communications option	<input type="radio"/> Yes	<input type="radio"/> Yes
	RF Communication Diagnostics	<input type="radio"/> Yes	<input type="radio"/> Yes

Group	Setting data	Export (Backup)	Import (Restore)
Multi-Reader/Writer Settings	Multi-Reader/Writer mode	<input type="radio"/> Yes	<input type="radio"/> Yes
	Group setting	<input type="radio"/> Yes	<input type="radio"/> Yes
	Slave IP address 1	<input type="radio"/> Yes	<input type="radio"/> Yes
	...	...	...
	Slave IP address 7	<input type="radio"/> Yes	<input type="radio"/> Yes

\*1. This item is for Reader/Writers with firmware version "5.00" or higher.


\*2. This item is for Reader/Writers with earlier than firmware version "5.00".

It will not be included in the exported file for Reader/Writers with firmware version "5.00" or higher.

Also, if you import the file exported from the Reader/Writers with firmware version earlier than "5.00" to the Reader/Writers with firmware version "5.00" or higher, it will be excluded from the imported setting data.

## Operation Method

After password authentication, execute the operation in the setting import section and the setting export section of the Configuration window of the Web Browser.

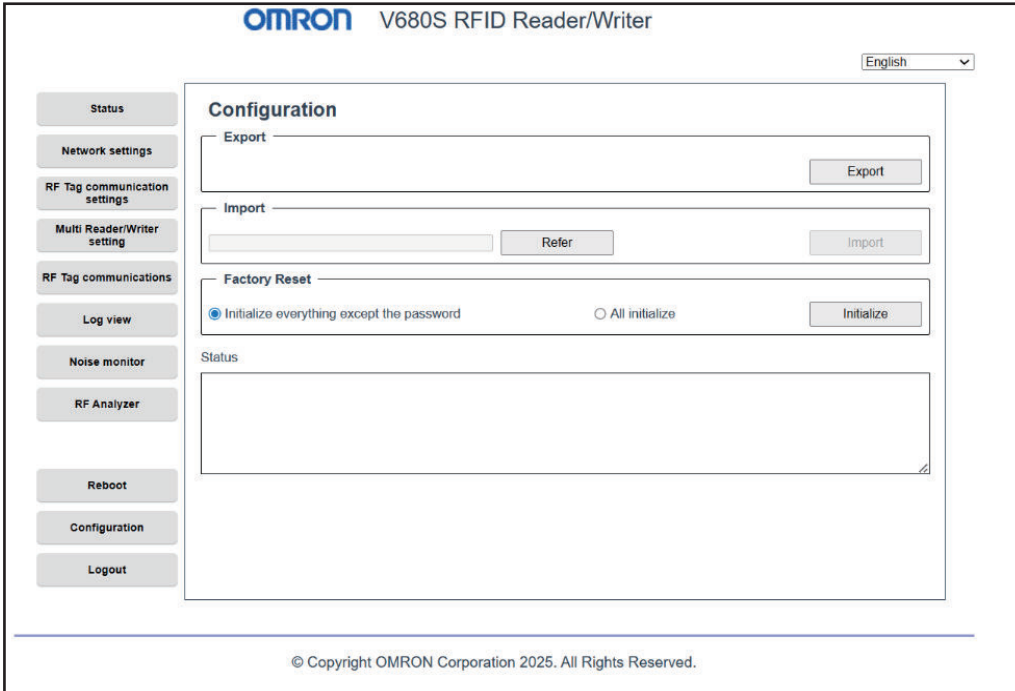



### Version Information

For the Configuration window of Reader/Writers with firmware version earlier than 5.00, see *A-9-3 Configuration* on page A-77 in *A-9 For Customers Using Reader/Writer Earlier Than Firmware Ver.5.00.* on page A-74.

## ● Export (Backup) Method


- 1** Start the browser.
- 2** Enter the IP address of the Reader/Writer in the browser's URL field.  
If the IP Address is the factory default, enter *https://192.168.1.200*.  
The Web Browser Password window will be displayed.

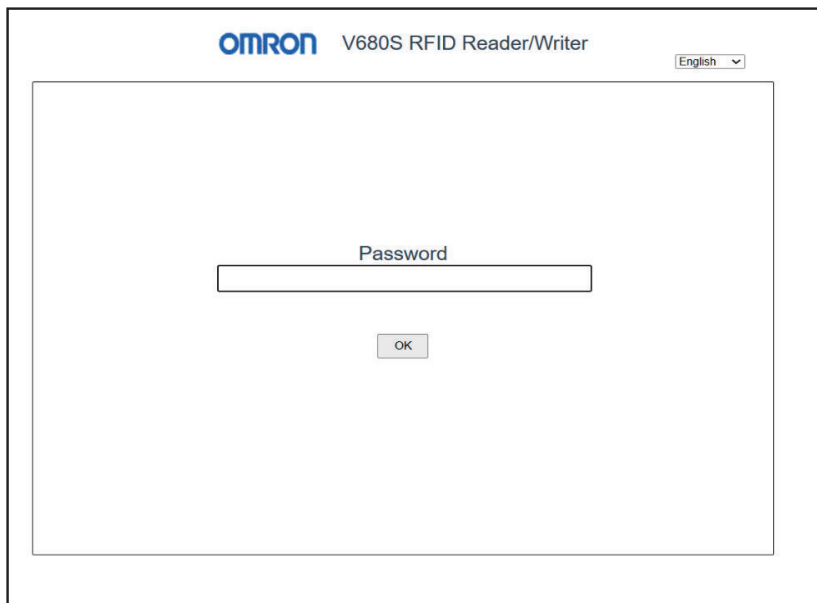


- 3** Enter the Web Password.




If the Web Password matches and authentication is successful, the following dialog will be displayed.

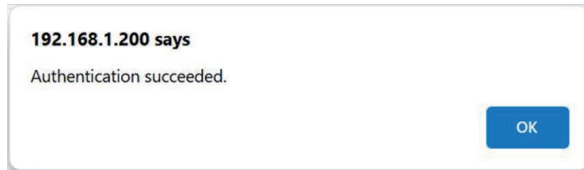

Then, the Status window will be displayed.

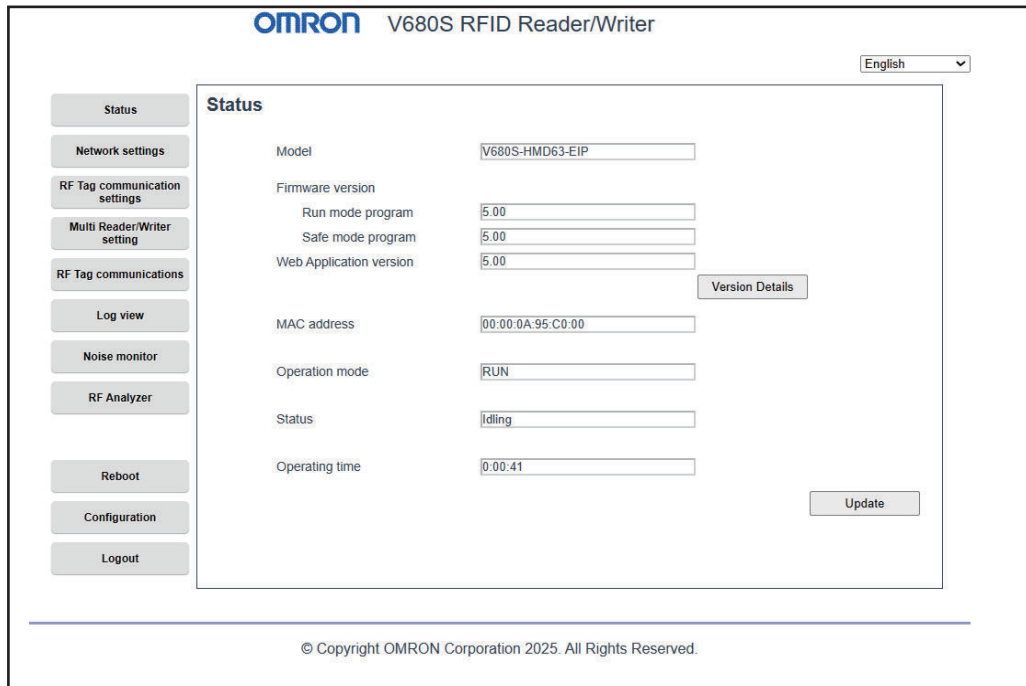


- 4** Click **Configuration** in the Web Browser.  
The Configuration window will be displayed.

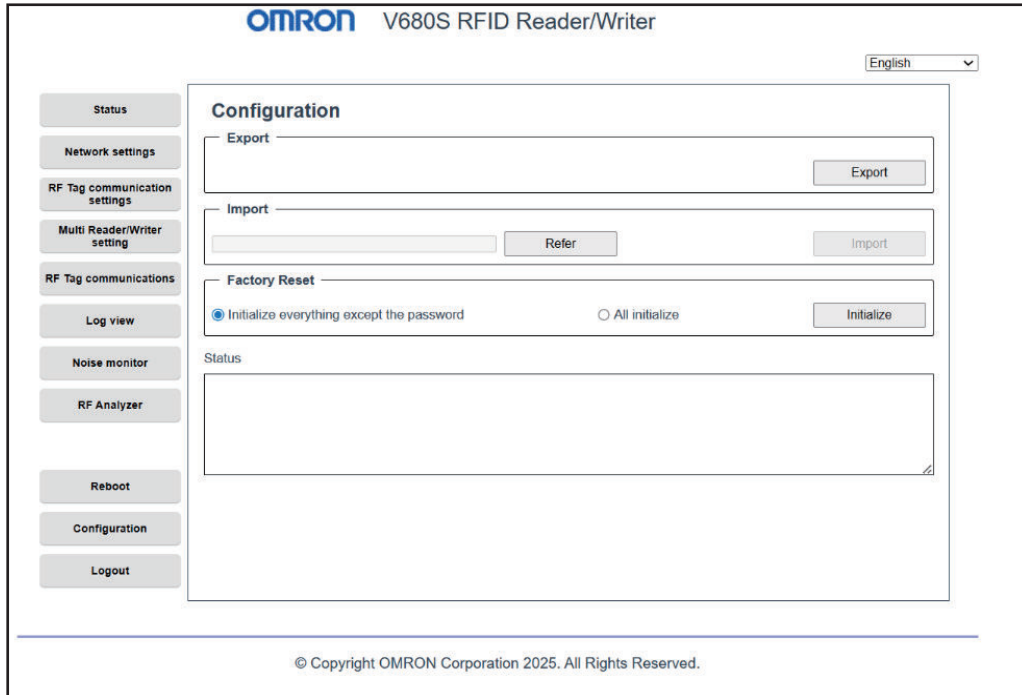

- 5 Click the **Export** button in the Export Settings section.  
The configuration file will be saved to your computer.

### ● Import (Restore) Method

- 1 Start the browser.
- 2 Enter the IP Address of the Reader/Writer in the browser's URL field.  
If the IP Address is the factory default, enter *https://192.168.1.200*.  
The Web Browser Password window will be displayed.

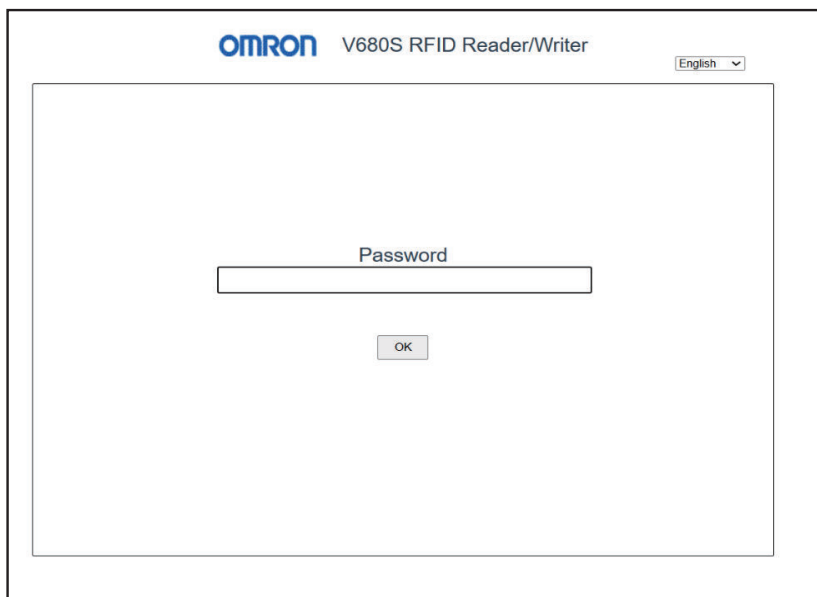

### 3 Enter the Web Password.

The screenshot shows the OMRON V680S RFID Reader/Writer web interface. At the top, the OMRON logo and the device name 'V680S RFID Reader/Writer' are displayed, along with a language dropdown menu set to 'English'. The main content area features a 'Password' label above a text input field containing several dots. A red rectangular box highlights the input field. Below the input field is an 'OK' button.

If the Web Password matches and authentication is successful, the following dialog will be displayed.

The screenshot shows a success dialog box with a white background and a thin border. It contains the text '192.168.1.200 says' in bold, followed by 'Authentication succeeded.' in a smaller font. A blue 'OK' button is located in the bottom right corner.

Then, the Status window will be displayed.

The screenshot shows the OMRON V680S RFID Reader/Writer web interface with the 'Status' window displayed. The interface includes a sidebar with navigation buttons: Status, Network settings, RF Tag communication settings, Multi Reader/Writer setting, RF Tag communications, Log view, Noise monitor, RF Analyzer, Reboot, Configuration, and Logout. The 'Status' window contains the following information:

Status	
Model	V680S-HMD63-EIP
Firmware version	
Run mode program	5.00
Safe mode program	5.00
Web Application version	5.00
	<a href="#">Version Details</a>
MAC address	00:00:0A:95:C0:00
Operation mode	RUN
Status	Idling
Operating time	0:00:41
	<a href="#">Update</a>

At the bottom of the page, the copyright notice reads: © Copyright OMRON Corporation 2025. All Rights Reserved.


- 4** Click **Configuration** in the Web Browser.  
The Configuration window will be displayed.

The screenshot shows the OMRON V680S RFID Reader/Writer Configuration web interface. The page title is "OMRON V680S RFID Reader/Writer" and the language is set to "English". On the left side, there is a navigation menu with buttons for: Status, Network settings, RF Tag communication settings, Multi Reader/Writer setting, RF Tag communications, Log view, Noise monitor, RF Analyzer, Reboot, Configuration, and Logout. The main content area is titled "Configuration" and contains three sections: "Export" with an "Export" button, "Import" with a file selection input, a "Refer" button, and an "Import" button, and "Factory Reset" with radio buttons for "Initialize everything except the password" (selected) and "All initialize", and an "Initialize" button. Below these sections is a "Status" section with a large empty text area. At the bottom of the page, there is a copyright notice: "© Copyright OMRON Corporation 2025. All Rights Reserved."

- 5** In the Import Settings section, select the configuration file to be restored and click the **Import** button.  
The settings in the configuration file will be reflected in the Reader/Writer.

## Configuration File

The configuration file is in ini file format. A hash value is added to the end of the file to detect file tampering by a third party.

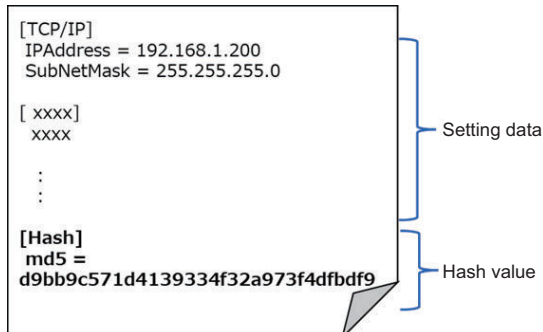

### Precautions for Correct Use

#### When importing a configuration file from earlier than firmware version "5.00" to the Reader/Writer with firmware version "5.00" or higher

- Since configuration files from earlier than firmware version "5.00" do not have hash values, it is not possible to detect tampering with the files by a third party. When importing a configuration file, a consent confirmation dialog is displayed. By consenting, you can import the configuration file.
- "Passwords" and "Web port numbers" that exist in setting files from earlier than firmware version "5.00" will be excluded from the imported setting data.
- The following items that do not exist in setting files from earlier than firmware version "5.00", the current setting values will be carried over.
  - Port Setting
  - IP Filtering Settings
  - Permission Settings
  - Web Password Settings (Operation lock)

#### When importing a configuration file from firmware version "5.00" or higher to the Reader/Writer earlier than firmware version "5.00"

- The following items added to setting files from firmware version "5.00" or higher will not be imported to Reader/Writers earlier than firmware version "5.00".
  - Port Setting
  - IP Filtering Settings
  - Permission Settings
  - Web Password Settings (Operation lock)

## 6-10-3 Convenient Functions

### Simple Operation Test

You can send commands from the Web server interface to operate the Reader/Writer without any special software.

### Utilities

You can display the results of noise measurements or error log information.

## 6-11 RFID System Maintenance

The RFID maintenance function consists of two functions, "Communication Diagnostic function" and "RF analyzer function".

Communications performance can be affected by environmental factors around the RFID System (including metal objects, the positional relationship between the Reader/Writer and RF Tags, and noise). You can use the RFID System maintenance functions to check the leeway in communications and achieve more stable device operation.



### Precautions for Correct Use

You can use the maintenance functions with Reader/Writers with firmware version 2.00 or higher.

Refer to 7-2-13 *GET FIRMWARE VERSION* on page 7-26 for the procedure to check the firmware version.




### Precautions for Correct Use

You cannot use the maintenance functions if you are using the FIFO Repeat communications option.


### 6-11-1 Communication Diagnostic

This function diagnoses the communications leeway whenever the Reader/Writer communicates with an RF Tag, displays the results on an operation indicator, and reports the results to the host device. It will help you achieve a more stable Reader/Writer and RF Tag installation and enable monitoring the status of operations.

The operation indicator lights green for a stable communication, yellow for an unstable communication, and red for a communications error.

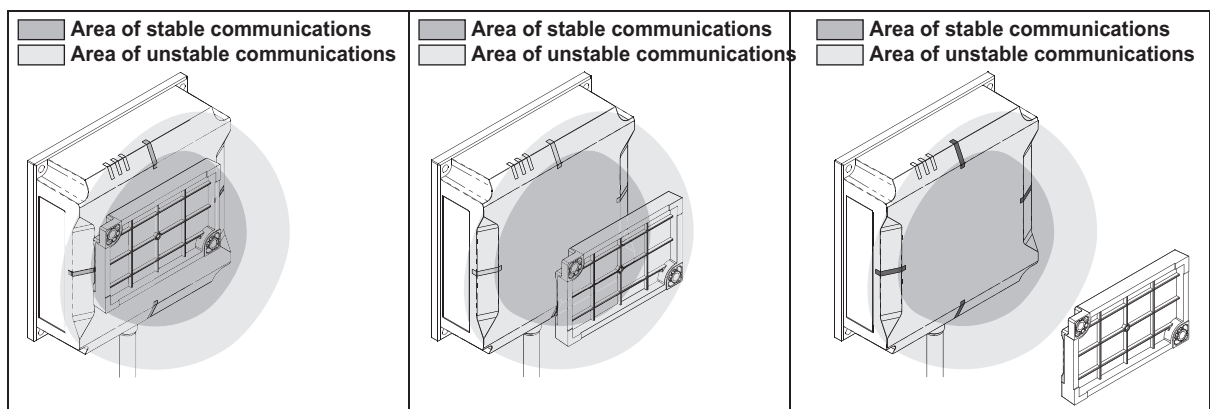




Yellow, which indicates an unstable communication, means that there is only 10% to 30% leeway in relation to the maximum communications range.

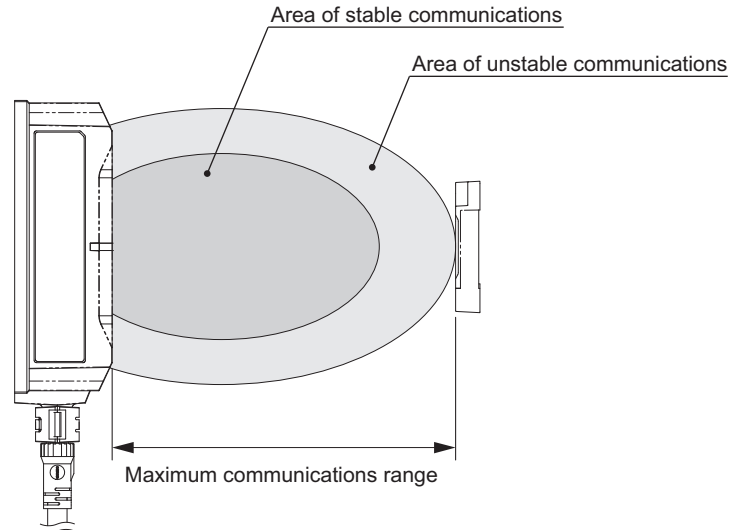

### Precautions for Correct Use

- Communication diagnostic is disabled in the default settings. To use communication diagnostic, you must enable it in advance. Refer to *8-3-4 RF Tag Communications Settings Window* on page 8-17 for the setting procedure for communication diagnostic.
- Use the results of communication diagnostic as a guideline.  
An indication of a stable communication (green) does not necessarily mean that communications are normal.
- Yellow, which indicates an unstable communication, does not necessarily mean that communications are not possible. It merely means that there is little leeway in communications. If you want to ensure more stable communications, we recommend that you use the Reader/Writer so that stable communications (green) are indicated.
- The communication time is approximately 200 ms longer when enabling Communication Diagnostic function.


You can use communication diagnostic to detect and diagnoses deterioration of performance for the following conditions.

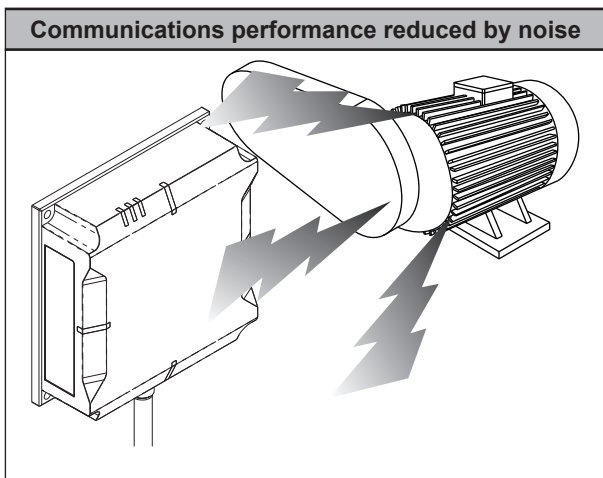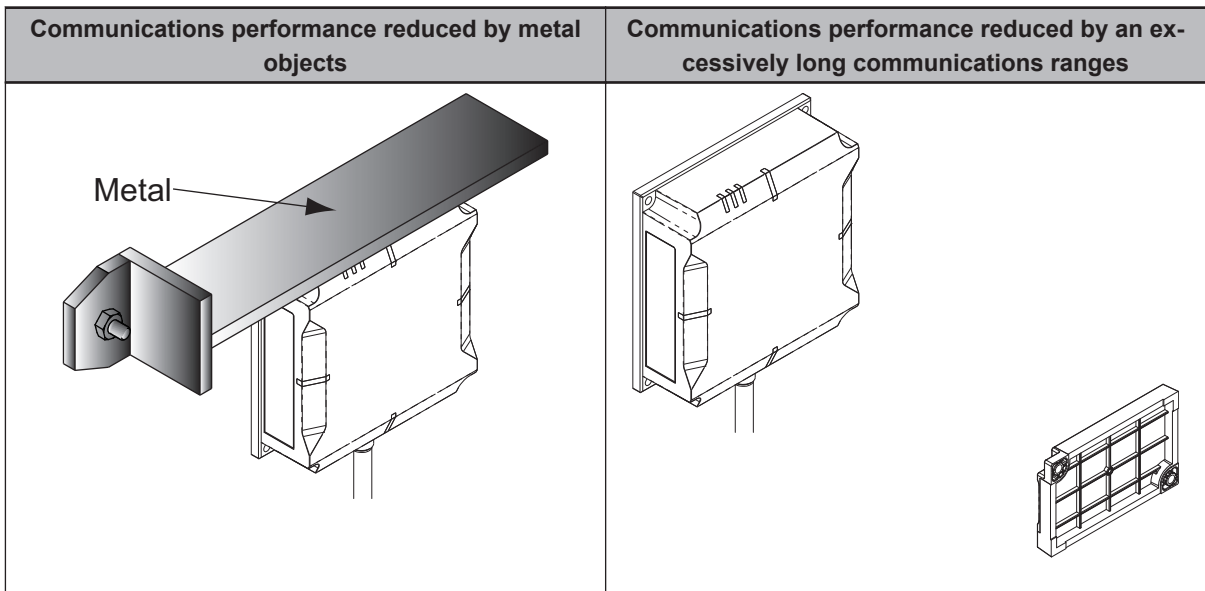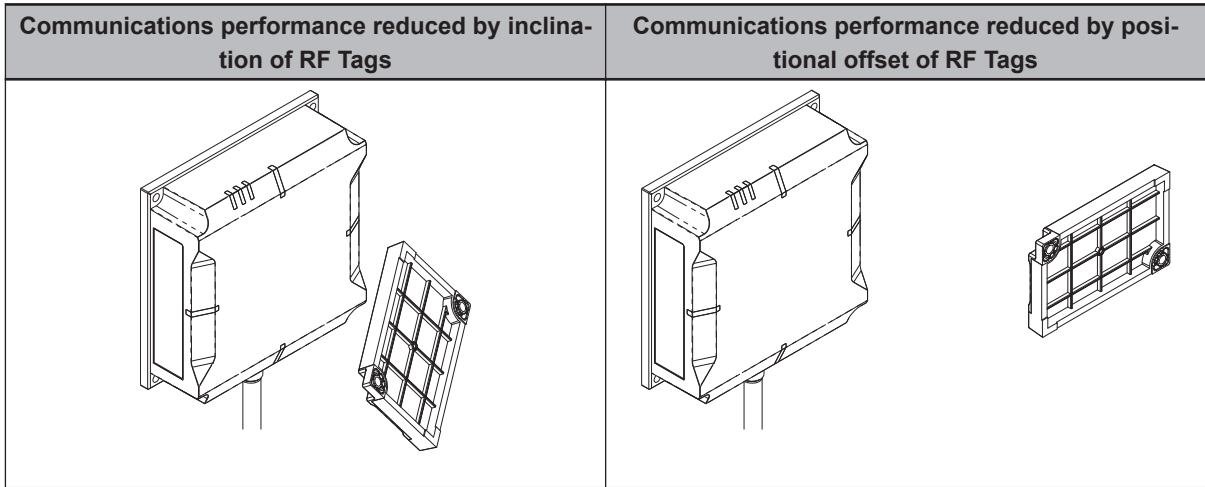

## 6-11-2 RF Analyzer

The RF Analyzer displays detailed information from communication diagnostic on a Web browser. You can easily check to see how stable communications are and troubleshoot problems.

You can browse a list of diagnostic information and periodically confirm the leeway quantitatively on graphs. You can download a log file that contains the diagnostic information stored in the Reader/Writer to a computer for your usage.

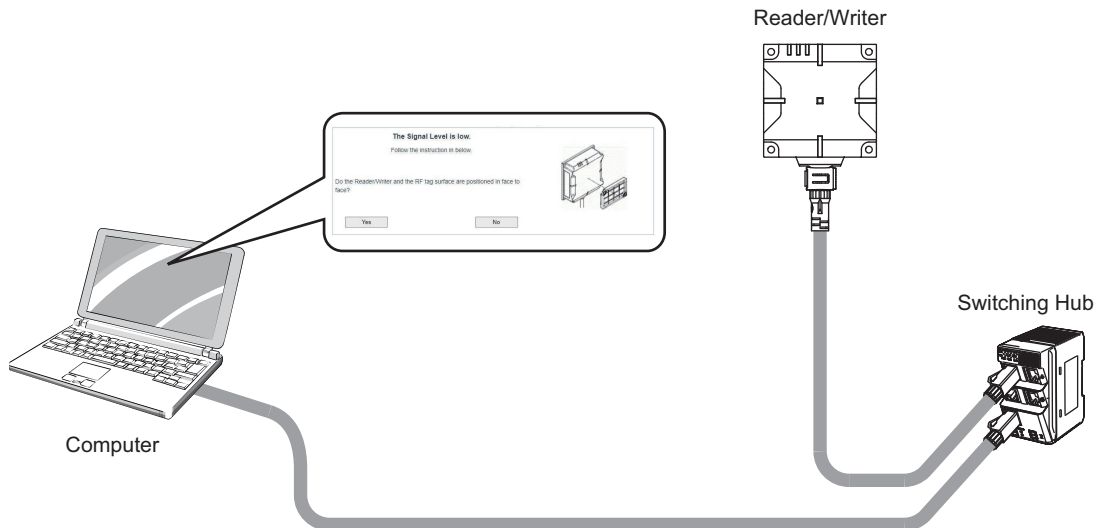

### Diagnostic Information Table

You can display a table of the diagnostic information from communications between the Reader/Writer and RF Tags. (The table contains up to 2,048 records.) You can check the following items in the table.

<b>Time</b>	The Reader/Writer operating time when it communicated with the RF Tag
<b>Command</b>	The name of the command used to communicate with the RF Tag
<b>Result</b>	The diagnostic result (stable, unstable, or error)
<b>Diagnostic information</b>	The cause when a communication was unstable

Whenever a communication was unstable, a button to display details is displayed in the list. If you click this button, you can troubleshoot the cause with guidance displayed on the Web browser to help stabilize communications.

## Diagnostic Information Graphs

You can display the diagnostic information quantitatively on a graph. You can check the following information on the graph.

<b>Signal level</b>	The communications signal level between the Reader/Writer and RF Tag is displayed in 10 levels on a vertical bar graph. The higher the value, the more stable the communications. A value of 10 means that communications are stable, and the bar is displayed in blue. A value of 1 to 9 means that communications are unstable, and the bar is displayed in yellow. A value of 0 indicates a communications error. Adjust the installation conditions to get the values as close to 10 as possible.
<b>Noise level</b>	The ambient noise level around the Reader/Writer that was detected in communications with RF Tags is displayed in 10 levels on a broken-line graph. The higher the value, the less stable the communications.

Refer to *8-3-9 RF Analyzer Window* on page 8-27 for the operating procedures of the RF Analyzer.

An application example of the RFID System maintenance functions is given below.

Enable communication diagnostic.

page 1-8



Communicate with an RF Tag.

page 1-7



If the operation indicator lights in yellow, check the RF Analyzer on a Web browser.

page 1-8



Check the assumed causes and corrections with the RF Analyzer and implement suitable measures.

page 1-9



Communicate with the RF Tag gain and see if the indicator lights in green.


page 1-11

## 6-12 Multi-Reader/Writer Operation

There are two modes that you can use for multi-Reader/Writer operation: Field Extension Mode and High-speed Traveling Mode.

You can link up to eight Reader/Writers to perform communications operations with RF Tags. One of the Reader/Writers operates as the master and the other Reader/Writers operate as slaves.

The host device just has to control one Reader/Writer, the master, to easily achieve complex control operations for all of the linked Reader/Writers.

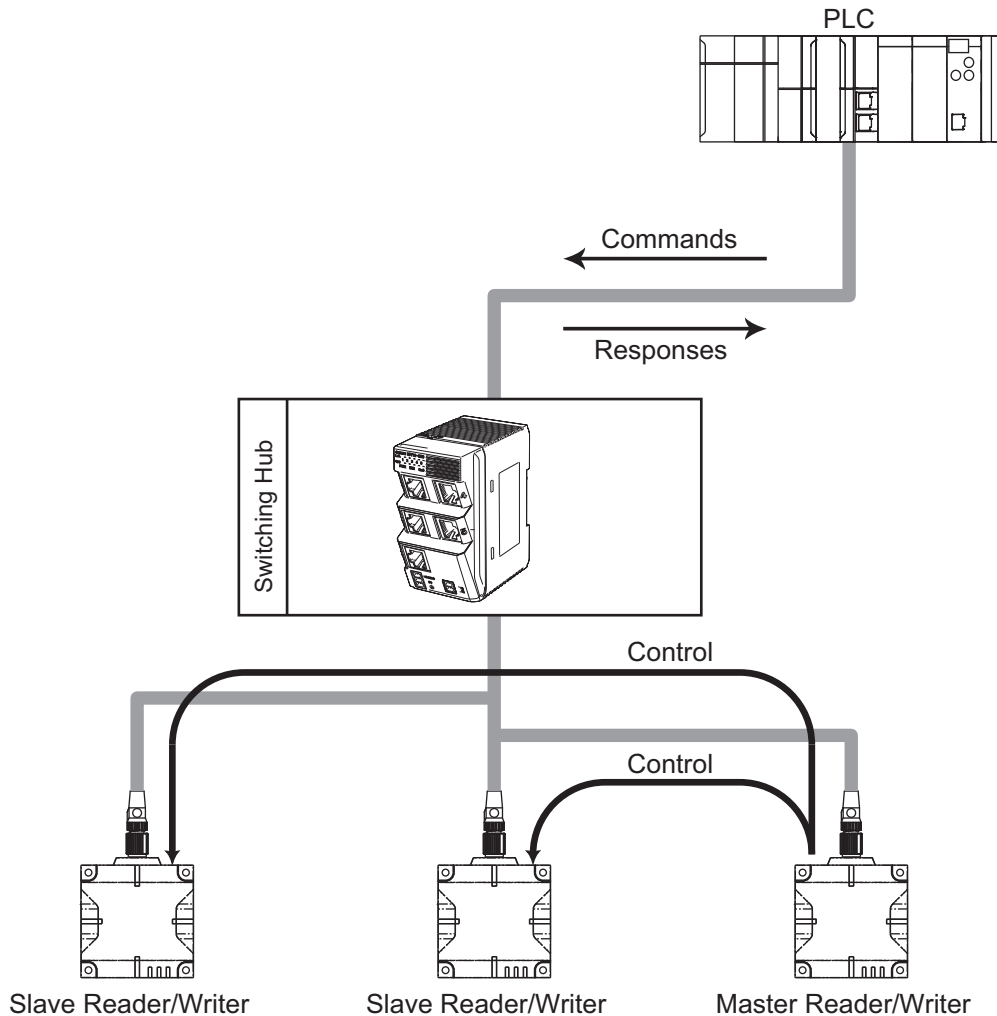

The RF Tag communications commands that you can use during multi-Reader/Writer operation (Field Extension Mode or High-speed Traveling Mode) are shown in the following table. If you use unsupported RF Tag communications commands when multi-Reader/Writer operation is enabled, an execution status error will be indicated in the response.

RF Tag communications command	Multi-Reader/Writer Mode	
	Field Extension Mode	High-speed Traveling Mode
READ DATA	Supported	Supported
WRITE DATA	Supported	Not supported
DATA FILL	Not supported	Not supported
RF TAG OVERWRITE COUNT CONTROL	Not supported	Not supported
READ ID	Supported	Not supported
COPY DATA	Not supported	Not supported
LOCK	Not supported	Not supported

The commands that can be acknowledged by a Slave Reader/Writer are shown in the following table. If an unsupported command is received by a Slave Reader/Writer, a multi-Reader/Writer execution error will occur.


	Name	Supported
RF Tag communications	READ ID	No
	READ DATA	No
	WRITE DATA	No
	LOCK	No
	DATA FILL	No
	RF TAG OVERWRITE COUNT CONTROL	No
	RESTORE DATA	No
	COPY DATA	No
Reader/Writer settings	INITIALIZE	No
	SET RF TAG COMMUNICATIONS	No
	GET RF TAG COMMUNICATIONS SETTINGS	Yes

	Name	Supported
Reader/Writer information acquisition	GET MODEL INFORMATION	Yes
	GET FIRMWARE VERSION	Yes
	GET OPERATING TIME	Yes
	GET COMMAND ERROR LOG	Yes
	GET RESTORE INFORMATION	Yes
Reader/Writer operation control	MEASURE NOISE	No
	RESET	No
Multi-Reader/Writer operation	SET MULTI-READER/WRITER OPERATION	No
	GET MULTI-READER/WRITER SETTINGS	Yes
	GET MULTI-READER/WRITER STATUS	Yes

## 6-12-1 Field Extension Mode

You can use this mode to link Reader/Writers in order to extend the effective communications field. Even if the workpieces are not all the same height or not oriented in the same direction, the placement of more than one Reader/Writer enables communicating with the RF Tags without worrying about the positions or orientation of the RF Tags.

This enables communications over a wide communications field and is therefore recommended for applications in which the locations or orientation of the RF Tags is not consistent.

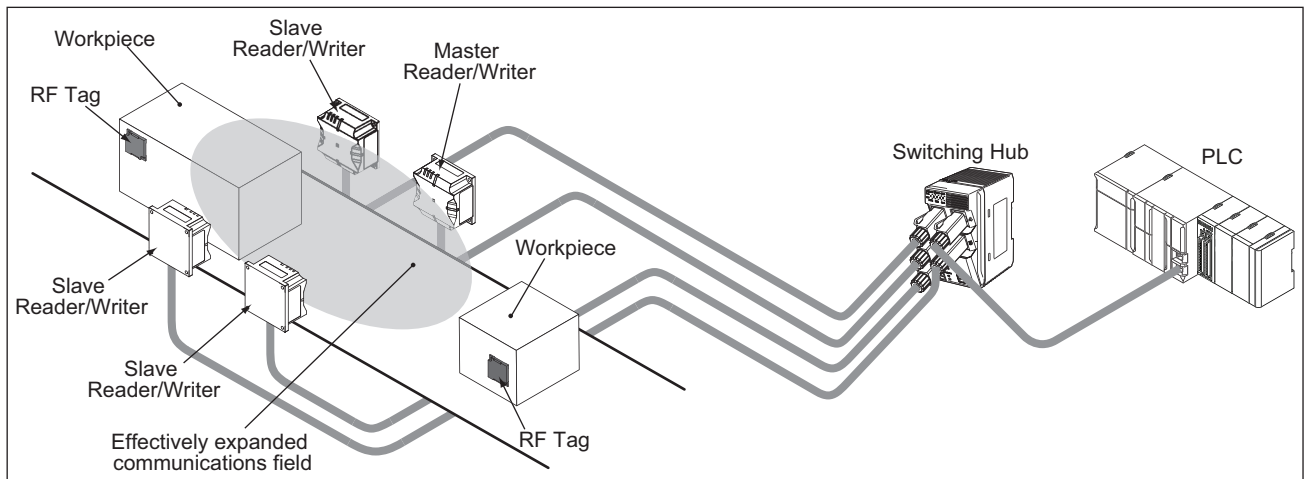

Communicating with RF Tags is possible without being affected by the orientation of the workpieces (i.e., the locations where the RF Tags are attached).

If you use Field Extension Mode, you can use only three RF Tag communications commands: READ DATA, WRITE DATA, and READ ID. Also, you can specify only the Once, Auto or Repeat communications option. If you use the FIFO Repeat communications option in Field Extension Mode, an execution status error will be indicated in the response.

### Applicable RF Tag Communications Commands

	Supported
READ DATA	Yes
WRITE DATA	Yes
DATA FILL	No
RF TAG OVERWRITE COUNT CONTROL	No
READ ID	Yes
COPY	No
LOCK	No

### Applicable Communications Options

	Supported
Once	Yes
Auto	Yes
Repeat	Yes
FIFO Repeat	No




### Precautions for Correct Use

In Field Extension Mode, the Reader/Writers do not simultaneously perform communications. The Reader/Writers individually perform communications on a time sharing basis.

## 6-12-2 High-speed Traveling Mode

You can read large data sizes from RF Tags because the data is split up and read by more than one Reader/Writer on a time-sharing basis while the workpiece is moving.

We recommend that you use this mode when reading data from RF Tags that are moving on a production line.

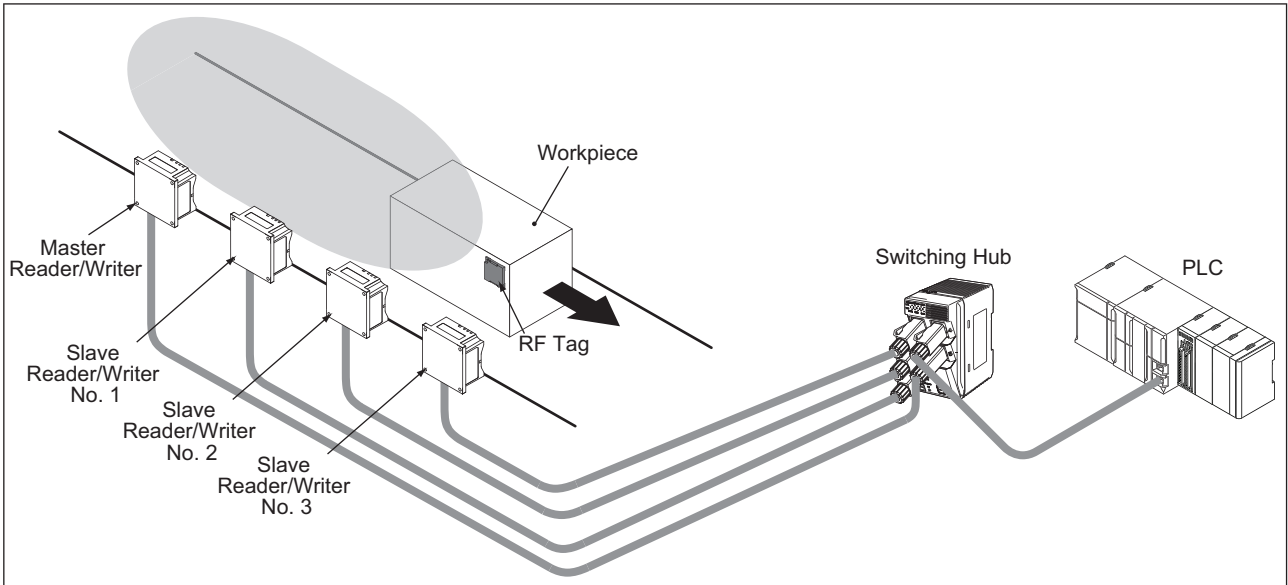

For example, if you link four Reader/Writers and each Reader/Writer can read only 25 words, you can read 100 words of data with the four linked Reader/Writers.

To use the High-speed Traveling Mode, the Master Reader/Writer and Slave Reader/Writers must be set according to their positions.

Read processing is executed in the following order.



### Precautions for Correct Use

- Always set the first Reader/Writer to read data as the Master Reader/Writer. Then set the other Reader/Writers to read data in order from Slave No. 1, Slave No.2, etc.
- Refer to *A-1-1 RF Tag Communications Range (for Reference Only)* on page A-3 and install the Reader/Writers so that the communications fields do not overlap. If the Reader/Writers are installed too close to each other, the reading speed will decrease.
- Refer to *Travel Speed Calculations* on page A-15 Appendices and set the workpiece travel speed.

For details, refer to *6-14-2 Using High-speed Traveling Mode* on page 6-85.



### Precautions for Correct Use

In High-speed Traveling Mode, the Master Reader/Writer must be located first.

In High-speed Traveling Mode, you can use only the READ DATA RF Tag communications command. Also, you can specify only the Auto or Repeat communications option. If you use any communications option other than Auto or Repeat in the High-speed Traveling Mode, an execution status error will be indicated in the response.

#### Applicable RF Tag Communications Commands

	Supported
READ DATA	Yes
WRITE DATA	No
DATA FILL	No
RF TAG OVERWRITE COUNT CONTROL	No
READ ID	No
COPY	No
LOCK	No

#### Applicable Communications Options

	Supported
Once	No
Auto	Yes
Repeat	Yes
FIFO Repeat	No



#### Precautions for Correct Use

In High-speed Traveling Mode, the Reader/Writers do not simultaneously perform communications. The Reader/Writers individually perform communications on a time sharing basis.


## 6-13 Using Communication Diagnostic and the RF Analyzer

You can use communications diagnostics from a Web server. Use either of the following procedures. Use the Web server to use the RF Analyzer.

### 6-13-1 Using the Web Server

#### Enabling Communication Diagnostic

- 1 Connect the Ethernet cable, turn ON the power supply to the Reader/Writer, and then start a Web browser on a computer.
- 2 Specify the IP address of the Reader/Writer in the address field of the Web browser. Enter **https://192.168.1.200/**, if you are using the default IP address.

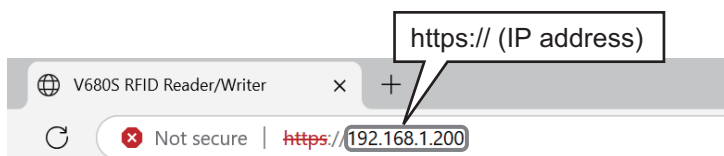

#### Version Information

For Reader/Writers earlier than firmware version "5.00", enter *http://192.168.1.200/* in the address field.

3 The Communications Setting View will be displayed.

The screenshot displays the OMRON V680S RFID Reader/Writer web interface. The page title is "OMRON V680S RFID Reader/Writer" with a language dropdown set to "English". A left sidebar contains navigation buttons: Status, Network settings, RF Tag communication settings (highlighted), Multi Reader/Writer setting, RF Tag communications, Log view, Noise monitor, RF Analyzer, Reboot, Configuration, and Logout. The main content area is titled "RF Tag communication settings" and includes the following controls:

- RF Tag communications option: Once
- RF Tag communications condition: (empty dropdown)
- RF Tag communications speed: High speed
- Write verify:
- RF Communication Diagnostics:  Enable,  Disable
- Set button

© Copyright OMRON Corporation 2025. All Rights Reserved.

- 4 Select the Enable Option for Communication Diagnostics and click the Set Button.

The screenshot shows the OMRON V680S RFID Reader/Writer web interface. The main content area is titled "RF Tag communication settings". On the left, there is a navigation menu with buttons for Status, Network settings, RF Tag communication settings, Multi Reader/Writer setting, RF Tag communications, Log view, Noise monitor, RF Analyzer, Reboot, Configuration, and Logout. The "RF Tag communication settings" window contains the following settings:

- RF Tag communications option: Once
- RF Tag communications condition: (empty)
- RF Tag communications speed: High speed
- Write verify:
- RF Communication Diagnostics:  Enable,  Disable

A "Set" button is located at the bottom right of the settings window. The footer of the interface reads: © Copyright OMRON Corporation 2025. All Rights Reserved.

Refer to 8-3-4 *RF Tag Communications Settings Window* on page 8-17 for the setting procedure for the Web browser interface.




#### Precautions for Correct Use


- When you enable communication diagnostic, the setting will be retained after the Reader/Writer is restarted and communication diagnostic will remain enabled.
- You cannot use the communications diagnostics if you are using the FIFO Repeat communications option. Use the Once, Auto or Repeat communications option.

## Communicating with an RF Tag

- 1 The RF Tag Communications View will be displayed.

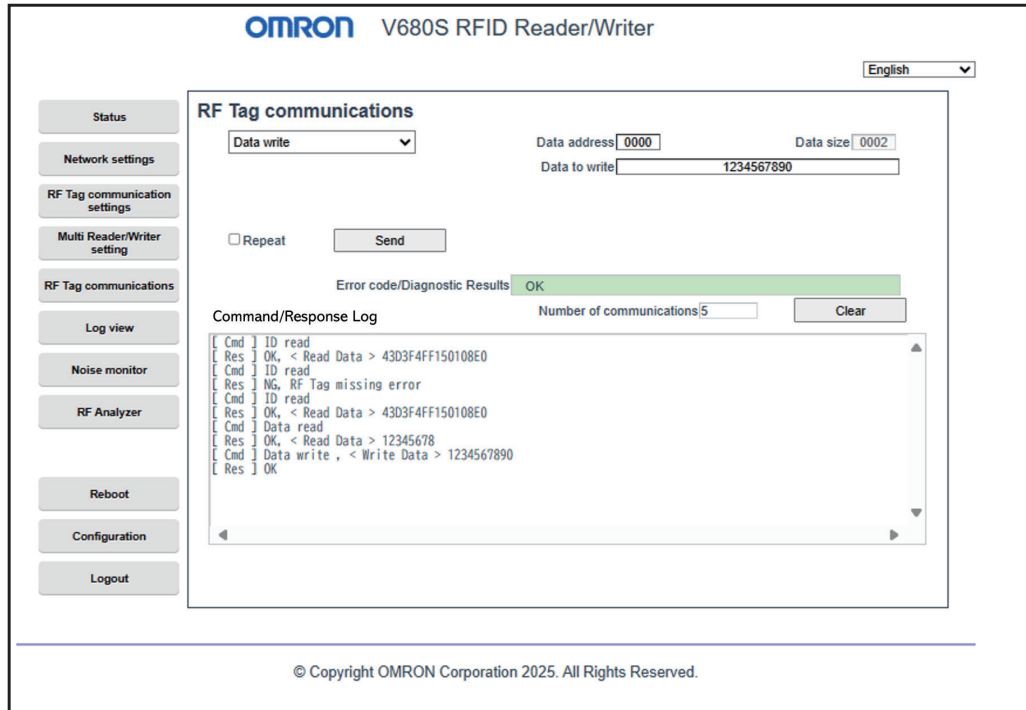

- 2 Place a RF Tag in front of the Reader/Writer.

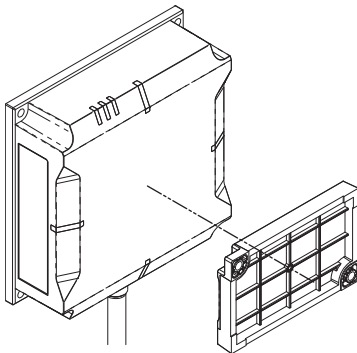

### Precautions for Correct Use

To increase the accuracy of communication diagnostic, we recommend installation in an environment that is as close as possible to the actual application environment.

- 3 Set the communications parameters (data address, data size, etc.), click the **Send** Button, and check the diagnostic results.

The screenshot displays the OMRON V680S RFID Reader/Writer web interface. The main content area is titled "RF Tag communications" and includes the following elements:

- Data write** dropdown menu.
- Data address** input field with value "0000".
- Data size** input field with value "0002".
- Data to write** input field with value "1234567890".
- Repeat** checkbox.
- Send** button.
- Error code/Diagnostic Results** field showing "OK".
- Command/Response Log** section with a "Number of communications" input field set to "5" and a "Clear" button.

The Command/Response Log contains the following text:

```
[ Cmd ] ID read
[ Res ] OK, < Read Data > 4303F4FF150108E0
[ Cmd ] ID read
[ Res ] NG, RF Tag missing error
[ Cmd ] ID read
[ Res ] OK, < Read Data > 4303F4FF150108E0
[ Cmd ] Data read
[ Res ] OK, < Read Data > 12345678
[ Cmd ] Data write, < Write Data > 1234567890
[ Res ] OK
```

At the bottom of the interface, the copyright notice reads: © Copyright OMRON Corporation 2025. All Rights Reserved.

## Checking with the RF Analyzer and Implementing Corrections

### 1 Display the RF Analyzer View.

OMRON V680S RFID Reader/Writer

English

Status

Network settings

RF Tag communication settings

Multi Reader/Writer setting

RF Tag communications

Log view

Noise monitor

RF Analyzer

Reboot

Configuration

Logout

**RF Analyzer**

Total : 4      Warning : 1      Error : 2      Graph

No	Time	Command	Result	UID
1	0:01:22	Read ID	Error	0000000000000000
2	0:01:23	Read ID	Stable	43D3F4FF150108E0
3	0:01:25	Read ID	Error	0000000000000000
4	0:01:27	Read ID	Warning	43D3F4FF150108E0

No: 4

Command: Read ID

Diagnostic description: 0001 : The Signal Level is low.

Signal Level: 9      Noise: 0

The Signal Level is low. Push the "Display" button on the right, and follow the instruction.

Display

Update      Save      Clear

© Copyright OMRON Corporation 2025. All Rights Reserved.



### Precautions for Correct Use

You cannot use the RF Tag Analyzer if you are using the FIFO Repeat communications option. Use the Once, Auto or Repeat communications option.

### 2 Click the **Display** Button in the Details column and follow the guidance to check the assumed causes and corrections.


**The Signal Level is low.**

Follow the instruction in below.


There is a possibility the positioning and posture of the Reader/Writer and the RF tag is not proper.  
 Make a position so that the Reader/Writer and the RF tag surface in face to face, then execute the RF communication diagnostics.  
 The inclination of the RF tag surface to the Reader/Writer may cause the deterioration of RF communication .

Return

- 3 In this example, the position of the Tag is corrected according to the guidance.

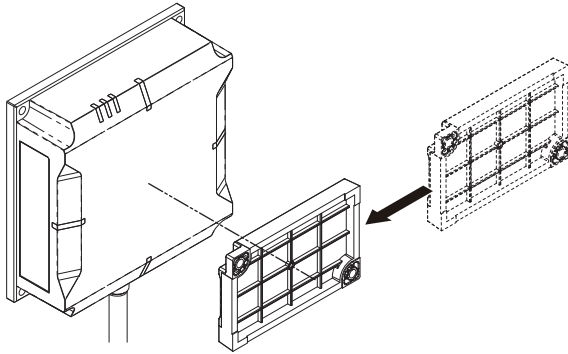

- 4 You can check the graph display to check quantitative information on the degree of instability.

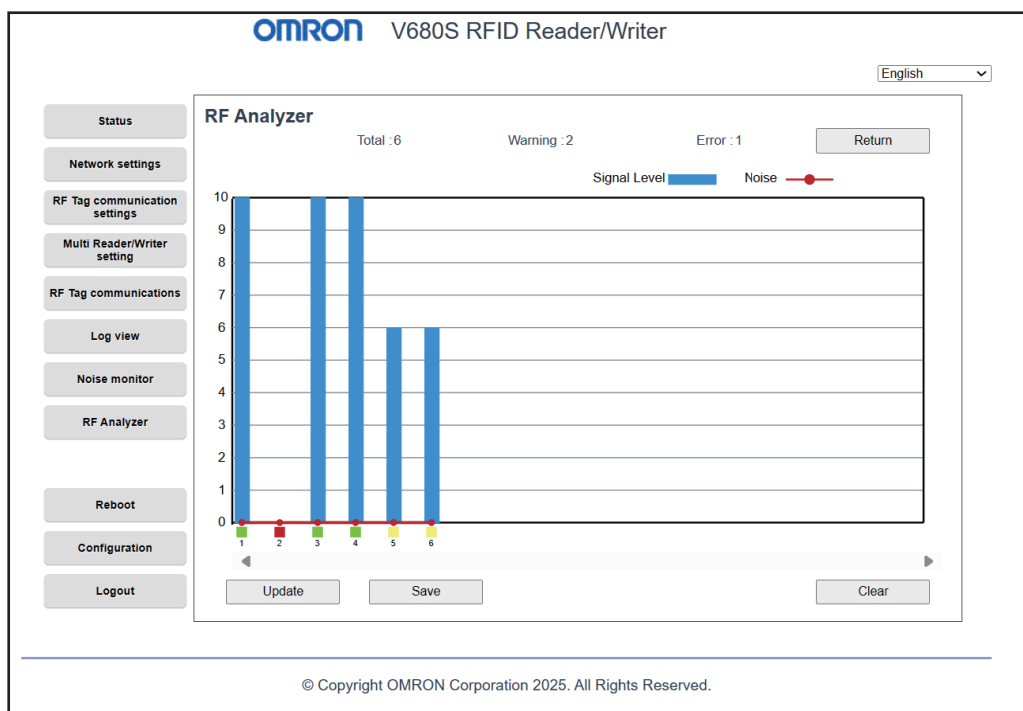


### Precautions for Correct Use

When you are finished, perform the step to communicate with the RF Tag again and check to see if stable communications have been achieved.

# 6-14 Using Multi-Reader/Writer Operation

## 6-14-1 Using Field Extension Mode

Use the following procedure for operation in Field Extension Mode. The following figure shows an example in which four Reader/Writers are installed.

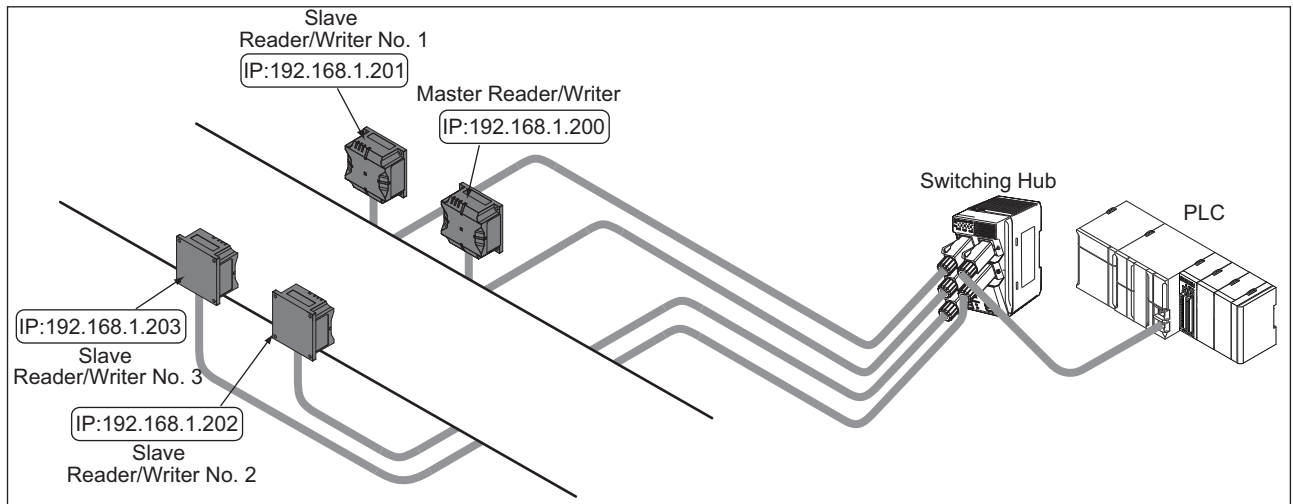

## Enabling Field Extension Mode

---

- 1 Connect all of the Reader/Writers with Ethernet Cables and turn ON the power supplies.




### Precautions for Correct Use

---

Set a unique IP address for each Reader/Writer in advance.  
Refer to *Section 5 Preparations for Communications* on page 5-1.

---

- 2 Start a Web browser on your computer.
- 3 In the address field on the Web browser operation window, enter the IP address of the master Reader/Writer (here, 192.168.1.200).

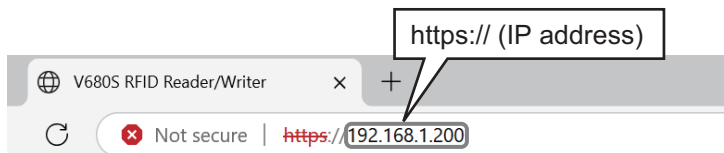

### Version Information

---

For Reader/Writers earlier than firmware version "5.00", enter *http://192.168.1.200/* in the address field.

---

- 4** Display the RF Tag Communications Settings View, set the RF Tag communications option to **Once**, **Repeat** or **Auto**, and then click the **Set** Button.

The screenshot displays the OMRON V680S RFID Reader/Writer web interface. The main title is "OMRON V680S RFID Reader/Writer" with a language dropdown set to "English". On the left, there is a navigation menu with buttons for: Status, Network settings, RF Tag communication settings, Multi Reader/Writer setting, RF Tag communications, Log view, Noise monitor, RF Analyzer, Reboot, Configuration, and Logout. The "RF Tag communication settings" panel is active, showing the following configuration:

- RF Tag communications option: Once
- RF Tag communications condition: (empty dropdown)
- RF Tag communications speed: High speed
- Write verify:
- RF Communication Diagnostics:  Enable,  Disable

A "Set" button is located at the bottom right of the settings panel. At the bottom of the interface, the copyright notice reads: "© Copyright OMRON Corporation 2025. All Rights Reserved."



### Precautions for Correct Use

If you specify the FIFO repeat communications option, multi-Reader/Writer operation will be enabled and a multi-Reader/Writer execution error will occur when you restart.

## 5 Display the Multi-Reader/Writer Settings View.

**OMRON** V680S RFID Reader/Writer

English

Status

Network settings

RF Tag communication settings

**Multi Reader/Writer setting**

RF Tag communications

Log view

Noise monitor

RF Analyzer

Reboot

Configuration

Logout

**Multi Reader/Writer setting**

Multi Reader/Writer mode  Disable  Field extension mode  High-speed travelling mode

Group setting	IP address	Status
Slave Reader/Writer No.1	<input type="text"/>	■
Slave Reader/Writer No.2	<input type="text"/>	■
Slave Reader/Writer No.3	<input type="text"/>	■
Slave Reader/Writer No.4	<input type="text"/>	■
Slave Reader/Writer No.5	<input type="text"/>	■
Slave Reader/Writer No.6	<input type="text"/>	■
Slave Reader/Writer No.7	<input type="text"/>	■

© Copyright OMRON Corporation 2025. All Rights Reserved.

## 6 Select the **Field Extension Mode** Check Box.

English

Status

Network settings



**Multi Reader/Writer settings**

Multi Reader/Writer mode  Disable  **Field extension mode**  High-speed travelling mode

## 7 Set the IP addresses of the three slave Reader/Writers and click the **Set** Button.

	Group setting	IP address	Status
RF Tag communication settings			
<b>Multi Reader/Writer setting</b>	Slave Reader/Writer No.1	<input type="text" value="192.168.1.201"/>	■
RF Tag communications	Slave Reader/Writer No.2	<input type="text" value="192.168.1.202"/>	■
Log view	Slave Reader/Writer No.3	<input type="text" value="192.168.1.203"/>	■
Noise monitor	Slave Reader/Writer No.4	<input type="text"/>	■
RF Analyzer	Slave Reader/Writer No.5	<input type="text"/>	■
Reboot	Slave Reader/Writer No.6	<input type="text"/>	■
	Slave Reader/Writer No.7	<input type="text"/>	■


## 8 A confirmation message will be displayed. Click the **OK** Button.

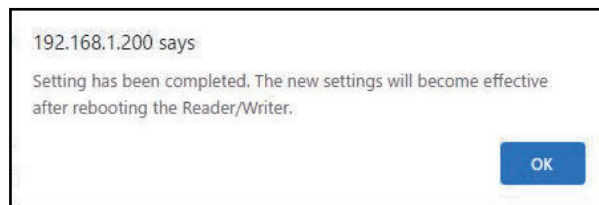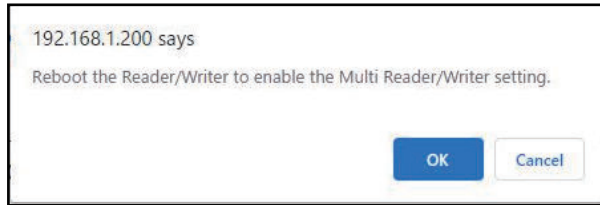

- 9** Click the **Reboot** Button. A Confirm Reboot Dialog Box will be displayed. Click the **OK** Button.



- 10** The following dialog box is displayed after the Reader/Writer has finished rebooting. Click the **OK** Button to connect to the Reader/Writer.

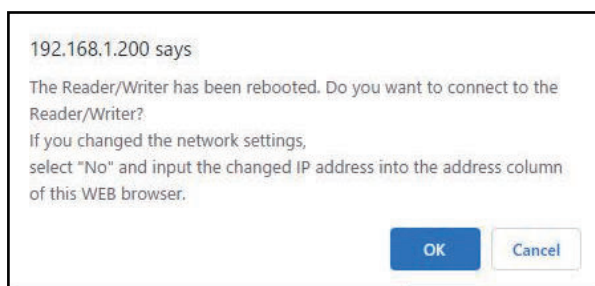

- 11** The following dialog box is displayed after reconnecting to the Reader/Writer. Click the **OK** Button.





### Precautions for Correct Use

---

- When re-connection goes wrong and an error message is displayed, check connection with the Reader/Writer and reboot a Web browser.
  - After re-connection, displays the **Status** window.
- 

**12** When the Master Reader/Writer is restarted, group registration processing is automatically performed for the registered Slave Reader/Writers.



### Precautions for Correct Use

---

If the Master Reader/Writer cannot establish communications with a registered Slave Reader/Writer (e.g., due to an incorrect IP address or because the Slave Reader/Writer is not started), the ERROR indicator (red) on the Master Reader/Writer will flash at 1-s intervals.

---

**13** You can confirm when communications have been established with all of the slave Reader/Writer from the **Multi-Reader/Writer Setting** Window of the Web browser operation window.

Group setting	IP address	Status
Slave Reader/Writer No.1	<input type="text" value="192.168.1.201"/>	
Slave Reader/Writer No.2	<input type="text" value="192.168.1.202"/>	
Slave Reader/Writer No.3	<input type="text" value="192.168.1.203"/>	
Slave Reader/Writer No.4	<input type="text"/>	


**14** The RUN indicator will light yellow on Reader/Writers that are operating as slave Reader/Writers. The indicator on the master Reader/Writer will remain lit green.

**15** This concludes the procedure to set Field Extension Mode. You can now use READ DATA or WRITE DATA commands from the host controller for the Master Reader/Writer to perform linked operation of multiple Reader/Writers.


## Executing a READ DATA Command in Field Extension Mode

- When the RF Tag Communications Option of the Master Reader/Writer Is Set to Once


**1** Send a READ DATA command from the host device to the Master Reader/Writer.

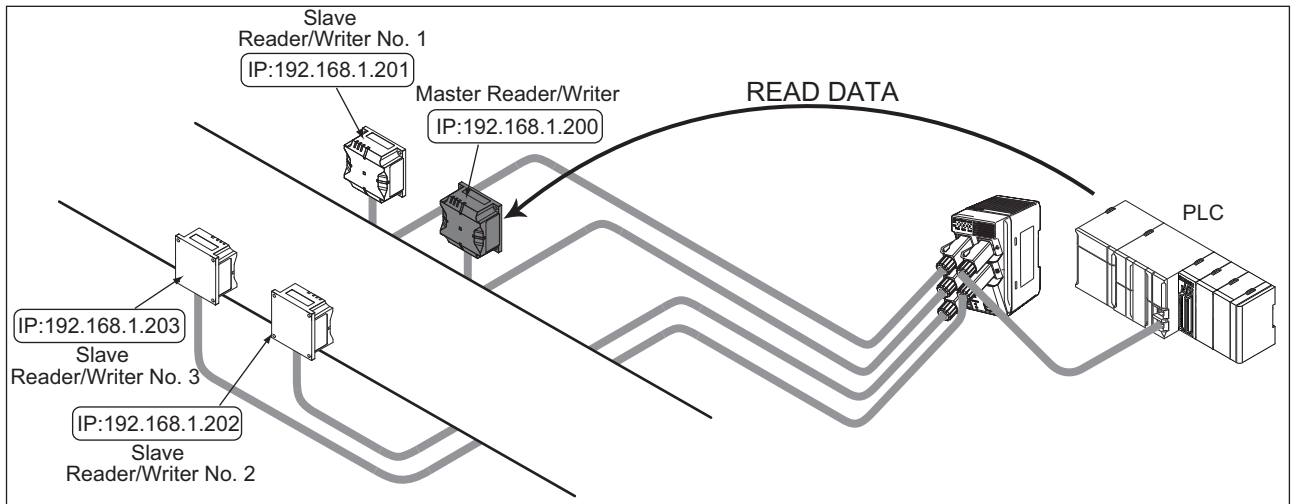


**2** The Master Reader/Writer will communicate with the RF Tag using the Once communications option. Here, communications will end normally or an RF Tag communications error will occur, the Reader/Writer will return a response to the host device, and processing will end. If an RF Tag missing error is detected, processing proceeds to step 3.

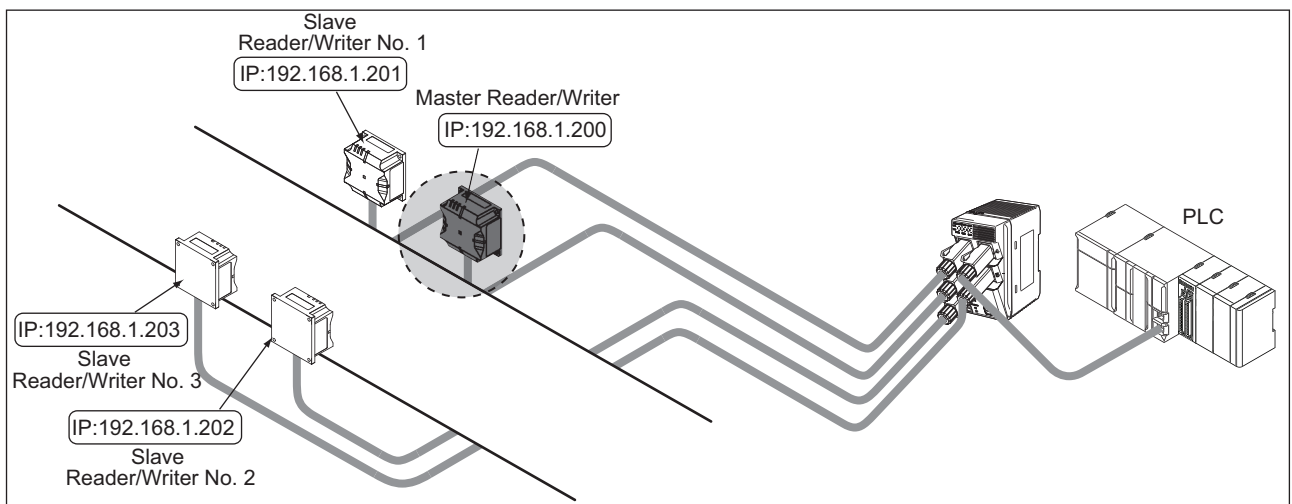

- 3** Slave Reader/Writer No. 1 will communicate with the RF Tag using the Once communications option. Here, communications will end normally or an RF Tag communications error will occur, the Reader/Writer will return a response to the host device, and processing will end. If an RF Tag tag missing error is detected, processing will be continued in order by Slave No. 2 and then by Slave No. 3.

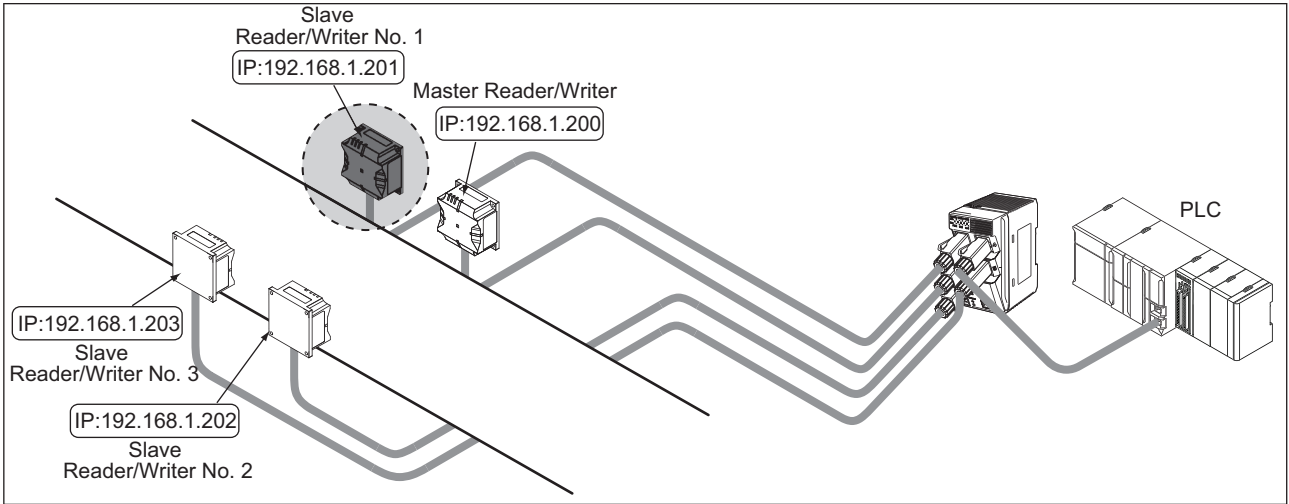


- 4** If an RF Tag missing error is detected for Slave No. 3, the error is returned to the host device and processing ends.

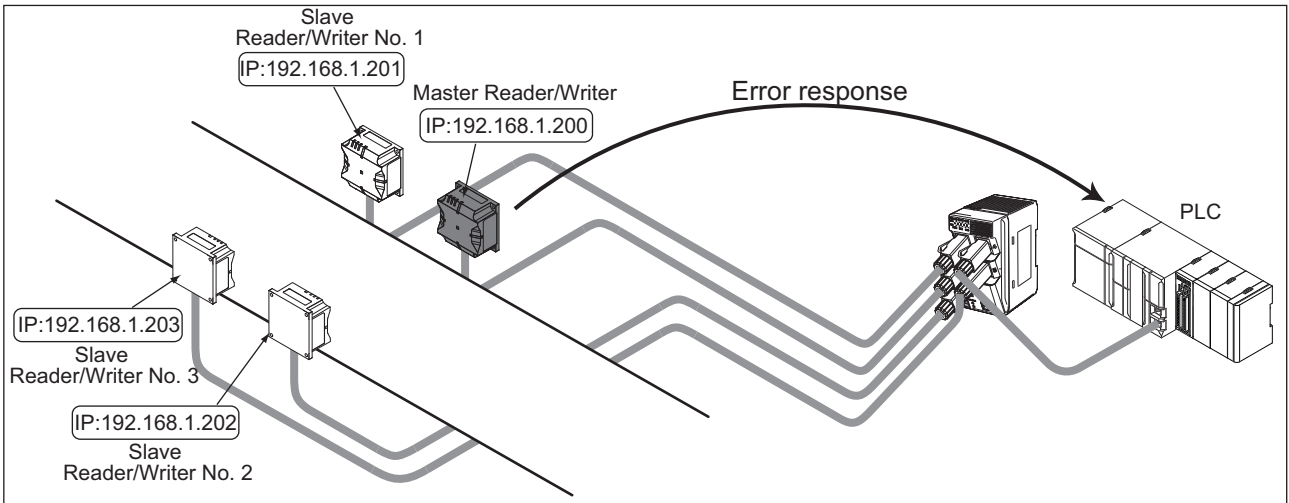


- When the RF Tag Communications Option of the Master Reader/Writer Is Set to Auto


- 1 Send a READ DATA command from the host device to the Master Reader/Writer.

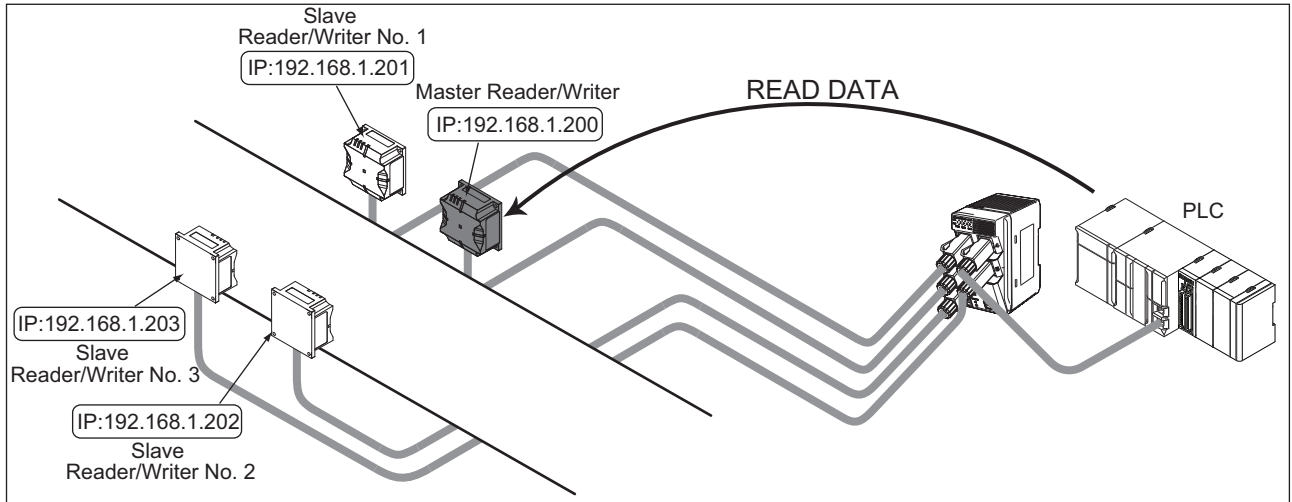


- 2 The Master Reader/Writer will communicate with the RF Tag using the Once communications option. Here, communications will end normally or an RF Tag communications error will occur, the Reader/Writer will return a response to the host device, and processing will end. If an RF Tag missing error is detected, processing proceeds to step 3.

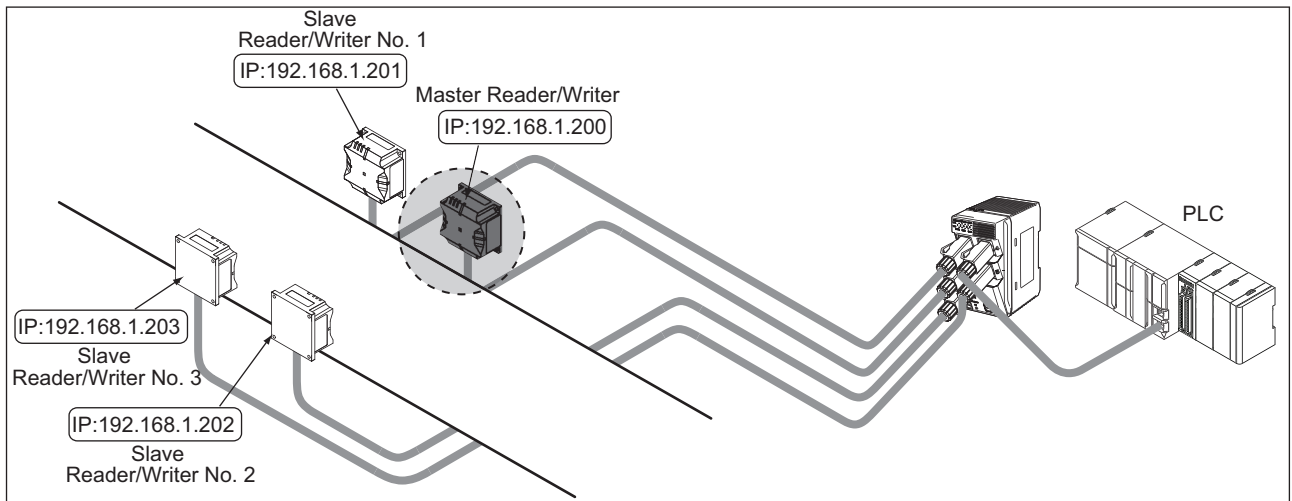

- 3** Slave Reader/Writer No. 1 will communicate with the RF Tag using the Once communications option. Here, communications will end normally or an RF Tag communications error will occur, the Reader/Writer will return a response to the host device, and processing will end. If an RF Tag tag missing error is detected, processing will be continued in order by Slave No. 2 and then by Slave No. 3.

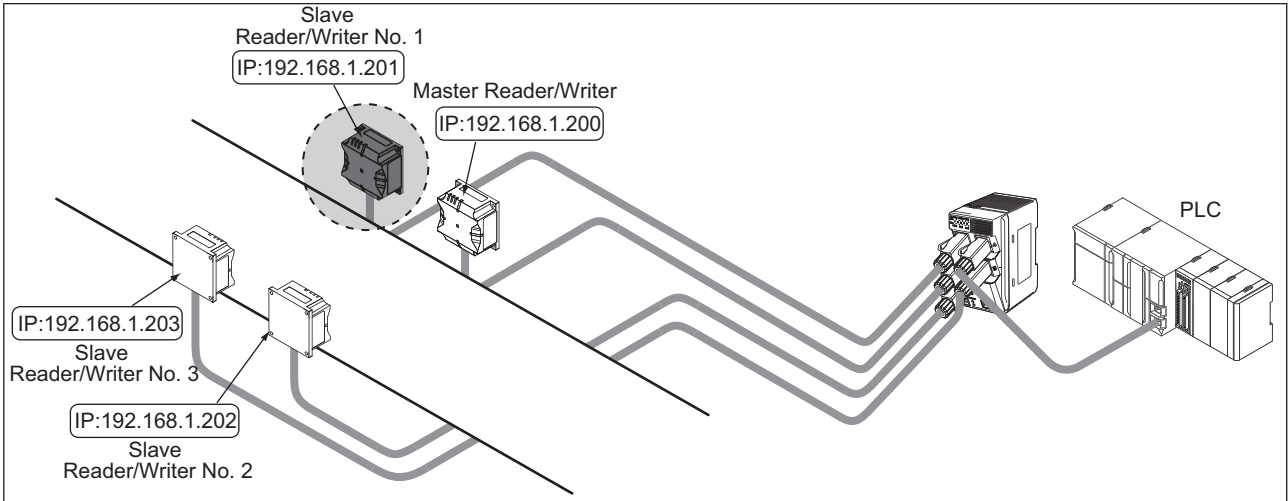

- 4** If an RF Tag missing error is detected for Slave No.3, communications processing is returned to the Master Reader/Writer and the operation is repeated from step 2.

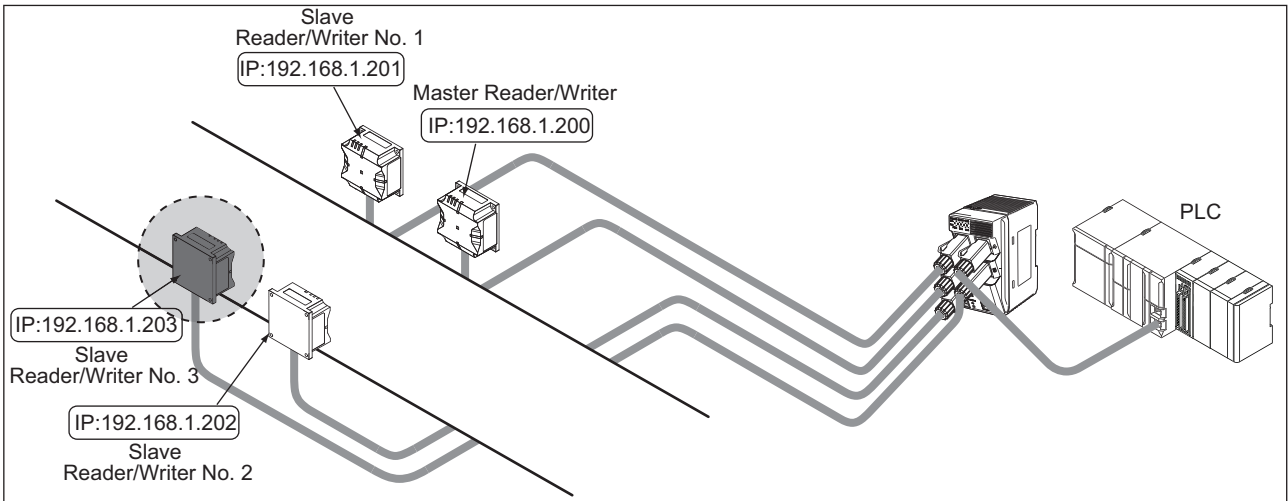


**Precautions for Correct Use**


In Field Extension Mode, the Reader/Writers do not simultaneously perform communications. The Reader/Writers individually perform communications on a time sharing basis.

- When the RF Tag Communications Option of the Master Reader/Writer Is Set to Repeat

- 1 Send a READ DATA command from the host device to the Master Reader/Writer.

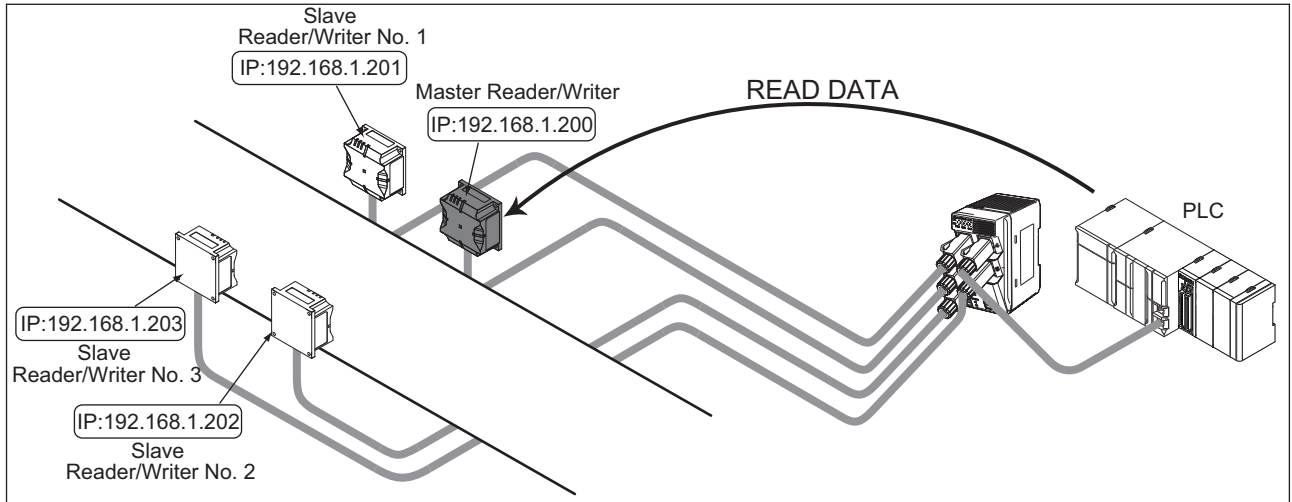


- 2 The Master Reader/Writer will communicate with the RF Tag using the Once communications option. Here, if RF Tag communications end normally, the Reader/Writer will return a response to the host device and processing is repeated from step 2. If an RF Tag missing error is detected, processing proceeds to step 3.

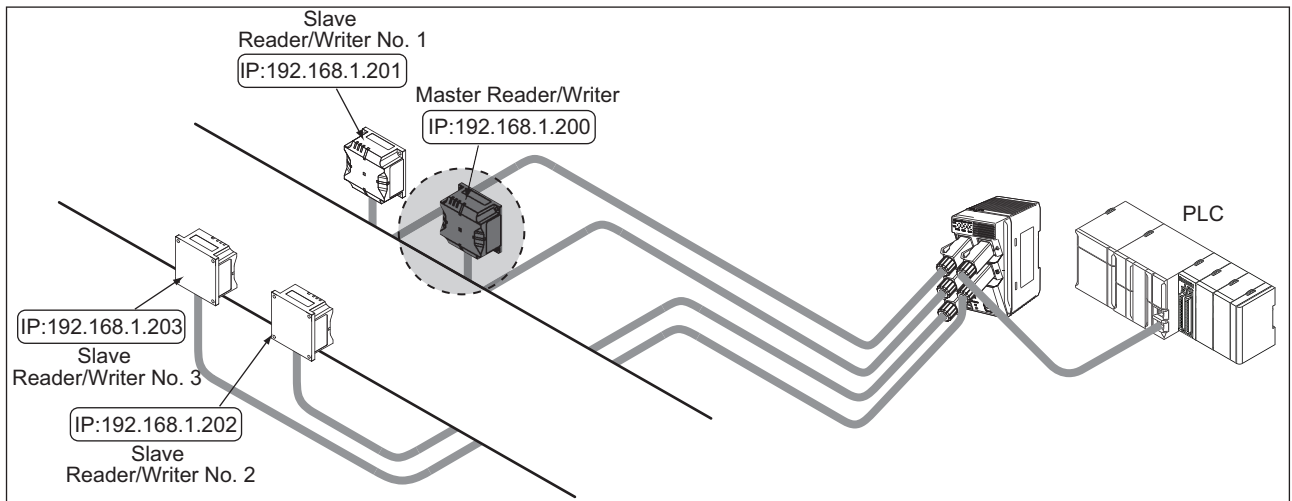


- 3** Slave Reader/Writer No. 1 will communicate with the RF Tag using the Once communications option.

Here, if RF Tag communications end normally, the Reader/Writer will return a response to the host device and processing is repeated from step 2.

If an RF Tag tag missing error is detected, processing will be continued in order by Slave No. 2 and then by Slave No. 3.

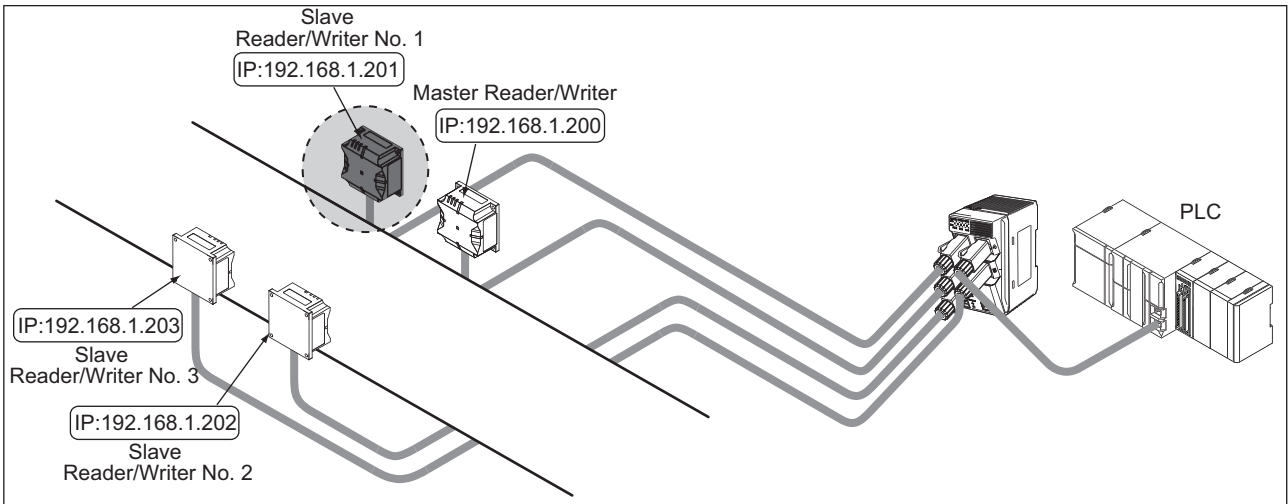

- 4** When communications have been completed for all of the Slave Reader/Writers, the operation is repeated from step 2.

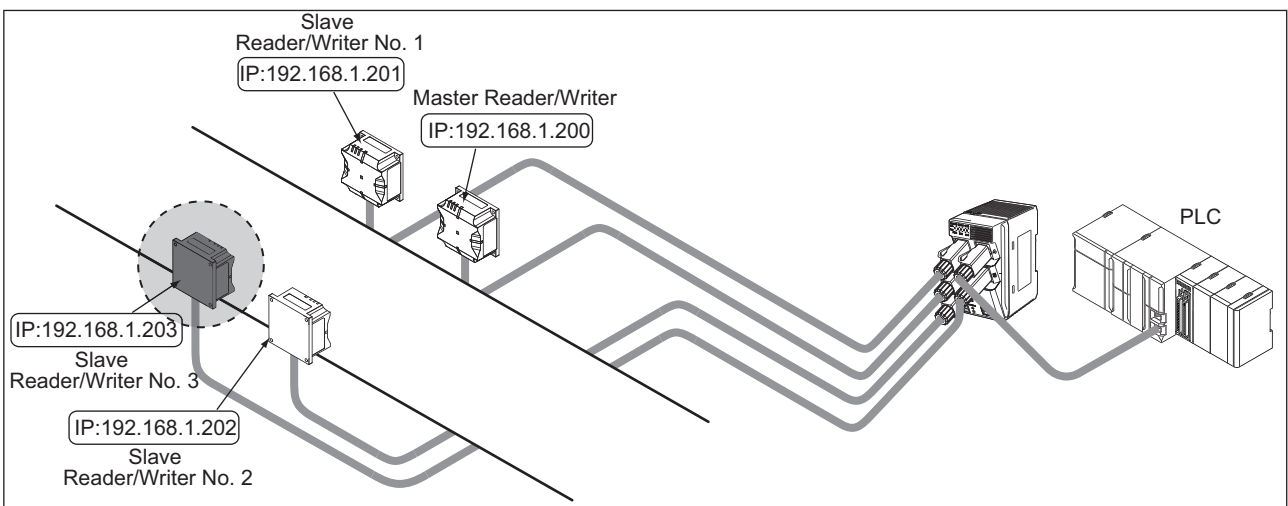


#### Precautions for Correct Use

In Field Extension Mode, the Reader/Writers do not simultaneously perform communications. The Reader/Writers individually perform communications on a time sharing basis.

## 6-14-2 Using High-speed Traveling Mode

Use the following procedure for operation in High-speed Traveling Mode. The following figure shows an example in which four Reader/Writers are installed.

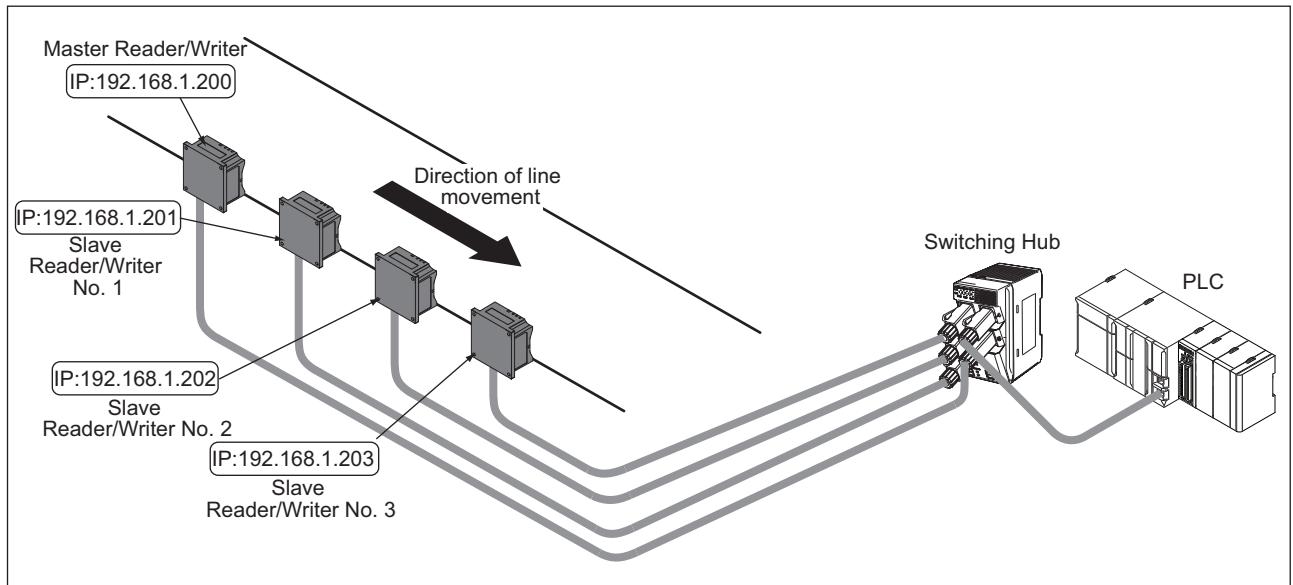

## Enabling High-speed Traveling Mode


- 1 Connect all of the Reader/Writers with Ethernet Cable and turn ON the power supplies.



### Precautions for Correct Use

Set a unique IP address for each Reader/Writer in advance.  
Refer to *Section 5 Preparations for Communications* on page 5-1.

- 2 Start a Web browser on your computer.
- 3 In the address field on the Web browser operation window, enter the IP address of the master Reader/Writer (here, 192.168.1.200).

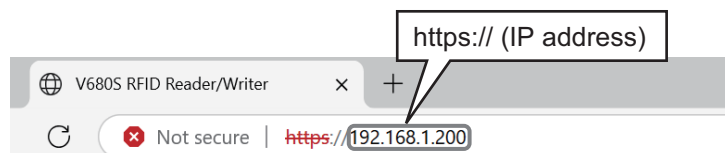

### Version Information

For Reader/Writers earlier than firmware version "5.00", enter `http://192.168.1.200/` in the address field.

- 4 Display the RF Tag Communications Settings View, set the RF Tag communications option to **Repeat**, and then click the **Set** Button.



### Precautions for Correct Use

If you specify the Once or FIFO repeat communications option, multi-Reader/Writer operation will be enabled and a *multi-Reader/Writer execution error* will occur when you restart.

- 5 Display the **Multi-Reader/Writer Settings** View.

Group setting	IP address	Status
Slave Reader/Writer No.1	<input type="text"/>	■
Slave Reader/Writer No.2	<input type="text"/>	■
Slave Reader/Writer No.3	<input type="text"/>	■
Slave Reader/Writer No.4	<input type="text"/>	■
Slave Reader/Writer No.5	<input type="text"/>	■
Slave Reader/Writer No.6	<input type="text"/>	■
Slave Reader/Writer No.7	<input type="text"/>	■

A 'Set' button is located at the bottom right of the main panel.



© Copyright OMRON Corporation 2025. All Rights Reserved.

- 6 Select the **High-speed travelling mode** Check Box.


- 7 Set the IP addresses of the three slave Reader/Writers and click the **Set** Button.

	Group setting	IP address	Status
RF Tag communication settings			
Multi Reader/Writer settings			
RF Tag communications			
Log view			
Noise monitor			
RF Analyzer			
	Slave Reader/Writer No.1	192.168.1.201	■
	Slave Reader/Writer No.2	192.168.1.202	■
	Slave Reader/Writer No.3	192.168.1.203	■
	Slave Reader/Writer No.4		■
	Slave Reader/Writer No.5		■
	Slave Reader/Writer No.6		■
	Slave Reader/Writer No.7		■


**8** A confirmation message will be displayed. Click the **OK** Button.

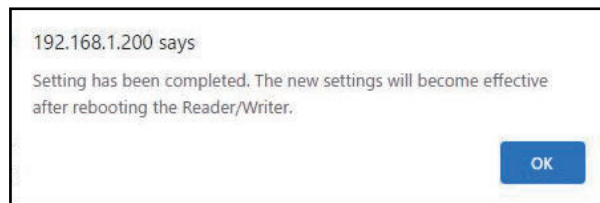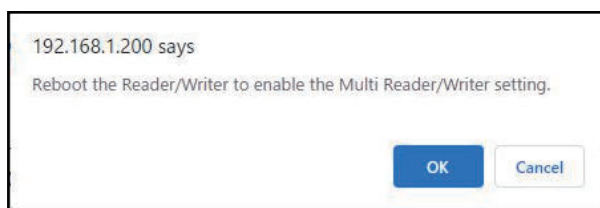


**9** Click the **Reboot** Button. A Confirm Reboot Dialog Box will be displayed. Click the **OK** Button.

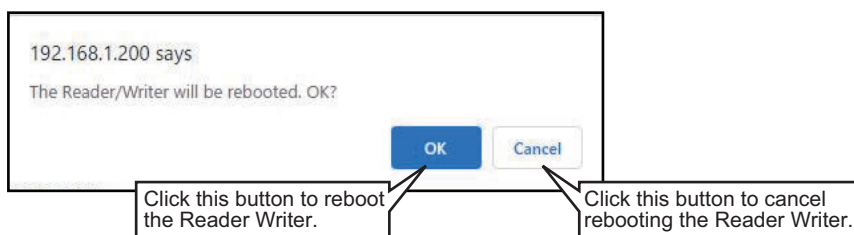

- 10** The following dialog box is displayed after the Reader/Writer has finished rebooting. Click the **OK** Button to connect to the Reader/Writer.

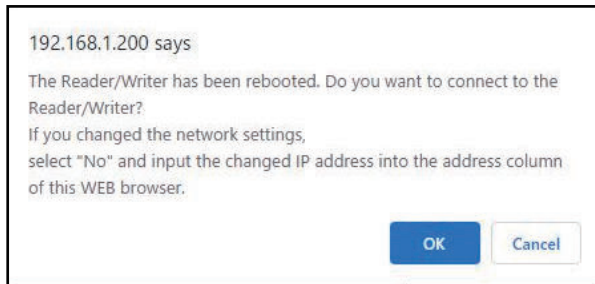

- 11** The following dialog box is displayed after reconnecting to the Reader/Writer. Click the **OK** Button.

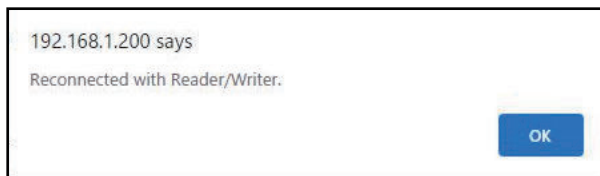

#### Precautions for Correct Use

- When re-connection goes wrong and an error message is displayed, check connection with the Reader/Writer and reboot a Web browser.
- After re-connection, display the **Status** window.

- 12** When the Master Reader/Writer is restarted, group registration processing is automatically performed for the registered Slave Reader/Writers.



#### Precautions for Correct Use

If the Master Reader/Writer cannot establish communications with a registered Slave Reader/Writer (e.g., due to an incorrect IP address or because the Slave Reader/Writer is not started), the ERROR indicator (red) on the Master Reader/Writer will flash at 1-s intervals.


- 13** You can confirm when communications have been established with all of the slave Reader/Writer from the **Multi-Reader/Writer Setting** Window of the Web browser operation window.

Group setting	IP address	Status
Slave Reader/Writer No.1	192.168.1.201	■
Slave Reader/Writer No.2	192.168.1.202	■
Slave Reader/Writer No.3	192.168.1.203	■
Slave Reader/Writer No.4		■


- 14** The RUN indicator will light yellow on Reader/Writers that are operating as slave Reader/Writers. The indicator on the master Reader/Writer will remain lit green.
- 15** This concludes the procedure to set High-speed Traveling Mode. You can now use READ DATA command from the host controller for the Master Reader/Writer to perform linked operation of multiple Reader/Writers.

## Executing a READ DATA Command in High-speed Traveling Mode


- 1** Send a READ DATA command from the host device to the Master Reader/Writer.

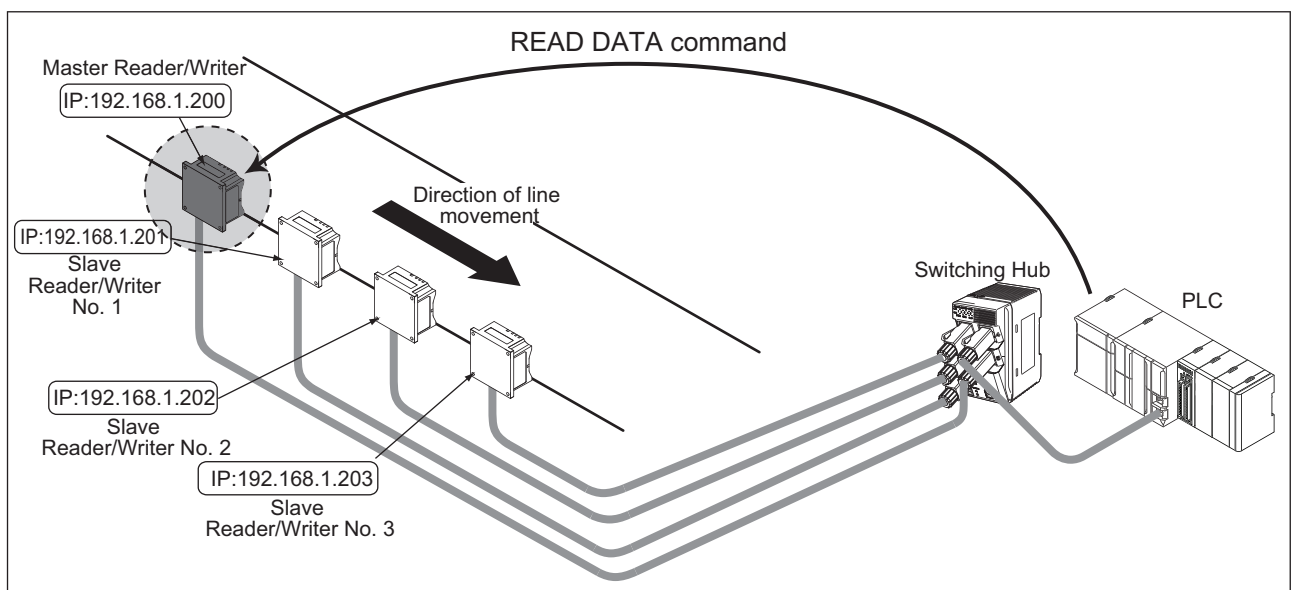


- 2** The Master Reader/Writer will wait for an RF Tag to enter the communications field and then communicate with the RF Tag. If communications with the RF Tag end normally, processing returns to step 3.

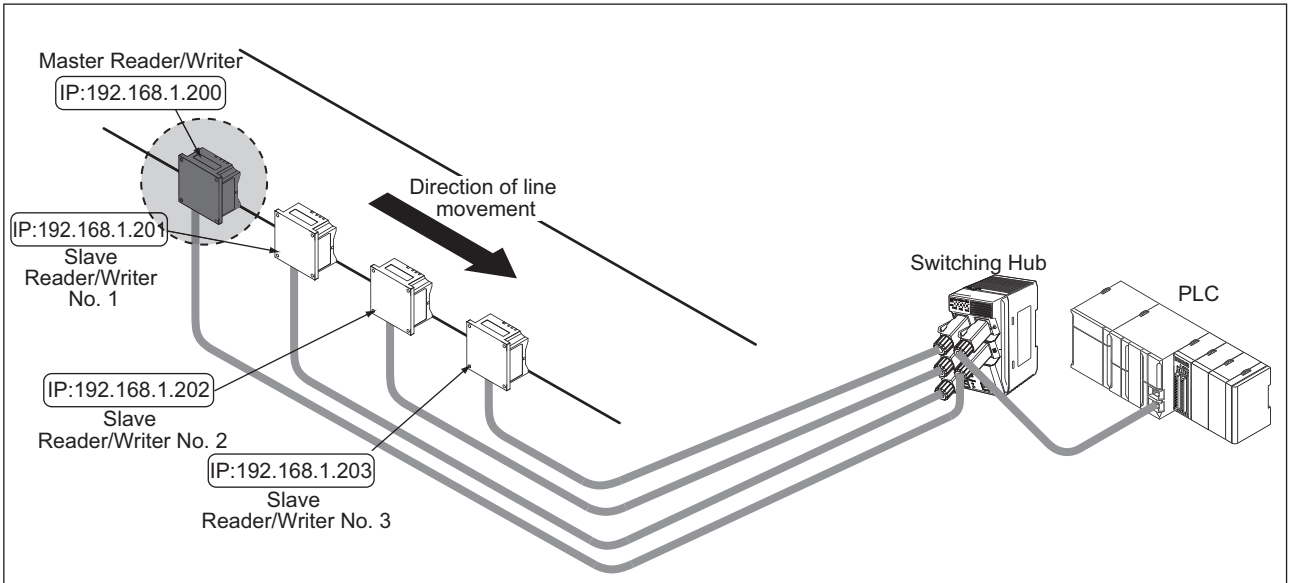

- 3** Slave No. 1 will wait for an RF Tag to enter the communications field and then communicate with the RF Tag. If communicating with the RF Tag ends normally, processing will be continued in order by Slave No. 2 and then by Slave No. 3.

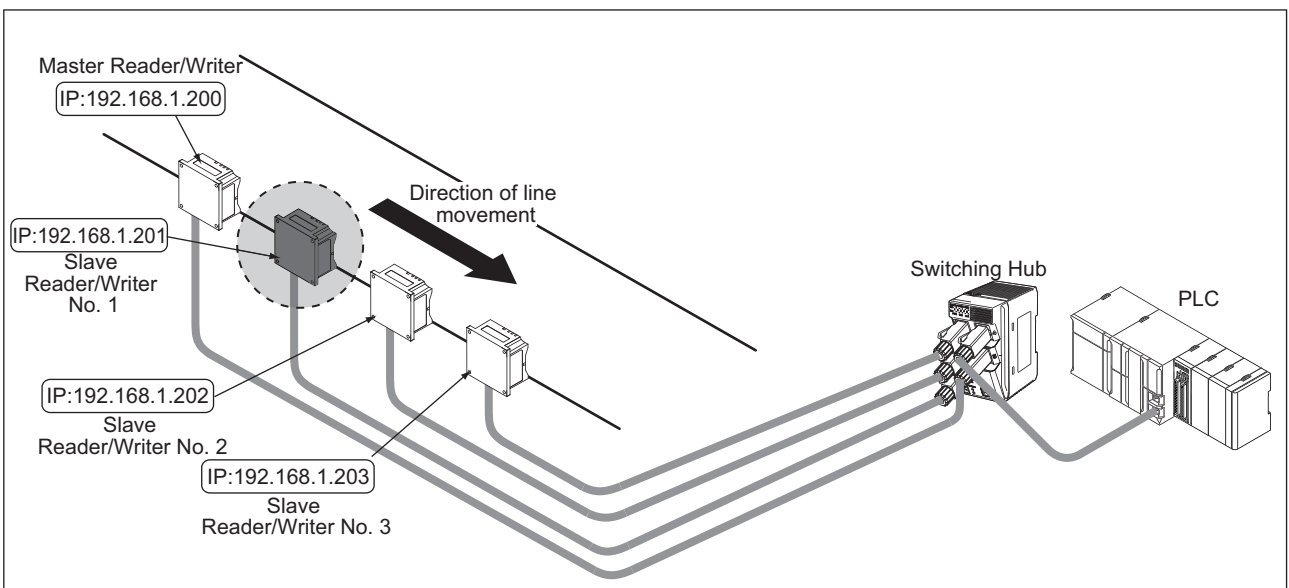


- 4** If all communications with the RF Tag end normally, the read data is returned to the host device and processing returns to step 2.

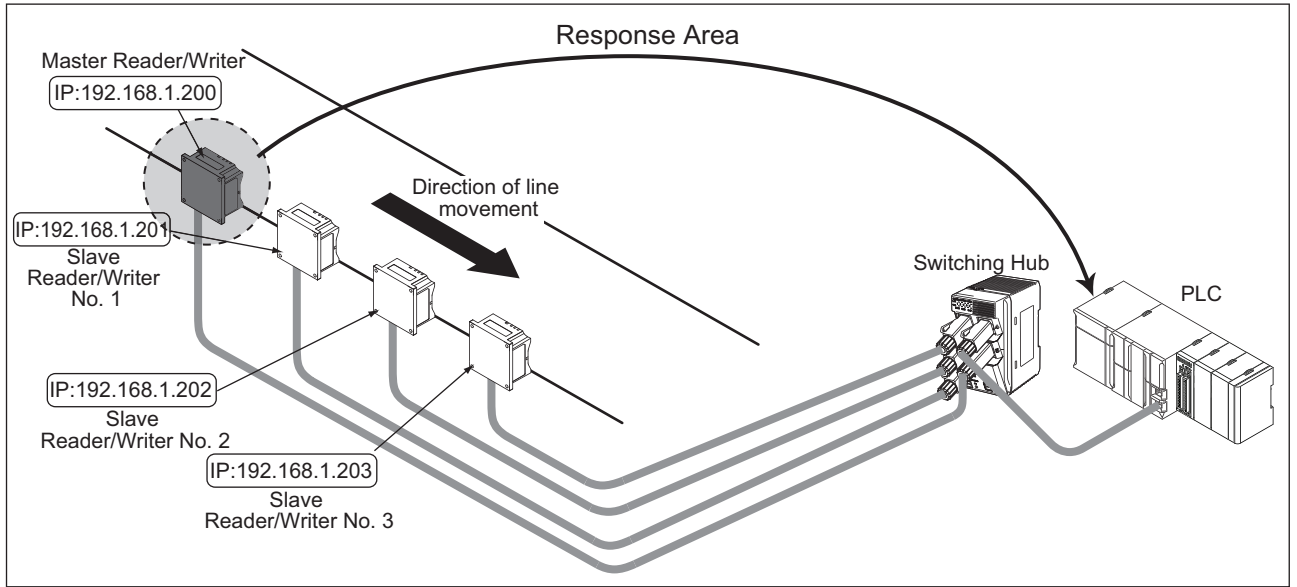

## Disabling Multi-Reader/Writer Operation

The following example procedure shows how to disable the multi-Reader/Writer operation. You can use the same procedure from either Field Extension Mode or High-speed Traveling Mode.


- 1 Start the Web browser on your computer and enter the IP address of the master Reader/Writer (here, 192.168.1.200) in the address field.

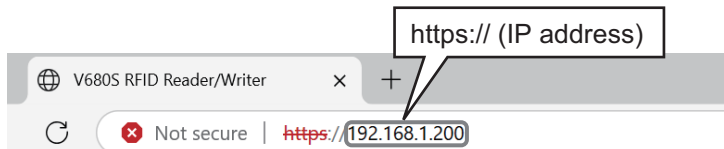

### Version Information


For Reader/Writers earlier than firmware version "5.00", enter *http://192.168.1.200/* in the address field.

- 2 Display the Multi-Reader/Writer Settings View.


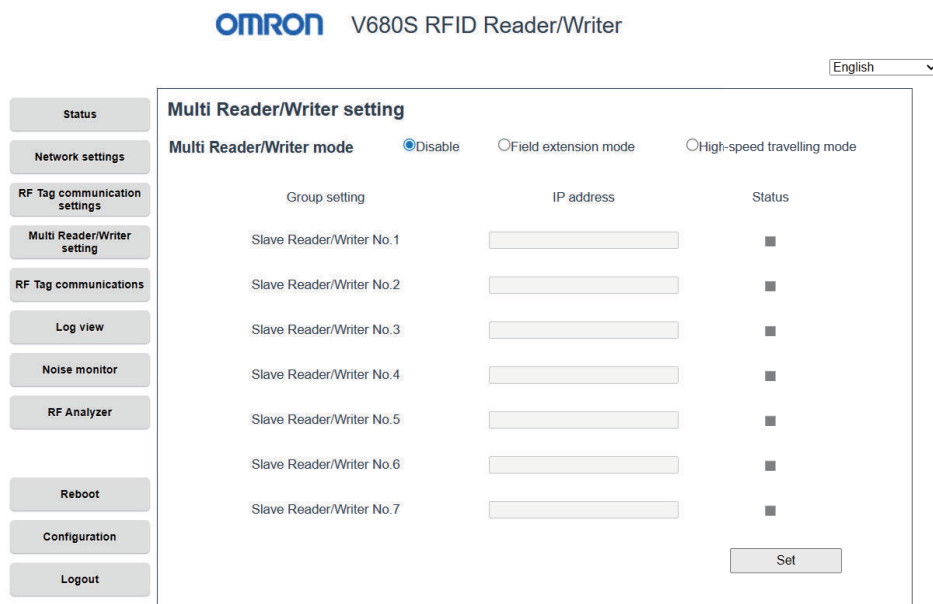


© Copyright OMRON Corporation 2025. All Rights Reserved.

 - 3** Select the **Disable** Check Box for Multi-Reader/Writer Mode and click the **Set** Button.



- 4** A confirmation message will be displayed. Click the **OK** Button.

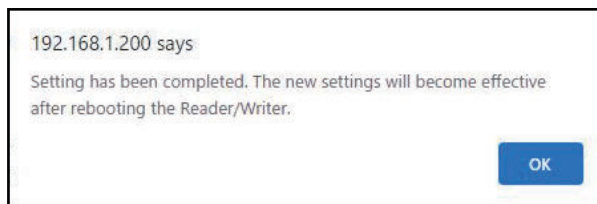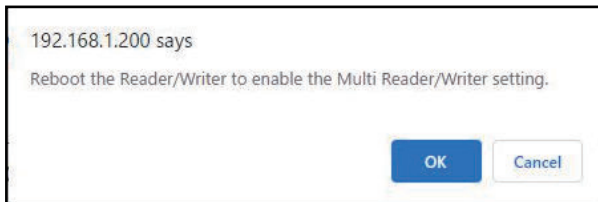

- 5** Click the **Reboot** Button. A Confirm Reboot Dialog Box will be displayed. Click the **OK** Button.




### Precautions for Correct Use


If you turn OFF the power supplies to the Slave Reader/Writers or if a communications error occurs for a Slave Reader/Writer (e.g., Ethernet Cable disconnection) before you restart the Reader/Writers, an *execution status error* will occur and the Reader/Writers will not restart normally.

If that occurs, turn OFF the power supplies to all of the Reader/Writers and then turn them back ON.

- 6** The following dialog box is displayed after the Reader/Writer has finished rebooting. Click the **OK** Button to connect to the Reader/Writer.

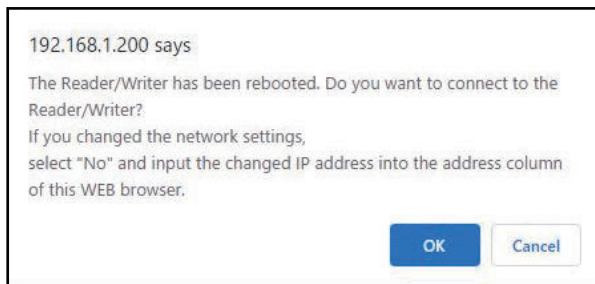

- 7** The following dialog box is displayed after reconnecting to the Reader/Writer. Click the **OK** Button.

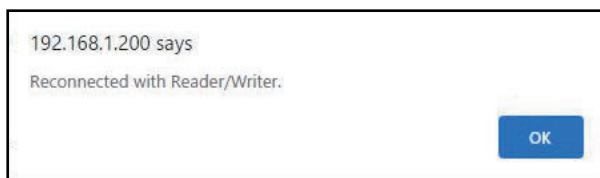

#### Precautions for Correct Use

---

- When re-connection goes wrong and an error message is displayed, check connection with the Reader/Writer and reboot a Web browser.
  - After re-connection, display the **Status** window.
- 

- 8** The Slave Reader/Writers will also be restarted automatically. This concludes the procedure to disable multi-Reader/Writer operation.



#### Precautions for Correct Use

---

When the Field Extension Mode is disabled, the RUN indicators on the Slave Reader/Writers will fast flashing green.

---

# 7

## Host Communications Specifications

This section describes the details of the EtherNet/IP Communication Protocol and the V680S commands.


---

<b>7-1</b>	<b>EtherNet/IP Communications Protocol .....</b>	<b>7-2</b>
7-1-1	Data Exchange with Ethernet/IP .....	7-2
7-1-2	EtherNet/IP Communications with the Reader/Writer .....	7-3
7-1-3	Tag Data Link Setting Methods .....	7-4
7-1-4	Memory Assignments .....	7-7
7-1-5	V680S Commands .....	7-9
<b>7-2</b>	<b>V680S Command Details .....</b>	<b>7-13</b>
7-2-1	READ ID .....	7-13
7-2-2	READ DATA .....	7-14
7-2-3	WRITE DATA .....	7-15
7-2-4	LOCK .....	7-16
7-2-5	DATA FILL .....	7-17
7-2-6	RF TAG OVERWRITE COUNT CONTROL .....	7-18
7-2-7	RESTORE DATA .....	7-19
7-2-8	COPY DATA .....	7-20
7-2-9	INITIALIZE .....	7-22
7-2-10	SET RF TAG COMMUNICATIONS .....	7-23
7-2-11	GET RF TAG COMMUNICATIONS SETTINGS .....	7-24
7-2-12	GET MODEL INFORMATION .....	7-25
7-2-13	GET FIRMWARE VERSION .....	7-26
7-2-14	GET OPERATING TIME .....	7-27
7-2-15	GET COMMAND ERROR LOG .....	7-28
7-2-16	GET RESTORE INFORMATION .....	7-30
7-2-17	MEASURE NOISE .....	7-32
7-2-18	RESET .....	7-33
7-2-19	SET MULTI-READER/WRITER OPERATION .....	7-34
7-2-20	GET MULTI-READER/WRITER SETTINGS .....	7-36
7-2-21	GET MULTI-READER/WRITER STATUS .....	7-38
<b>7-3</b>	<b>Time Charts .....</b>	<b>7-40</b>
7-3-1	Executing RF Tag Communications Commands .....	7-40
7-3-2	Executing Other Commands .....	7-43

# 7-1 EtherNet/IP Communications Protocol

## 7-1-1 Data Exchange with Ethernet/IP

Data is exchanged cyclically between Ethernet devices on the EtherNet/IP network using tag data links as shown below.

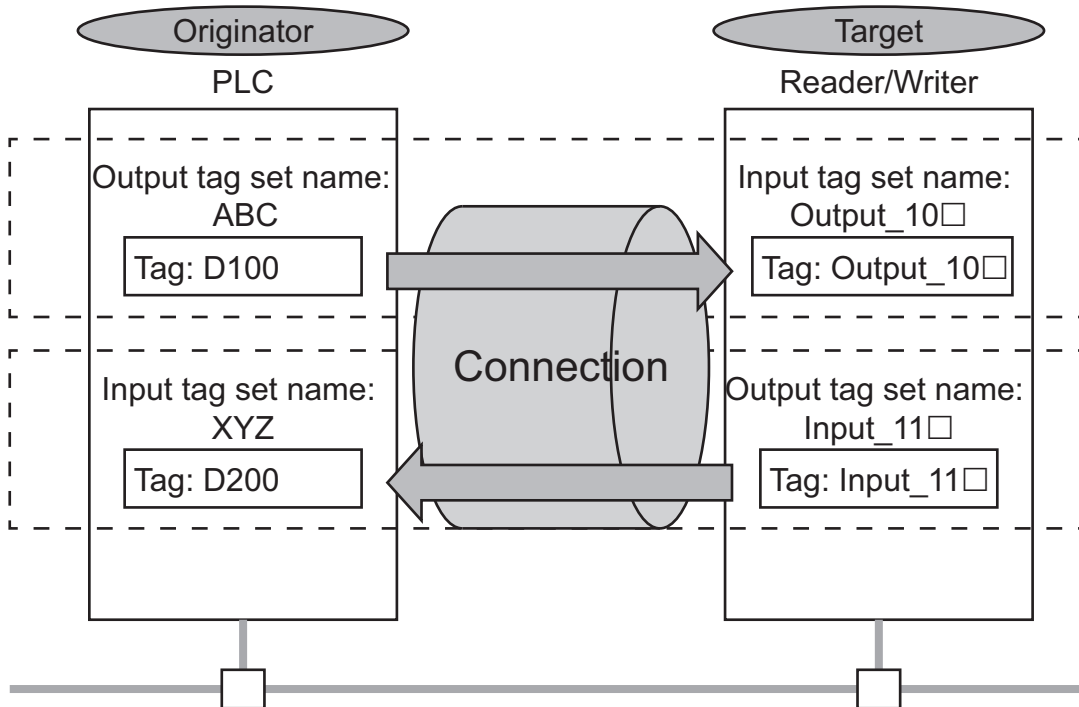

### Data Exchange Method

To exchange data, a connection is opened between two EtherNet/IP devices.

One of the nodes requests the connection to open a connection with a remote node. The node that requests the connection is called the originator, and the node that receives the request is called the target. The host device (PLC) and Reader/Writer function as the originator and target.

### Data Exchange Memory Locations

The memory locations that are used to exchange data across a connection are specified as tags.


You can specify memory addresses or variables in the host device (PLC) for tags.

A group of tags consists of an output tag set and an input tag set.

## 7-1-2 EtherNet/IP Communications with the Reader/Writer

You can use EtherNet/IP tag data links to communicate between the PLC and the Reader/Writer to perform control via command/response communications or to perform RF Tag communications. The following communications areas are prepared in the PLC to perform communications.

Area name	Description
Command Area	This is the area to which you write commands for the Reader/Writer to execute.
Response Area	This is the area to which the Reader/Writer writes the results of commands executed from the command area.

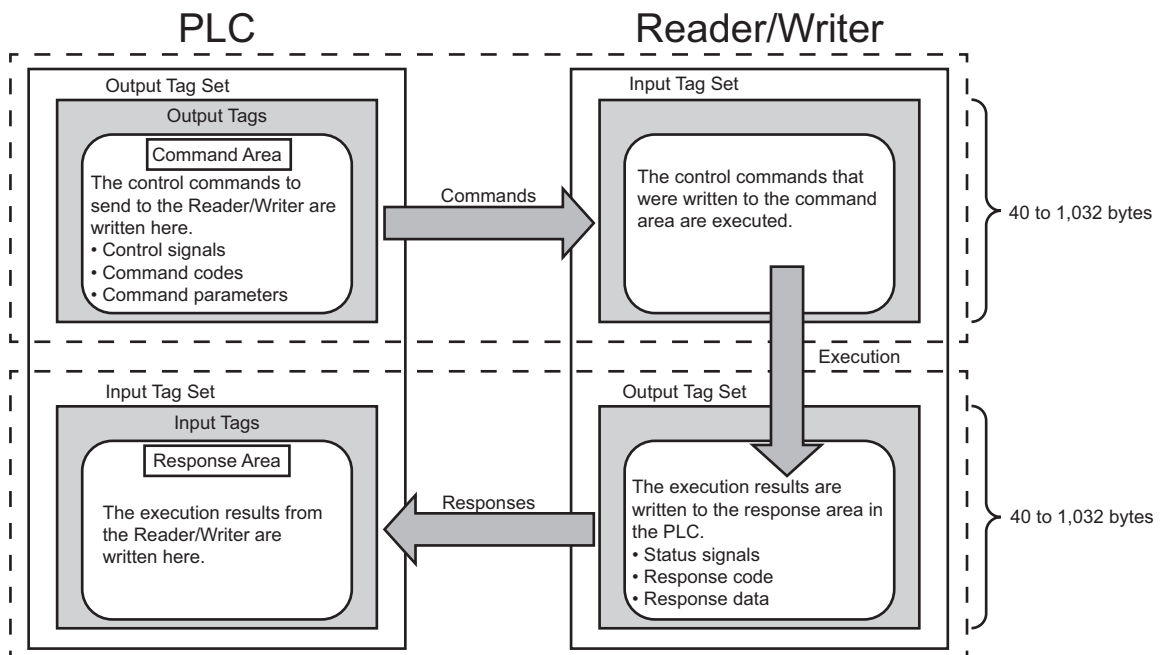

### 7-1-3 Tag Data Link Setting Methods

This section describes how to set data links for EtherNet/IP.

The communications areas in the PLC for which data links are created to the Reader/Writer are specified as tags and tag sets, and the connections are set for tag data link communications.

To connect to OMRON PLCs or Controllers, you use the Network Configurator to set up tag data links (i.e., tags, tag sets, and connection settings).

Refer to the following manuals for details on the tag data link settings that are made with the Network Configurator.

- *NJ-series CPU Unit Built-in EtherNet/IP Port User's Manual (Cat. No. W506)*
- *CS/CJ-series EtherNet/IP Units Operation Manual (Cat. No. W465)*
- *CJ-series EtherNet/IP Units Operation Manual for NJ-series CPU Unit (Cat. No. W495)*
- *V680S-series RFID Reader/Writer NJ Series EtherNet/IP Connection Guide (Cat. No. P625)*



#### Precautions for Correct Use

To set tag data links, an EDS file that defines the V680S connection is required. Download the EDS file from the OMRON website.

The communications areas in the PLC are set as tag data link connections as shown in the following table.

### Tag and Tag Set Settings in the PLC

Setting item	Setting	
	Command Area	Response Area
Type of tags and tag set	Output tag sets	Input tag sets
Tag and tag set names	I/O memory addresses or variable names	I/O memory addresses or variable names
Data sizes	40, 264, 520, or 1,032 bytes* <sup>1</sup>	40, 264, 520, or 1,032 bytes* <sup>1</sup>

\*1. Select one of the following values for the data size according to the data size required to write or read an RF Tag in one operation.

Data size	Data size that can be read or written for an RF Tag in one operation
40 bytes	32 bytes
264 bytes	256 bytes
520 bytes	512 bytes
1,032 bytes	1,024 bytes

## Setting Connections

Connection I/O Type : Consume Data From/Produce Data To : 40

**Originator Device**

Node Address : 192.168.250.1  
 Comment : NJ501-1300

Input Tag Set : Edit Tag Sets

▼

Connection Type : Point to Point connection

---

Output Tag Set : Edit Tag Sets

▼

Connection Type : Point to Point connection

**Target Device**

Node Address : 192.168.250.2  
 Comment : V680S Series

Output Tag Set : Input\_200 - [40Byte]

---

Input Tag Set : Output\_100 - [40Byte]

Hide Detail

**Detail Parameter**

Packet Interval (RPI) : 2.0 ms ( 10.0 - 10000.0 ms )  
 Timeout Value : Packet Interval (RPI) x 4      Connection Name : (Possible to omit)

Setting item		Description
Originator device (PLC)	Input tag sets	Tag set name on PLC [40 to 1,032 bytes]
	Input connection types	Cannot be changed (point to point connection).
	Output tag sets	Tag set name on PLC [40 to 1,032 bytes]
	Output connection types	Cannot be changed (point to point connection).
Target device (Reader/Writer)	Output tag sets	Input_11□ [40 to 1,032 bytes]
	Input tag sets	Output_10□ [40 to 1,032 bytes]
Requested packet interval (RPI)		User specified (2.0 to 10,000 ms, default: 10.0 ms)



### Precautions for Correct Use

- If I/O memory addresses are specified for the communications areas, the information in the communications areas will be cleared when the operating mode of the PLC changes unless addresses in the CIO Area, which are maintained, are specified.
- The following assembly object is required to specify instances when the EDS file is not used.

Parameter name	Set value	Remarks
Instance ID	100	Output connection (40-byte tag set and tags)
	101	Output connection (264-byte tag set and tags)
	102	Output connection (520-byte tag set and tags)
	103	Output connection (1,032-byte tag set and tags)
	110	Input connection (40-byte tag set and tags)
	111	Input connection (264-byte tag set and tags)
	112	Input connection (520-byte tag set and tags)
	113	Input connection (1,032-byte tag set and tags)

- If you connect to an OMRON master, the maximum data size for one tag data link connection depends on the model of the master. Use the sizes in the following table for reference.

EtherNet/IP master	Maximum data size per connection	Recommended data size setting for tag or tag set.
NX701 CPU Unit	1,444 bytes	1,032 bytes
NJ-series CPU Unit	600 bytes	520 bytes
Built-in EtherNet/IP function on CJ2H-series CPU Unit	1,444 bytes	1,032 bytes
Built-in EtherNet/IP function on CJ2M-series CPU Unit	1,280 bytes	1,032 bytes
EtherNet/IP Unit	1,444 bytes	1,032 bytes

## 7-1-4 Memory Assignments

This section describes the memory assignments for the Command Area and Response Area in the PLC.

Memory is aligned in 16-bit units. The bit order for each field is little endian.

### Command Area (from PLC Originator to Reader/Writer Target)

I/O memory offset	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
+0	Resv	Resv	Resv	Resv	Resv	Resv	Resv	Resv	Resv	Resv	Resv	Resv	Resv	Resv	Resv	EXE
+1	Command Code															
+2	Command Parameter 1															
+3	Command Parameter 2															
+4	Command Data (The format depends on the command.)															
:																
:																
+N																

**Note** Reserved (resv) bits are for future expansion. Do not turn them ON and OFF.

Signal/data	Name	Data type	Size	Description
EXE	Command Execution Request	BOOL	1 bit	<ul style="list-style-type: none"> <li>Turn ON this bit to send a request to the Reader/Writer to execute a command. Set the command code and parameters before you turn ON this bit.</li> <li>You can turn OFF this bit during execution of a communications command with RF Tags to cancel communications processing by the Reader/Writer.</li> </ul>
CmdCode	Command Code	WORD	2 byte	This word stores the command code.
CmdParam1	Command Parameter 1	WORD	2 byte	These words store the command parameters. Refer to the sections for individual commands for details.
CmdParam2	Command Parameter 2	WORD	2 byte	
CmdData	Command Data	-	-	These words store the command data. Refer to the sections for individual commands for details.

## Response Area (from Reader/Writer Target to PLC Originator)

I/O memory off-set	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
+0	Resv	Resv	Resv	Resv	Resv	Resv	Resv	RF_W AR	SYS_ ERR	RF_E RR	CMD_ ERR	FRIC	ERR	NORM	BUSY	READ Y
+1	Error code															
+2	Response Information 1															
+3	Response Information 2															
+4	Response Data (The format depends on the command.)															
:																
:																
+N																

**Note** Reserved (resv) bits are for future expansion. They always output 0.

Signal/data	Name	Data type	Size	Description
READY	Ready	BOOL	1 bit	This bit turns ON when the Reader/Writer completes preparations and is ready to receive a command. It turns OFF while tag data link communications are disconnected and the reconnecting Reader/Writer is executing a command.
BUSY	Command Execution Active	BOOL	1 bit	This bit is ON while the Reader/Writer is executing a command. It is OFF when a command is not being executed.
NORM	Command Completion	BOOL	1 bit	This bit turns ON when the Reader/Writer completes command execution normally (i.e., for a normal end). It turns OFF when the EXE signal is turned OFF.
ERR	Error	BOOL	1 bit	This bit turns ON when the Reader/Writer returns an error response. It turns OFF when the EXE signal is turned OFF.
FRIC	Flicker	BOOL	1 bit	This bit toggles (turns ON or turns OFF) when the communications result changes while the Reader/Writer is executing an RF Tag communications command with a Repeat communications option.
CMD_ERR	Command error	BOOL	1 bit	This bit turns ON when the Reader/Writer returns a command error response. It turns ON and OFF in sync with the ERR signal.
RF_ERR	RF Tag Communications Error	BOOL	1bit	This bit turns ON when the Reader/Writer returns an RF Tag communications error response. It turns ON and OFF in sync with the ERR signal.
SYS_ERR	Fatal Error	BOOL	1 bit	This bit turns ON when the Reader/Writer returns a fatal error response. It turns ON and OFF in sync with the ERR signal.
RF_WAR	Unstable Communications	BOOL	1 bit	This bit turns ON when the diagnostics result in the response for execution of an RF Tag communications command by the Reader/Writer indicates that communications are unstable. It turns ON and OFF in sync with the NORM signal.
ErrCode	Error Code	WORD	2 bytes	This word contains the error code.
ResplInfo1	Response Information 1	WORD	2 bytes	This word contains device information.
ResplInfo2	Response Information 2	WORD	2 bytes	This word contains communications diagnostic results.
RespData	Response Data	---	---	This word contains the response data. Refer to the sections for individual commands for details.

## 7-1-5 V680S Commands

### Command Codes

The following table lists the command codes that you can specify for execution by the Reader/Writer. Set these codes in the Command Code field in the command area.

Classification	Command code	Command name	Access permission	Reference
RF Tag communications	0001 hex	READ ID	Read	page 7-13
	0002 hex	READ DATA	Read	page 7-14
	0003 hex	WRITE DATA	Write	page 7-15
	0004 hex	LOCK	Write	page 7-16
	0005 hex	DATA FILL	Write	page 7-17
	0006 hex	RF TAG OVERWRITE COUNT CONTROL	Write	page 7-18
	0007 hex	RESTORE DATA	Write	page 7-19
	0008 hex	COPY DATA	Write	page 7-20
Reader/Writer settings	1000 hex	INITIALIZE* <sup>1</sup>	Write	page 7-22
	1001 hex	SET RF TAG COMMUNICATIONS* <sup>1</sup>	Write	page 7-23
	1002 hex	GET RF TAG COMMUNICATIONS SETTINGS	Read	page 7-24
Reader/Writer information acquisition	2000 hex	GET MODEL INFORMATION	Read	page 7-25
	2001 hex	GET FIRMWARE VERSION	Read	page 7-26
	2002 hex	GET OPERATING TIME	Read	page 7-27
	2004 hex	GET COMMAND ERROR LOG	Read	page 7-28
	2005 hex	GET RESTORE INFORMATION	Read	page 7-30
Reader/Writer operation control	2003 hex	MEASURE NOISE* <sup>1</sup>	Execute	page 7-32
	3000 hex	RESET* <sup>1</sup>	Execute	page 7-33
Multi-Reader/Writer operation	1003 hex	SET MULTI-READER/WRITER OPERATION* <sup>1</sup>	Write	page 7-34
	1004 hex	GET MULTI-READER/WRITER SETTINGS	Read	page 7-36
	2006 hex	GET MULTI-READER/WRITER STATUS	Read	page 7-38

- \*1. When using with the Reader/Writers with firmware version "5.00" or higher, check each Access permission box on the **Permission Settings** tab of the **Network Settings** window and set it to **Permission**. If a command that is not set to **Permission** is issued from the host device, an "Execution status error" (error code: 1006 hex) will occur.

## Error Codes

The following tables list the error codes that indicate the response results from the Reader/Writer. These codes are set in the Error Code field in the response area.

If an error response is returned (i.e., an error code other than 0000 hex), a record is stored in the command error log in the Reader/Writer. Records are not stored for errors for which responses are not returned to the host device. Reader/Writer operating errors and system errors are recorded in the system error log in the Reader/Writer.

### ● Normal Code

Error code name	Error code	Description
Normal end	0000 hex	Processing ended normally.

### ● Interrupted Processing

Error code name	Error code	Description
Communications canceled	0001 hex	Processing was canceled when an OFF EXE signal was received before an RF Tag was detected. (The contents of the RF Tag was not changed, even for a WRITE DATA command.)
Communications aborted	0002 hex	Processing was canceled when an OFF EXE signal was received during communications with an RF Tag. (For a WRITE DATA command, the contents of the RF Tag may have been changed.)

### ● Command Errors

Error code name	Error code	Description
Unknown command error	1003 hex	A command that is not supported by the Reader/Writer was received.
Command parameter error	1005 hex	There was an error in the parameters in the received command data.
Execution status error	1006 hex	<ul style="list-style-type: none"> <li>The Reader/Writer could not execute the command that was received.</li> <li>A was issued for which the Access permission was not set to Permission.</li> </ul>

## ● RF Tag Communications Errors

Error code name	Error code	Description
RF Tag missing error	2001 hex	There is no RF Tag in the communications field.
RF Tag communications error	2002 hex	Communications with the RF Tag did not end normally.
UID mismatch error	2003 hex	An RF Tag with the specified ID was not in the communications field.
RF Tag address error	2004 hex	The access address for the RF Tag is outside of the area supported by the target RF Tag.
RF Tag lock error	2005 hex	An attempt was made to write data to a locked area.
Verification error	2006 hex	Processing to write data to the RF Tag did not end normally.
RF Tag data lost error	2007 hex	Processing to write data to the RF Tag did not end normally. (Data may have been lost and must be restored.)
RF Tag system error	2008 hex	The RF Tag returned an error response.
RF Tag overwriting error	2009 hex	The overwrite limit was exceeded for overwrite count control processing.
Reader/Writer connection error	200A hex	When executing the COPY DATA command, communications could not be established with the copy destination Reader/Writer.
Communications connection error between Reader/Writers	200B hex	When executing multi-Reader/Writer functions, communications could not be established with a Slave Reader/Writer.

## ● Reader/Writer Operation Errors

Error code name	Error code	Description
Unfixed operation mode error	8001 hex	The control signal was not stable when the Reader/Writer was started. A record is stored only in the system error log.
User setting error	8002 hex	An error was detected in user configuration memory when the Reader/Writer was started. A record is stored only in the system error log. The classification of the setting is given in attached information 1. 0000 0001 hex: Network setting 0000 0002 hex: RF Tag communications setting 0000 0003 hex: Multi-Reader/Writer setting
Multi-Reader/Writer execution error	8003 hex	A set value was detected when the Reader/Writer was started that prevents execution of multi-Reader/Writer operation. The reason for the error is given in attached information 1. 0000 0001 hex: The combination of the Multi-Reader/Writer Mode and the communications option prevented execution. 0000 0002 hex: This Reader/Writer has the same IP address as the Slave Reader/Writer.

## ● System Errors

Error code name	Error code	Description
System startup errors		
System memory error	F001 hex	An error was detected in system memory. A record is stored only in the system error log.
Profile error	F002 hex	An error was detected in the profile data. A record is stored only in the system error log.
System Configuration error	F003 hex	An error was detected in system configuration. A record is stored only in the system error log.
Hardware faults		
IC error	F011 hex	An error was detected in an IC in the Reader/Writer.
Configuration memory error	F012 hex	An error was detected when accessing configuration memory.

## Device Information

The following table lists the device information that indicates the Reader/Writer in which the error occurred.

These codes are set in the Response Information 1 field in the response area.

Device information	Description
0000 hex	An error occurred in the local Reader/Writer.
0100 hex	<ul style="list-style-type: none"> <li>An error occurred in the destination Reader/Writer when copying data.</li> <li>An error occurred in Slave Reader/Writer No. 1 for multi-Reader/Writer operation.</li> </ul>
0200 hex	An error occurred in Slave Reader/Writer No. 2 for multi-Reader/Writer operation.
0300 hex	An error occurred in Slave Reader/Writer No. 3 for multi-Reader/Writer operation.
0400 hex	An error occurred in Slave Reader/Writer No. 4 for multi-Reader/Writer operation.
0500 hex	An error occurred in Slave Reader/Writer No. 5 for multi-Reader/Writer operation.
0600 hex	An error occurred in Slave Reader/Writer No. 6 for multi-Reader/Writer operation.
0700 hex	An error occurred in Slave Reader/Writer No. 7 for multi-Reader/Writer operation.

## Communications Diagnostics Results

The following table lists the communications diagnostic results that are obtained when the Reader/Writer communicates with an RF Tag.

If communications diagnostics are enabled, these codes are provided to indicate the cause when diagnostics indicate that communications are unstable.

This information is set in the Response Information 2 field in the response area. When this information is set, the RF\_WAR (communications unstable) signal turns ON.

Communications diagnostics result	Description
0000 hex	Normal
0001 hex	Insufficient power to send
0002 hex	Insufficient power to receive
0003 hex	Too much noise
0004 hex	Insufficient signal-to-noise ratio

## 7-2 V680S Command Details

### 7-2-1 READ ID

This command reads the ID code of the RF Tag in the communications field.

#### Command Area


Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	0001 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	0000 hex (Not used.)
CmdParam2/Command Parameter 2	WORD	2 bytes	0000 hex (Not used.)

#### Response Area

Signal/data	Data type	Size	Description
ErrCode/Error Code	WORD	2 bytes	Error code
RespInfo1/Response Information 1	WORD	2 bytes	Device information
RespInfo2/Response Information 2	WORD	2 bytes	Communications diagnostics result
RespData/Response Data	STRUCT	-	-
ID Data	ARRAY[] OF BYTE	8 bytes	UID data read from the RF Tag (always 8 bytes)

#### Execution Example

Reading the ID Code of the RF Tag

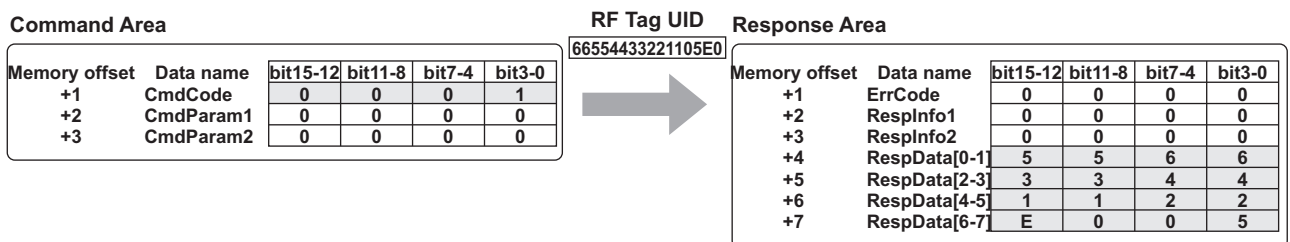

## 7-2-2 READ DATA

This command reads data from the RF Tag in the communications field.

### Command Area

Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	0002 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	First word address of the data read from the RF Tag 0000 to FFFF hex
CmdParam2/Command Parameter 2	WORD	2 bytes	The maximum data size that you can read from an RF Tag depends on the data size setting (in words). 0000 to 0200 hex * The maximum size that you can specify depends on the tag data link setting.

### Response Area

Signal/data	Data type	Size	Description
ErrCode/Error Code	WORD	2 bytes	Error code
RespInfo1/Response Information 1	WORD	2 bytes	Error device information
RespInfo2/Response Information 2	WORD	2 bytes	Communications diagnostics result
RespData/Response Data			
Read data	ARRAY[] OF BYTE	1024 bytes max.	Data read from the RF Tag

### Execution Example

Reading Four Words of Data Starting from Word Address 1234 Hex in the RF Tag

#### Command Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	CmdCode	0	0	0	2
+2	CmdParam1	1	2	3	4
+3	CmdParam2	0	0	0	4

#### RF Tag Memory

User address	bit15-12	bit11-8	bit7-4	bit3-0
1234Hex	1	1	1	1
1235Hex	2	2	2	2
1236Hex	3	3	3	3
1235Hex	4	4	4	4

#### Response Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	ErrCode	0	0	0	0
+2	RespInfo1	0	0	0	0
+3	RespInfo2	0	0	0	0
+4	RespData[0-1]	1	1	1	1
+5	RespData[2-3]	2	2	2	2
+6	RespData[4-5]	3	3	3	3
+7	RespData[6-7]	4	4	4	4

## 7-2-3 WRITE DATA

This command writes data to the RF Tag in the communications field.

### Command Area

Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	WRITE DATA (0003 hex)
CmdParam1/Command Parameter 1	WORD	2 bytes	First word address of the data to write to the RF Tag 0000 to FFFF hex
CmdParam2/Command Parameter 2	WORD	2 bytes	The maximum data size that you can write to an RF Tag depends on the data size setting (in words). 0000 to 0200 hex * The maximum size that you can specify depends on the tag data link setting.
CmdData/Command Data			
	Data to write	ARRAY[] OF BYTE	1024 bytes max.
			Data to write to RF Tag

### Response Area

Signal/data	Data type	Size	Description
ErrCode/Error Code	WORD	2 bytes	Error code
RespInfo1/Response Information 1	WORD	2 bytes	Error device information
RespInfo2/Response Information 2	WORD	2 bytes	Communications diagnostics result

### Execution Example

Writing 1111222233334444 to Four Words Starting from Word Address 1234 Hex in the RF Tag

Command Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	CmdCode	0	0	0	3
+2	CmdParam1	1	2	3	4
+3	CmdParam2	0	0	0	4
+4	CmdData[0-1]	1	1	1	1
+5	CmdData[2-3]	2	2	2	2
+6	CmdData[4-5]	3	3	3	3
+7	CmdData[6-7]	4	4	4	4



Response Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	ErrCode	0	0	0	0
+2	RespInfo1	0	0	0	0
+3	RespInfo2	0	0	0	0

RF Tag Memory

User address	bit15-12	bit11-8	bit7-4	bit3-0
1234Hex	1	1	1	1
1235Hex	2	2	2	2
1236Hex	3	3	3	3
1235Hex	4	4	4	4

## 7-2-4 LOCK

This command locks the memory of the RF Tag in the communications field. Memory cannot be written again after it is locked. There is also no way to unlock memory.

### Command Area

Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	0004 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	First block or sector number to lock in the RF Tag 0000 to FFFF hex
CmdParam2/Command Parameter 2	WORD	2 bytes	Number of blocks or sectors to lock in the RF Tag 0001 to FFFF hex

### Response Area

Signal/data	Data type	Size	Description
ErrCode/Error Code	WORD	2 bytes	Error code
ResplInfo1/Response Information 1	WORD	2 bytes	Error device information
ResplInfo2/Response Information 2	WORD	2 bytes	Communications diagnostics result

### Execution Example

Locking Four Blocks/Sectors Starting from Block/Sector 12 in the RF Tag

Command Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	CmdCode	0	0	0	4
+2	CmdParam1	0	0	0	C
+3	CmdParam2	0	0	0	4



Response Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	ErrCode	0	0	0	0
+2	ResplInfo1	0	0	0	0
+3	ResplInfo2	0	0	0	0



#### Precautions for Correct Use

The unit for locking memory depends on the RF Tag. Refer to *A-5 RF Tag Memory Map* on page A-63 for details.

## 7-2-5 DATA FILL

This command fills the specified number of words in the RF Tag in the communications field with the specified data.

### Command Area

Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	0005 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	First word address of the data to write to the RF Tag 0000 to FFFF hex
CmdParam2/Command Parameter 2	WORD	2 bytes	Number of words in the RF Tag to write 0000 hex: Specifies the entire area. 0001 to FFFF hex: Specified size
CmdData/Command Data			
Fill data	ARRAY[] OF BYTE	2 bytes	Fill data to write to the RF Tag (always one word)

### Response Area

Signal/data	Data type	Size	Description
ErrCode/Error Code	WORD	2 bytes	Error code
Resplnfo1/Response Information 1	WORD	2 bytes	Device information
Resplnfo2/Response Information 2	WORD	2 bytes	Communications diagnostics result

### Execution Example

Writing 5A5A Hex to Four Words Starting from Word Address 1234 Hex in the RF Tag

Command Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	CmdCode	0	0	0	5
+2	CmdParam1	1	2	3	4
+3	CmdParam2	0	0	0	4
+4	CmdData[0-1]	5	A	5	A



Response Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	ErrCode	0	0	0	0
+2	Resplnfo1	0	0	0	0
+3	Resplnfo2	0	0	0	0

RF Tag Memory

User address	bit15-12	bit11-8	bit7-4	bit3-0
1234Hex	5	A	5	A
1235Hex	5	A	5	A
1236Hex	5	A	5	A
1235Hex	5	A	5	A

## 7-2-6 RF TAG OVERWRITE COUNT CONTROL

This command is used to control the number of times RF Tags are overwritten. You can use it for RF Tags that have EEPROM.

### Command Area

Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	0006 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	Overwrite count control operation 0x0000: Initialization 0x0001: Subtraction 0x0002: Addition
CmdParam2/Command Parameter 2	WORD	2 bytes	First word address of the overwrite count area to maintain in the RF Tag 0000 to FFFF hex
CmdData/Command Data			
Count	UDINT	4 bytes	Initialize: The overwrite count to set in the RF Tag Addition/Subtraction: The count to add to or subtract from the current value maintained in the RF Tag 0000 0000 to FFFF FFFF hex

### Response Area

Signal/data	Data type	Size	Description
ErrCode/Error Code	WORD	2 bytes	Error code
ResplInfo1/Response Information 1	WORD	2 bytes	Device information
ResplInfo2/Response Information 2	WORD	2 bytes	Communications diagnostics result

### Execution Example

Initializing Word Address 1234 Hex in the RF Tag to a Count of 5,000 (1388 Hex) as the Overwrite Count Area

Command Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	CmdCode	0	0	0	6
+2	CmdParam1	0	0	0	0
+3	CmdParam2	1	2	3	4
+4	CmdData[0-1]	1	3	8	8
+5	CmdData[2-3]	0	0	0	0

Response Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	ErrCode	0	0	0	0
+2	ResplInfo1	0	0	0	0
+3	ResplInfo2	0	0	0	0

RF Tag Memory

User address	bit15-12	bit11-8	bit7-4	bit3-0
1234Hex	0	0	0	0
1235Hex	1	3	8	8

## 7-2-7 RESTORE DATA

This command restores the RF Tag data that is held in the Reader/Writer. You can use it for RF Tags that have EEPROM.

You can restore RF Tag data only when the RF Tag in the communications field matches the held RF Tag ID.

### Command Area

Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	0007 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	0000 hex (Not used.)
CmdParam2/Command Parameter 2	WORD	2 bytes	0000 hex (Not used.)

### Response Area

Signal/data	Data type	Size	Description
ErrCode/Error Code	WORD	2 bytes	Error code
RespInfo1/Response Information 1	WORD	2 bytes	Error device information
RespInfo2/Response Information 2	WORD	2 bytes	Communications diagnostics result

### Execution Example

Restoring Data When Writing to an RF Tag Fails and an RF Tag Data Lost Error Occurs

#### Command Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	CmdCode	0	0	0	7
+2	CmdParam1	0	0	0	0
+3	CmdParam2	0	0	0	0

#### Information to Restore

User address	1234	
Data size	0004	
Data	11	22
	33	44
	55	66
	77	88

#### Response Area


Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	ErrCode	0	0	0	0
+2	RespInfo1	0	0	0	0
+3	RespInfo2	0	0	0	0

#### RF Tag Memory

User address	bit15-12	bit11-8	bit7-4	bit3-0
1234Hex	1	1	2	2
1235Hex	3	3	4	4
1236Hex	5	5	6	6
1235Hex	7	7	8	8

## 7-2-8 COPY DATA

This command uses two Reader/Writers to copy data from an RF Tag in the communications field of one Reader/Writer (A) to the RF Tag in the communications field of another Reader/Writer (B).

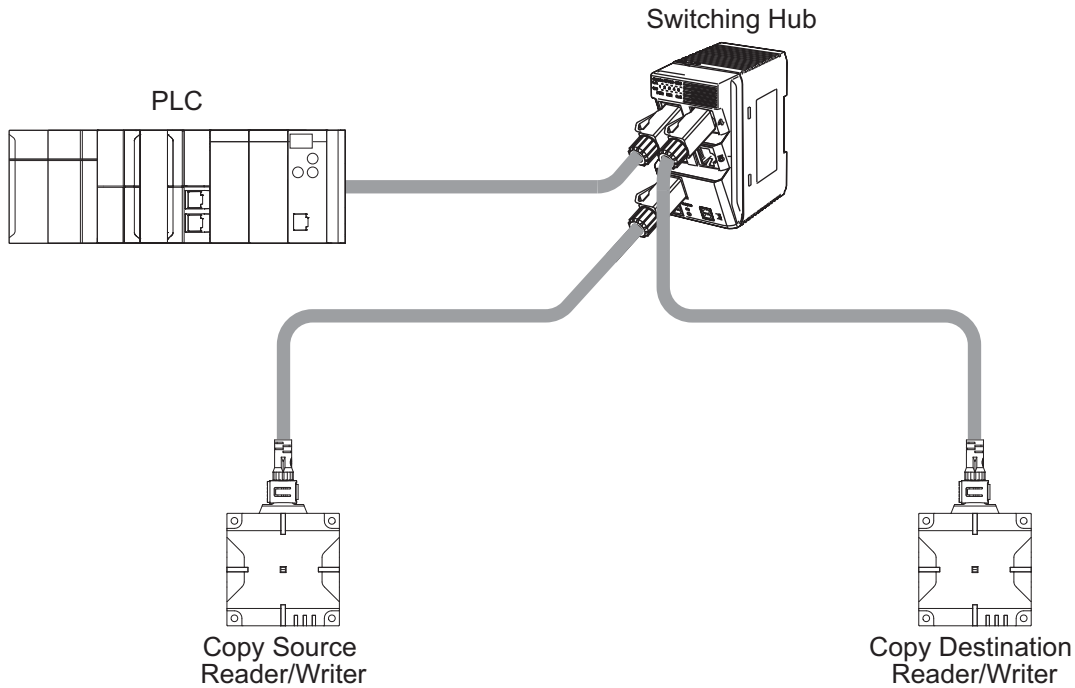

### Command Area

Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	0008 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	First word address of the data to copy from the RF Tag 0000 to FFFF hex
CmdParam2/Command Parameter 2	WORD	2 bytes	Number of words in the RF Tag to copy 0001 to 0200 hex
CmdData/Command Data			
IP address	DWORD	4 bytes	IP address of Reader/Writer at the copy destination 0000 0000 to FFFF FFFF hex Example: C0A801C8 hex (192.168.1.200)

### Response Area

Signal/data	Data type	Size	Description
ErrCode/Error Code	WORD	2 bytes	Error code
ResplInfo1/Response Information 1	WORD	2 bytes	Device information
ResplInfo2/Response Information 2	WORD	2 bytes	Communications diagnostics result

## Execution Example

Copying Four Words of Data Starting from Word Address 1234 Hex in the RF Tag to an RF Tag in the Communications Field of the Reader/Writer with IP Address 192.168.1.201 (C0A801C9 Hex)

Command Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	CmdCode	0	0	0	8
+2	CmdParam1	1	2	3	4
+3	CmdParam2	0	0	0	4
+4	CmdData[0-1]	0	1	C	9
+5	CmdData[2-3]	C	0	A	8

Response Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	ErrCode	0	0	0	0
+2	Resplnfo1	0	0	0	0
+3	Resplnfo2	0	0	0	0

RF Tag Memory in the Copy Source Reader/Writer

User address	bit15-12	bit11-8	bit7-4	bit3-0
1234Hex	1	1	2	2
1235Hex	3	3	4	4
1236Hex	5	5	6	6
1235Hex	7	7	8	8

RF Tag Memory in the Copy Destination Reader/Writer

User address	bit15-12	bit11-8	bit7-4	bit3-0
1234Hex	1	1	2	2
1235Hex	3	3	4	4
1236Hex	5	5	6	6
1235Hex	7	7	8	8

The operation indicator on the copy source Reader/Writer will change as shown in the following table.

		Copy destination		
		Communications normal (stable communications): Indicator lights green.	Communications normal (unstable communications): Indicator lights yellow.	Communications failed: Indicator lights red.
Copy source	Communications normal (stable communications): Indicator lights green.	Communications normal (stable communications): Indicator lights green.	Communications normal (unstable communications): Indicator lights yellow.	Communications failed: Indicator lights red.
	Communications normal (unstable communications): Indicator lights yellow.	Communications normal (unstable communications): Indicator lights yellow.	Communications normal (unstable communications): Indicator lights yellow.	Communications failed: Indicator lights red.
	Communications failed: Indicator lights red.	Communications failed: Indicator lights red.	Communications failed: Indicator lights red.	Communications failed: Indicator lights red.



### Precautions for Correct Use

To check the communications diagnostics result of the copy destination Reader/Writer, use the Web server function to check the copy destination Reader/Writer separately.

Refer to *6-10 Web Server* on page 6-47 for detailed information on Web server function.

## 7-2-9 INITIALIZE

This command restores the Reader/Writer settings to their default values.

### Command Area

Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	1000 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	0000 hex (Not used.)
CmdParam2/Command Parameter 2	WORD	2 bytes	0000 hex (Not used.)

### Response Area

Signal/data	Data type	Size	Description
ErrCode/Error Code	WORD	2 bytes	Error code
ResplInfo1/Response Information 1	WORD	2 bytes	0000 hex (Not used.)
ResplInfo1/Response Information 1	WORD	2 bytes	0000 hex (Not used.)

### Execution Example

Initializing All Settings

Command Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	CmdCode	1	0	0	0
+2	CmdParam1	0	0	0	0
+3	CmdParam2	0	0	0	0



Response Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	ErrCode	0	0	0	0
+2	ResplInfo1	0	0	0	0
+3	ResplInfo2	0	0	0	0

## 7-2-10 SET RF TAG COMMUNICATIONS

This command sets the RF Tag communications conditions in the Reader/Writer (communications option, communications speed, and write verification).

### Command Area

Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	1001 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	0000 hex (Not used.)
CmdParam2/Command Parameter 2	WORD	2 bytes	0000 hex (Not used.)
CmdData/Command Data			
Communications Option	WORD	2 bytes	0000 hex: Once 0001 hex: Repeat 0002 hex: FIFO Repeat (Without ID code check) 0003 hex: Auto 0012 hex: FIFO Repeat (With ID code check)
Communications Speed	WORD	2 bytes	0000 hex: High speed 0001 hex: Normal speed
Write Verification	WORD	2 bytes	0000 hex: Do not verify. 0001 hex: Verify
Communications Diagnostics	WORD	2 bytes	0000 hex: Disable 0001 hex: Enable

### Response Area

Signal/data	Data type	Size	Description
ErrCode/Error Code	WORD	2 bytes	Error code
ResplInfo1/Response Information 1	WORD	2 bytes	0000 hex (Not used.)
ResplInfo1/Response Information 1	WORD	2 bytes	0000 hex (Not used.)

### Execution Example

Setting the Communications Option to Repeat, Setting the Communications Speed to Standard, Disabling Write Verification, and Enabling Communications Diagnostics

Command Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	CmdCode	1	0	0	1
+2	CmdParam1	0	0	0	0
+3	CmdParam2	0	0	0	0
+4	CmdData[0-1]	0	0	0	1
+5	CmdData[2-3]	0	0	0	1
+6	CmdData[4-5]	0	0	0	0
+7	CmdData[6-7]	0	0	0	1



Response Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	ErrCode	0	0	0	0
+2	ResplInfo1	0	0	0	0
+3	ResplInfo2	0	0	0	0

## 7-2-11 GET RF TAG COMMUNICATIONS SETTINGS

This command reads the RF Tags communications conditions from the Reader/Writer (communications option, communications speed, and write verification).

### Command Area

Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	1002 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	0000 hex (Not used.)
CmdParam2/Command Parameter 2	WORD	2 bytes	0000 hex (Not used.)

### Response Area

Signal/data	Data type	Size	Description
ErrCode/Error Code	WORD	2 bytes	Error code
RespInfo1/Response Information 1	WORD	2 bytes	0000 hex (Not used.)
RespInfo2/Response Information 2	WORD	2 bytes	0000 hex (Not used.)
RespData/Response Data			
Communications Option	WORD	2 bytes	0000 hex: Once 0001 hex: Repeat 0002 hex: FIFO Repeat (Without ID code check) 0003 hex: Auto 0012 hex: FIFO Repeat (With ID code check)
Communications Speed	WORD	2 bytes	0000 hex: High speed 0001 hex: Normal speed
Write Verification	WORD	2 bytes	0000 hex: Do not verify. 0001 hex: Verify
Communications Diagnostics	WORD	2 bytes	0000 hex: Disable 0001 hex: Enable

### Execution Example

Reading the Communications Settings When the Communications Option Is Set to Repeat, the Communications Speed Is Set to Standard, Write Verification Is Disabled, and Communications Diagnostics Are Enabled

Command Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	CmdCode	1	0	0	2
+2	CmdParam1	0	0	0	0
+3	CmdParam2	0	0	0	0



Response Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	ErrCode	0	0	0	0
+2	RespInfo1	0	0	0	0
+3	RespInfo2	0	0	0	0
+4	RespData[0-1]	0	0	0	1
+5	RespData[2-3]	0	0	0	1
+6	RespData[4-5]	0	0	0	0
+7	RespData[6-7]	0	0	0	1

## 7-2-12 GET MODEL INFORMATION

This command reads the model of the Reader/Writer.

### Command Area

Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	2000 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	0000 hex (Not used.)
CmdParam2/Command Parameter 2	WORD	2 bytes	0000 hex (Not used.)

### Response Area

Signal/data	Data type	Size	Description
ErrCode/Error Code	WORD	2 bytes	Error code
RespInfo1/Response Information 1	WORD	2 bytes	0000 hex (Not used.)
RespInfo2/Response Information 2	WORD	2 bytes	0000 hex (Not used.)
RespData/Response Data			
Model Number Information	ARRAY[] OF BYTE	32 bytes	32 bytes of ASCII text max. (end code: 0000 hex)

### Execution Example

Reading the Model When a V680S-HMD63-EIP Reader/Writer Is Being Used

Command Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	CmdCode	2	0	0	0
+2	CmdParam1	0	0	0	0
+3	CmdParam2	0	0	0	0



Response Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	ErrCode	0	0	0	0
+2	RespInfo1	0	0	0	0
+3	RespInfo2	0	0	0	0
+4	RespData[0-1]	3	6	5	6
+5	RespData[2-3]	3	0	3	8
+6	RespData[4-5]	2	D	5	3
+7	RespData[6-7]	4	D	4	8
+8	RespData[8-9]	3	6	4	4
+9	RespData[10-11]	2	D	3	3
+10	RespData[12-13]	4	9	4	5
+11	RespData[14-15]	0	0	5	0
+12	RespData[16-17]	0	0	0	0
+13	RespData[18-19]	0	0	0	0
+14	RespData[20-21]	0	0	0	0
+15	RespData[22-23]	0	0	0	0
+16	RespData[24-25]	0	0	0	0
+17	RespData[26-27]	0	0	0	0
+18	RespData[28-29]	0	0	0	0
+19	RespData[30-31]	0	0	0	0

Model number information obtained from Reader/Writer

## 7-2-13 GET FIRMWARE VERSION

This command reads the firmware version of the Reader/Writer.

### Command Area

Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	2001 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	0000 hex (Not used.)
CmdParam2/Command Parameter 2	WORD	2 bytes	0000 hex (Not used.)

### Response Area

Signal/data	Data type	Size	Description
ErrCode/Error Code	WORD	2 bytes	Error code
RespInfo1/Response Information 1	WORD	2 bytes	0000 hex (Not used.)
RespInfo2/Response Information 2	WORD	2 bytes	0000 hex (Not used.)
RespData/Response Data			
Run Mode Program Major Versionr	WORD	2 bytes	0000 to 0099 hex (BCD)
Run Mode Program Minor Version	WORD	2 bytes	0000 to 0099 hex (BCD)
Run Mode Program Revision	WORD	2 bytes	0000 to 9999 hex (BCD)
Safe Mode Program Major Version	WORD	2 bytes	0000 to 9999 hex (BCD)
Safe Mode Program Minor Version	WORD	2 bytes	0000 to 9999 hex (BCD)
Safe Mode Program Revision	WORD	2 bytes	0000 to 9999 hex (BCD)

### Execution Example

Reading the Firmware Version When the Run Mode Program Version is Version 1.2.3 and the Safe Mode Program Version is Version 1.2.2

Command Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	CmdCode	2	0	0	1
+2	CmdParam1	0	0	0	0
+3	CmdParam2	0	0	0	0



Response Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	ErrCode	0	0	0	0
+2	RespInfo1	0	0	0	0
+3	RespInfo2	0	0	0	0
+4	RespData[0-1]	0	0	0	1
+5	RespData[2-3]	0	0	0	2
+6	RespData[4-5]	0	0	0	3
+7	RespData[6-7]	0	0	0	1
+8	RespData[8-9]	0	0	0	2
+9	RespData[10-11]	0	0	0	2

} Run Mode program version information (rows +4 to +7)

} Safe Mode program version information (rows +8 to +9)

## 7-2-14 GET OPERATING TIME

This command reads the operating time since the Reader/Writer was started.  
The operating time is reset when the Reader/Writer is reset.

### Command Area

Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	2002 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	0000 hex (Not used.)
CmdParam2/Command Parameter 2	WORD	2 bytes	0000 hex (Not used.)

### Response Area

Signal/data	Data type	Size	Description
ErrCode/Error Code	WORD	2 bytes	Error code
RespInfo1/Response Information 1	WORD	2 bytes	0000 hex (Not used.)
RespInfo2/Response Information 2	WORD	2 bytes	0000 hex (Not used.)
RespData/Response Data			
Operating time	UDINT	4 bytes	Running time since the Reader/Writer was started (in milliseconds) 0000 0000 to FFFF FFFF hex

### Execution Example

Reading the Operating Time When It Is 1,234,567,890 (4996 02D2 hex)

Command Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	CmdCode	2	0	0	2
+2	CmdParam1	0	0	0	0
+3	CmdParam2	0	0	0	0



Response Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	ErrCode	0	0	0	0
+2	RespInfo1	0	0	0	0
+3	RespInfo2	0	0	0	0
+4	RespData[0-1]	0	2	D	2
+5	RespData[2-3]	4	9	9	6

## 7-2-15 GET COMMAND ERROR LOG

This command reads the log of command errors that have occurred in the Reader/Writer. The command error log is reset when the Reader/Writer is restarted.

### Command Area

Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	2004 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	Number of first record to read 0000 to 000F hex (0 to 15)
CmdParam2/Command Parameter 2	WORD	2 bytes	Number of records to read 0001 to 0010 hex (1 to 16) * The maximum number of records that you can specify depends on the tag data link settings.

### Response Area

Signal/data	Data type	Size	Description	
ErrCode/Error Code	WORD	2 bytes	Error code	
RespInfo1/Response Information 1	WORD	2 bytes	0000 hex (Not used.)	
RespInfo2/Response Information 2	WORD	2 bytes	0000 hex (Not used.)	
RespData/Response Data				
Number of Records		UINT	2 bytes	Number of valid records in the command error log 0000 to 0010 hex (1 to 16)
Newest Record	Operating Time	UDINT	4 bytes	Operating time when the error occurred (unit: ms) 0000 0000 to FFFF FFFF hex
	IP Address of the Remote Device	DWORD	4 bytes	IP address of host device that generated the error 0000 0000 to FFFF FFFF hex Example: C0A801C8 (192.168.1.200)
	Command Code	WORD	2 bytes	Command code for which an error occurred
	Error Code	WORD	2 bytes	Error code of the error that occurred
	Response Information 1	WORD	2 bytes	Response information 1 for the error that occurred
	Response Information 2	WORD	2 bytes	Response information 2 for the error that occurred
Newest Record - 1	Same as above.	Same as above.	Same as above.	Same as above.
:	:	:	:	:
Newest Record - 15	Same as above.	Same as above.	Same as above.	Same as above.

\* The maximum size of the response data depends on the tag and tag set settings. Therefore, the number of command error log records that can be read with one operation will vary. A parameter error will occur if the setting exceeds the response data size.

## Execution Example

Reading the Two Newest Records from the Command Error Log When Command Errors Occur

\* This example assumes that there are the following two valid records in the command error log.

- Error code 2001 hex occurred for command code 0001 hex at the host device (IP address 192.168.1.10) at an operating time of 11,223,344 (00AB 4130 hex).
- Error code 2002 hex occurred for command code 0002 hex at the host device (IP address 192.168.1.10) at an operating time of 11,223,345 (00AB 4131 hex).

Command Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	CmdCode	2	0	0	4
+2	CmdParam1	0	0	0	0
+3	CmdParam2	0	0	0	2



Response Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0	
+1	ErrCode	0	0	0	0	} Number of records } Operating time } IP address } Command code } Error code } Response information 1 } Response Information 2 } Operating time } IP address } Command code } Error code } Response information 1 } Response Information 2 } Operating time } IP address } Command code } Error code } Response information 1 } Response Information 2
+2	RespInfo1	0	0	0	0	
+3	RespInfo2	0	0	0	0	
+4	RespData[0-1]	0	0	0	2	
+5	RespData[2-3]	4	1	3	1	
+6	RespData[4-5]	0	0	4	B	
+7	RespData[6-7]	0	1	0	A	
+8	RespData[8-9]	C	0	A	8	
+9	RespData[10-11]	0	0	0	2	
+10	RespData[12-13]	2	0	0	2	
+11	RespData[14-15]	0	0	0	0	
+12	RespData[16-17]	0	0	0	0	
+13	RespData[18-19]	4	1	3	0	
+14	RespData[20-21]	0	0	4	B	
+15	RespData[22-23]	0	1	0	A	
+16	RespData[24-25]	C	0	A	8	
+17	RespData[26-27]	0	0	0	1	
+18	RespData[28-29]	2	0	0	1	
+19	RespData[30-31]	0	0	0	0	
+20	RespData[32-33]	0	0	0	0	
⋮	⋮	⋮	⋮	⋮	⋮	
+125	RespData[242-243]	0	0	0	0	
+126	RespData[244-245]	0	0	0	0	
+127	RespData[246-247]	0	0	0	0	
+128	RespData[248-249]	0	0	0	0	
+129	RespData[250-251]	0	0	0	0	
+130	RespData[252-253]	0	0	0	0	
+131	RespData[254-255]	0	0	0	0	
+132	RespData[256-257]	0	0	0	0	

Newest record in the command error log

Newest record - 1 in the command error log

Newest record - 15 in the command error log

## 7-2-16 GET RESTORE INFORMATION

This command reads the restore information from memory in the Reader/Writer.  
The restore information is reset when the Reader/Writer is reset.

### Command Area

Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	2005 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	Number of first record to read 0000 to 0007 hex (0 to 7)
CmdParam2/Command Parameter 2	WORD	2 bytes	Number of records to read 0001 to 008 hex (1 to 8) * The maximum number of records that you can specify depends on the tag data link settings.

### Response Area

Signal/data	Data type	Size	Description	
ErrCode/Error Code	WORD	2 bytes	Error code	
RespInfo1/Response Information 1	WORD	2 bytes	0000 hex (Not used.)	
RespInfo2/Response Information 2	WORD	2 bytes	0000 hex (Not used.)	
RespData/Response Data				
Number of Records		UINT	2 bytes	Number of valid records in the restore information 0000 to 0008 hex (1 to 8)
Newest Record	Operating Time	UDINT	4 bytes	Operating time in milliseconds when RF Tag data lost error occurred 0000 0000 to FFFF FFFF hex
	RF Tag ID	ARRAY OF BYTE	8 bytes	UID of the RF Tag when the RF Tag data lost error occurred
	User Address	WORD	2 bytes	First write address when an RF Tag data lost error occurred
	Data Size	WORD	2 bytes	Write size when an RF Tag data lost error occurred
	Data	ARRAY OF BYTE	8 bytes	Data in the RF Tag before the write operation when the RF Tag data lost error occurred
Newest Record - 1	Same as above.	Same as above.	Same as above.	Same as above.
:	:	:	:	:
Newest Record - 7	Same as above.	Same as above.	Same as above.	Same as above.

\* The maximum size of the response data depends on the tag and tag set settings. Therefore, the number of records of restore information that can be read with one operation will vary. A parameter error will occur if the setting exceeds the response data size.

## Execution Example

Reading the Newest Restore Information Record When Writing to an RF Tag Fails and an RF Tag Data Lost Error Occurs

\* This example assumes that there is the following one valid record of restore information.

- Operating time: 1,234,567,890 (4996 02D2 hex)
- RF Tag ID: 6655 4433 2211 05E0
- User address: 1234 hex
- Data size: 0004 hex
- Data: 1122 3344 5566 7788 hex

Command Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	CmdCode	2	0	0	5
+2	CmdParam1	0	0	0	0
+3	CmdParam2	0	0	0	1



Response Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0	
+1	ErrCode	0	0	0	0	
+2	RespInfo1	0	0	0	0	
+3	RespInfo2	0	0	0	0	
+4	RespData[0-1]	0	0	0	1	} Number of records
+5	RespData[2-3]	0	2	D	2	
+6	RespData[4-5]	4	9	9	6	} Operating time
+7	RespData[6-7]	5	5	6	6	
+8	RespData[8-9]	3	3	4	4	} RF Tag UID
+9	RespData[10-11]	1	1	2	2	
+10	RespData[12-13]	E	0	0	5	
+11	RespData[14-15]	1	2	3	4	} User address
+12	RespData[16-17]	0	0	0	4	
+13	RespData[18-19]	2	2	1	1	} Data size
+14	RespData[20-21]	4	4	3	3	
+15	RespData[22-23]	6	6	5	5	} Data
+16	RespData[24-25]	8	8	7	7	
⋮	⋮	⋮	⋮	⋮	⋮	
+128	RespData[248-249]	0	0	0	0	} Operating time
+129	RespData[250-251]	0	0	0	0	
+130	RespData[252-253]	0	0	0	0	} RF Tag UID
+131	RespData[254-255]	0	0	0	0	
+132	RespData[256-257]	0	0	0	0	} User address
+133	RespData[258-259]	0	0	0	0	
+134	RespData[260-261]	0	0	0	0	} Data size
+135	RespData[262-263]	0	0	0	0	
+136	RespData[264-265]	0	0	0	0	} Data
+137	RespData[266-267]	0	0	0	0	
+138	RespData[268-269]	0	0	0	0	
+139	RespData[270-271]	0	0	0	0	

Newest record in restore information

Newest record - 7 in restore information

## 7-2-17 MEASURE NOISE

This command measures the noise level around the Reader/Writer.

### Command Area

Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	2003 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	0000 hex (Not used.)
CmdParam2/Command Parameter 2	WORD	2 bytes	0000 hex (Not used.)

### Response Area

Signal/data	Data type	Size	Description
ErrCode/Error Code	WORD	2 bytes	Error code
RespInfo1/Response Information 1	WORD	2 bytes	0000 hex (Not used.)
RespInfo2/Response Information 2	WORD	2 bytes	0000 hex (Not used.)
RespData/Response Data			
Average Noise Level	UINT	2 bytes	0000 to 0063 hex (level 0 to 99)
Maximum Noise Level	UINT	2 bytes	0000 to 0063 hex (level 0 to 99)
Minimum Noise Level	UINT	2 bytes	0000 to 0063 hex (level 0 to 99)

### Execution Example

Measuring the Noise Level When the Average Level Is 51 (0033 Hex), the Maximum Level Is 62 (003E hex), and the Minimum Level Is 41 (0029 Hex)

Command Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	CmdCode	2	0	0	3
+2	CmdParam1	0	0	0	0
+3	CmdParam2	0	0	0	0



Response Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	ErrCode	0	0	0	0
+2	RespInfo1	0	0	0	0
+3	RespInfo2	0	0	0	0
+4	RespData[0-1]	0	0	3	3
+5	RespData[2-3]	0	0	3	E
+6	RespData[4-5]	0	0	2	9

## 7-2-18 RESET

This command resets the Reader/Writer.

### Command Area

Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	3000 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	0000 hex (Not used.)
CmdParam2/Command Parameter 2	WORD	2 bytes	0000 hex (Not used.)

### Response Area

Signal/data	Data type	Size	Description
ErrCode/Error Code	WORD	2 bytes	Error code
ResplInfo1/Response Information 1	WORD	2 bytes	0000 hex (Not used.)
ResplInfo2/Response Information 2	WORD	2 bytes	0000 hex (Not used.)

### Execution Example

Resetting the Reader/Writer

Command Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	CmdCode	3	0	0	0
+2	CmdParam1	0	0	0	0
+3	CmdParam2	0	0	0	0



Response Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	ErrCode	0	0	0	0
+2	ResplInfo1	0	0	0	0
+3	ResplInfo2	0	0	0	0

## 7-2-19 SET MULTI-READER/WRITER OPERATION

This command sets multi-Reader/Writer operation.

### Command Area


Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	1003 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	0000 hex (Not used.)
CmdParam2/Command Parameter 2	WORD	2 bytes	0000 hex (Not used.)
CmdData/Command Data			
Multi-Reader/Writer Mode	WORD	2 bytes	0000 hex: Disable 0001 hex: Enable Field Extension Mode 0002 hex: Enable High-speed Traveling Mode
Number of Slave Reader/Writers	WORD	2 bytes	Number of Reader/Writers linked with multi-Reader/Writer operation 0000 to 0007 hex * Specify 0000 hex if multi-Reader/Writer operation is disabled.
IP Address of Slave Reader/Writer No. 1	DWORD	4 bytes	IP addresses of Slave Reader/Writers 0000 0000 to FFFF FFFF hex  Example: C0A801C8 hex (192.168.1.200) * Specify 0000 0000 hex if multi-Reader/Writer operation is disabled or the Slave Reader/Writer is not used.
IP Address of Slave Reader/Writer No. 2	DWORD	4 bytes	
IP Address of Slave Reader/Writer No. 3	DWORD	4 bytes	
IP Address of Slave Reader/Writer No. 4	DWORD	4 bytes	
IP Address of Slave Reader/Writer No. 5	DWORD	4 bytes	
IP Address of Slave Reader/Writer No. 6	DWORD	4 bytes	
IP Address of Slave Reader/Writer No. 7	DWORD	4 bytes	

### Response Area

Signal/data	Data type	Size	Description
ErrCode/Error Code	WORD	2 bytes	Error code
ResplInfo1/Response Information 1	WORD	2 bytes	0000 hex (Not used.)
ResplInfo2/Response Information 2	WORD	2 bytes	0000 hex (Not used.)

## Execution Example

Setting the Multi-Reader/Writer Mode to Field Extension Mode, the Number of Slave Reader/Writers to 3, and the IP Addresses of Slaves No. 1, No. 2, and No. 3 to 192.168.1.201, 192.168.1.202, and 192.168.1.203, Respectively

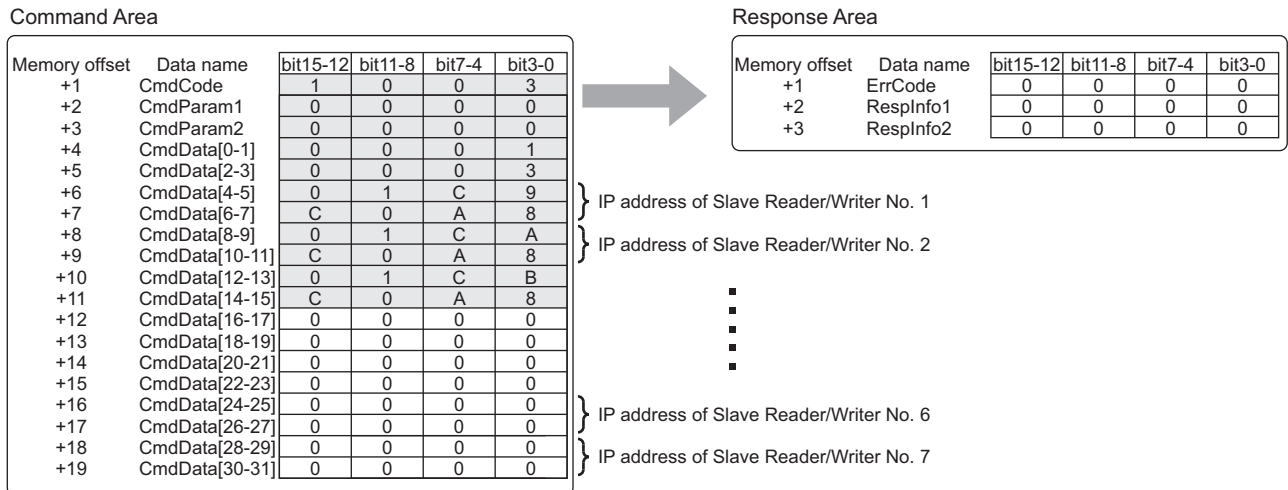

## 7-2-20 GET MULTI-READER/WRITER SETTINGS

You can use this command to check the multi-Reader/Writer settings in a Reader/Writer.

### Command Area

Signal/data	Data type	Description	Function
CmdCode/Command Code	WORD	2 bytes	1004 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	0000 hex (Not used.)
CmdParam2/Command Parameter 2	WORD	2 bytes	0000 hex (Not used.)

### Response Area

Signal/data	Data type	Size	Description
ErrCode/Error Code	WORD	2 bytes	Error code
RespInfo1/Response Information 1	WORD	2 bytes	0000 hex (Not used.)
RespInfo2/Response Information 2	WORD	2 bytes	0000 hex (Not used.)
RespData/Response Data			
Multi-Reader/Writer Mode	WORD	2 bytes	0000 hex: Disable 0001 hex: Enable Field Extension Mode 0002 hex: Enable High-speed Traveling Mode
Number of Slave Reader/Writers	WORD	2 bytes	Number of Reader/Writers linked with multi-Reader/Writer operation 0000 to 0007 hex
IP Address of Slave Reader/Writer No. 1	DWORD	4 bytes	IP addresses of Slave Reader/Writers 0000 0000 to FFFF FFFF hex Example: C0A801C8 hex (192.168.1.200)
IP Address of Slave Reader/Writer No. 2	DWORD	4 bytes	
IP Address of Slave Reader/Writer No. 3	DWORD	4 bytes	
IP Address of Slave Reader/Writer No. 4	DWORD	4 bytes	
IP Address of Slave Reader/Writer No. 5	DWORD	4 bytes	
IP Address of Slave Reader/Writer No. 6	DWORD	4 bytes	
IP Address of Slave Reader/Writer No. 7	DWORD	4 bytes	

## Execution Example

Reading the Multi-Reader/Writer Settings When the Multi-Reader/Writer Mode Is Set to Field Extension Mode, the Number of Slave Reader/Writers Is Set to 3, and the IP Addresses of Slaves No. 1, No. 2, and No. 3 Are Set to 192.168.1.201, 192.168.1.202, and 192.168.1.203, Respectively

### Command Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	CmdCode	1	0	0	4
+2	CmdParam1	0	0	0	0
+3	CmdParam2	0	0	0	0



### Response Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0	
+1	ErrCode	0	0	0	0	
+2	RespInfo1	0	0	0	0	
+3	RespInfo2	0	0	0	0	
+4	RespData[0-1]	0	1	0	0	
+5	RespData[2-3]	0	3	0	0	
+6	RespData[4-5]	0	1	C	9	} IP address of Slave Reader/Writer No. 1
+7	RespData[6-7]	C	0	A	8	
+8	RespData[8-9]	0	1	C	A	} IP address of Slave Reader/Writer No. 2
+9	RespData[10-11]	C	0	A	8	
+10	RespData[12-13]	0	1	C	B	} IP address of Slave Reader/Writer No. 2
+11	RespData[14-15]	C	0	A	8	
+12	RespData[16-17]	0	0	0	0	
+13	RespData[18-19]	0	0	0	0	
+14	RespData[20-21]	0	0	0	0	
+15	RespData[22-23]	0	0	0	0	
+16	RespData[24-25]	0	0	0	0	
+17	RespData[26-27]	0	0	0	0	
+18	RespData[28-29]	0	0	0	0	
+19	RespData[30-31]	0	0	0	0	

## 7-2-21 GET MULTI-READER/WRITER STATUS

This command reads the Master Reader/Writer and Slave Reader/Writer status when multi-Reader/Writer operation is being used.

### Command Area

Signal/data	Data type	Size	Description
CmdCode/Command Code	WORD	2 bytes	2006 hex
CmdParam1/Command Parameter 1	WORD	2 bytes	0000 hex (Not used.)
CmdParam2/Command Parameter 2	WORD	2 bytes	0000 hex (Not used.)

### Response Area

Signal/data	Data type	Size	Description
ErrCode/Error Code	WORD	2 bytes	Error code
ResplInfo1/Response Information 1	WORD	2 bytes	0000 hex (Not used.)
ResplInfo2/Response Information 2	WORD	2 bytes	0000 hex (Not used.)
RespData/Response Data			
Master Status	WORD	2 bytes	Multi-Reader/Writer status of Master Reader/Writer 0000 hex : Disable 1000 hex : Preparing for Field Extension Mode (Detecting Groups) 1001 hex : Ready for Field Extension Mode (Group Detection Completed) 2000 hex : Preparing for High-speed Traveling Mode (Detecting Groups) 2001 hex : Ready for High-speed Traveling Mode (Group Detection Completed)
Slave No. 1 Status	WORD	2 bytes	Connection status of Slave Reader/Writers No. 1 to 7 0000 hex: Not connected. 0001 hex: Connection successful 0002 hex: Connection failed
:	:	:	
Slave No. 7 Status	WORD	2 bytes	

## Execution Example

Reading the Multi-Reader/Writer Status When the Reader/Writer Is in Field Extension Mode, the Group Is Being Detected, Connection of Slave Reader/Writer No. 2 Failed, and Slave Reader/Writers No. 3 to 7 Are Not Connected

### Command Area

Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	CmdCode	2	0	0	6
+2	CmdParam1	0	0	0	0
+3	CmdParam2	0	0	0	0



### Response Area


Memory offset	Data name	bit15-12	bit11-8	bit7-4	bit3-0
+1	ErrCode	0	0	0	0
+2	RespInfo1	0	0	0	0
+3	RespInfo2	0	0	0	0
+4	RespData[0-1]	1	0	0	0
+5	RespData[2-3]	0	0	0	1
+6	RespData[4-5]	0	0	0	2
+7	RespData[6-7]	0	0	0	0
+8	RespData[8-9]	0	0	0	0
+9	RespData[10-11]	0	0	0	0
+10	RespData[12-13]	0	0	0	0
+11	RespData[14-15]	0	0	0	0

} Master Reader/Writer  
 } Slave Reader/Writer No. 1  
 } Slave Reader/Writer No. 2  
 } Slave Reader/Writer No. 3  
 } Slave Reader/Writer No. 4  
 } Slave Reader/Writer No. 5  
 } Slave Reader/Writer No. 6  
 } Slave Reader/Writer No. 7

## 7-3 Time Charts

### 7-3-1 Executing RF Tag Communications Commands


#### Using the Once Communications Option

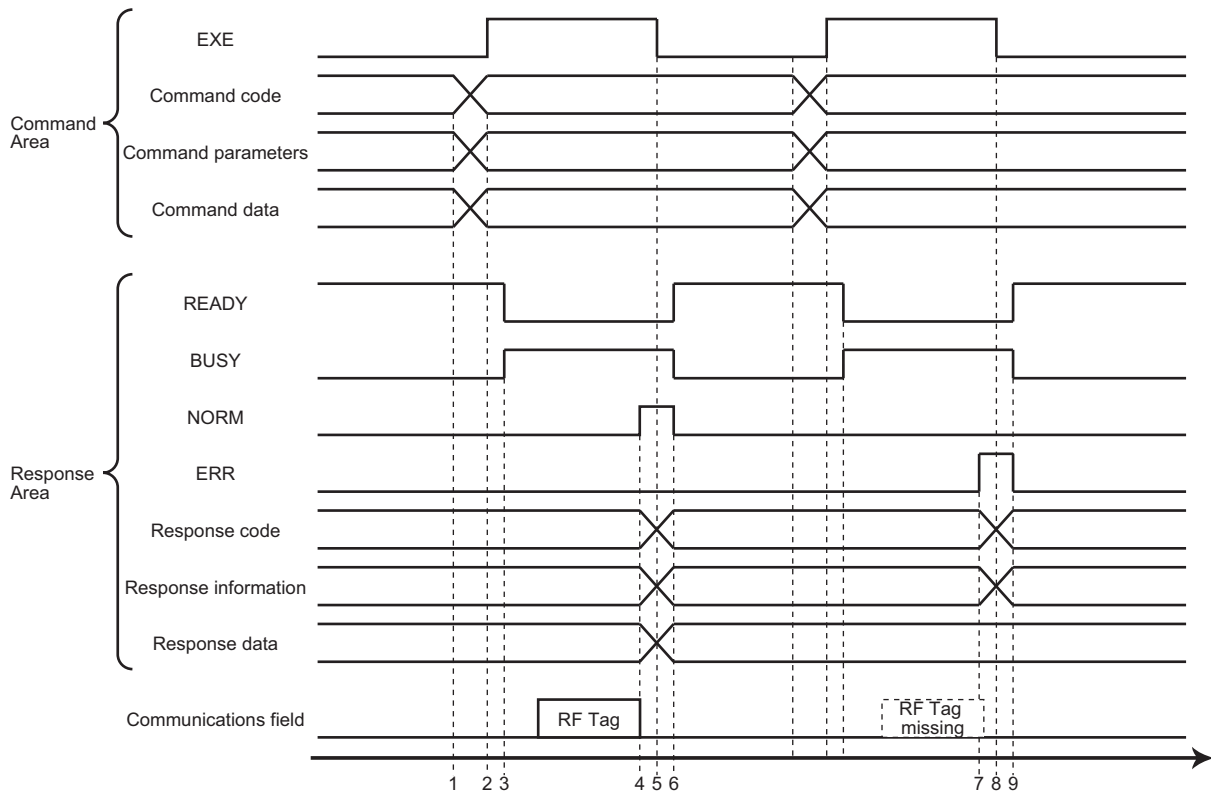

1. The command code, command parameters, and command data are set from the PLC while the READY signal is ON.
2. The user (PLC) turns ON the EXE signal. This tells the Reader/Writer to start execution.
3. When the Reader/Writer receives the instruction to start execution, it turns OFF the READY signal and turns ON the BUSY signal.
4. The Reader/Writer detects an RF Tag and when communications end normally, it sets the response code, response information, and response data and turns ON the NORM signal.
5. The user (PLC) detects that the NORM signal has turned ON and reads the response data. After reading the data, the user (PLC) turns OFF the EXE signal. This tells the Reader/Writer to stop execution.
6. When the Reader/Writer receives the instruction to stop execution, it turns ON the READY signal and turns OFF the BUSY signal and the NORM signal.
7. When command execution ends in an error (e.g., the Reader/Writer does not detect an RF Tag or communications fail), it sets the response code and response information and turns ON the ERR signal.

8. The user (PLC) detects that the ERR signal has turned ON, reads the response code and response information, and checks the error. After checking the error, the user (PLC) turns OFF the EXE signal. This tells the Reader/Writer to stop execution.
9. When the Reader/Writer receives the instruction to stop execution, it turns ON the READY signal and turns OFF the BUSY signal and the ERR signal.


## Using the Auto Communications Option

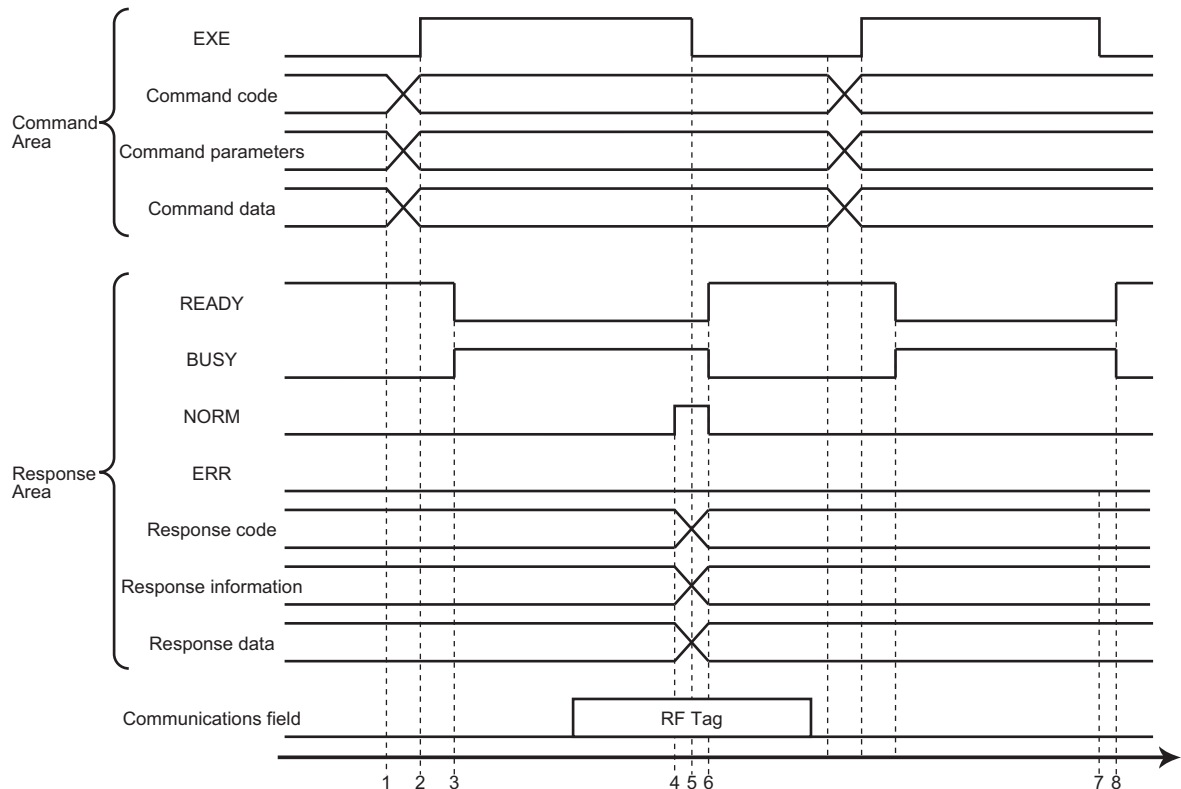

1. The command code, command parameters, and command data are set from the PLC while the READY signal is ON.
2. The user (PLC) turns ON the EXE signal. This tells the Reader/Writer to start execution.
3. When the Reader/Writer receives the instruction to start execution, it turns OFF the READY signal and turns ON the BUSY signal. From this timing, the reader / writer keeps waiting for the RF tag to enter the communication area.
4. The Reader/Writer detects an RF Tag and when communications end normally, it sets the response code, response information, and response data and turns ON the NORM signal. At this time, the NORM LED (green) lights up once.
5. The user (PLC) detects that the NORM signal has turned ON and reads the response data. After reading the data, the user (PLC) turns OFF the EXE signal. This tells the Reader/Writer to stop execution.
6. When the Reader/Writer receives the instruction to stop execution, it turns ON the READY signal and turns OFF the BUSY signal and the NORM signal.
7. If the BUSY signal is ON and the user (PLC) wants to cancel Auto communications, the user (PLC) turns OFF the EXE signal. This tells the Reader/Writer to stop execution.

- When the Reader/Writer receives the instruction to stop execution, it turns ON the READY signal and turns OFF the BUSY signal and the ERR signal.

## Using the Repeat or FIFO Repeat Communications Option

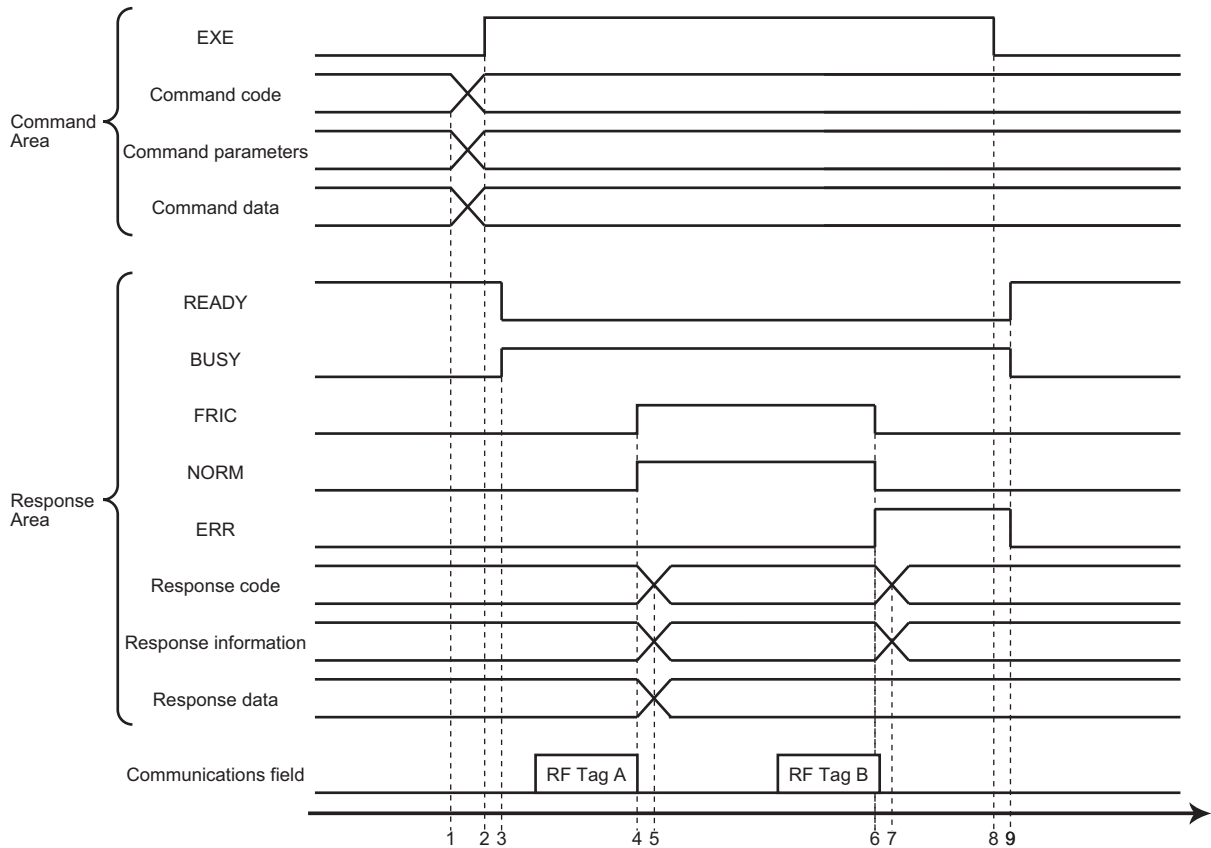


- The command code, command parameters, and command data are set from the PLC while the READY signal is ON.
- The user (PLC) turns ON the EXE signal. This tells the Reader/Writer to start execution.
- When the Reader/Writer receives the instruction to start execution, it turns OFF the READY signal and turns ON the BUSY signal.
- The Reader/Writer detects the first RF Tag (RF Tag A) and when communications end normally, it sets the response code, response information, and response data, toggles the FRIC signal (turns it ON), and turns ON the NORM signal.
- The user (PLC) detects that the FRIC signal has changed and that the NORM signal has turned ON and reads the response data.
- The Reader/Writer detects the second RF Tag (RF Tag B) and when communications end in an error, it sets the response code and response information, toggles the FRIC signal (turns it OFF), and turns ON the ERR signal.
- The user (PLC) detects that the FRIC signal has changed and that the ERR signal has turned ON, reads the response code and response information, and checks the error.
- If the BUSY signal is ON and the user (PLC) wants to cancel Repeat or FIFO Repeat communications, the user (PLC) turns OFF the EXE signal. This tells the Reader/Writer to stop execution.

- When the Reader/Writer receives the instruction to stop execution, it turns ON the READY signal and turns OFF the BUSY, FRIC, NORM, and ERROR signals.

## 7-3-2 Executing Other Commands


### Executing Reader/Writer Setting, Reader/Writer Information Acquisition, or Reader/Writer Operation Control Commands

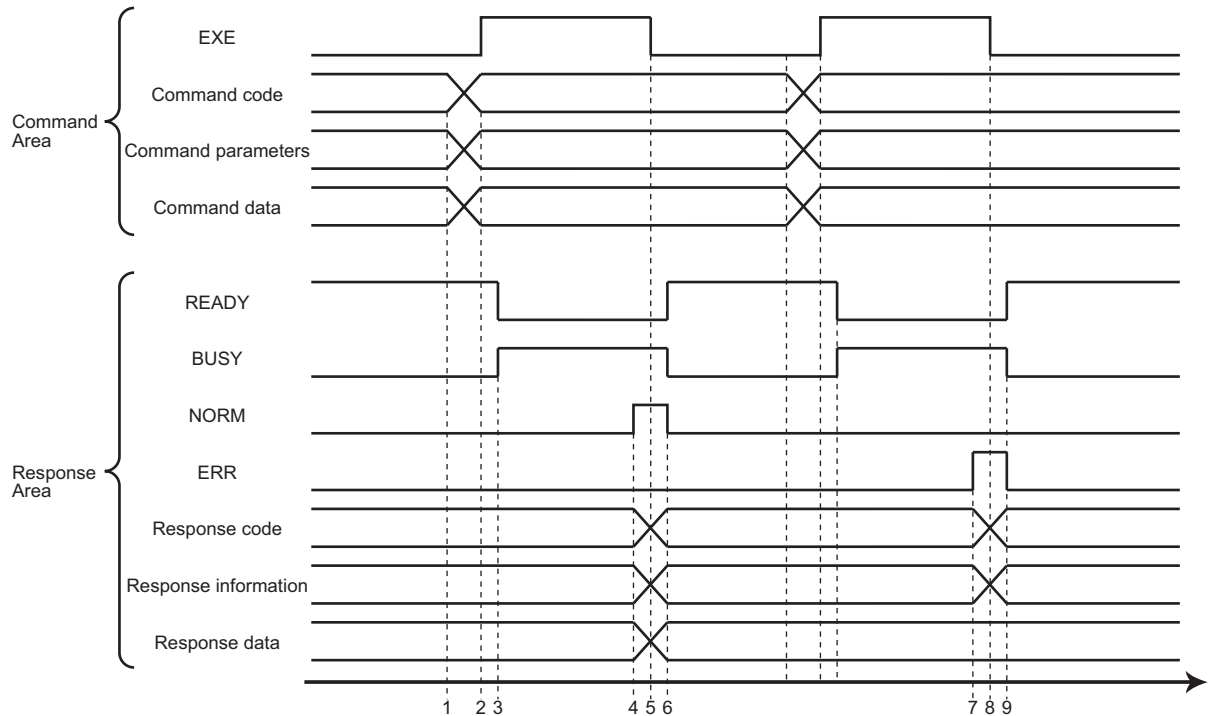

- The command code, command parameters, and command data are set from the PLC while the READY signal is ON.
- The user (PLC) turns ON the EXE signal. This tells the Reader/Writer to start execution.
- When the Reader/Writer receives the instruction to start execution, it turns OFF the READY signal and turns ON the BUSY signal.
- When communications end normally, the Reader/Writer sets the response code and response data and turns ON the NORM signal.
- The user (PLC) detects that the NORM signal has turned ON and reads the response data. After reading the data, the user (PLC) turns OFF the EXE signal. This tells the Reader/Writer to stop execution.
- When the Reader/Writer receives the instruction to stop execution, it turns ON the READY signal and turns OFF the BUSY signal and the ERR signal.
- When communications end in an error, the Reader/Writer sets the response code and response information and turns ON the ERR signal.
- The user (PLC) detects that the ERR signal has turned ON, reads the response code and response information. After reading the data, the user (PLC) turns OFF the EXE signal. This tells the Reader/Writer to stop execution.

- When the Reader/Writer receives the instruction to stop execution, it turns ON the READY signal and turns OFF the BUSY signal and the ERR signal.

## Executing the RESET Command

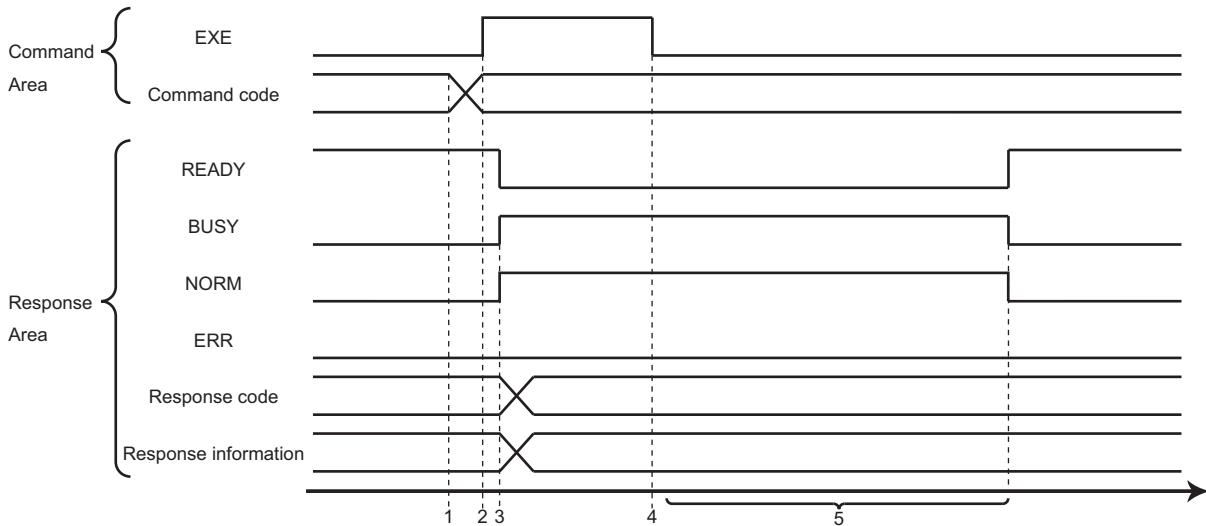

- Set the command code of the RESET command in the PLC while the READY signal is ON.
- The user (PLC) turns ON the EXE signal. This tells the Reader/Writer to start execution.
- When the Reader/Writer receives the instruction to start execution, it turns OFF the READY signal and turns ON the BUSY signal. If the Reader/Writer can be reset, it sets the response code and turns ON the NORM signal.
- When the PLC detects that the NORM signal is ON, it turns OFF the EXE signal. This tells the Reader/Writer to stop execution.
- When the Reader/Writer receives the instruction to stop execution, it resets itself. After the Reader/Writer restarts and the tag data link connections are established again, the Reader/Writer turns ON the READY signal and turns OFF the BUSY signal and NORM signal.



# Web Browser Interface

This section describes the settings of the Web Browser of the personal computer and each operation window.

---

<b>8-1</b>	<b>Web Browser Overview .....</b>	<b>8-2</b>
8-1-1	Overview .....	8-2
8-1-2	System Environment .....	8-2
8-1-3	Procedure to Display the Browser Window .....	8-3
<b>8-2</b>	<b>Web Browser Functions .....</b>	<b>8-4</b>
8-2-1	Windows List .....	8-4
8-2-2	Window Transitions .....	8-6
8-2-3	Window Configuration .....	8-7
<b>8-3</b>	<b>Operation Interface .....</b>	<b>8-8</b>
8-3-1	Password Window .....	8-8
8-3-2	Status Window .....	8-10
8-3-3	Network Settings Window .....	8-11
8-3-4	RF Tag Communications Settings Window .....	8-17
8-3-5	Multi Reader/Writer Settings Window .....	8-18
8-3-6	RF Tag Communications Window .....	8-19
8-3-7	Log View Window .....	8-21
8-3-8	Noise Monitor .....	8-26
8-3-9	RF Analyzer Window .....	8-27
8-3-10	Reboot.....	8-31
8-3-11	Configuration Window .....	8-32
<b>8-4</b>	<b>Root Certificate Installation Procedure.....</b>	<b>8-35</b>

# 8-1 Web Browser Overview

This section describes the overview of the Web Browser, the system environment, and the procedure to display the browser window.

## 8-1-1 Overview

The V680S-series Reader/Writer EtherNet/IP type is equipped with the Web Browser. The following functions can be easily performed without preparing special tools.

- Password Authentication
- Status View
- Network Settings
- Test Operation
- Noise Monitor
- Security Log etc.
- RF Analyzer
- Export/Import Settings
- Factory Reset

## 8-1-2 System Environment

The following environment is required to use the Web Browser.

Item	Requirement
Operating System (OS)	Windows 10 32-bit or 64-bit edition Windows 11
Browser	Google Chrome Microsoft Edge
Display	XGA 1024 × 768 or higher



### Version Information

The operating environment when using Reader/Writer earlier than firmware Ver.5.00, please refer to *A-9 For Customers Using Reader/Writer Earlier Than Firmware Ver.5.00.* on page A-74.

### 8-1-3 Procedure to Display the Browser Window

This section describes the procedure to display the various windows of the Web Browser. For details, refer to the explanations in each section.

- 1** Connect the host device and the Reader/Writer with a LAN cable.
- 2** Turn on the power of the Reader/Writer.
- 3** Start the browser on the host device.
- 4** Enter the IP address or domain name of the Reader/Writer in the browser's URL field.
- 5** The Password window will be displayed, so enter your Web Password.
- 6** If the Web Password matches and authentication is successful, the following dialog will be displayed.
- 7** Then, the Status window will be displayed.
- 8** Use the navigation buttons on the left side of the window to select the function you want to perform.



#### Version Information

---

The procedure when using Reader/Writer earlier than firmware Ver.5.00, please refer to *A-9 For Customers Using Reader/Writer Earlier Than Firmware Ver.5.00.* on page A-74.

---

## 8-2 Web Browser Functions

This section describes the functions of the Web Browser.

### 8-2-1 Windows List

The following is a list of the Web Browser windows.

Window name	Tab name	Content	RUN Mode	Safe Mode	See
Password	---	Password Authentication is performed.	○Yes	×No	page 8-8
Status	---	You can check the Reader/Writer's Device Information.	○Yes	○Yes	page 8-11
Network Settings	TCP/IP Settings	You can set the IP Address and subnet mask.	○Yes	×No	page 8-12
	Port Setting	You can set the Port Number and Port Enable/Disable.	○Yes	×No	page 8-13
	IP Filtering Settings	You can set IP Filtering.	○Yes	×No	page 8-14
	Permission Settings	You can change the Access Permission Settings.	○Yes	×No	page 8-15
	Web Password Settings	You can set the Web Password and Lock Time..	○Yes	×No	page 8-16
RF Tag Communications Settings	---	You can set the communications condition with RF tags.	○Yes	×No	page 8-17
Multi Reader/Writer Settings	---	You can set the multi-Reader/Writer operation functions.	○Yes	×No	page 8-18
RF Tag Communications	---	You can communicate with RF tags.	○Yes	×No	page 8-19
Log View	Command Error Log	You can check the Command Error Log.	○Yes	○Yes	page 8-22
	System error log	You can check the System error log.	○Yes	○Yes	page 8-23
	Security Log*1	You can check the Security Log.	○Yes	○Yes	page 8-24
Noise Monitor	---	You can use the Noise Measurement Function.	○Yes	×No	page 8-26
RF Analyzer	Communication Diagnostic Log Table	You can use the RF Analyzer to check the diagnostic information from communication diagnostic.	○Yes	×No	page 8-27
	Graphs	You can display time-based graphs of diagnostic log information.	○Yes	×No	page 8-29
Configuration	---	You can export, import, and perform Factory Reset.	○Yes	×No*2	page 8-32

\*1. You can use this tab with Reader/Writers with firmware version 5.00 or higher.

\*2. You can use initialization.




### Precautions for Correct Use

---

- In Safe Mode, only the Status window, the Log View window, and the Factory Reset function in the Configuration window can be used.
  - In Slave Mode, the RF Tag Communications Settings window, RF Tag Communications window, and Noise Monitor window cannot be used.
-


## 8-2-2 Window Transitions

The window transitions of the Web Browser are shown below.

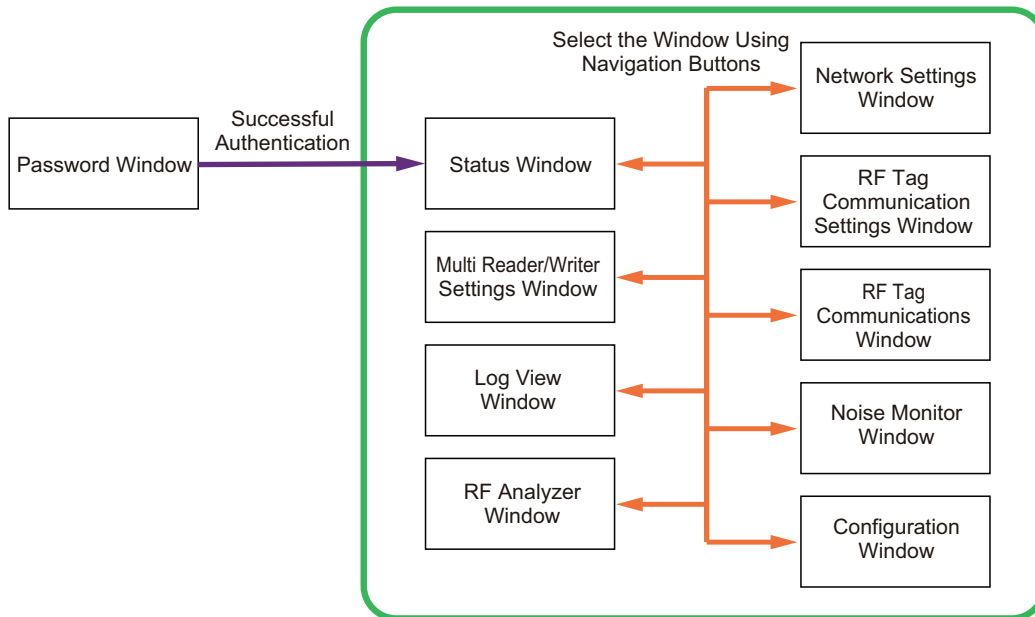

### 8-2-3 Window Configuration

The window configuration of the Web Browser is shown below.

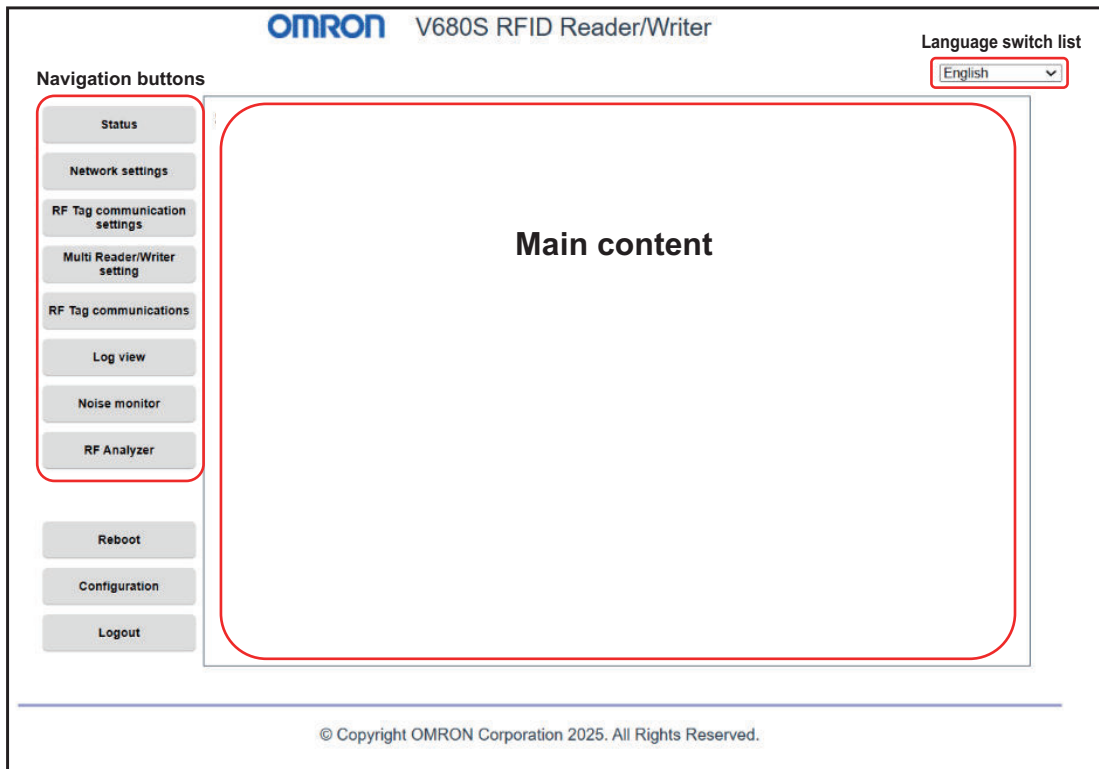


Item	Description	Notes
Language switch list	Switches the language. Select from English/Japanese/Chinese/Korean.	---
Navigation buttons	Select the function to execute.	---
Reboot button	Reboot the Reader/Writer.	---
Configuration button	Execute the Configuration window.	---
Logout button	Logs out.	---
Main content	This is the area where the content of each window is displayed.	---

## 8-3 Operation Interface

### 8-3-1 Password Window

After connecting to the Reader/Writer, the **Password** window is displayed first. The **Password** window has the Language switch list, the Password input field, and the **OK** button.

When you enter the correct Web Password and click the **OK** button, the dialog indicating successful authentication is displayed. After that, the **Status** window is displayed.

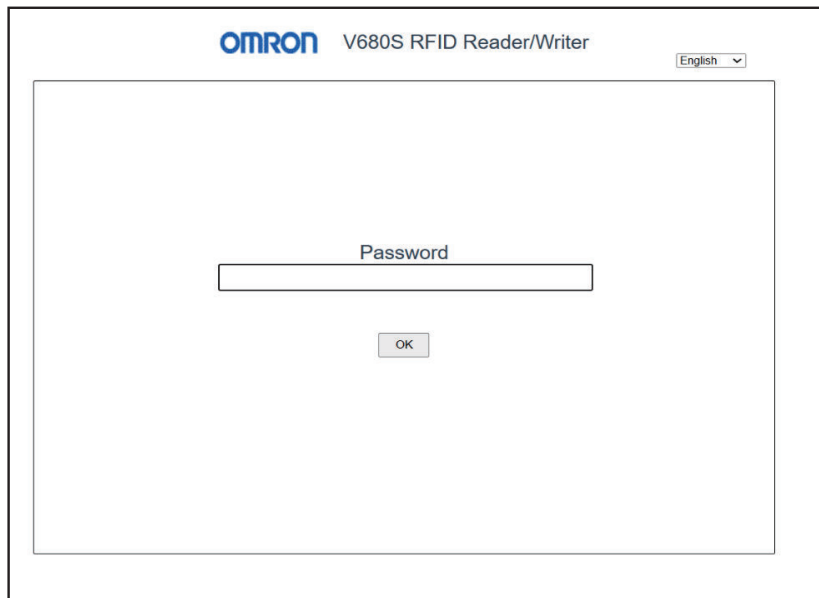

Item	Description	Notes
Language switch list	Switches the language. Select from English/Japanese/Chinese/Korean.	---
Password	Enter your Web Password.	---
OK	After clicking, if the password matches, the main content is displayed.	---



### Additional Information


Password specifications are as follows.

Item	Content
Valid number of characters	8 characters or more and 32 characters or less*1
Usable characters	Half-width alphanumeric characters and symbols (case-sensitive)*2

\*1. Any value between 8 and 32 characters can be set.

\*2. Characters that can be used are ASCII characters 0x21 to 0x7E (0-9 A-Z a-z, '!"#\$%&()\* ,./:;? @[]^\_`{|}~+<=>).

If you enter the wrong password five times, the following dialog will be displayed and the Web Browser will be locked for 10 minutes. The lock will be released after the time has elapsed or by rebooting the Reader/Writer.

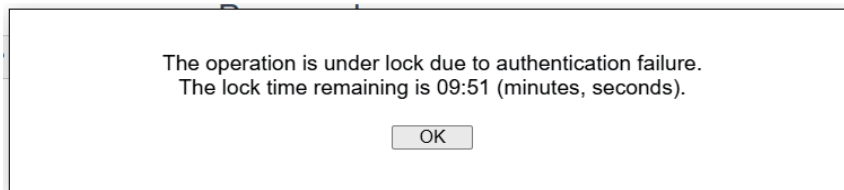

### Version Information

The procedure when using Reader/Writer earlier than firmware Ver.5.00, please refer to *A-9 For Customers Using Reader/Writer Earlier Than Firmware Ver.5.00.* on page A-74.

## 8-3-2 Status Window

On the **Status** window, you can check information such as the Reader/Writer Model, MAC Address, and Firmware Version.

Item	Description
Device type	Displays the product model number.
Firmware version	
Run mode program	Displays the Run Mode program versions. Displays only "Major version" and "Minor version".
Safe Mode program	Displays the Safe Mode program versions. Displays only "Major version" and "Minor version".
Web Application Version*1	Displays the Web Application Version.
MAC address	Displays the MAC address from the Reader/Writer.
Operation mode	Displays the mode of the Reader/Writer. RUN mode: Normal operation mode. SAFE mode: This mode is used when an error occurs or the IP address is fixed and started. page 6-14
Status	Displays the status of the Reader/Writer. Idling RF Tag communications in progress Changing settings Error
Operating time	Displays the time since the Reader/Writer was started. Example: 0:12:34

\*1. The **Web Application Version** is displayed on Reader/Writers with firmware version "5.00" or higher.

### 8-3-3 Network Settings Window

In the **Network Settings** window, you can configure the Network Settings of the Reader/Writer. You can set the IP Address, Subnet Mask, Port, Password, IP Filtering, and Access Permissions by selecting a tab.

Tab name	Content
TCP/IP Settings	You can set the IP Address and Subnet Mask.
Port Setting	You can set the Port number and Port Enable/Disable.
IP Filtering Settings	You can set IP Filtering.
Permission Settings	You can change the Access Permission.
Web Password Settings	You can set the Web Password and Lock Time.



#### Version Information

You can use the IP Filtering Settings tab, Permission Settings tab, and Web Password Settings tab with Reader/Writers with firmware version 5.00 or higher.

## Network Settings Window (TCP/IP Settings)

The **TCP/IP Settings** tab on the **Network Settings** window allows you to set the IP address, Subnet mask and Gateway address etc. of the Reader/Writer.

The screenshot shows the OMRON V680S RFID Reader/Writer web interface. The top header displays the OMRON logo and the device name. A language dropdown menu is set to 'English'. On the left, a sidebar contains buttons for 'Status', 'Network settings', 'RF Tag communication settings', 'Multi Reader/Writer setting', 'RF Tag communications', 'Log view', 'Noise monitor', 'RF Analyzer', 'Reboot', 'Configuration', and 'Logout'. The main content area is titled 'Network settings' and has several tabs: 'TCP/IP settings' (selected), 'Port Settings', 'IP Filtering settings', 'Permission settings', and 'Web Password settings'. Under 'TCP/IP settings', the 'Fixed setting' radio button is selected. The IP address is set to 192.168.1.200, the Subnet mask to 255.255.255.0, and the Gateway address to 192.168.1.254. There are also options to 'Obtain from BOOTP server' and 'Fix at the IP address which is obtained from BOOTP server'. A 'Device name' field is present with a 'Set' button to the right. At the bottom, a copyright notice reads: '© Copyright OMRON Corporation 2025. All Rights Reserved.'

Item	Description	Setting range	Default
IP address	IP address	---	192.168.1.200
Subnet mask	Subnet mask address	---	255.255.255.0
Gateway address	Gateway address	---	192.168.1.254
BOOTP Options	Fixed setting, Obtain from BOOTP server, or Fix at the IP address which is obtained from BOOTP server	---	Fixed setting
Device name	63 ASCII characters max.	63 ASCII characters max.	None
Set	Click to set the entered value.	-	-



### Precautions for Correct Use

- If you change the network settings, restart the Reader/Writer. The new settings will be effective after a restart of the Reader/Writer.
- When you restart the Reader/Writer after you change the IP address, Web browser can not reconnect to the Reader/Writer. If you re-specified the new IP address in the address field of the Web browser, the screen will be appeared.
- The error message is displayed if you change the configuration during the Reader/Writer is executing RF tag communication or Noise measurement.

## Network Settings Window (Port Setting)

The **Port Setting** tab on the **Network Settings** window allows you to set the communication port for the Reader/Writer.

The screenshot shows the OMRON V680S RFID Reader/Writer web interface. The main title is "OMRON V680S RFID Reader/Writer" with a language dropdown set to "English". On the left is a navigation menu with buttons for Status, Network settings, RF Tag communication settings, Multi Reader/Writer setting, RF Tag communications, Log view, Noise monitor, RF Analyzer, Reboot, Configuration, and Logout. The main content area is titled "Network settings" and contains sub-tabs: TCP/IP settings, Port Settings (selected), IP Filtering settings, Permission settings, and Web Password settings. Under "Port Settings", there is a "Web Browser" section with input fields for "HTTPS Port" (value: 443) and "WebSocket Port" (value: 8443). Below that is a "Multi Reader/Writer Port" section with radio buttons for "Can" (selected) and "Can not". A "Set" button is located at the bottom right of the settings area. At the bottom of the window, a copyright notice reads: "© Copyright OMRON Corporation 2025. All Rights Reserved."

Item	Description	Setting range
Web Browser		
HTTPS Port	You can specify the HTTPS port number for the Reader/Writer.	Fixed setting 443
WebSocket Port	You can specify the WebSocket port number for the Reader/Writer. At startup, the configured WebSocket Port number is displayed.	Numbers only 1024 to 65535
Multi-Reader/Writer Port available		---
Available/Not available	You can set whether or not the multi-Reader/Writer can be used on both the master and slave.	
Set	Click to set the entered value.	---

## Network Settings Window (IP Filtering Settings)

The **IP Filtering Settings** tab on the **Network Settings** window allows you to set IP Filtering Settings for each communication.

For information on the IP Filtering function, see *IP Filtering Function* on page 6-30.




Item	Description	Notes
Web Browser		---
Enable/Disable	You can Enable/Disable the IP Filtering function for Web Browser.	
IP Address	You can specify the IP Address that is allowed to connect.	
Mask	You can specify the Mask for the IP Address that is allowed to connect.	
Set	Click to set the entered value.	---

## Network Settings Window (Permission Settings)

The **Permission Settings** tab on the **Network Settings** window allows you to set V680S Commands that are restricted from being executed on the Reader/Writer.

Checked items are *Permission*. Clicking the **Set** button saves the settings to the Reader/Writer itself.

For information on the Access Permission Settings, see *Access Permission Settings* on page 6-33.

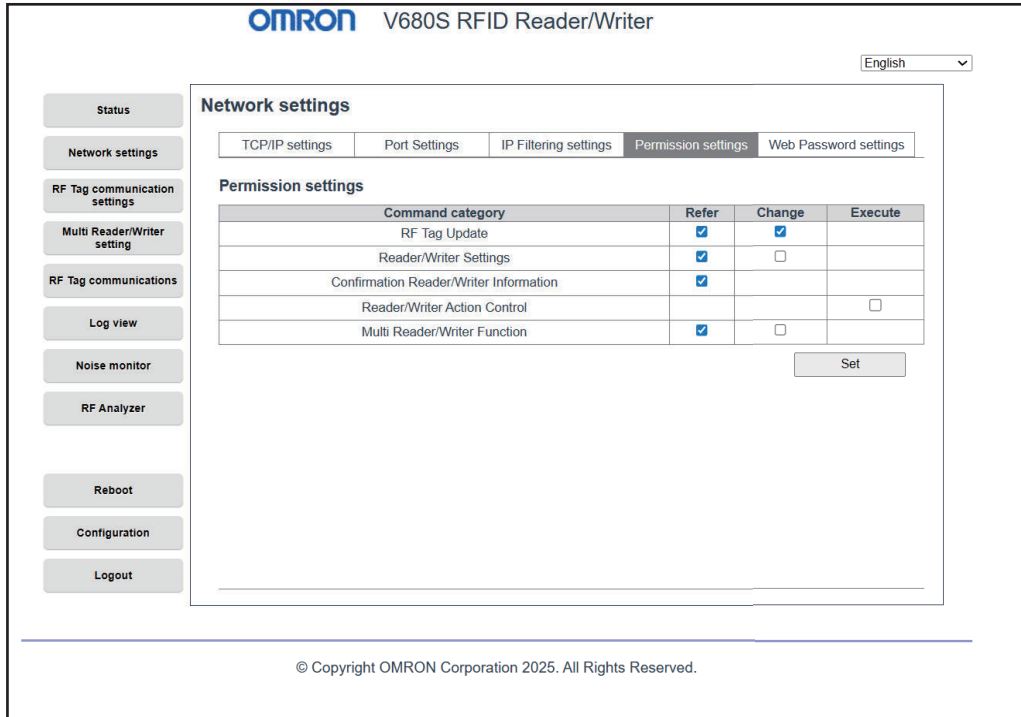

Target command	Permis-sion	Content	Setting range	Initial state
RF Tag Communica-tion	Read	Access permission for RF Tag communica-tion	Prohibit, Per-mission	Permission
	Write		Prohibit, Per-mission	Permission
Reader/Writer Set-tings	Read	Access permission for Reader/Writer Set-tings	Prohibit, Per-mission	Permission
	Write		Prohibit, Per-mission	Prohibit
Checking Reader/Writer information	Read	Access permission for Checking Reader/Writer information	Prohibit, Per-mission	Permission
Reader/Writer opera-tion control	Execute	Access permission for Reader/Writer opera-tion control	Prohibit, Per-mission	Prohibit
Multi-Reader/Writer operation	Read	Access permission for Multi-Reader/Writer operation	Prohibit, Per-mission	Permission
	Write		Prohibit, Per-mission	Prohibit

## Network Settings Window (Web Password Settings)

The **Web Password Settings** tab on the **Network Settings** window allows you to change the Web Password.

For details on Web Password, see *6-3 Password Authentication Function* on page 6-7.

Item	Description	Notes
Web Password		---
Password	You can set a new password.	
Password (reenter)	Re-enter the new password to confirm it.	
Set	Click to set the entered <i>password</i> .	
Operation Lock		---
Enable/Disable	You can choose whether to Enable or Disable the Operation Lock.	
Lock Time (60 to 3,600 sec)	You can specify the Operation Lock Time.	
Set	Click to set the entered <i>Lock Time</i> value.	




### Version Information

#### The Reader/Writer earlier than firmware Ver.5.00

- Specify up to 15 ASCII characters. Specify "" (blank) for no password.
- If you change the network settings, restart the Reader/Writer. The new settings will be effective after a restart of the Reader/Writer.
- The error message is displayed if you change the configuration during the Reader/Writer is executing RF tag communication or Noise measurement.

## 8-3-4 RF Tag Communications Settings Window

The **RF Tag Communications Settings** window allows you to set the communications condition with RF tags.

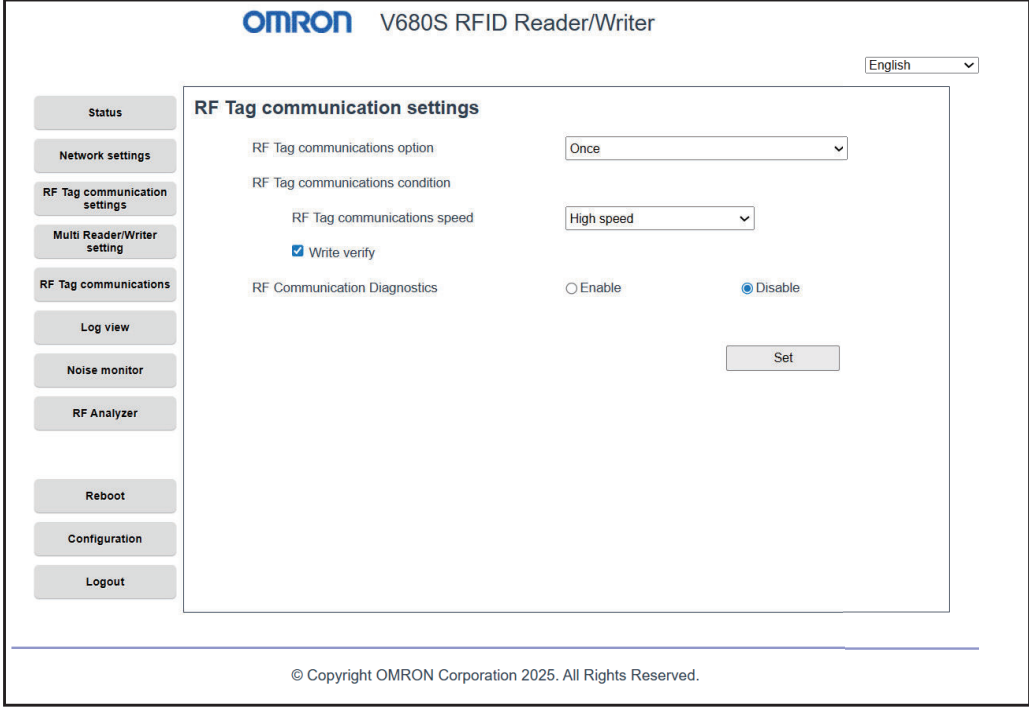

Item name	Description	Setting range	Default
RF Tag Communications option <sup>*1</sup>	Select the RF Tag communications option.	Once, Auto, Repeat, FIFO Repeat (Without ID code check) or FIFO Repeat (With ID code check)	Once
RF Tag Communications Speed	Specify the speed of communications with the RF Tags. <sup>*2</sup>	High speed or Normal speed	High speed
Write Verify	Select this check box to enable write verification.	Enabled/disabled	Enabled
Use diagnostics	Select to enabled or disabled. <sup>*3</sup>	Enabled/disabled	Enabled
Set	The settings are immediately reflected when you click the "Set" button.	-	-

\*1. Refer to 6-5-1 *Communications Options* on page 6-15 for information of RF Tag Communications option.

\*2. Refer to 6-8-2 *Setting Communications Conditions* on page 6-27 for information of RF Tag Communications option.

\*3. Refer to 6-11 *RFID System Maintenance* on page 6-56 for communication diagnostic.



### Precautions for Correct Use

The error message is displayed if you change the configuration during the Reader/Writer is executing RF tag communication or Noise measurement.

### 8-3-5 Multi Reader/Writer Settings Window

The **multi-Reader/Writer settings** window allows you to set the multi-Reader/Writer operation functions.

**OMRON** V680S RFID Reader/Writer

English v

Status

Network settings

RF Tag communication settings

**Multi Reader/Writer setting**

RF Tag communications

Log view

Noise monitor

RF Analyzer

Reboot

Configuration

Logout

#### Multi Reader/Writer setting

**Multi Reader/Writer mode**    Disable    Field extension mode    High-speed travelling mode

Group setting	IP address	Status
Slave Reader/Writer No.1	<input style="width: 100%;" type="text"/>	■
Slave Reader/Writer No.2	<input style="width: 100%;" type="text"/>	■
Slave Reader/Writer No.3	<input style="width: 100%;" type="text"/>	■
Slave Reader/Writer No.4	<input style="width: 100%;" type="text"/>	■
Slave Reader/Writer No.5	<input style="width: 100%;" type="text"/>	■
Slave Reader/Writer No.6	<input style="width: 100%;" type="text"/>	■
Slave Reader/Writer No.7	<input style="width: 100%;" type="text"/>	■

© Copyright OMRON Corporation 2025. All Rights Reserved.

Item name	Description	Setting range	Default
Multi Reader/Writer mode	Sets the Multi-Reader/Writer Mode.	Disable, Field extension mode, or High-speed traveling mode	Disable
Group setting	You can check the IP address of Reader/Writers registered as Slave Reader/Writers and the connection status of all of the Slave Reader/Writers.	-	-
IP address	You can set or check the IP addresses of Slave Reader/Writers No. 1 to 7.	-	-
Status	You can check the connection status of Slave Reader/Writers No. 1 to 7 with the displayed colors.	Not registered: Gray Connection failed: Red Connection successful: Green	-
Set	Click to set the entered value.	-	-

#### Precautions for Correct Use

- If you change any of the multi-Reader/Writer settings, restart the Reader/Writer. The new settings will be enabled after the Reader/Writer is restarted.
- You can register IP addresses for up to seven Slave Reader/Writers on this view. If you set the Multi-Reader/Writer Mode to anything other than Disable and set the IP address for a Slave Reader/Writer, the Slave Reader/Writer will become a Master Reader/Writer.
- There can be only one Master Reader/Writer in any one group.

8-18

V680S Series Reader/Writer User's Manual EtherNet/IP (Z353-E1)

## 8-3-6 RF Tag Communications Window

The RF tag communication window allows you to communicate with RF tags.

The screenshot displays the OMRON V680S RFID Reader/Writer web interface. The main window is titled "RF Tag communications" and contains the following elements:

- Language:** English (dropdown menu)
- Data write:** A dropdown menu set to "Data write".
- Data address:** Input field containing "0000".
- Data size:** Input field containing "0002".
- Data to write:** Input field containing "1234567890".
- Repeat:** A checkbox that is currently unchecked. A callout box points to it with the text: "Select this check box to repeatedly send the command."
- Send:** A button to execute the command. A callout box points to it with the text: "Click this button to send the command."
- Error code/Diagnostic Results:** A green bar displaying "OK".
- Number of communications:** Input field containing "5".
- Clear:** A button to clear the log.
- Command/Response Log:** A scrollable text area showing the following log entries:
 

```

      [ Cmd ] ID read
      [ Res ] OK, < Read Data > 43D3F4FF150108E0
      [ Cmd ] ID read
      [ Res ] NG, RF Tag missing error
      [ Cmd ] ID read
      [ Res ] OK, < Read Data > 43D3F4FF150108E0
      [ Cmd ] Data read
      [ Res ] OK, < Read Data > 12345678
      [ Cmd ] Data write, < Write Data > 1234567890
      [ Res ] OK
      
```

On the left side of the interface, there is a vertical menu with buttons for: Status, Network settings, RF Tag communication settings, Multi Reader/Writer setting, Log view, Noise monitor, RF Analyzer, Reboot, Configuration, and Logout.

At the bottom of the interface, the copyright notice reads: © Copyright OMRON Corporation 2025. All Rights Reserved.

## 1. Command

Item name	Description	Setting range
Command select	Select the command to send.	ID READ / DATA READ / DATA WRITE
Data address	Specify in 4-digit hexadecimal the first address to read or write from the RF Tag.	0000 to 0999 hex
Data size	Specify in 4-digit hexadecimal the number of words of data to read from the RF Tag.	0001 to 007D hex
Write data	Specify the data to write to RF Tag.	1 to 113 words
Repeat	Select this check box to repeatedly and consecutively send the command. Clear the selection of this check box if the RF Tag communications option of the Reader/Writer is set to Auto, Repeat or FIFO Repeat. If a command is sent repeatedly and consecutively with these options, an error dialog will occur.	---
Send	Click to send the command.	

## 2. Response Area

Item name	Description
Error code/Diagnostics results	The background will be green when the response returned by the Reader/Writer indicates a normal end. If the response indicates an error end, the background will be red and the error code will be displayed. If communications diagnostics are enabled and communications with the RF Tag are determined to be unstable, the background will be yellow and the diagnostics result is displayed.
Number of communications	The total number of commands that have been sent to the Reader/Writer is displayed.
Command/Response Log	Displays the sent command and write data, read data and the result. [Cmd] : The send command is displayed. If the command is a data write, it is followed by <Write Data>. [Res] : Result of the response is displayed. If the response result is NG, the error details will be displayed. If the ID read and data read are successful, <Read Data> follows the response result. <Read Data> : The read data of the tag is displayed. <Write Data> : The data to be written to the tag is displayed.
Clear	This button clears the number of sent commands and command/response log.

Refer to *6-11 RFID System Maintenance* on page 6-56 for details on communications diagnostics.




### Precautions for Correct Use

If RF Tag communications are attempted when the Reader/Writer is performing RF Tag communications, noise measurement, or other processing, an error will occur. Perform operations when the Reader/Writer is not busy with another operation.

## 8-3-7 Log View Window

On the **Log View** window, you can check the Command Error Log, System error log and Security Log. You can switch between them by tab.

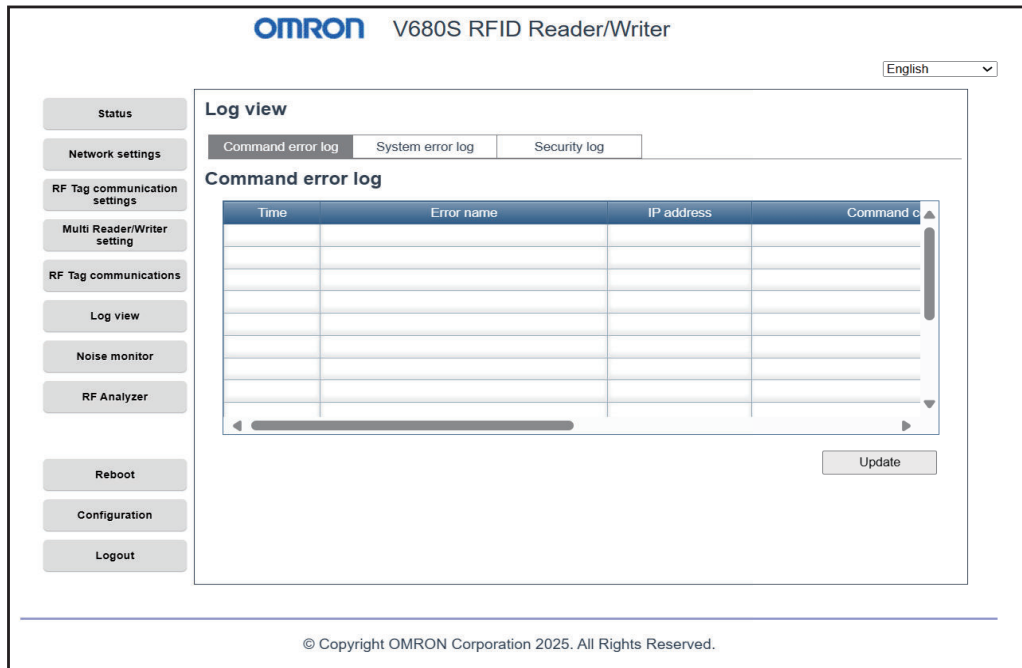


Tab name	Content
Command Error Log	The Command Error Log is displayed.
System error log	The System error log is displayed.
Security Log	The Security Log of setting changes, control, and operations is displayed.



### Version Information

You can use the Security Log with Reader/Writers with firmware version 5.00 or higher.

## Log View Window (Command Error Log)

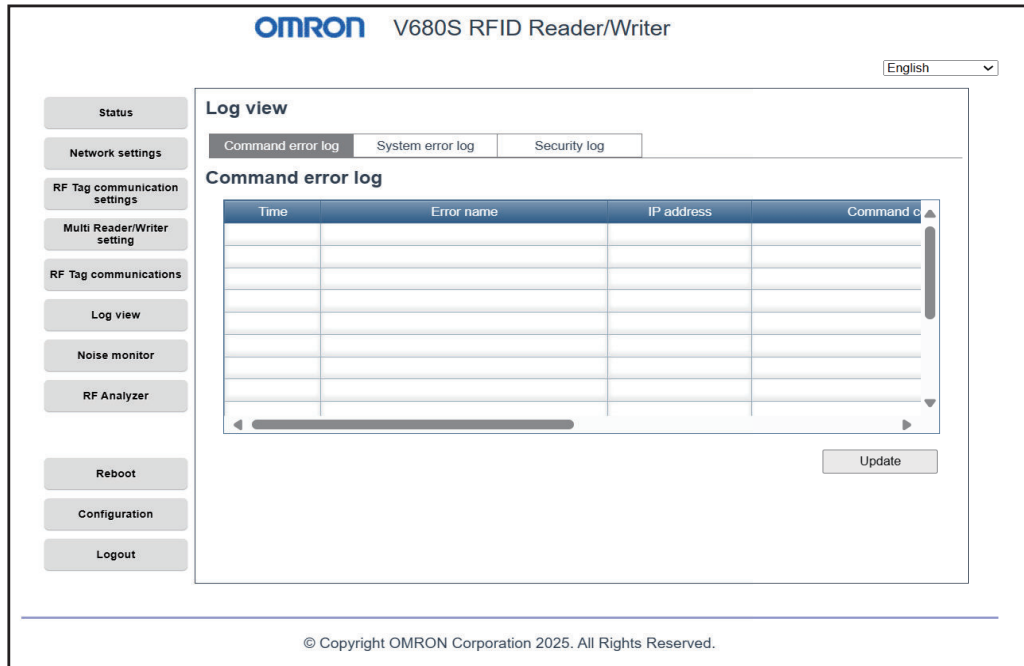

Item name	Description
Command Error Log	Displays the following command error log information. Operating time, error name, IP address, command code, error code, attached information 1, and attached information 2
Update	Click to refresh the display.

Refer to 6-9-1 *Command Error Log* on page 6-37 for details on the command error log.

## Log View Window (System error log)

The screenshot shows the OMRON V680S RFID Reader/Writer web browser interface. The main content area is titled "Log view" and contains three tabs: "Command error log", "System error log" (which is selected), and "Security log". Below the tabs is a table titled "System error log" with the following columns: "Time", "Error name", "Error code", and "Inform". The table is currently empty. To the right of the table is an "Update" button. A callout box points to the "Update" button with the text "Click to refresh the display." On the left side of the interface, there is a sidebar menu with buttons for "Status", "Network settings", "RF Tag communication settings", "Multi Reader/Writer setting", "RF Tag communications", "Log view", "Noise monitor", "RF Analyzer", "Reboot", "Configuration", and "Logout". At the bottom of the interface, there is a copyright notice: "© Copyright OMRON Corporation 2025. All Rights Reserved."


Item name	Description
System error log	Displays the following information from the system error log: Operating time, error name, error code, attached information 1, and attached information 2
Update	Click to refresh the display.

Refer to 6-9-2 *System Error Log* on page 6-38 for details on the system error log.

## Log View Window (Security Log)

The Security Log tab on the Log View window allows you to check the Log View of changes and controls made to the Reader/Writer by the host device, and operations made to the Reader/Writer by the user using the Web Browser.

For information on the Security Log function, see 6-9-3 *Security Log* on page 6-39.

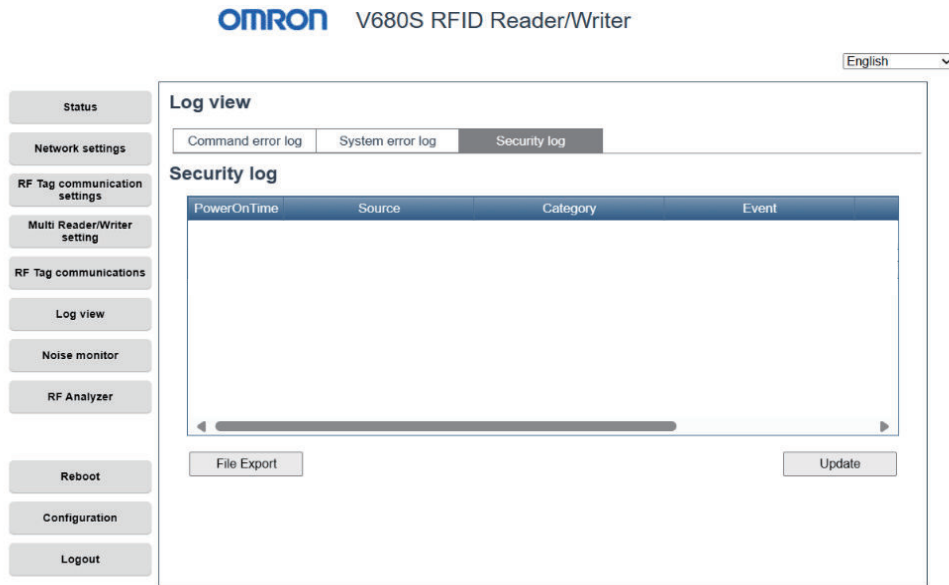

© Copyright OMRON Corporation 2025. All Rights Reserved.

Item	Description	Notes
PowerOnTime	Time information when the event occurred. The accumulated power-on time (in seconds) in the Reader/Writer is registered.	---
Source	Type of the route on which the event occurred. For communication routes, the service/protocol type and the IP address of the communication partner are displayed.	---
Category	The event category is displayed.	--- ---
Event	The contents of the event are displayed.	---
Result	The result of the change, control, or operation that caused the event.	---
Additional Info1	Additional information on the event result.	---
Additional Info2	Additional information on the event result.	---
Export	Click to export the Security Log as a CSV file.	---
Update	Click to retrieve and redisplay the Security Log.	---

## ● Exported File Format

This section explains the format of the CSV file that is exported when the **Export** button is clicked. Each Security Log is separated by a "," (comma) and written on one line.

The data written is as follows.

Item	Content (format)	Example
PowerOnTime	PowerOnTime. The format is hhhh"h"mm"m"ss"s.	8765h43m21s
Source	Source type. One of three types: control signal line, Web Browser, or V680S Command. For communication routes, the source IP Address is also written.	WebBrowser:192.168.1.1 V680SCommand:192.168.1.1 SignalLine
Category	Code indicating the event category.	0010
Event	Code indicating the event type.	0000
Result	Result of the event.	00
Additional Info1	Additional Information 1 for the result of the event.	00000000
Additional Info2	Additional Information 2 for the result of the event.	00000000

## ■ Example of Exported File

An example of an exported file.

```
PowerOnTime,Source,Category,Event,Result,Additional Info1,Additional Info2
24h42m18s,SignalLine,System Control,Operating Mode Change,Safe-Mode,,
24h43m36s,WebBrowser:192.168.1.10,Access Control>Password Authentication,Authentication
Successful,,
24h44m16s,WebBrowser:192.168.1.10,Firmware Update,Firmware Update,Successful,0002,05.00.00
24h46m14s,WebBrowser:192.168.1.10,Firmware Update,Firmware Update,Successful,0001,05.00.00
24h46m14s,WebBrowser:192.168.1.10,Firmware Update,Firmware Update,Successful,0003,05.00.00
24h49m50s,WebBrowser:192.168.1.10,Access Control>Password Authentication,Authentication
Successful,,
24h53m8s,WebBrowser:192.168.1.10,Access Control>Password Authentication,Authentication
Successful,,
```

### 8-3-8 Noise Monitor

You can check the graphed noise level (one second intervals) around the Reader/Writer.

Select from the screen, the type of the RF tag you want to use, because the communication performance will be changed by the combination of the type of the RF tag to be used. The “Normal area”, “Precaution area” and “Warning area” will be appeared on the screen according to the type of the RF tag to be used.

Normal area	Means the noise level that communications range can be reduced to about less than 20%
Precaution area	Means the noise level that communications range can be reduced to about 20% to 50%.
Warning area	Means the noise level that communications range can be reduced to about 50% or more.

About the relationship between the Reader/Writer communication performance and the noise level, refer to 6-7-2 *Noise Measurement* on page 6-23.



#### Precautions for Correct Use

- When the Reader/Writer is running in safe mode, this screen can not be operated. Run the Reader/Writer in RUN mode.
- Because there is variation in the result of the noise measurement, consider the result as a guideline.

OMRON V680S RFID Reader/Writer

English

Displays the maximum noise level since noise monitoring was started.

Peak : 0

V680-D8KF67

Select the type of the RF tag you want to use.

Warning area shown in white.

Caution area shown in light blue.

Normal area shown in blue.

Click this button to start or stop monitoring noise.

Start

© Copyright OMRON Corporation 2025. All Rights Reserved.

Item name	Description
Noise monitor	The display is updated every second. The maximum, average, and minimum noise levels since noise monitoring was started are displayed.



#### Precautions for Correct Use

The error message is displayed if you change the configuration during the Reader/Writer is executing RF tag communication or Noise measurement.

## 8-3-9 RF Analyzer Window

You can use the RF Analyzer to check the diagnostic information from communication diagnostic. You can easily see whether communications are stable, unstable (warning), or in error when communication diagnostic is used.

If communications are unstable (warning), you can display assumed causes and display guidance that provides detailed cause confirmation and corrections.

If an error occurs, the error name and corrections are displayed.



### Precautions for Correct Use

- When the Reader/Writer is running in safe mode, this screen can not be operated. Run the Reader/Writer in RUN mode.
- The diagnostic log is not displayed while communication diagnostic is disabled. Enable communication diagnostic on the Communications Setting View.
- If the number of records in the diagnostic log exceeds 2,048, the oldest records are overwritten.

**V680S RFID Reader/Writer**

Total number of records in diagnostic log (2,048 max.), Number of unstable communications, Number of errors.

Status

Network settings

RF Tag communication settings

Multi Reader/Writer setting

RF Tag communications

Log view

Noise monitor

RF Analyzer

Reboot

Configuration

Logout

RF Analyzer

Total : 4    Warning : 1    Error : 2    Graph

No	Time	Command	Result	UID
1	0:01:22	Read ID	Error	0000000000000000
2	0:01:23	Read ID	Stable	43D3F4FF150108E0
3	0:01:25	Read ID	Error	0000000000000000
4	0:01:27	Read ID	Warning	43D3F4FF150108E0

No 4

Command Read ID

Diagnostic description 0001 : The Signal Level is low.

Signal Level 9    Noise 0

The Signal Level is low. Push the "Display" button on the right, and follow the instruction.

Click this button to refresh the display.

Update    Save    Clear

You can check the diagnostic log on a graph.

This button is displayed when diagnostic results show warning communications. Click the button to display guidance in a separate window so that you can check assumed causes and corrections.

You can save the diagnostic log in a CSV file on the computer.

Click this button to clear the diagnostic log.

OMRON Corporation 2025. All Rights Reserved.

Item name	Description
No.	Numbers are assigned from 1 to 2,048. The larger the number, the more recent the information.
Time	The Reader/Writer operating time when the diagnostic information was registered.
Command	The command that was executed when the diagnostics information was registered.
Result	One of the following: Stable, Unstable (warning), or Error
UID	Displays the UID of the RF Tags that were detected in communications diagnostics.
Diagnostic description	<p>Displays the details of the communication diagnosis history.</p> <p>No. : Numbers are assigned from 1 to 2,048. The larger the number, the more recent the information.</p> <p>Command : The command type that was executed when the diagnostic information was registered.</p> <p>Diagnostic description : The error code and assumed cause are displayed.</p> <p>Signal Level : Displays the signal level when communicating with the RF tag.</p> <p>Noise : Displays the noise level around the reader / writer during communication with the RF tag.</p> <p>Assumed cause/Correction The assumed cause and corrections are displayed for unstable (warning) communications and communications errors. A button is displayed for unstable communications. Click the button and follow the displayed guidance to display assumed causes and corrections.</p>


## Guidance display

Click the Display Button in the Details column on the RF Analyzer View to display guidance. Respond yes or no to the questions to display advice on the assumed causes and corrections. If you follow the advice to make corrections, you can increase the communications leeway and achieve more stable RFID System operation.

**The Signal Level is low.**

Follow the instruction in below.

Do the Reader/Writer and the RF tag surface are positioned in face to face?

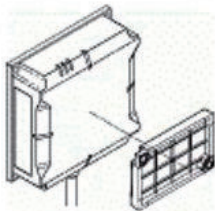

## RF Analyzer Graphs

You can display time-based graphs of diagnostic log information.

This allows you to visually understand the data from communication diagnostic and quantitatively confirm the degree of leeway in communications.


Two parameters are displayed for the graph.

### a. Signal Level

To communicate with RF Tags, the Signal levels of the Reader/Writer and RF Tags must be sufficiently high. You can display the Signal levels in 10 levels from 0 to 10 on a bar graph. The higher the value, the more leeway there is in communications. If there is sufficient communications leeway, the level is 10. If a communication fails (i.e., if an error occurs), the level will be 0 and no bar will be displayed. A value of 1 to 9 means that the communications leeway is low (i.e., that communications are unstable), and the bar will be displayed in yellow. In this case, we recommend that you follow the guidance described above and adjust the installation conditions to increase the communications leeway as close as possible to a level of 10.

### b. Noise Level

The ambient noise level around the Reader/Writer during communications with the RF Tag is displayed in red on a broken-line graph. The lower the noise level, the better the conditions. A noise level of 5 or higher means that the communications leeway is low (i.e., that communications are unstable), and the bar will be displayed in yellow.

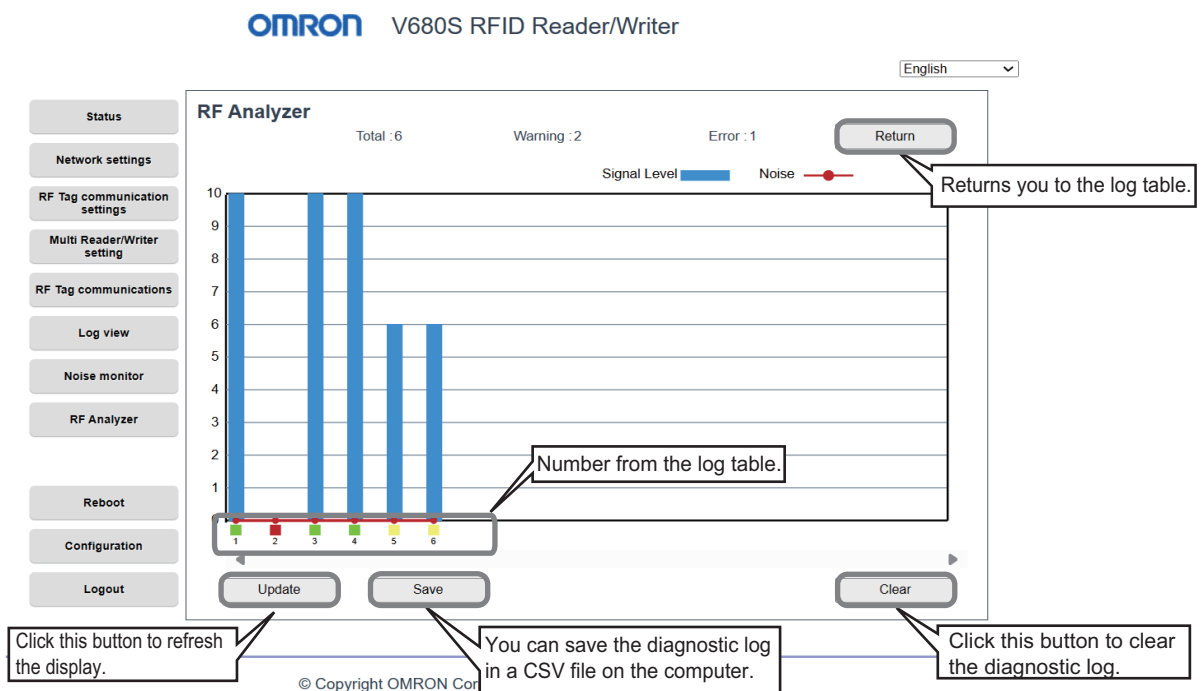

## RF Analyzer Diagnostic Log File

You can click the **Export** Button on the RF Analyzer View to download the diagnostic log stored in the Reader/Writer to a computer and save it as a CSV file. The following information is included in the diagnostic log file. You can use it to check more detailed information than you can on the Web browser displays.

Item name	Description
No	Numbers are assigned from 1 to 2,048. The larger the number, the more recent the information.
Time Stamp	The Reader/Writer operating time when the diagnostic information was registered.
Query	The communications result is displayed. "Warning" is displayed if the communications diagnostic result shows an unstable communication. - Normal : Normal - Warning : Unstable - Other : Error type name
Diagnostic Result	The communications diagnostic result is displayed. - Good : Stable - Output level low : Low send power - Receiving level low : Low receive power - Noise level high : Excessive ambient noise level - Signal-Noise ratio low : Low signal-to-noise ratio - N/A : Communications error
Output Level	The send power level to the RF Tag is given between 0 and 10. The higher the value, the better the conditions. (If the level is 9 or lower, the Reader/Writer will determine that the communication was warning.)
Receiving Level	The receive power level from the RF Tag to the Reader/Writer is given between 0 and 10. The higher the value, the better the conditions. (If the level is 9 or lower, the Reader/Writer will determine that the communication was warning.)
Noise Level	The ambient noise level around the Reader/Writer is given between 0 and 10. The lower the value, the better the conditions. (If the level is 5 or higher, the Reader/Writer will determine that the communication was warning.)
Signal Level	The overall level combining Output Level and Receiving Level is given between 0 and 10. The higher the value, the better the conditions.
Tag ID	The Tag ID of the RF Tag for which communication diagnostic was performed is given.




### Version Information

For Reader/Writers with firmware version earlier than 5.00, the command type that was executed when the diagnostic information was registered is recorded as "Command".


## 8-3-10 Reboot

You can restart the Reader/Writer and reflect the settings by clicking the Reboot Button on each operation window.


If you click the **Reboot** Button on any of the operation views, a Confirm Reboot Dialog Box is displayed.

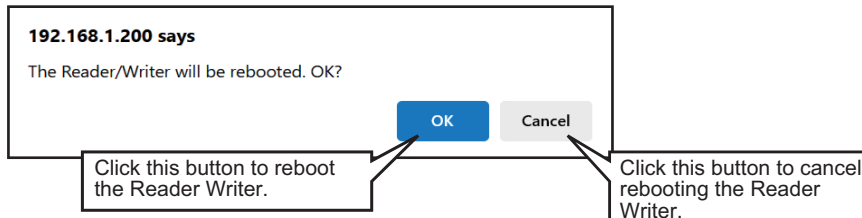

The following dialog box is displayed after the Reader/Writer has finished rebooting. Click the **OK** Button to connect to the Reader/Writer.

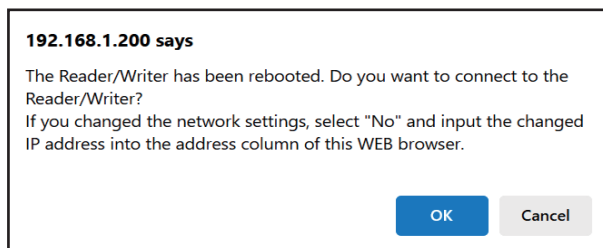

The following dialog box is displayed after reconnecting to the Reader/Writer. Click the **OK** Button.

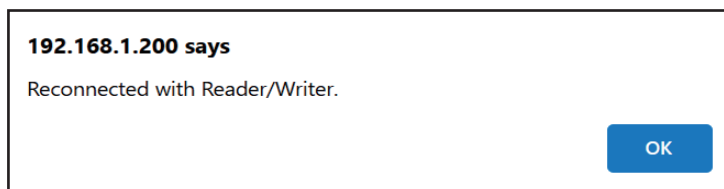

### Precautions for Correct Use

- When re-connection goes wrong and an error message is displayed, Check the connection with the Reader/Writer and reboot a Web browser.
- If you reboot the Reader/Writer after changing the password, the **Password** window will be displayed.  
If you have not changed the password, the window will remain the same as when you reboot the Reader/Writer.



### Version Information

For Reader/Writer earlier than firmware version 5.00, the **Status** window will be displayed after re-connection.

## 8-3-11 Configuration Window

The **Configuration** window allows you to perform Import Settings (Restore), Export Settings (Backup), and Factory Reset of settings.

For details on the Import Settings (Restore) and Export Settings (Backup) functions, see *6-10-2 Importing and Exporting Settings* on page 6-47.

For details on the Factory Reset, see *Factory Reset Function* on page 6-25.

Item	Description	Notes
Import Settings		Only ini files can be selected.
Refer	Select the configuration file to restore.	
Import	Click to import the configuration file to restore.	
Export Settings		The file name when export is <i>conf.ini</i> .
Export	Click to export the configuration file as a backup.	
Factory Reset		---
Initialize without password	Select to initialize everything except the password.	
All initialize	Select to initialize including the password.	
Initialize	Click to perform initialization.	
Status	Displays the status of import, export, and initialization.	You cannot enter a value.



### Version Information

For the Configuration window of Reader/Writers with firmware version earlier than 5.00, see *A-9-3 Configuration* on page A-77 in *A-9 For Customers Using Reader/Writer Earlier Than Firmware Ver.5.00.* on page A-74.

## ini File Format

The format of the sections and entries in the ini file is as follows.

The text enclosed in [ ] indicates the section. Each entry is written on a separate line below it.

Any line that starts with a semicolon (;) is treated as a comment.

```
[NetworkSetting]
IPAddress=192.168.1.200
SubnetMask=255.255.255.0
.
.
.
```

### Version Information

For the configuration file (ini file), of Reader/Writers with firmware version earlier than 5.00, see *A-9-4 Configuration File* on page A-82 in *A-9 For Customers Using Reader/Writer Earlier Than Firmware Ver.5.00.* on page A-74.

The section and entry names are as follows:

Group	Setting data	Section name	Entry name	A* <sup>1</sup>	B* <sup>2</sup>
Device Specific Information	Model	[DeviceProfile]	DeviceType	○	×
	Firmware Version (RUN Mode Program)		FirmwareVersion_Run	○	×
	Firmware Version (Safe Mode Program)		FirmwareVersion_Safe	○	×
	Web Application Version		WebAppVersion	○	×
	MAC Address		MACAddress	○	×
	Operation mode		RunMode	×	×
	Status		Status	×	×
	Operating time		PowerOnTime	×	×
NetworkSetting	IP Address	[NetworkSetting]	IPAddress	○	○
	Subnet Mask		SubnetMask	○	○
	Gateway address		GatewayAddress	○	○
	BOOTP Options		BOOTP	○	○
	Device name		DeviceName	○	○
	Modbus TCP port number setting		TCPPort* <sup>3</sup>	○	×
	HTTPS port number setting		HTTPSPort* <sup>3</sup>	○	×
	WebSocket port number setting		WebSocketPort	○	○
	Multi-Reader/Writer Port available		MultiReaderWriterPortUse-Flag	○	○
	IP Filtering Settings Enable/Disable (V680S Command)		TCPFilter* <sup>3</sup>	○	×
	IP Filtering Settings IP address (V680S Command)		TCPFilter_IPAddress* <sup>3</sup>	○	×
	IP Filtering Settings mask (V680S Command)		TCPFilter_Mask* <sup>3</sup>	○	×
	IP Filtering Settings Enable/Disable (HTTPS)		WebFilter	○	○

Group	Setting data	Section name	Entry name	A*1	B*2
	IP Filtering Settings IP address (HTTPS)		WebFilter_IPAddress	<input type="radio"/>	<input type="radio"/>
	IP Filtering Settings mask (HTTPS)		WebFilter_Mask	<input type="radio"/>	<input type="radio"/>
SecuritySetting	Web Operation Lock Time	[SecuritySetting]	WebLockTime	<input type="radio"/>	<input type="radio"/>
	Permission Settings RF Tag Communication		AP_RFTagAccess	<input type="radio"/>	<input type="radio"/>
	Permission Settings Reader/Writer Settings		AP_ReaderWriterOption	<input type="radio"/>	<input type="radio"/>
	Permission Settings Reader/Writer information acquisition		AP_ReaderWriterInfo	<input type="radio"/>	<input type="radio"/>
	Permission Settings Reader/Writer operation control		AP_ReaderWriterControl	<input type="radio"/>	<input type="radio"/>
	Permission Settings RFID maintenance		AP_RFIDMaintenance	<input type="radio"/>	<input type="radio"/>
	Permission Settings Multi-Reader/Writer operation		AP_MultiReaderWriter	<input type="radio"/>	<input type="radio"/>
RFTagCommunication-Setting	RF Tag Communications Speed	[RFTagCommunicationSetting]	CommunicationSpeed	<input type="radio"/>	<input type="radio"/>
	Write Verify		WriteVerify	<input type="radio"/>	<input type="radio"/>
	Communications option		CommunicationOption	<input type="radio"/>	<input type="radio"/>
	RF Communication Diagnostics		CommunicationDiagnostics	<input type="radio"/>	<input type="radio"/>
MultiReaderWriterSetting	Multi-Reader/Writer mode	[MultiReaderWriterSetting]	MultiReaderWriterMode	<input type="radio"/>	<input type="radio"/>
	Group setting		SlaveNum	<input type="radio"/>	<input type="radio"/>
	Slave IP address 1		SlaveNo1IPAddress	<input type="radio"/>	<input type="radio"/>
	...		...	<input type="radio"/>	<input type="radio"/>
	Slave IP address 7		SlaveNo7IPAddress	<input type="radio"/>	<input type="radio"/>
Hash Value	Hash Value	[Hash]	Hash	<input type="radio"/>	<input type="radio"/>

\*1. Export target

\*2. Import target

\*3. The import result screen will display **OK**, but no values have been imported.

## 8-4 Root Certificate Installation Procedure

This section describes the procedure for connecting the Web Browser and the Reader/Writer in a secure state.

Please download the root certificate *RFID\_omronca.crt* from the following URL beforehand.  
<https://www.fa.omron.co.jp/products/family/3198/download/software.html>



### Precautions for Correct Use

In this procedure, the hosts file (C:\windows\system32\drivers\etc\hosts) in the computer is re-written.

If the entry is incorrect, the computer may not be able to connect.


### Procedure Overview

Procedure	Description
Installing the root certificate	Install the root certificate for the Reader/Writer on the computer that uses the Web Browser.
Setting the domain name	In the hosts file in the computer, set the domain name of the Reader/Writer to be connected with the Web Browser. If you do not set the domain name, the connection will be in "Not secure" state.
Start the Web Browser in a secure state	Enter the domain name in the address field of the Web Browser and confirm that the connection is secure.


### 1 Install the root certificate.

As an example, the use of Microsoft Edge is explained.


- 1) Click the **horizontal ellipsis** in the upper right corner of the Microsoft Edge, and then click **Settings**.

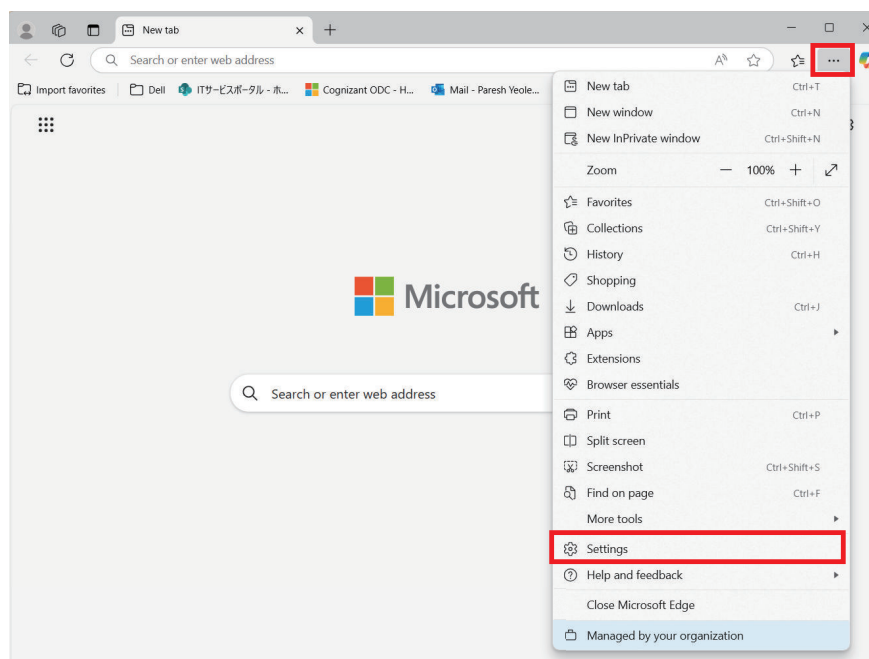


2) Click **Privacy, search, and services – Manage certificate**.

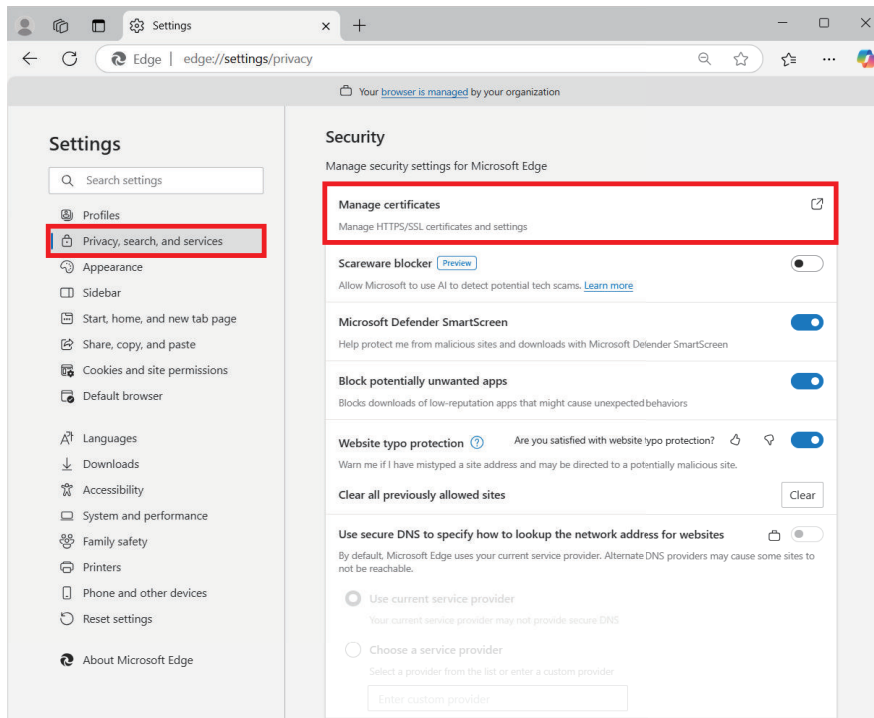


3) When the certificate dialog opens, click the **Import** button.

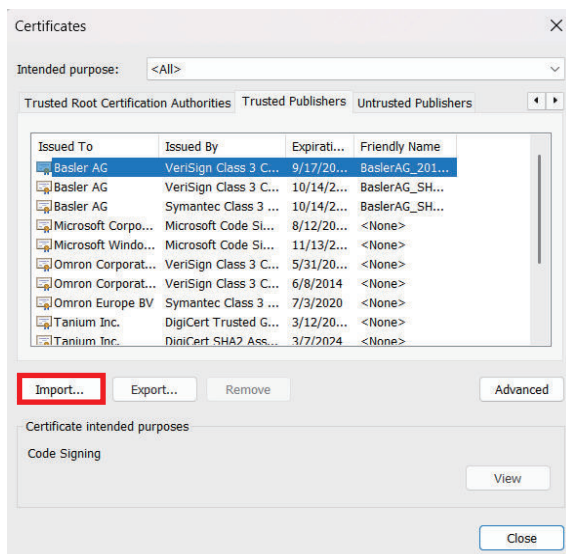


- 4) When the following dialog opens, click the **Next** button.

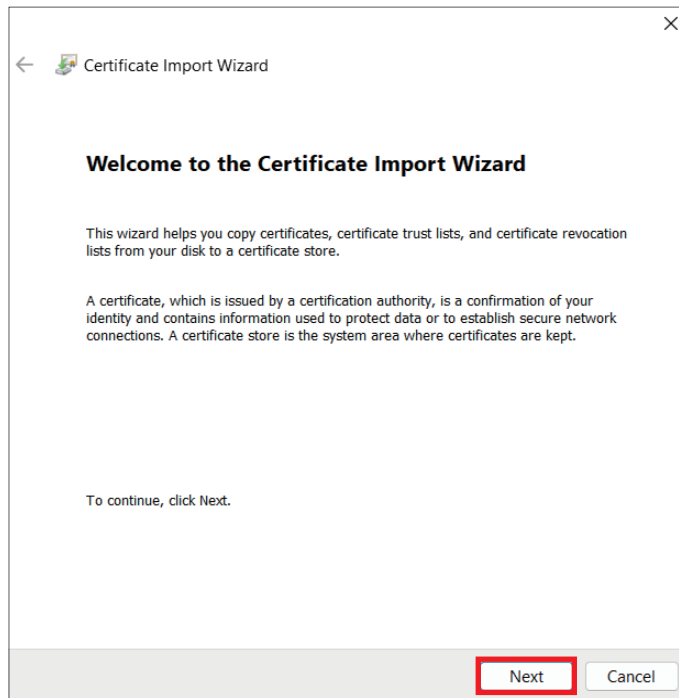


- 5) In the following dialog, select the root certificate **RFID\_omronca.crt** and click the **Next** button.

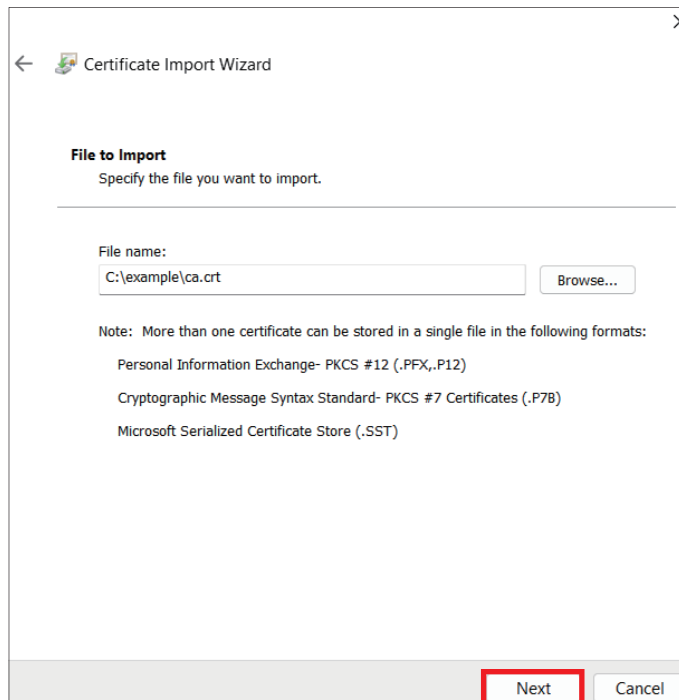


- 6) In the Certificate Store field, select **Trusted Root Certification Authorities** and click the **Next** button.

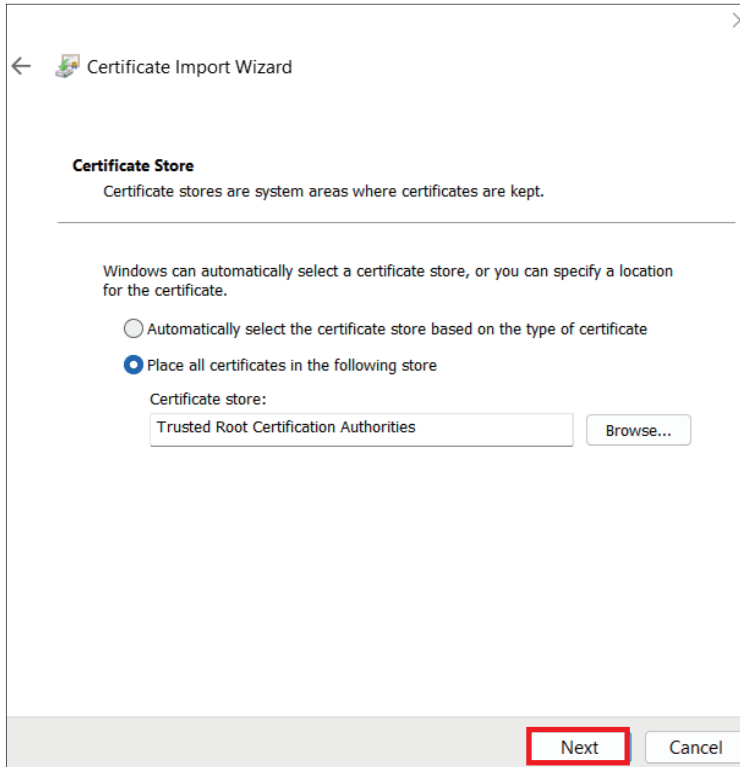

- 7) The following **security warning** dialog may be displayed. Make sure that the imported root certificate is the file provided by OMRON and click the **Yes** button.

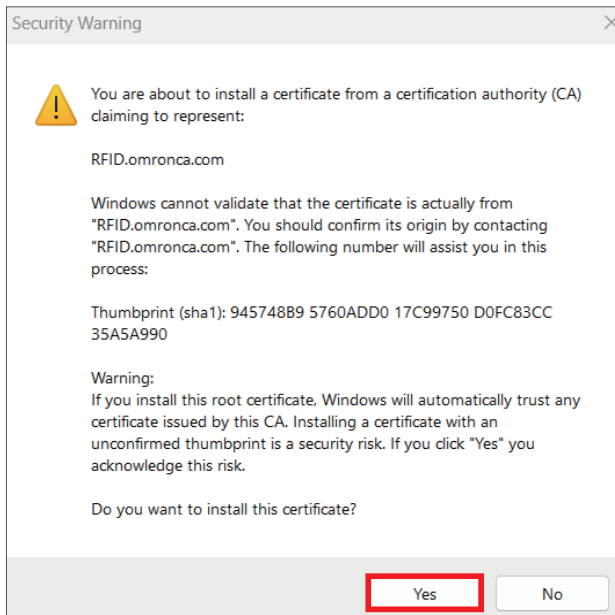


- 8) If **RFID\_omronca.crt** is displayed in the **Trusted Root Certification Authorities** tab, installation of the root certificate is complete. Click the **Close** button to close the screen.

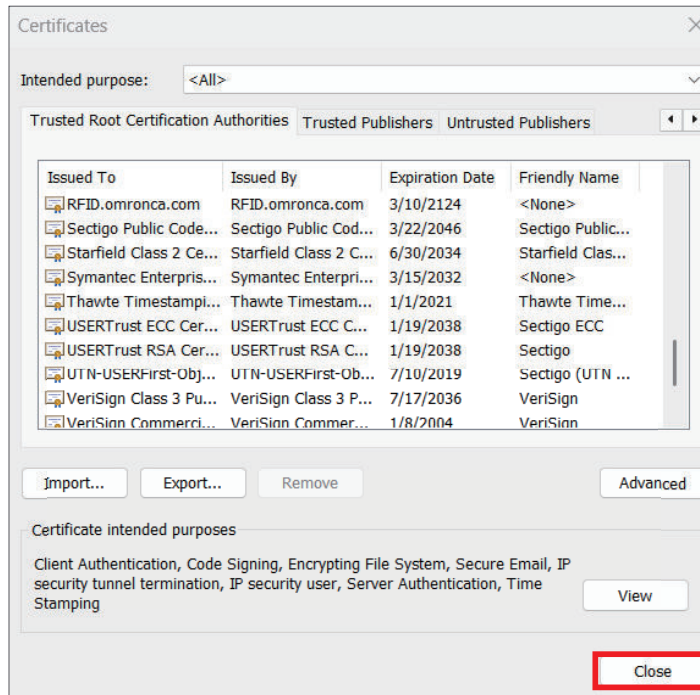


## 2 Next, set the domain name of the Reader/Writer.

To set the domain name, write the correspondence between the Reader/Writer's IP address and domain name in the hosts file.


- 1) From the Start menu, right-click Notepad in Windows Accessories and click Other - Run as administrator.
- 2) Click **File - Open**.

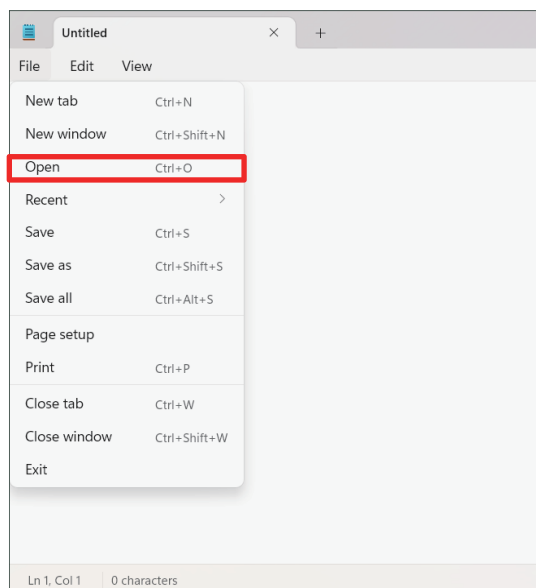


- 3) Select **All Files (\*.\*)** and enter `C:\Windows\System32\drivers\etc` in the address bar. Select the **hosts** file and click the **Open** button.

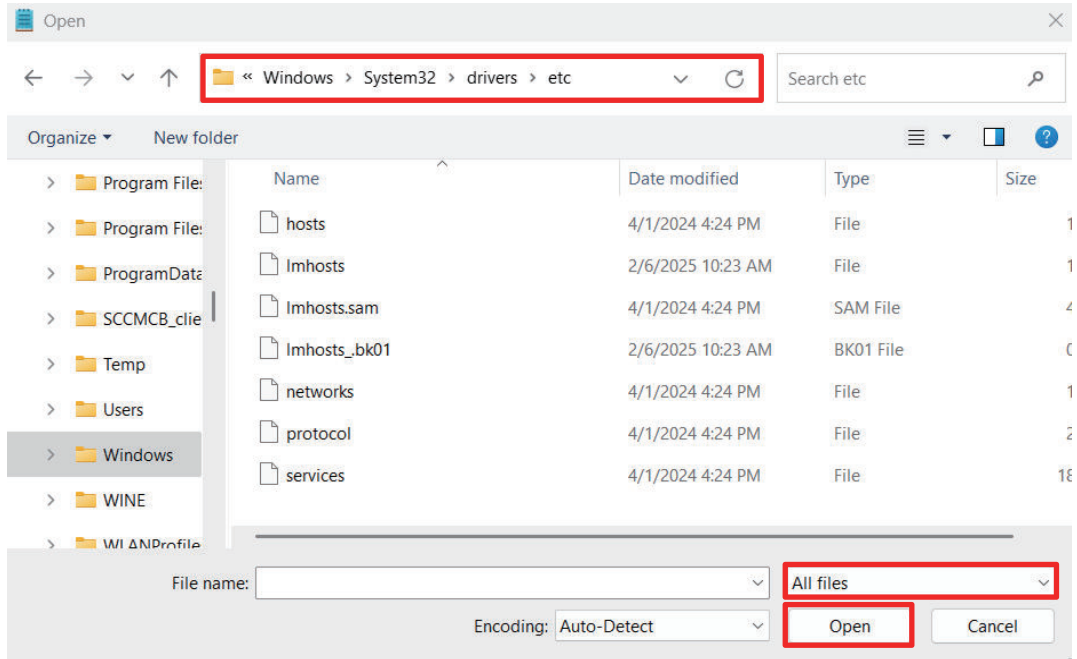

- 4) In the hosts file, the correspondence between IP addresses and domain names is described on each line. Add the IP address and domain name of the Reader/Writer to be connected to the Web Browser.

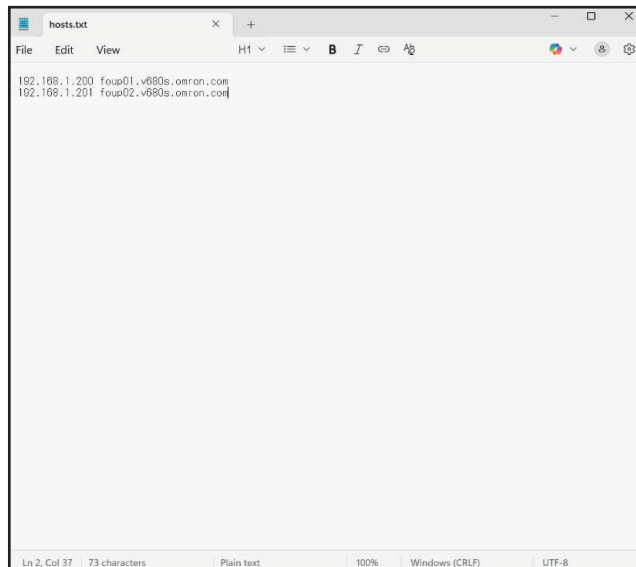

The server certificate for the Reader/Writer is a wildcard certificate. You can set multiple Reader/Writer domain names by using alphanumeric characters, - (hyphen), and . (period), with 3 characters or more, and 63 characters or less, for the subdomain name.

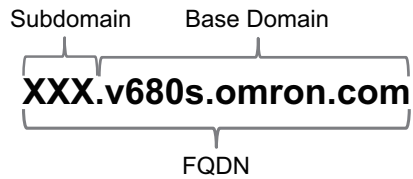

Example: When connecting the following two Reader/Writers to the network


IP address	Subdomain name
192.168.1.200	foup01
192.168.1.201	foup02

Add the following to the hosts file.


```
192.168.1.200    foup01.v680s.omron.com
192.168.1.201    foup02.v680s.omron.com
```

### 3 Connect the Web Browser and Reader/Writer in a secure state.

- 1) If the subdomain name is *foup01*, enter the domain name in the address field of the Web Browser as follows.

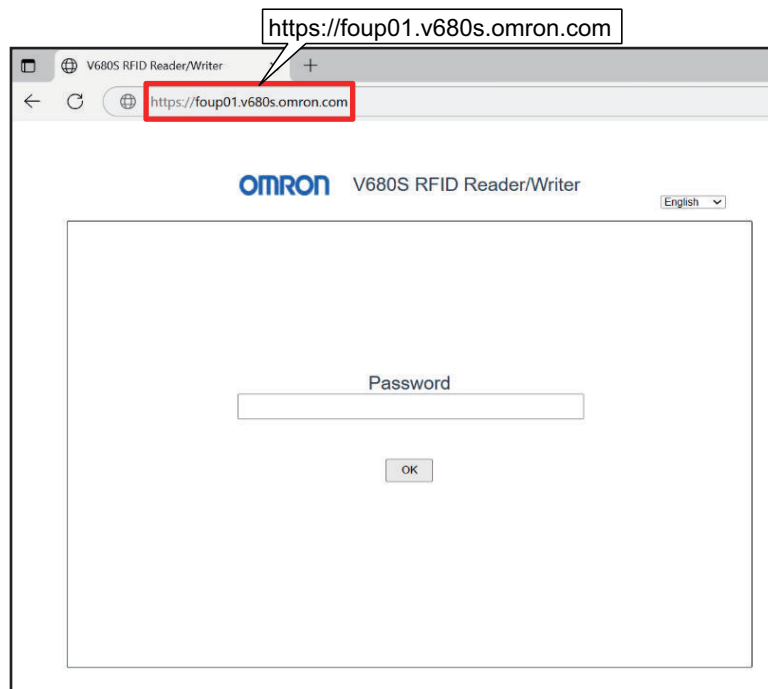

- 2) Click the lock symbol to the left of the address bar and confirm that it says **The connection is secure**.

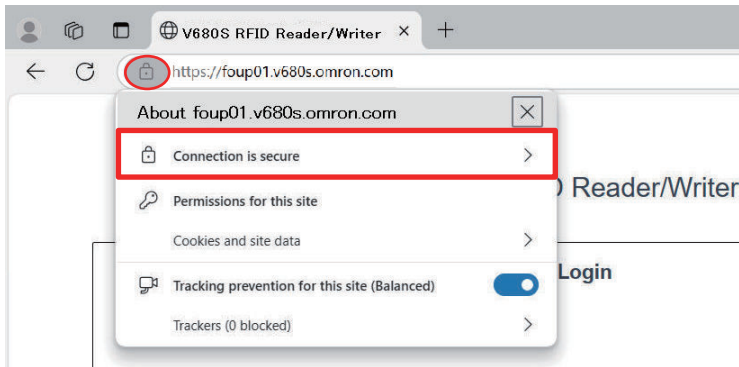

### Additional Information

If you can't connect to the Reader/Writer

If a VPN (Virtual Private Network) connection or proxy settings are active, you may not be able to connect.

- If a VPN connection is active, disable the VPN connection by disabling Wi-Fi, for example, before connecting.
- If proxy settings are active, disable the proxy settings before connecting.

# 9

## Troubleshooting

This section describes Reader/Writer error information and troubleshooting.

<b>9-1</b>	<b>Error Descriptions</b> .....	<b>9-2</b>
9-1-1	Fatal Errors.....	9-2
9-1-2	Nonfatal Errors .....	9-3
<b>9-2</b>	<b>Errors and Indicator Status</b> .....	<b>9-4</b>
9-2-1	Fatal Errors.....	9-4
9-2-2	Nonfatal Errors .....	9-5
9-2-3	Tag Data Links Error.....	9-5
<b>9-3</b>	<b>Errors and Countermeasures</b> .....	<b>9-6</b>
9-3-1	Reader/Writer Operation Errors .....	9-6
9-3-2	IP Address Duplication Error .....	9-6
9-3-3	System Errors.....	9-7
9-3-4	V680S Command Errors .....	9-8
9-3-5	RF Tag Communications Errors .....	9-9
<b>9-4</b>	<b>Troubleshooting Flowcharts</b> .....	<b>9-10</b>
9-4-1	Main Check Flowchart.....	9-10
9-4-2	System Connections Check Flowchart.....	9-11
9-4-3	Operating Conditions and External Environment Check Flowchart .....	9-12
9-4-4	Host Device Communications Check Flowchart .....	9-13
9-4-5	RF Tag Communications Check Flow .....	9-14
<b>9-5</b>	<b>About The Ethernet Communication Abnormality</b> .....	<b>9-15</b>
<b>9-6</b>	<b>How to deal with browser interface problems</b> .....	<b>9-17</b>
9-6-1	When the Web browser screen is not displayed or the screen layout is strange.....	9-17
9-6-2	Google Chrome .....	9-17
9-6-3	Internet explorer11 .....	9-19
9-6-4	Microsoft Edge .....	9-20
<b>9-7</b>	<b>Safe Mode</b> .....	<b>9-22</b>
9-7-1	Starting in Safe Mode.....	9-22

# 9-1 Error Descriptions

---

Information on up to eight errors that occur are recorded until the power supply to the Reader/Writer is turned OFF. You can access this information from the host device or the Web server.

## 9-1-1 Fatal Errors

### Reader/Writer Operation Errors

---

The NORM/ERR indicator in the operation indicators flashes red if the control signal is not stable or if an error occurs in user configuration memory. If the Reader/Writer detects a user configuration memory error during startup, it will start in Safe Mode and the RUN indicator will flash green.

Check the connection of the control signal or correct the user settings, and then cycle the power supply to the Reader/Writer to return to normal operation.

### System Errors

---

The NORM/ERR indicator in the operation indicators lights red if there is a CPU error, system memory error, or hardware fault. If the Reader/Writer detects a system memory error during startup, it will start in Safe Mode and the RUN indicator will flash green.

### IP Address Duplication Error

---

If an IP address duplication error is detected at startup, the NORM/ERR indicator in the operation indicators flashes red irregularly. Turn OFF the power supply to the Reader/Writer, remove the Reader/Writer from the network, correct the IP addresses, add the Reader/Writer to the network, and turn the power supply back ON.

### BOOTP Server Connection Error

---


If an IP address cannot be obtained from the BOOTP server at startup, the NORM/ERR indicator in the operation indicators flashes irregularly.

Correct the settings in the BOOTP server and cycle the power supply to the Reader/Writer.


## 9-1-2 Nonfatal Errors

The NORM/ERR indicator in the operation indicators flashes red once if an error occurs in communications between the Reader/Writer and host device or in communications with an RF Tag.


**V680S-HMD63-EIP**

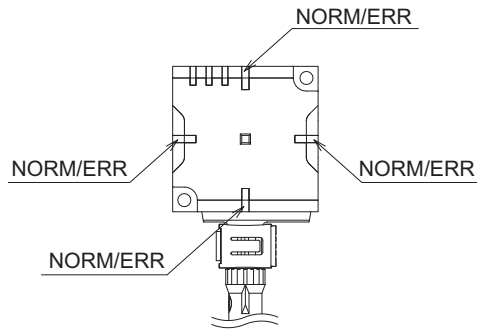

**V680S-HMD64-EIP**

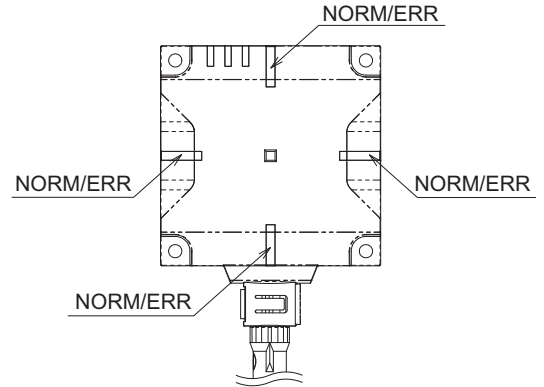

**V680S-HMD66-EIP**

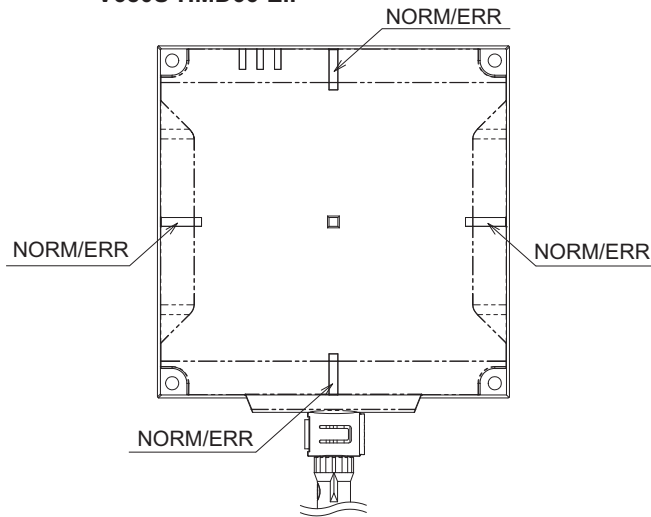



## 9-2 Errors and Indicator Status



### 9-2-1 Fatal Errors

#### Reader/Writer Operation Errors



- User Configuration Memory Error

RUN	NORM/ERR	Processing when error occurs
		There is an error in user configuration memory. Initialize the settings to restore normal operation. Refer to <i>User Configuration Memory Error</i> on page 9-6 for information for Initialize the setting.
Lit green or fast flashing green	Flashing red	



- Unstable Control Signal or User Configuration Memory (Host Device Communications Conditions Settings) Error

RUN	NORM/ERR	Processing when error occurs
		<p>The value of the control signal is not stable.</p> <ul style="list-style-type: none"> <li>See if the control signal line in the V680S Cable is connected correctly to 24 VDC. See if there is a source of strong noise near the Reader/Writer or Cable.</li> </ul> <p>There is an error in user configuration memory (host device communications conditions settings).</p> <ul style="list-style-type: none"> <li>Initialize the settings to restore normal operation.</li> </ul> <p>Refer to <i>User Configuration Memory Error</i> on page 9-6 for information for Initialize the setting.</p> <p>* The Reader/Writer automatically starts in Safe Mode when it detects an error.</p>
Flashing green	Flashing red	

- Multi-Reader/Writer Execution Error



RUN	NORM/ERR	Processing when error occurs
		<p>The multi-Reader/Writer functions cannot be executed.</p> <ul style="list-style-type: none"> <li>Check the combination of the RF Tag communications option setting and multi-Reader/Writer function operating mode in the Master Reader/Writer.</li> <li>Correct the IP address settings so that the Slave Reader/Writer does not use the same IP address as the Master Reader/Writer.</li> </ul> <p>For details, refer 6-12 <i>Multi-Reader/Writer Operation</i> on page 6-61.</p>
Flashing green or fast flashing green	Lit red	

#### IP Address Duplication Error (Indicator Flashes Red Irregularly)



RUN	NORM/ERR	Processing when error occurs
		<p>Devices with the same IP address were detected during Reader/Writer startup.</p> <ul style="list-style-type: none"> <li>Correct the IP address settings of the Reader/Writers.</li> </ul>
Fast flashing green	Flashing red irregularly	

## System Errors

- CPU Error or Hardware Fault



RUN	NORM/ERR	Processing when error occurs
		Take the appropriate action referring 9-3-3 <i>System Errors</i> on page 9-7. Replace the Reader/Writer if the condition does not change.
Lit green or fast flashing green	Lit red	

- System Memory Error



RUN	NORM/ERR	Processing when error occurs
		Take the appropriate action referring 9-3-3 <i>System Errors</i> on page 9-7. Replace the Reader/Writer if the condition does not change. * If the Reader/Writer detects a fault, the Reader/Writer will start in the "Safe mode" automatically.
Flashing green	Lit red	

### 9-2-2 Nonfatal Errors

The NORM/ERR indicator flashes once if an error occurs in communications between the Reader/Writer and host device or in communications with an RF Tag.

RUN	NORM/ERR
	
Lit green or fast flashing green	Flashes red once

### 9-2-3 Tag Data Links Error

RUN	NORM/ERR
	
Lit green	Flashing yellow



#### Precautions for Correct Use

If you use more than one Reader/Writer for multi-Reader/Writer operation, the ERROR indicator will light red once on any Reader/Writer for which an error is detected during communications with an RF Tag. The NORM indicator will light green once on any Reader/Writer that completes communications with an RF Tag normally. When the Master Reader/Writer returns a response to the host device, the NORM or ERROR indicator will light depending on whether the results given in the response is for a normal or error completion.

## 9-3 Errors and Countermeasures

### 9-3-1 Reader/Writer Operation Errors

#### User Configuration Memory Error

Initialize the settings to restore normal operation. There are the following two ways to initialize the Reader/Writer.

- Initializing with a Command Message from the Host Device  
You can send the INITIALIZE SETTINGS command to the Reader/Writer to return the settings to the default values.
- Initializing through the Web Server  
You can connect a computer to the network, start a Web browser, and return the settings to the default values from the Web browser window.

Refer to *Initializing the Settings* on page A-80 for the procedure to Initializing through the Web Server.

#### Unfixed Operation Mode Error or User Configuration Memory (Host Device Communications Conditions Settings) Error

Identify the error on the Error Log View in the Web browser and restore operation with the countermeasure.

Refer to *8-3-7 Log View Window* on page 8-21 for the procedure to check the error log contents from the Web browser window.

- Unfixed Operation Mode Error  
See if the control signal line is connected correctly to the 24 VDC terminal on the power source. Check for sources of noise around the Cable.
- User Configuration Memory Error (Host Device Communications Conditions Settings)  
Initialize the settings to restore normal operation. You can connect a computer to the network, start a Web browser, and return the settings to the default values from the Web browser window.

Refer to *Initializing the Settings* on page A-80 for the procedure to Initializing through the Web Server.

#### Multi-Reader/Writer Execution Error

Check the combination of the Multi-Reader/Writer Mode and the communications option.

### 9-3-2 IP Address Duplication Error

Turn OFF the power supply to the Reader/Writer, remove the Reader/Writer from the network, correct the IP addresses, add the Reader/Writer to the network, and turn the power supply back ON.

### 9-3-3 System Errors

Turn OFF the power supply, check the wiring, and then turn ON the power supply. If the problem does not change, recovery is not possible for the error. Replace the Reader/Writer.

#### Multi-Reader/Writer Execution Error

Check the combination of the Multi-Reader/Writer Mode and the RF Tag communications option. Or, check the IP address settings to see if the Slave Reader/Writer is using the same IP address as the Master Reader/Writer.

The RF Tag communications commands that you can use during multi-Reader/Writer operation (Field Extension Mode or High-speed Traveling Mode) are shown in the following table.

If you use any RF Tag communications command that cannot be used for the Master Reader/Writer, an execution status error will be indicated in the response.

- **Commands That Can Be Addressed to a Master Reader/Writer**

RF Tag communications command	Multi-Reader/Writer Mode	
	Field Extension Mode	High-speed Traveling Mode
READ DATA	Supported	Supported
WRITE DATA	Supported	Not supported
DATA FILL	Not supported	Not supported
RF TAG OVERWRITE COUNT CONTROL	Not supported	Not supported
READ ID	Supported	Not supported
COPY DATA	Not supported	Not supported
LOCK	Not supported	Not supported

- **Commands That Can Be Acknowledged by a Slave Reader/Writer**

The following table shows the commands that a Reader/Writer that is operating as a slave can acknowledge.

If an unsupported command is received by a Slave Reader/Writer, an execution status error will be indicated in the response.

Command type	Name	Supported
RF Tag communications	READ ID	No
	READ DATA	No
	WRITE DATA	No
	LOCK	No
	DATA FILL	No
	RF TAG OVERWRITE COUNT CONTROL	No
	RESTORE DATA	No
	COPY DATA	No
Reader/Writer settings	INITIALIZE	No
	SET RF TAG COMMUNICATIONS	No
	GET RF TAG COMMUNICATIONS SETTINGS	Yes

Command type	Name	Supported
Reader/Writer information acquisition	GET MODEL INFORMATION	Yes
	GET FIRMWARE VERSION	Yes
	GET OPERATING TIME	Yes
	GET COMMAND ERROR LOG	Yes
	GET RESTORE INFORMATION	Yes
Reader/Writer operation control	MEASURE NOISE	No
	RESET	No
Multi-Reader/Writer operation	SET MULTI-READER/WRITE OPERATION	No
	GET MULTI-READER/WRITE SETTINGS	Yes
	GET MULTI-READER/WRITE STATUS	Yes



#### Precautions for Correct Use

- You can use the maintenance functions with Reader/Writers with firmware version 3.00 or higher.
- All linked Reader/Writers must have firmware version 3.00 or higher.

### 9-3-4 V680S Command Errors

You can check errors detected by the Reader/Writer in the Response Area where the Reader/Writer returns the response after command execution.

You can also check error information by sending the GET COMMAND ERROR LOG command to the Reader/Writer or by using the Error Log View on a Web browser. The following table provides detailed error information and countermeasures.

Error name	Error code	Countermeasure
Command parameter error	1005 hex	Check the contents of the command and send the correct contents. Make sure the command parameter values are correct.
Execution status error	1006 hex	Send the command again. Execution is not possible because the Reader/Writer is performing other processing. Set the Access permission to <b>Permission</b> before issuing the command.

### 9-3-5 RF Tag Communications Errors

You can check errors detected by the Reader/Writer in the Response Area where the Reader/Writer returns the response after command execution.


You can also check error information by sending the GET COMMAND ERROR LOG command to the Reader/Writer or by using the Error Log View on a Web browser. The following table provides detailed error information and countermeasures.

Error name	Error code	Countermeasure
RF Tag missing error	2001 hex	Change the control timing so that communications start when there is an RF Tag in the communications field of the Reader/Writer. Measure the noise and implement noise countermeasures by <i>6-7-2 Noise Measurement</i> on page 6-23. Check the influence of surrounding metal and make sure there is sufficient communications range.
RF Tag communications error	2002 hex	Change the control timing so that communications start when there is an RF Tag in the communications field of the Reader/Writer. Measure the noise and implement noise countermeasures by <i>6-7-2 Noise Measurement</i> on page 6-23. Check the influence of surrounding metal and make sure there is sufficient communications range.
UID mismatch error	2003 hex	Perform communications when the RF Tag for which data is to be restored is in the communications field of the Reader/Writer.
RF Tag address error	2004 hex	Adjust the processing area (addresses) for communications with the RF Tag to match the memory area of the RF Tag.
RF Tag lock error	2005 hex	The RF Tag memory region that contains the communications processing area (addresses) is locked. Check the communications processing area (addresses) and perform the process again or replace the RF Tag.
RF Tag verification error	2006 hex	Repeat the processing while the RF Tag is in the communications field of the Reader/Writer. Measure the noise and implement noise countermeasures by <i>6-7-2 Noise Measurement</i> on page 6-23. Check the influence of surrounding metal and make sure there is sufficient communications range.
RF Tag data lost error	2007 hex	Repeat the processing while the RF Tag is in the communications field of the Reader/Writer. Measure the noise and implement noise countermeasures by <i>6-7-2 Noise Measurement</i> on page 6-23. Check the influence of surrounding metal and make sure there is sufficient communications range.
RF Tag system error	2008 hex	Change to an RF Tag that is supported by the Reader/Writer.
RF Tag overwriting error	2009 hex	Replace the RF Tag.
Reader/Writer connection error	200A hex	Make sure that the copy destination Reader/Writer is operating normally. Make sure that the copy destination Reader/Writer is normally connected to the network and that there are no mistakes in the settings.
Communications connection error between Reader/Writers	200B hex	Make sure that the Slave Reader/Writers have started normally before you execute multi-Reader/Writer functions. Make sure that the Slave Reader/Writers are normally connected to the network and that there are no mistakes in the settings.


## 9-4 Troubleshooting Flowcharts


If an error occurs, fully check the whole situation, determine the relationship between the system and any other devices, and refer to the following flowcharts for the troubleshooting procedures.

### 9-4-1 Main Check Flowchart

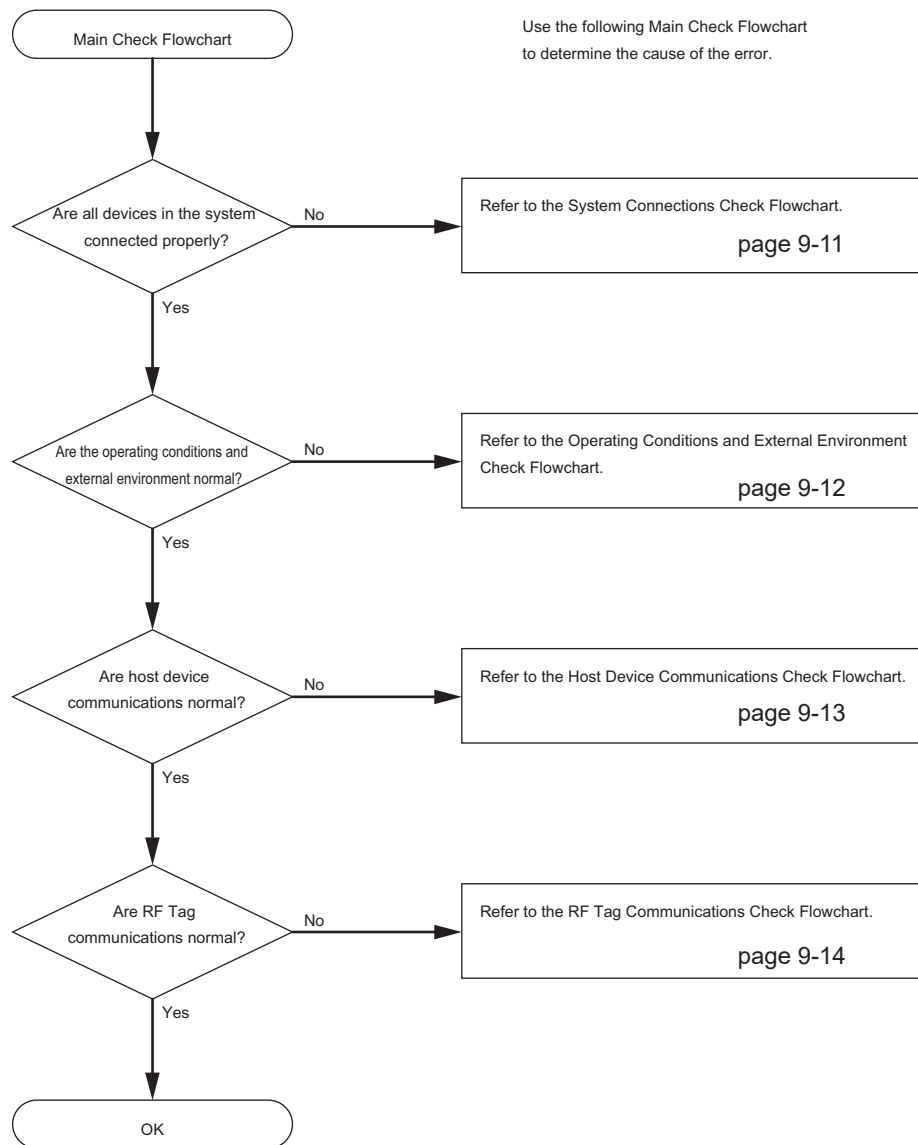


**9-4-2 System Connections Check Flowchart**

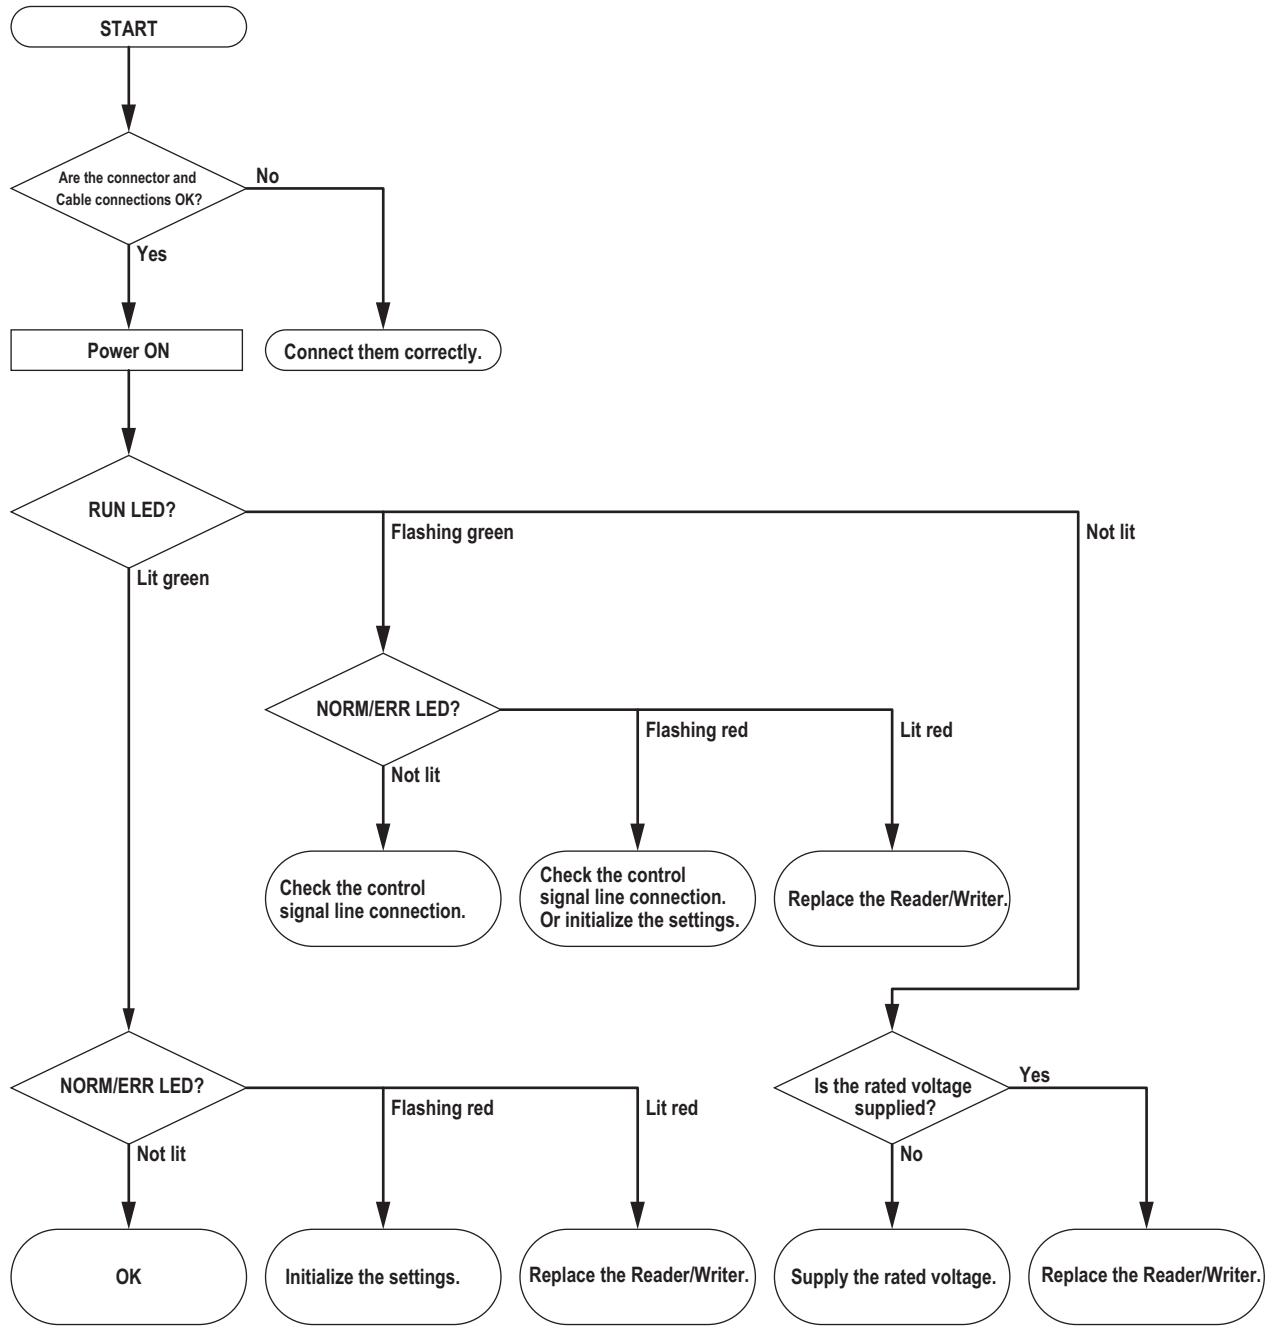


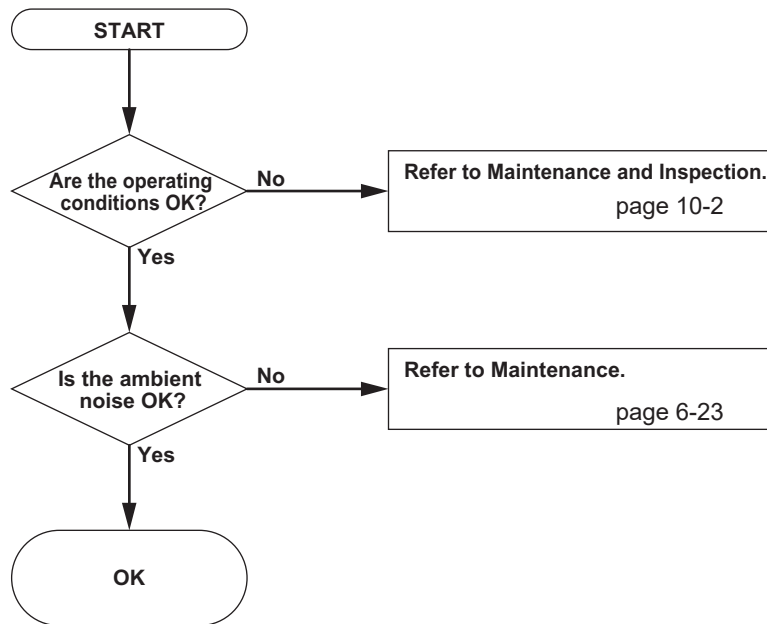**9-4-3 Operating Conditions and External Environment Check Flowchart**

**9-4-4 Host Device Communications Check Flowchart**

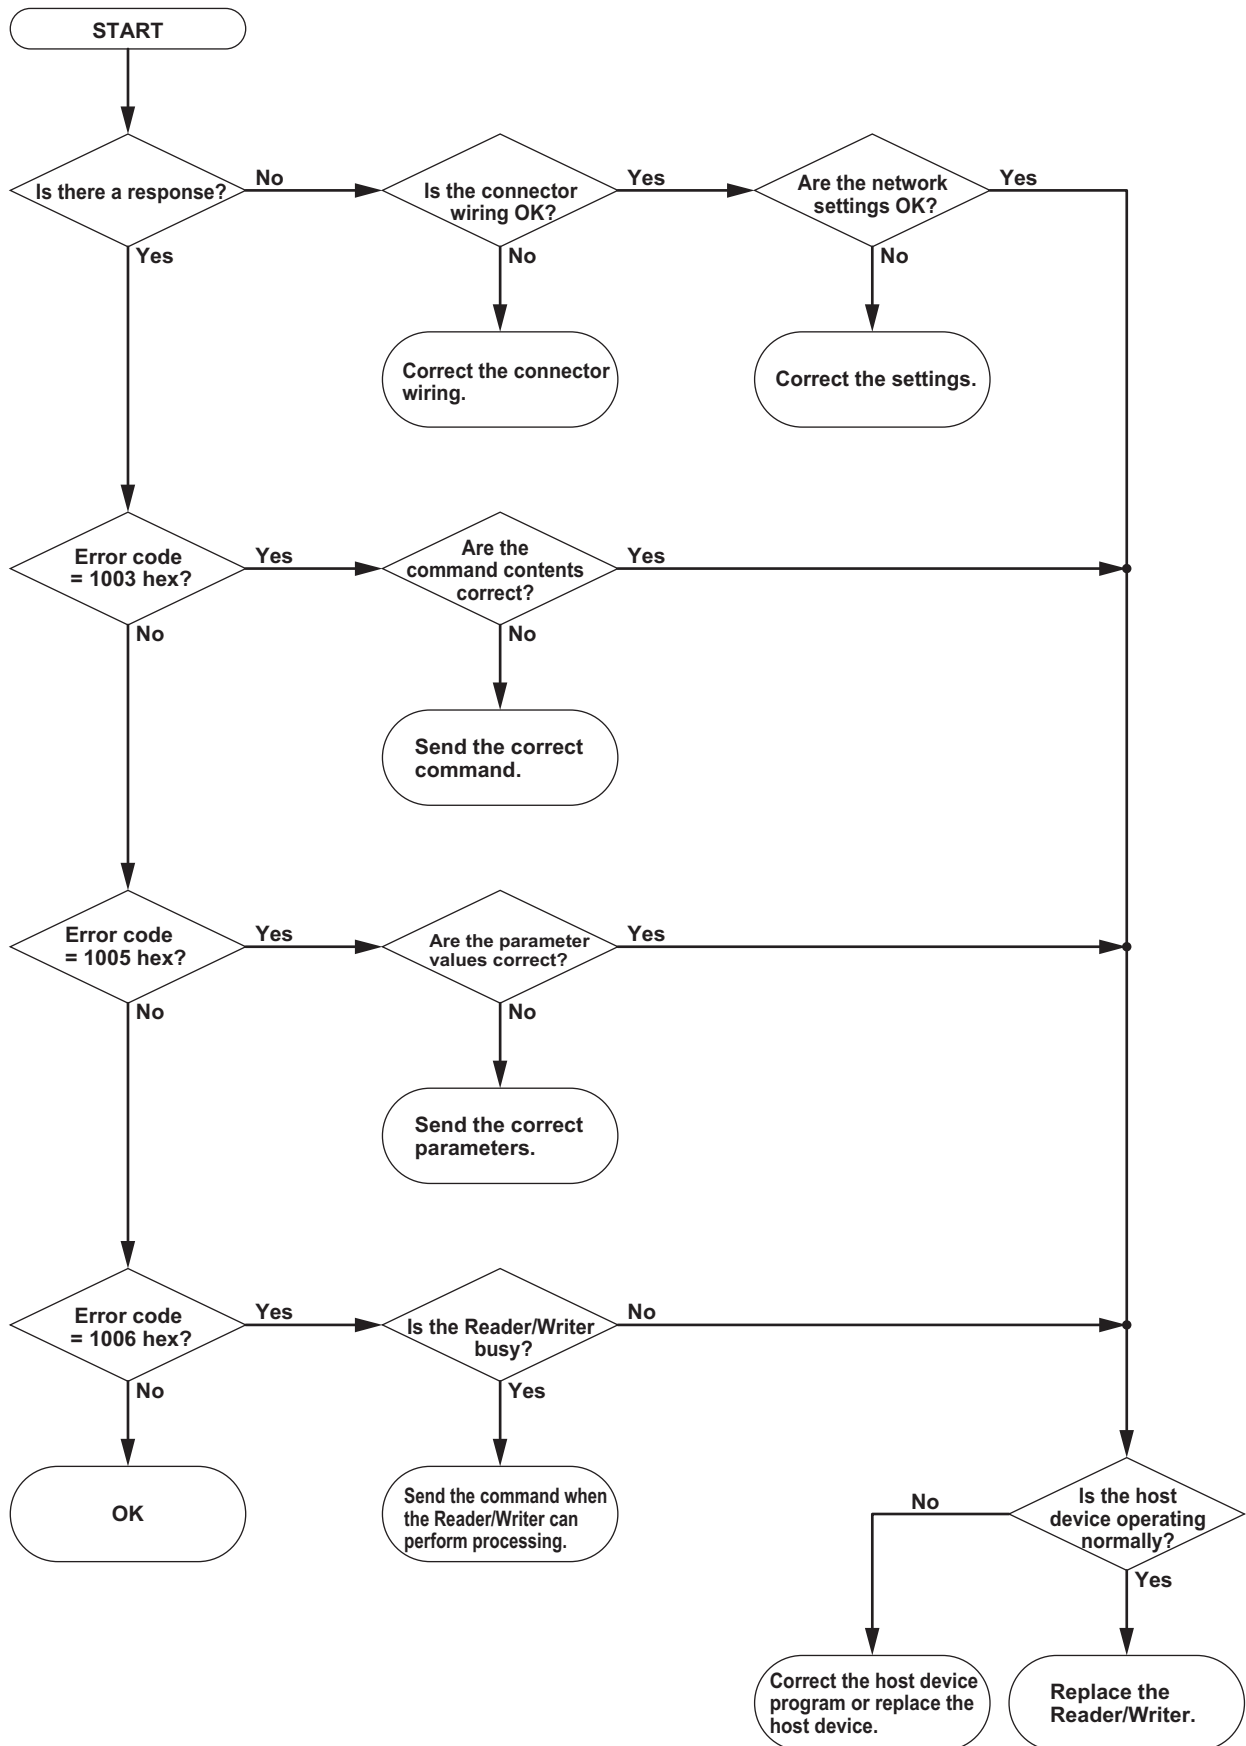

9-4-5 RF Tag Communications Check Flow

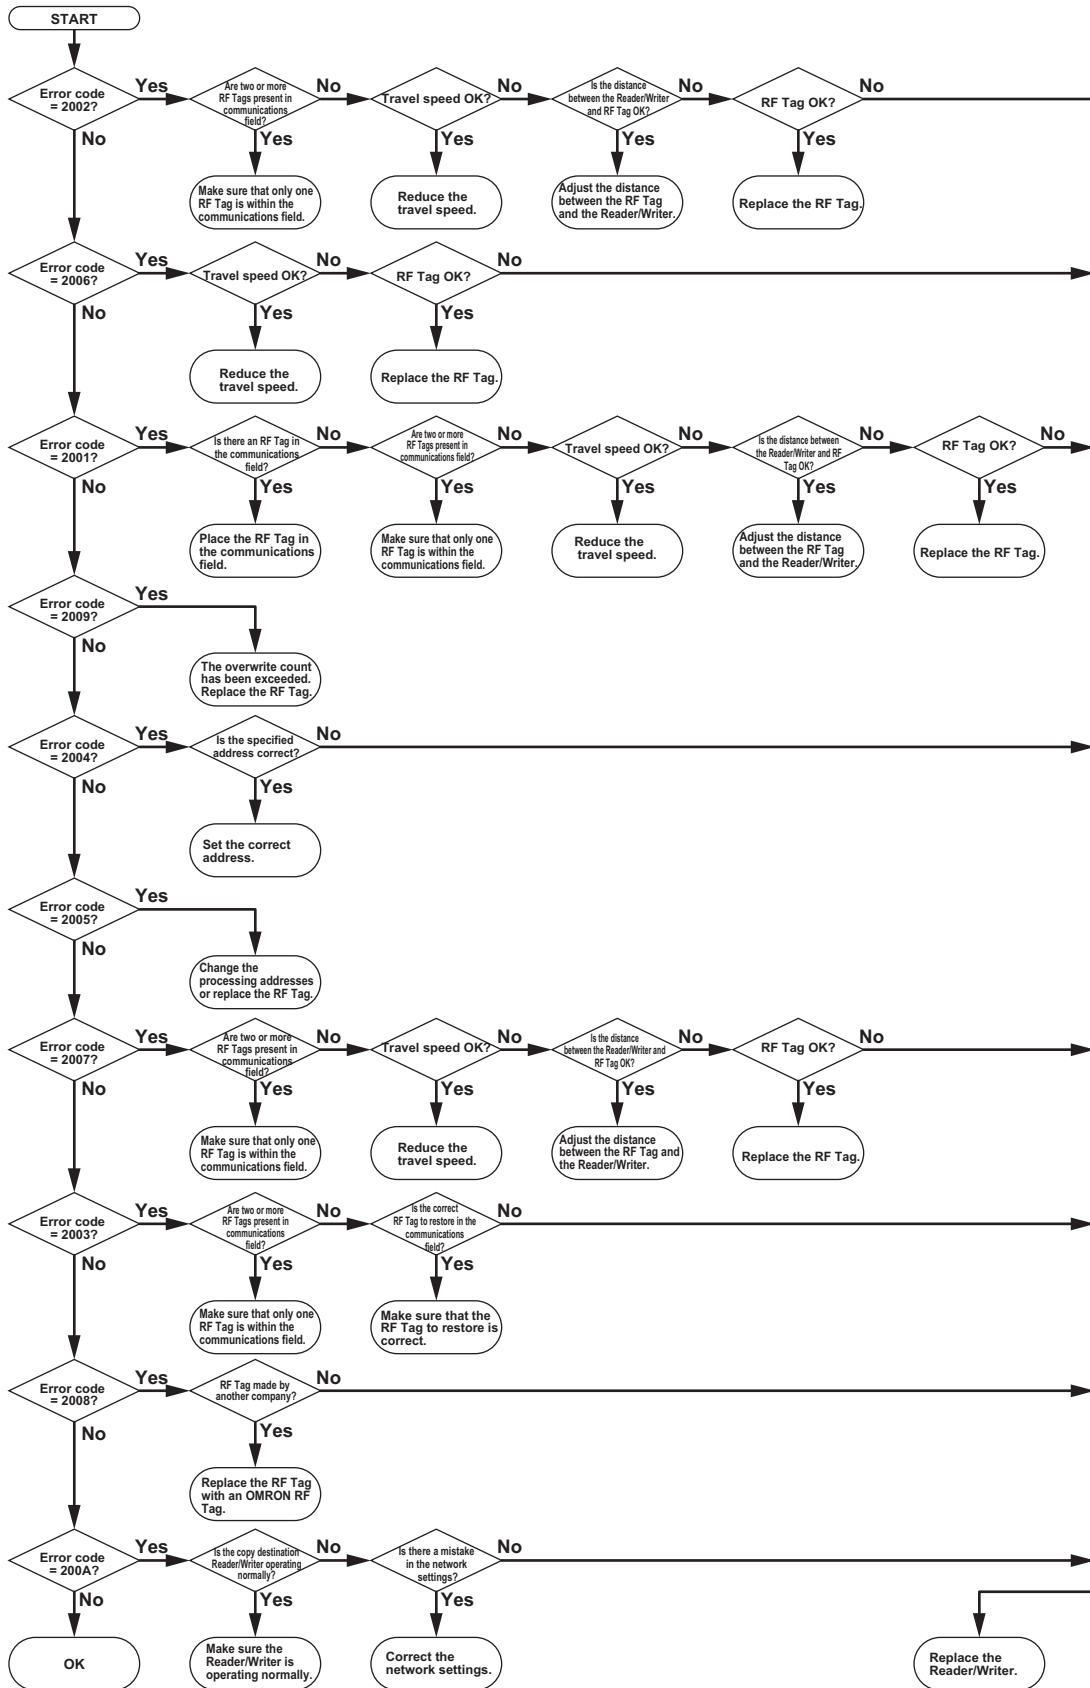


Refer to 6-11-1 Communication Diagnostic on page 6-56, when Communication Diagnosis is enabled and the diagnostic result is "Warning".

## 9-5 About The Ethernet Communication Abnormality



### Precautions for Correct Use

If an Ethernet network is configured into a loop as shown below, broadcast packets are accumulated in the band, and the communication is disabled. Therefore, do not configure the Ethernet network into a loop.

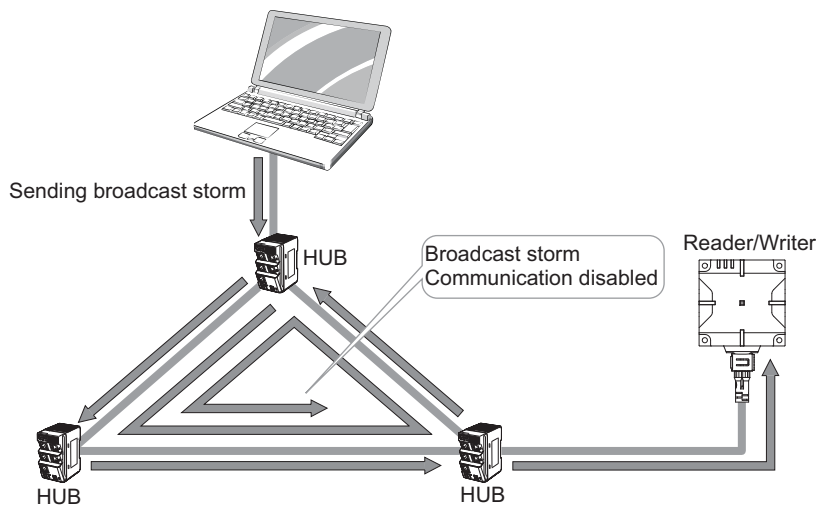

### Precautions for Correct Use


When a large amount of broadcast packets or multicast packets flow into the Ethernet network, Reader/Writers may stop its operation. Please do not send a large amount of packet. Please separate the Reader/Writers from the network segment that broadcast or multicast packets flow.



**Precautions for Correct Use**

**When using in combination with Ethernet/IP devices such as PLC made by other manufacturers**

If communication is interrupted due to a disconnection of a connector or other reason and does not resume normally afterwards, try restarting the Ethernet/IP device.

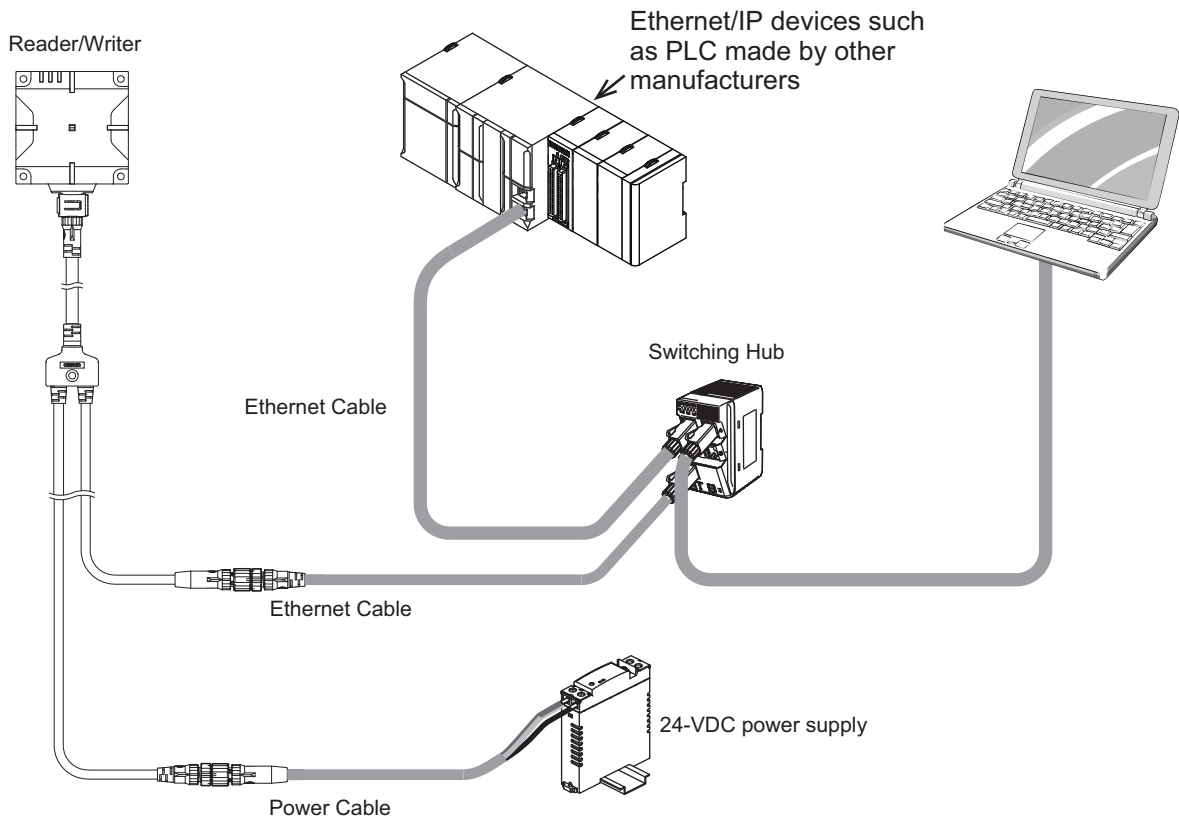

## 9-6 How to deal with browser interface problems

### 9-6-1 When the Web browser screen is not displayed or the screen layout is strange

When the Web browser screen is not displayed or the screen layout is strange. Please reload. If the problem persists even after reloading, follow the procedure below to delete the temporary Internet file and then display it again.




#### Precautions for Correct Use


The operating environment when using Reader/Writer earlier than firmware Ver.4.00, please refer to *A-10-2 Cannot Display the Web Browser Operation Window* on page A-84.

### 9-6-2 Google Chrome


- 1 Open the settings from “Google Chrome settings” at the top right of the screen.

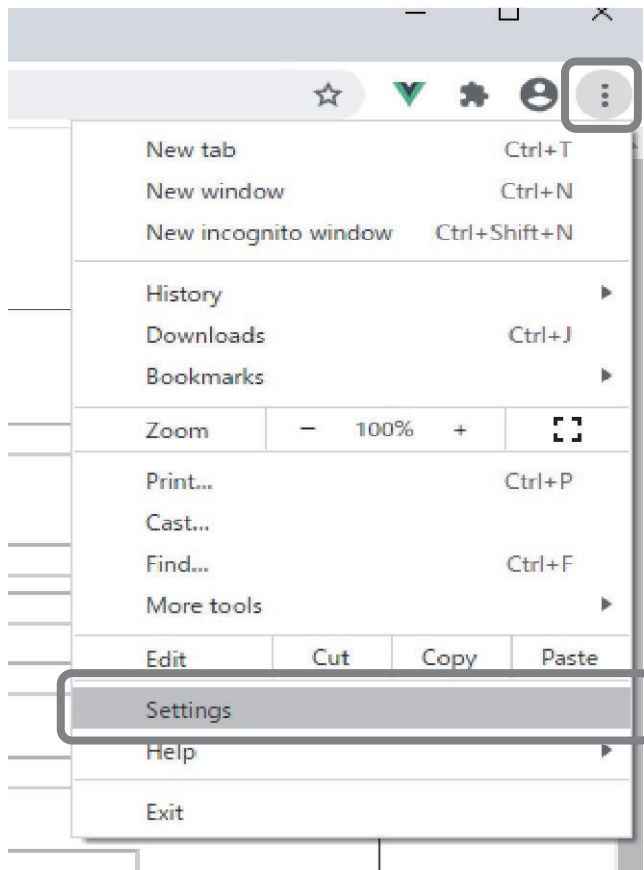

- 2** Select Clear browsing data in the privacy and security section.

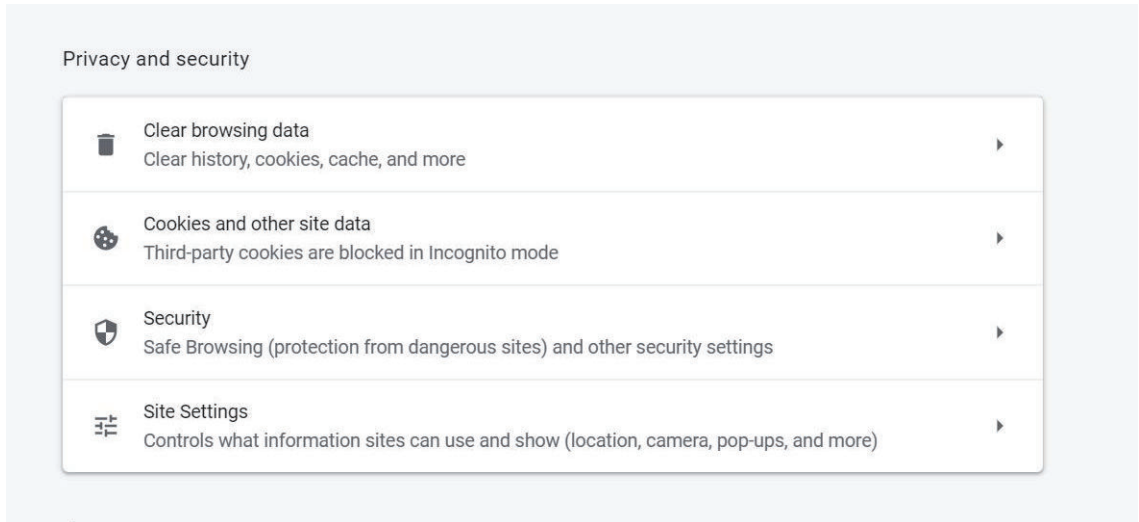

- 3** Time range selects all time. Check cached images and files and select clear data.

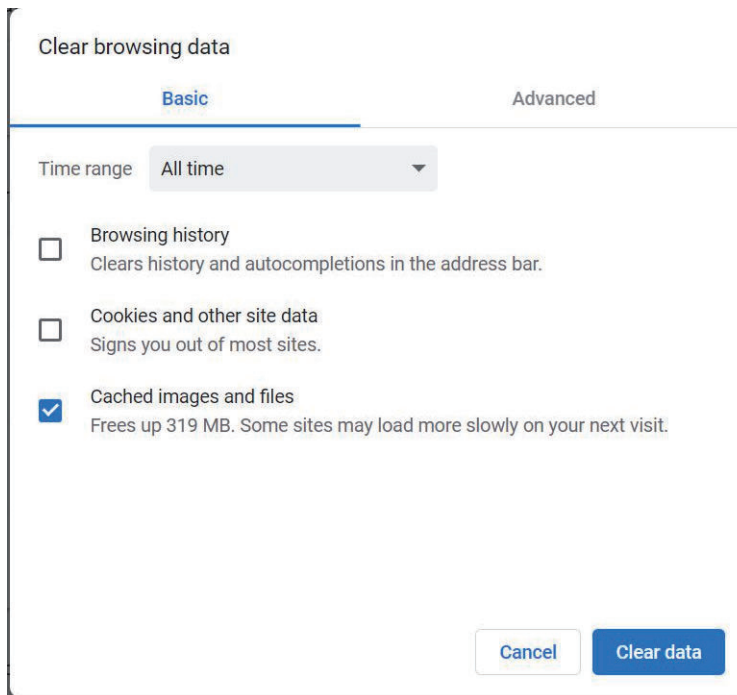


## 9-6-3 Internet explorer11


### ✓ Version Information

Internet Explorer cannot be used with Reader/Writers with firmware version "5.00" or higher.

- 1 Click the Tools menu and select Internet Options. Click the delete... button in the Browsing History section of the General tab.

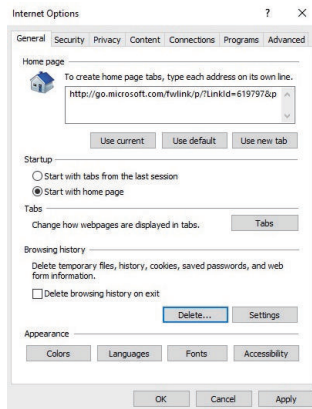


- 2 Check "Temporary Internet files and website files" and click Delete.

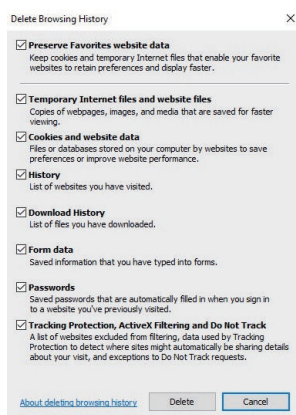


## 9-6-4 Microsoft Edge


- 1 Click the three points in the upper right and click “Settings”.

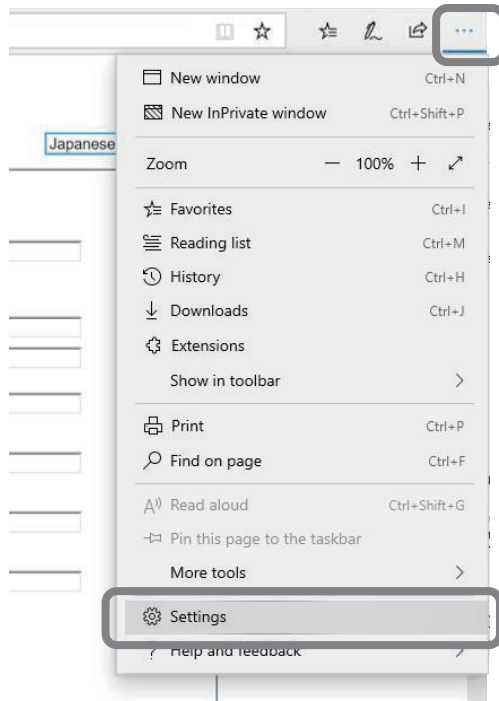

- 2 Click “choose what to clear” in the “Privacy & Security” tab.

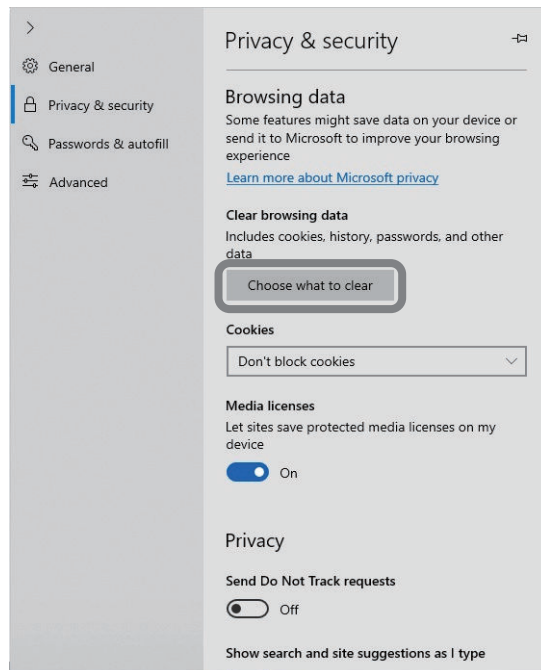

- 3 Check “Cached data and files” and click Clear.

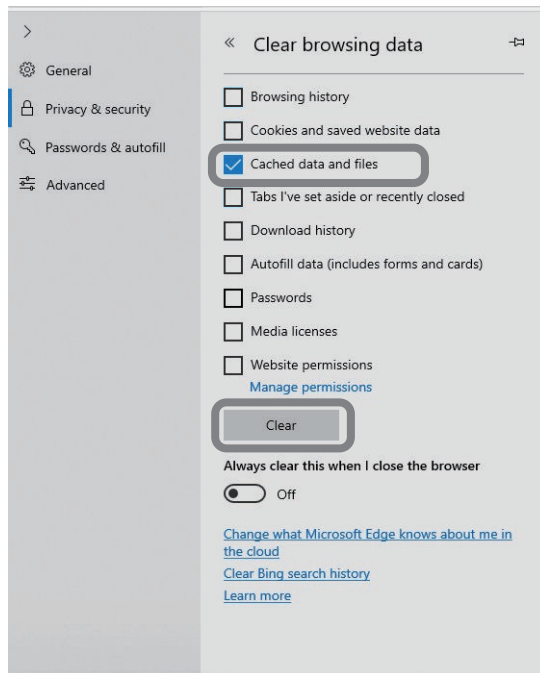

## 9-7 Safe Mode

In addition to the Run Mode that is used for normal operation, the Reader/Writer supports a Safe Mode operation mode. The Safe Mode is used when you do not remember the IP address or password that is set in the Reader/Writer.

If the Reader/Writer starts in Safe Mode, the following settings are always used. This allows you to access the Reader/Writer even if you forget the IP address so that you can set the IP address again.

<b>IP address</b>	192.168.1.200
<b>Subnet mask</b>	255.255.255.0

If you forget the registered IP address registered in the IP filtering settings of a Reader/writers with firmware version "5.00" or higher and cannot connect to the Web Browser, you can disable the IP filtering function tentatively by starting in Safe Mode.

If you forget the password for the Reader/Writer with firmware version "5.00" or higher, you can start the Reader/Writer in Safe Mode and perform the Factory Reset on the Configuration window to reset all of the Reader/writer settings, including the password, to factory default state.



### Precautions for Correct Use

When the Reader/Writer is running in safe mode, some functions can not be used (Ex. RF tag communication and noise measurement function, etc). When you use the Reader/Writer normally, please start the Reader/Writer in RUN mode.

### 9-7-1 Starting in Safe Mode

- 1** Connect the control signal line from the Cable to the GND terminal on the DC power supply. Connect the other two lines (24P and 24N ) to the DC power supply terminals.
- 2** Turn ON the power supply to the Reader/Writer.
- 3** The RUN indicator on the Reader/Writer will flash green

After the Reader/Writer starts in Safe Mode, use the Web browser or host device to reset or initialize the IP address.



### Precautions for Correct Use

If an error occurs in the Reader/Writer, the Reader/Writer may automatically start in Safe Mode. Refer to *9-1 Error Descriptions* on page 9-2 for for more information.

# 10

## Maintenance and Inspection

This section describes Maintenance and Inspection.

---

<b>10-1</b>	<b>Maintenance and Inspection .....</b>	<b>10-2</b>
10-1-1	Inspection Items .....	10-2

# 10-1 Maintenance and Inspection

The Reader/Writer must be inspected on a daily or periodic basis so that the functions remain in good condition.

The Reader/Writer consists of semiconductors that last almost indefinitely. The following malfunctions, however, may result due to the operating environment and conditions.

1. Element deterioration due to overvoltage or overcurrent.
2. Element deterioration due to continuous stress caused by high ambient temperature.
3. Connector contact faults or insulation deterioration due to humidity and dust.
4. Connector contact faults or element corrosion due to corrosive gas.

## 10-1-1 Inspection Items

No.	Inspection item	Details	Criteria	Remarks
1	Power supply voltage fluctuation	(1) Make sure that the supply voltage fluctuation at the power supply terminal block is within the permissible range.	Within supply voltage specified range	Multimeter
		(2) Make sure that there are no frequent instantaneous power failures or radical voltage fluctuations.	Within permissible voltage fluctuation range	Power supply analyzer
2	Ambient environment			Maximum and minimum thermometer Hygrometer
	(a) Temperature	(a) Within the specified range	(a) -10 to 55°C	
	(b) Humidity	(b) Within the specified range	(b) 25% to 85%	
	(c) Vibration and shock	(c) Influence of vibration or shock from machines	(c) Within the specified range	
	(d) Dust	(d) Make sure that the Reader/Writer is free of accumulated dust and foreign particles.	(d) Must not be present.	
	(e) Corrosive gas	(e) Make sure that no metal parts are discolored or corroded.	(e) Must not be present.	
3	Panel condition			---
	(a) Ventilation	(a) Make sure that the system is ventilated properly with natural ventilation, forced ventilation, or cooling air.	(a) The interior temperature must be between -10 and 55°C with proper ventilation.	
	(b) Damage to packing for any enclosing structure	(b) Make sure that the panel packing is properly attached with no damage.	(b) The packing must have no damage.	
4	Mounting conditions	(1) Make sure that the Reader/Writer is securely mounted.	No loose screws	---
		(2) Make sure that each connector is fully inserted.	Each connector must be locked or securely tightened with screws.	---
		(3) Make sure that no wire is broken or nearly broken.	Must be no wire that is broken or nearly broken.	---
		(4) Make sure that the distance between the RF Tags and Reader/Writer is within the specified range.	Within the specified range	---
5	RF Tag life	Manage the number of times data is written to each RF Tag.	The maximum number of overwrites must not be exceeded	---



# Appendices

This section describes Data Characteristics, Installation Precautions, RF Tag Memory Capacities and Memory Types ,RF tag Memory Map, and so on.

---

<b>A-1</b>	<b>Data Characteristics .....</b>	<b>A-3</b>
A-1-1	RF Tag Communications Range (for Reference Only).....	A-3
A-1-2	RF Tag Communications Time (for Reference Only).....	A-11
<b>A-2</b>	<b>Reader/Writer Installation Precautions .....</b>	<b>A-16</b>
A-2-1	V680S-HMD63-EIP .....	A-16
A-2-2	V680S-HMD64-EIP .....	A-18
A-2-3	V680S-HMD66-EIP .....	A-20
<b>A-3</b>	<b>RF Tag Installation Precautions.....</b>	<b>A-22</b>
A-3-1	V680-D1KP54T .....	A-22
A-3-2	V680-D1KP66T .....	A-25
A-3-3	V680-D1KP66MT .....	A-28
A-3-4	V680-D1KP66T-SP .....	A-31
A-3-5	V680-D1KP58HTN .....	A-35
A-3-6	V680S-D2KF67 .....	A-38
A-3-7	V680S-D2KF67M .....	A-41
A-3-8	V680S-D8KF67 .....	A-44
A-3-9	V680S-D8KF67M .....	A-47
A-3-10	V680S-D2KF68 .....	A-50
A-3-11	V680S-D2KF68M .....	A-53
A-3-12	V680S-D8KF68 .....	A-56
A-3-13	V680S-D8KF68M .....	A-59
<b>A-4</b>	<b>RF Tag Memory Capacities and Memory Types .....</b>	<b>A-62</b>
<b>A-5</b>	<b>RF Tag Memory Map .....</b>	<b>A-63</b>
A-5-1	V680-D1KP□□ RF Tags.....	A-63
A-5-2	V680S-D2KF6□ RF Tags.....	A-64
A-5-3	V680S-D8KF6□ RF Tags.....	A-65
<b>A-6</b>	<b>Chemical Resistance of the Reader/Writers and RF Tags.....</b>	<b>A-66</b>
A-6-1	Chemical Resistance of the Reader/Writers .....	A-66
A-6-2	Chemical Resistance of RF Tags .....	A-67
<b>A-7</b>	<b>Degree of Protection.....</b>	<b>A-70</b>
A-7-1	IEC (International Electrotechnical Commission) IEC 60529 .....	A-70
A-7-2	Oil Resistance (OMRON in-house standard) .....	A-72
<b>A-8</b>	<b>Differences in Address and Size Specifications between V680 and V680S Reader/Writers.....</b>	<b>A-73</b>

<b>A-9</b>	<b>For Customers Using Reader/Writer Earlier Than Firmware Ver.5.00..</b>	<b>A-74</b>
A-9-1	Web Browser Operation Window .....	A-74
A-9-2	Password Entry View .....	A-76
A-9-3	Configuration .....	A-77
A-9-4	Configuration File .....	A-82
<b>A-10</b>	<b>For Customers Using Reader/Writer Earlier Than Firmware Ver.4.00. ...</b>	<b>A-83</b>
A-10-1	Operating environment when using a web browser. ....	A-83
A-10-2	Cannot Display the Web Browser Operation Window .....	A-84
<b>A-11</b>	<b>Use of Open Source Software (OSS).....</b>	<b>A-93</b>
A-11-1	Copyright Notices .....	A-93
<b>A-12</b>	<b>Firmware Version Update History.....</b>	<b>A-98</b>


# A-1 Data Characteristics

## A-1-1 RF Tag Communications Range (for Reference Only)


### V680S-HMD63-EIP

(Unit: mm)


- V680S-HMD63-EIP and V680-D1KP54MT (Back Surface: Metal)

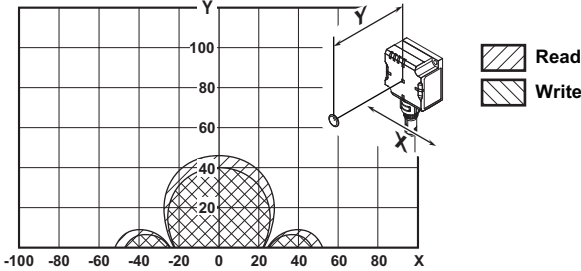


- V680S-HMD63-EIP and V680-D1KP66T (Back Surface: Metal)

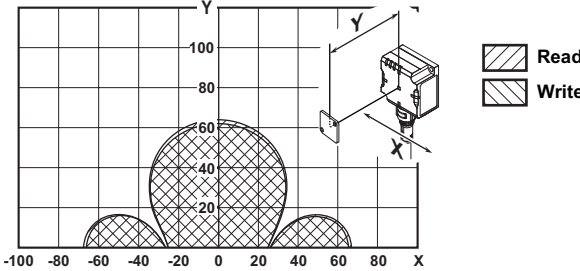

- V680S-HMD63-EIP and V680-D1KP66MT (Back Surface: Metal) (Back Surface: Metal)

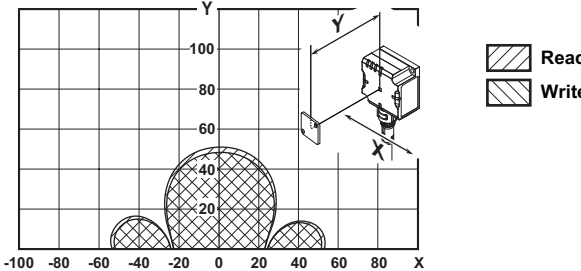


- V680S-HMD63-EIP and V680-D1KP66T-SP (Back Surface: Metal)

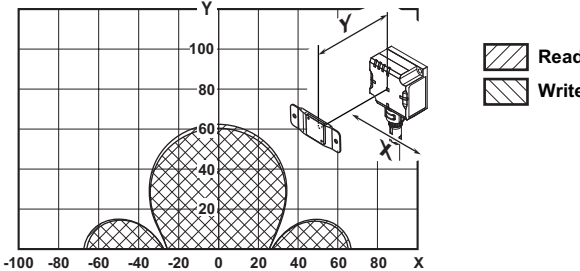


(Unit: mm)


● V680S-HMD63-EIP and V680S-D2KF67  
(Back Surface: Metal)

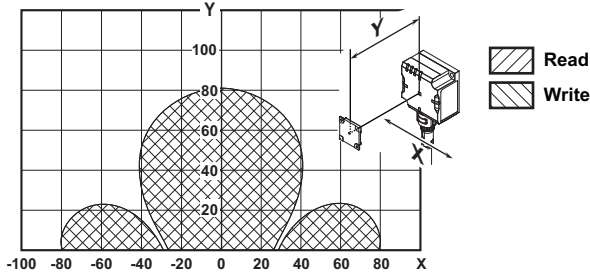


● V680S-HMD63-EIP and V680S-D2KF67M  
(Back Surface: Metal)

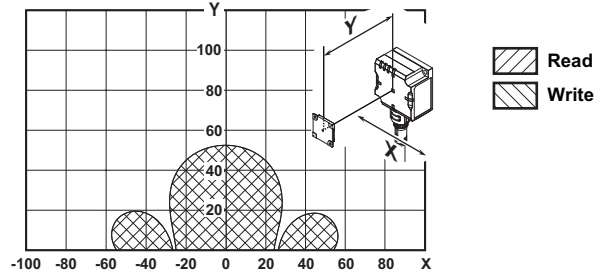

● V680S-HMD63-EIP and V680S-D8KF67  
(Back Surface: Metal)

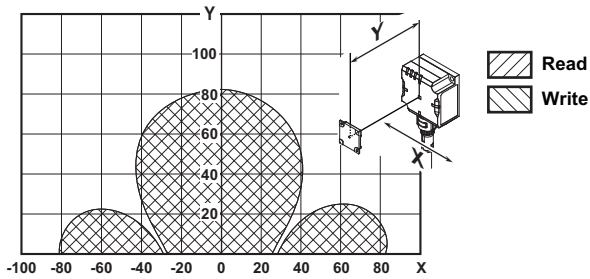


● V680S-HMD63-EIP and V680S-D8KF67M  
(Back Surface: Metal) (Back Surface: Metal)

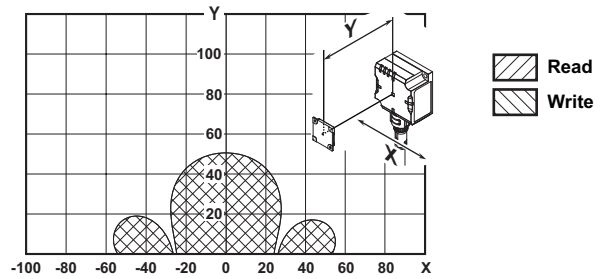


# V680S-HMD64-EIP

(Unit: mm)


● V680S-HMD64-EIP and V680-D1KP54T  
(Back Surface: Metal)

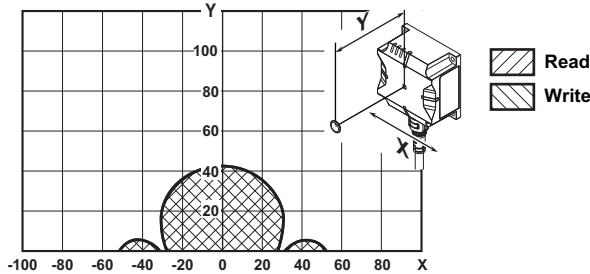


● V680S-HMD64-EIP and V680-D1KP66T  
(Back Surface: Metal)

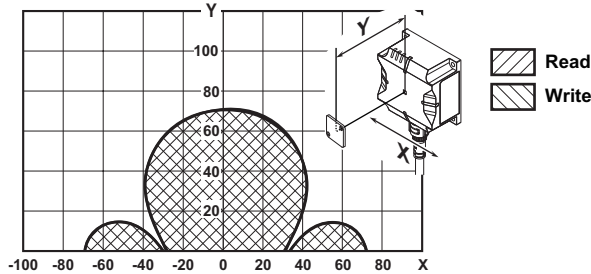


● V680S-HMD64-EIP and V680-D1KP66MT  
(Back Surface: Metal) (Back Surface: Metal)

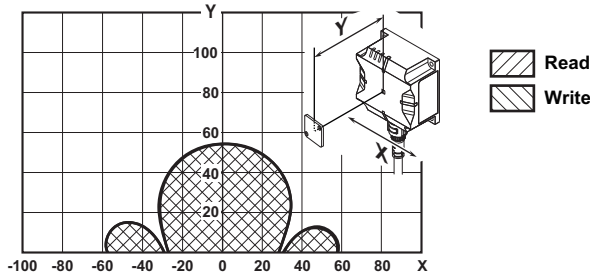

● V680S-HMD64-EIP and V680-D1KP66T-SP  
(Back Surface: Metal)

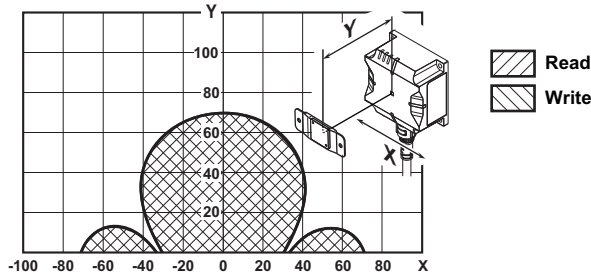


● V680S-HMD64-EIP and V680-D1KP58HTN  
(Back Surface: Metal) (with Attachment, V680-A80)

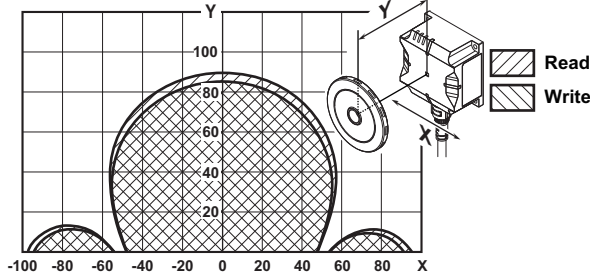


(Unit: mm)


● V680S-HMD64-EIP and V680S-D2KF67  
(Back Surface: Metal)

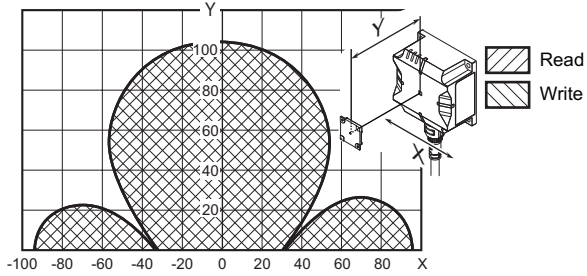


● V680S-HMD64-EIP and V680S-D2KF67M  
(Back Surface: Metal) (Back Surface: Metal)

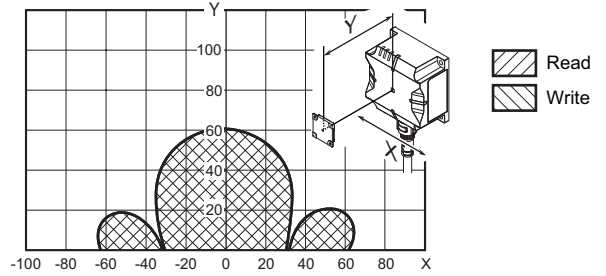

● V680S-HMD64-EIP and V680S-D8KF67  
(Back Surface: Metal)

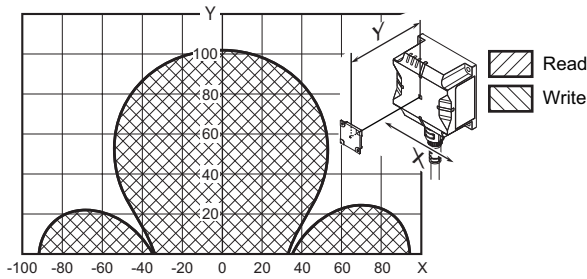


● V680S-HMD64-EIP and V680S-D8KF67M  
(Back Surface: Metal) (Back Surface: Metal)

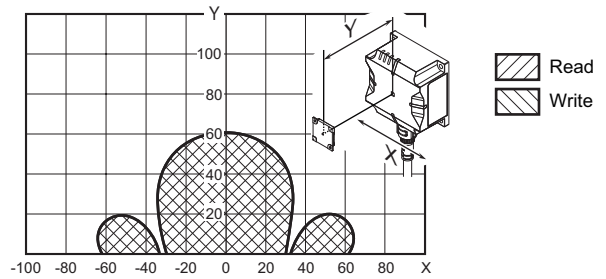


(Unit: mm)


● V680S-HMD64-EIP and V680S-D2KF68  
(Back Surface: Metal) (Horizontal-facing RF Tag)

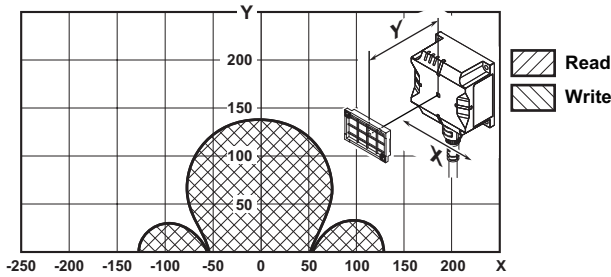


● V680S-HMD64-EIP and V680S-D2KF68  
(Back Surface: Metal) (Vertical-facing RF Tag)

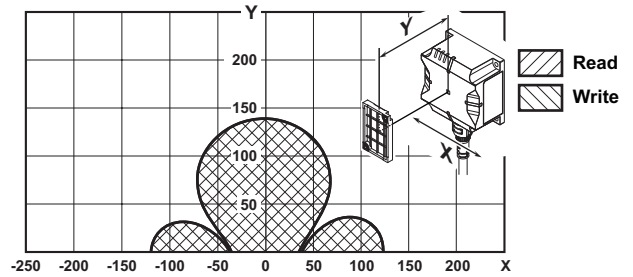


● V680S-HMD64-EIP and V680S-D2KF68M  
(Back Surface: Metal) (Back Surface: Metal)  
(Horizontal-facing RF Tag)

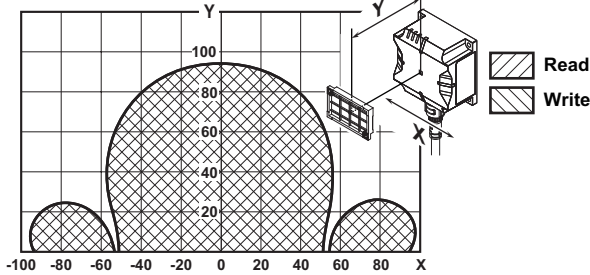


● V680S-HMD64-EIP and V680S-D2KF68M  
(Back Surface: Metal) (Back Surface: Metal)  
(Vertical-facing RF Tag)

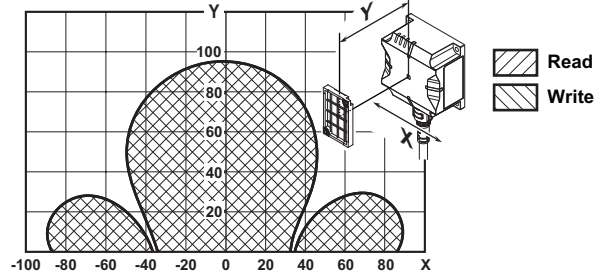


● V680S-HMD64-EIP and V680S-D8KF68  
(Back Surface: Metal) (Horizontal-facing RF Tag)

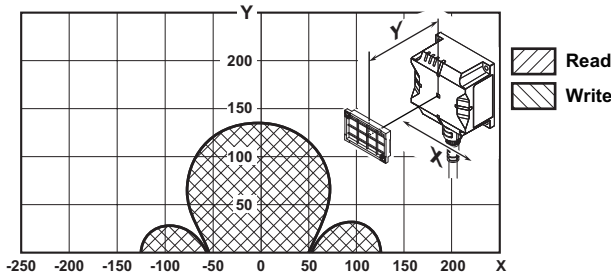


● V680S-HMD64-EIP and V680S-D8KF68  
(Back Surface: Metal) (Vertical-facing RF Tag)

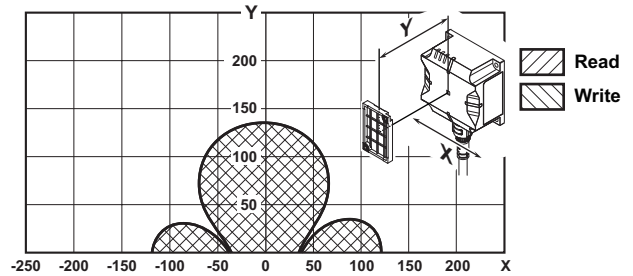

● V680S-HMD64-EIP and V680S-D8KF68M  
(Back Surface: Metal) (Back Surface: Metal)  
(Horizontal-facing RF Tag)

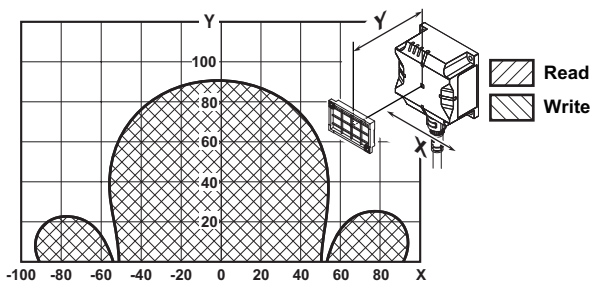


● V680S-HMD64-EIP and V680S-D8KF68M  
(Back Surface: Metal) (Back Surface: Metal)  
(Vertical-facing RF Tag)

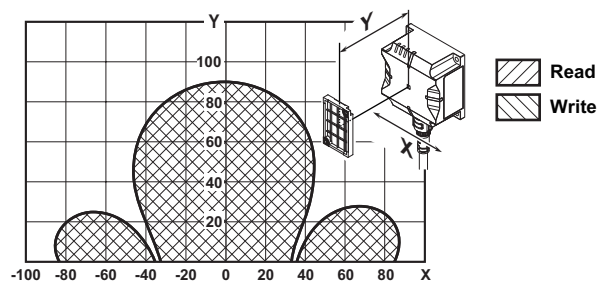


# V680S-HMD66-EIP

(Unit: mm)


● V680S-HMD66-EIP and V680-D1KP54T  
(Back Surface: Metal)

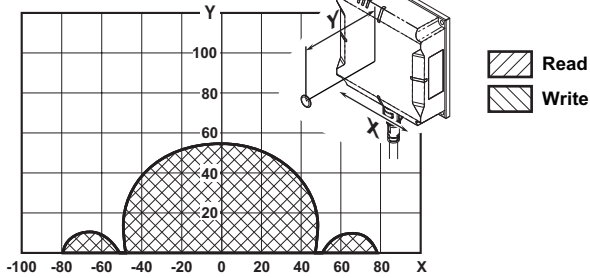


● V680S-HMD66-EIP and V680-D1KP66T  
(Back Surface: Metal)

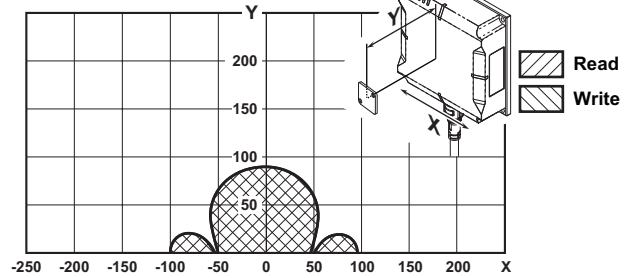


● V680S-HMD66-EIP and V680-D1KP66MT  
(Back Surface: Metal) (Back Surface: Metal)

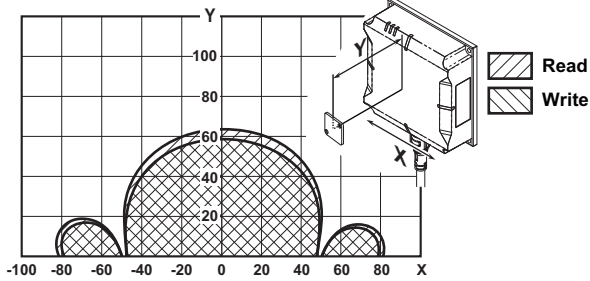

● V680S-HMD66-EIP and V680-D1KP66T-SP  
(Back Surface: Metal)

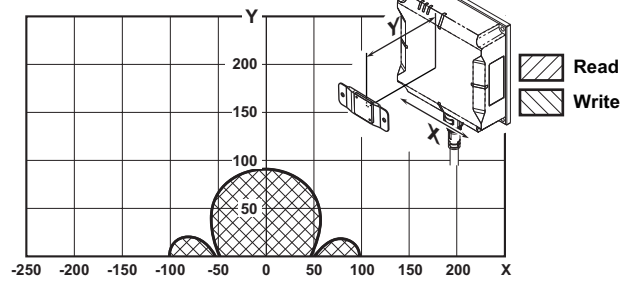


V680S-HMD66-EIP and V680-D1KP58HTN  
(Back Surface: Metal) (with Attachment, V680-A80)

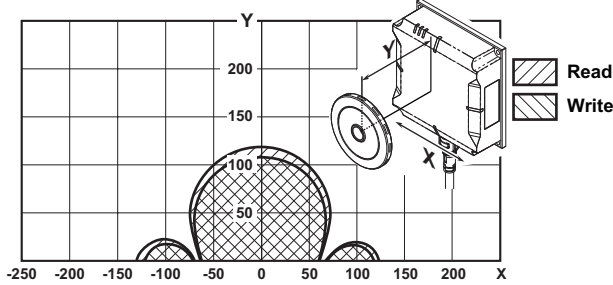


(Unit: mm)


● V680S-HMD66-EIP and V680S-D2KF67 (Back Surface: Metal)

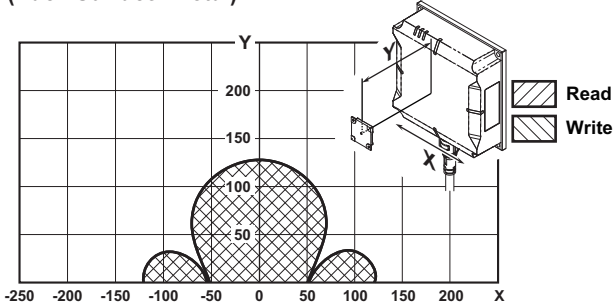


● V680S-HMD66-EIP and V680S-D2KF67M (Back Surface: Metal) (Back Surface: Metal)

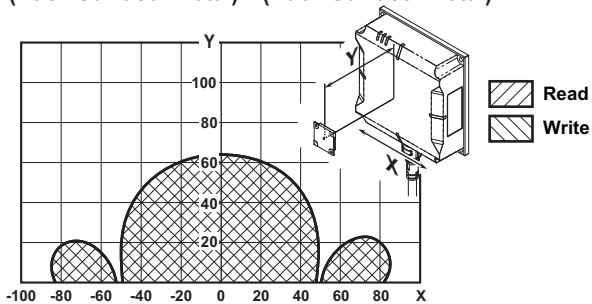

● V680S-HMD66-EIP and V680S-D8KF67 (Back Surface: Metal)

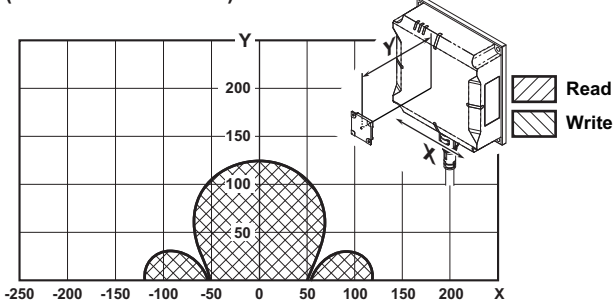


● V680S-HMD66-EIP and V680S-D8KF67M (Back Surface: Metal) (Back Surface: Metal)

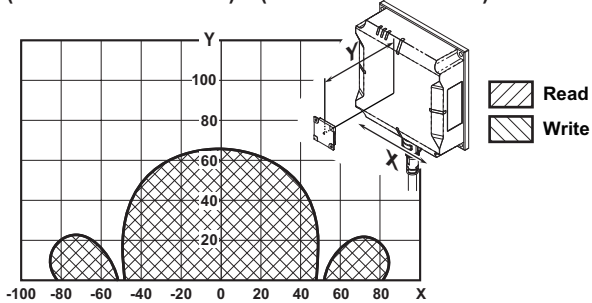


(Unit: mm)


● V680S-HMD66-EIP and V680S-D2KF68  
(Back Surface: Metal) (Horizontal-facing RF Tag)

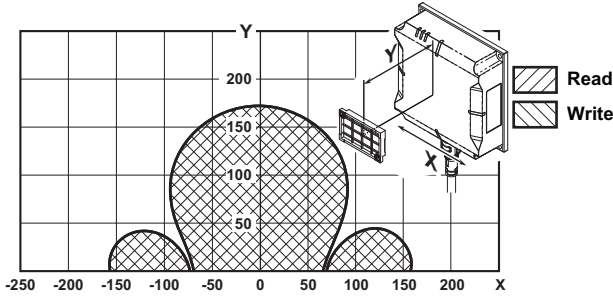


● V680S-HMD66-EIP and V680S-D2KF68  
(Back Surface: Metal) (Vertical-facing RF Tag)

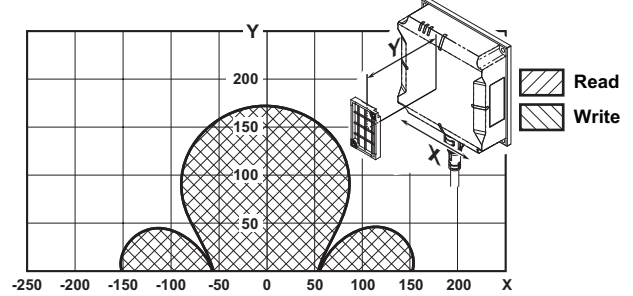


● V680S-HMD66-EIP and V680S-D2KF68M  
(Back Surface: Metal) (Back Surface: Metal)  
(Horizontal-facing RF Tag)

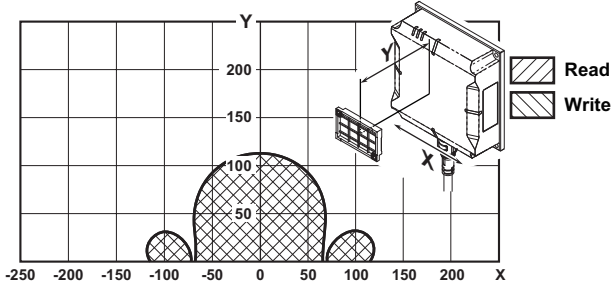


● V680S-HMD66-EIP and V680S-D2KF68M  
(Back Surface: Metal) (Back Surface: Metal)  
(Vertical-facing RF Tag)

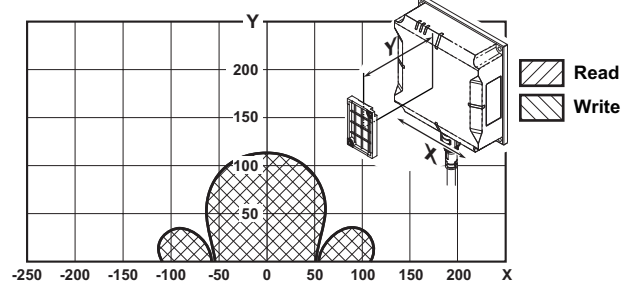


● V680S-HMD66-EIP and V680S-D8KF68  
(Back Surface: Metal) (Horizontal-facing RF Tag)

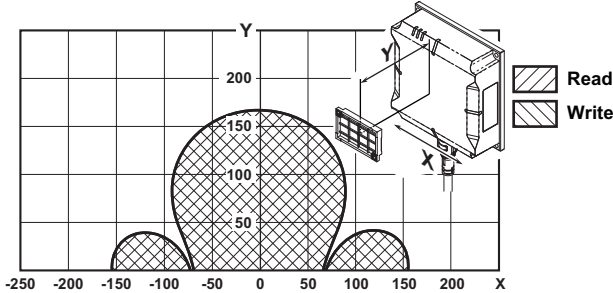


● V680S-HMD66-EIP and V680S-D8KF68  
(Back Surface: Metal) (Vertical-facing RF Tag)

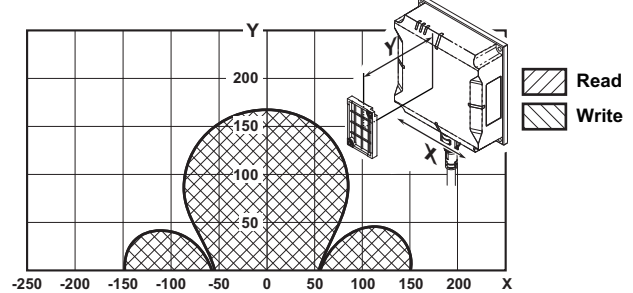

● V680S-HMD66-EIP and V680S-D8KF68M  
(Back Surface: Metal) (Back Surface: Metal)  
(Horizontal-facing RF Tag)

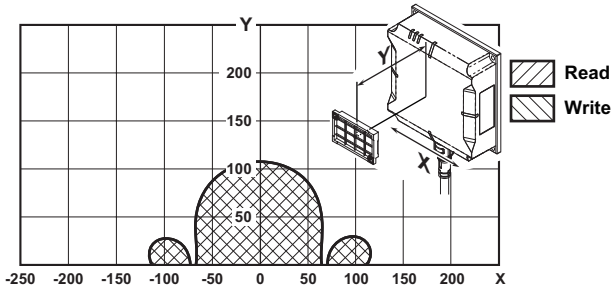


● V680S-HMD66-EIP and V680S-D8KF68M  
(Back Surface: Metal) (Back Surface: Metal)  
(Vertical-facing RF Tag)

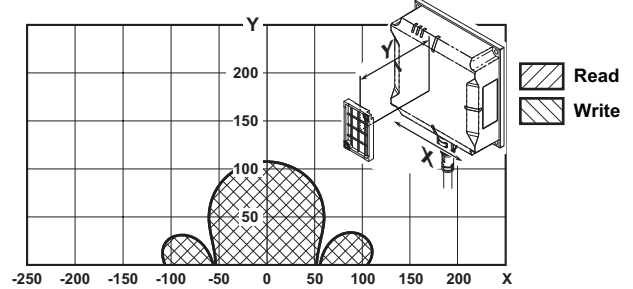

## A-1-2 RF Tag Communications Time (for Reference Only)

### Communications Time

Communications time is from the rise of the RF signal to the last bit of the response from the RF tag.

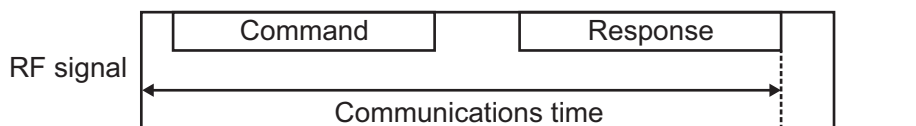

- RF signal : The radio wave that the Reader/Writer turns ON the RF Tag.  
The Reader/Writer turns ON this RF signal and then sends the command to start communications with the RF tag.  
When the communications end, the Reader/Writer turns OFF the RF signal
- Command : The command that the Reader/Writer sends to the RF Tag.
- Response : The response that the RF Tag returns to the Reader/Writer.


#### Precautions for Correct Use

The communication time is approximately 200ms longer when enabling Communications Diagnosis function.

#### ● V680S-HMD6□-EIP and V680-D1KP□□

There are no differences between Communication speed: “normal” and “high”.


Command	Communications time (ms) N: No. of bytes processed
Read	$T = 1.0N + 20.1$
Write (with verification)	$T = 1.8N + 45.2$
Write (without verification)	$T = 1.5N + 41.4$

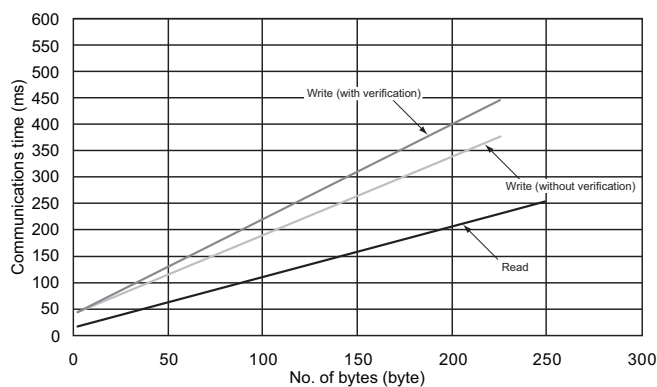

● **V680S-HMD6□-EIP and V680S-D2KF6□ (Communications speed setting: High speed)**


- Communication Option: Other than FIFO Repeat (With ID code check)

Command	Communications time (ms) N: No. of bytes processed
Read	$T = 0.4N + 17.4$
Write (with verification)	$T = 1.0N + 51.9$
Write (without verification)	$T = 0.7N + 35.2$

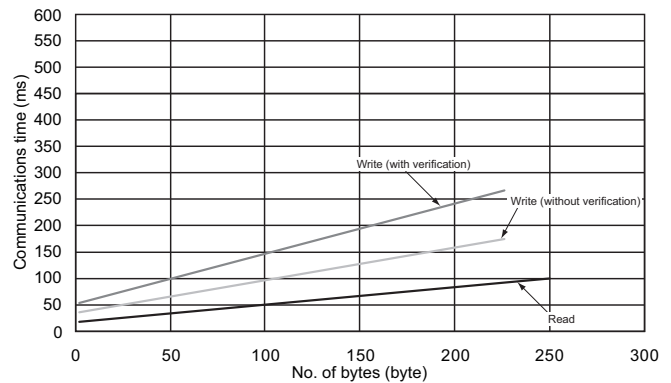

- Communication Option: FIFO Repeat (With ID code check)


Command	Communications time (ms) N: No. of bytes processed
Read	$T = 0.4N + 24.8$
Write (with verification)	$T = 1.2N + 76.1$
Write (without verification)	$T = 0.8N + 51.6$

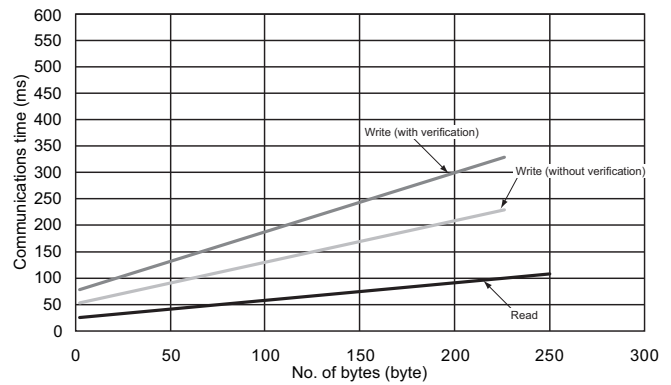

● **V680S-HMD6□-EIP and V680S-D8KF6□ (Communications speed setting: High speed)**


- Communication Option: Other than FIFO Repeat (With ID code check)

Command	Communications time (ms) N: No. of bytes processed
Read	$T = 0.4N + 33.0$
Write (with verification)	$T = 0.9N + 95.1$
Write (without verification)	$T = 0.5N + 65.8$

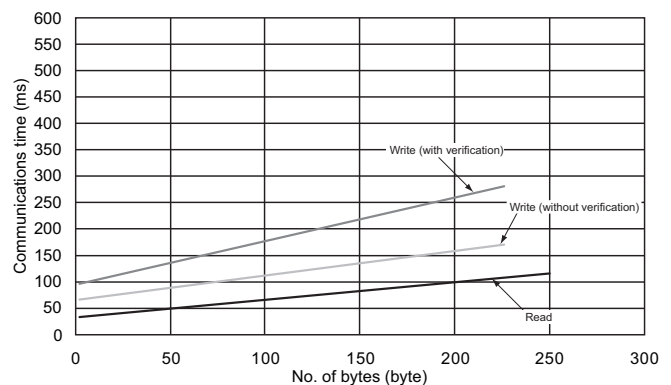

- Communication Option: FIFO Repeat (With ID code check)


Command	Communications time (ms) N: No. of bytes processed
Read	$T = 0.4N + 40.4$
Write (with verification)	$T = 1.0N + 116.5$
Write (without verification)	$T = 0.6N + 45.8$

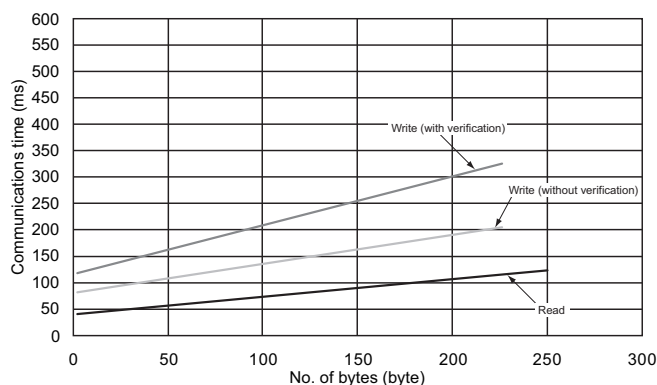

● V680S-HMD6□-EIP and V680S-D2KF6□ (Communications speed setting: Normal speed)


- Communication Option: Other than FIFO Repeat (With ID code check)

Command	Communications time (ms) N: No. of bytes processed
Read	$T = 0.9N + 18.7$
Write (with verification)	$T = 1.7N + 42.1$
Write (without verification)	$T = 0.9N + 32.0$

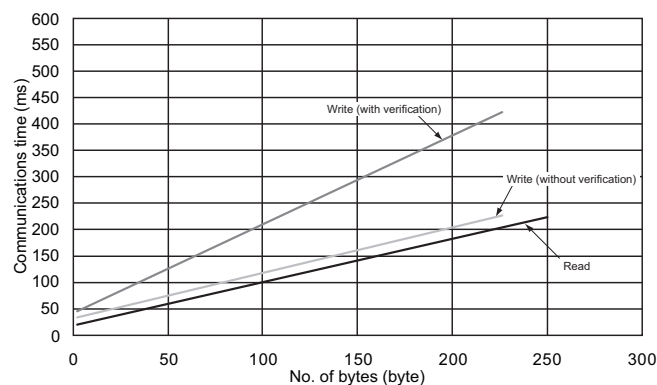

- Communication Option: FIFO Repeat (With ID code check)


Command	Communications time (ms) N: No. of bytes processed
Read	$T = 1.2N + 27.3$
Write (with verification)	$T = 2.4N + 60.2$
Write (without verification)	$T = 1.2N + 46.4$

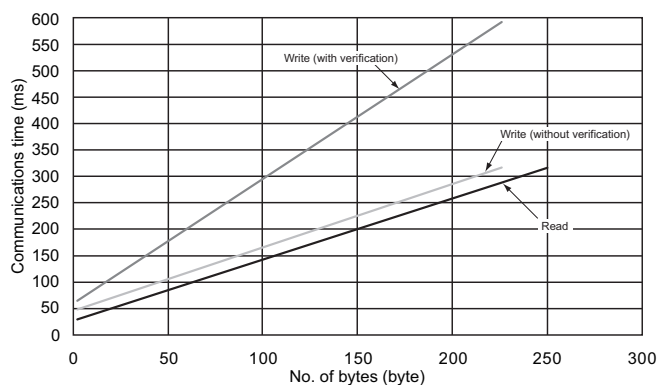

● **V680S-HMD6□-EIP and V680S-D8KF6□ (Communications speed setting: Normal speed)**


- Communication Option: Other than FIFO Repeat (With ID code check)

Command	Communications time (ms) N: No. of bytes processed
Read	$T = 0.5N + 36.1$
Write (with verification)	$T = 1.0N + 93.0$
Write (without verification)	$T = 0.5N + 65.8$

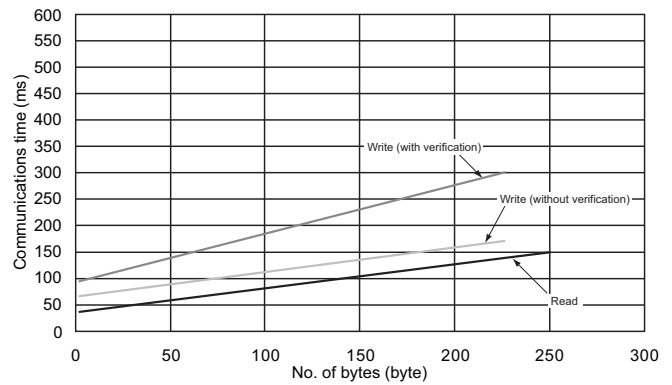

- Communication Option: FIFO Repeat (With ID code check)

Command	Communications time (ms) N: No. of bytes processed
Read	$T = 0.6N + 45.8$
Write (with verification)	$T = 1.1N + 113.1$
Write (without verification)	$T = 0.6N + 80.8$

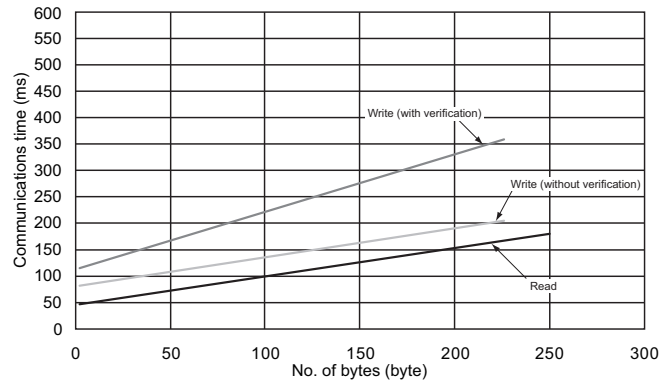

# Travel Speed Calculations

Set the communications option to Repeat to communicate with a moving RF Tag. The maximum speed for communicating with the RF Tag can be calculated simply using the following formula.


$$\text{Maximum speed} = \frac{D \text{ (Distance traveled in communications field)}}{T \text{ (Communications time)}}$$

D (Distance traveled in communications field) is calculated from the actual measurement or the communications field between the Reader/Writer and RF Tag.




## Precautions for Correct Use

In order to ensure a margin, it is preferable that the communication time is calculated at twice.

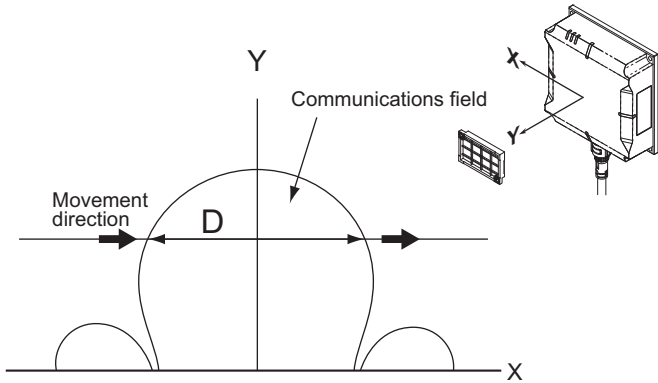

- Calculation Example

The following example is for reading 128 bytes with the V680S-D2KF68 and V680S-HMD66-EIP.

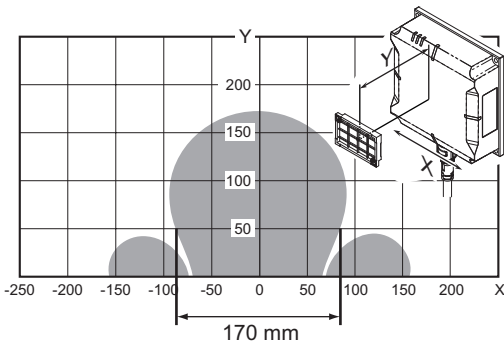

From the above chart,  
Distance traveled in communications field = 170 mm when Y (communications range) is 50 mm  
Communications time T = 267.8 ms (calculated from the communications time , i.e., 2 times ´ (0.9 ´ 128 bytes + 18.7))

Therefore, the maximum speed of the Tag is as follows:

$$\begin{aligned} \text{Maximum speed} &= \frac{D \text{ (Distance traveled in communications field)}}{T \text{ (Communications time)}} = \frac{170(\text{mm})}{267.8(\text{ms})} \\ &= 38.1 \text{ m/min} \end{aligned}$$

# A-2 Reader/Writer Installation Precautions


## A-2-1 V680S-HMD63-EIP

### Influence of Surrounding Metal on Reader/Writer

The Reader/Writer can be surface-mounted or it can be embedded in metal to protect it from collisions.

If you embed the Reader/Writer in metal, separate it at least 80 mm from any metallic surface to prevent malfunctions. If the distance between surrounding metal and the Reader/Writer is less than 80 mm, the Reader/Writer communications range will be greatly reduced.

Do not allow the height of the metal to exceed the height of the Reader/Writer.

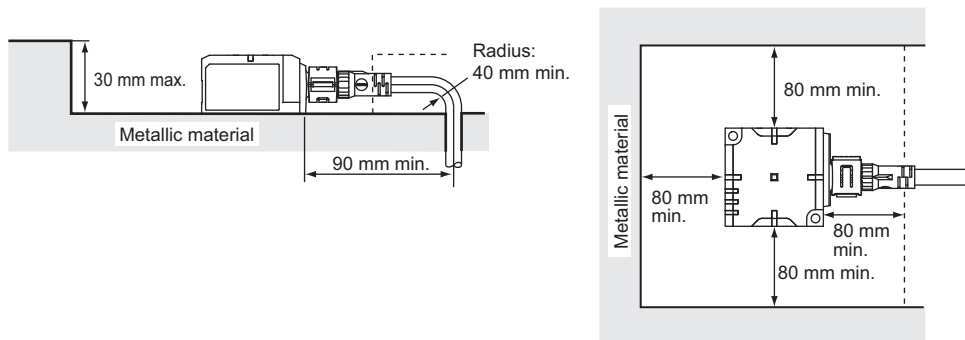

#### Precautions for Correct Use

- Provide a Cable bending radius of 40 mm or more.
- The communications range will be reduced significantly if the Reader/Writer is installed closer than 80 mm to metal surfaces.

### Mutual Interference of Reader/Writers


To prevent malfunctioning due to mutual interference when using more than one Reader/Writer, leave sufficient space between them as given in the following table.

If the distance between the Reader/Writers is too short, the read/write distances will be reduced.


RF Tag model	Mounting distance	
	Installing the Reader/Writer facing each other	Installing the Reader/Writer in parallel
V680-D1KP54T	230 mm	110 mm
V680-D1KP66T	300 mm	100 mm
V680-D1KP66MT	220 mm	100 mm
V680-D1KP66T-SP	300 mm	100 mm
V680S-D2KF67	370 mm	120 mm
V680S-D2KF67M	220 mm	100 mm
V680S-D8KF67	290 mm	120 mm

RF Tag model	Mounting distance	
	Installing the Reader/Writer facing each other	Installing the Reader/Writer in parallel
V680S-D8KF67M	240 mm	100 mm

Installing the Reader/Writers Facing Each Other

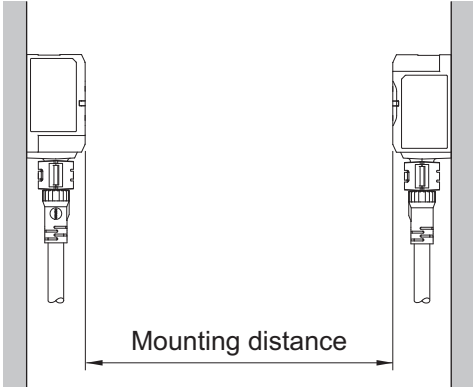

Installing the Reader/Writers in Parallel

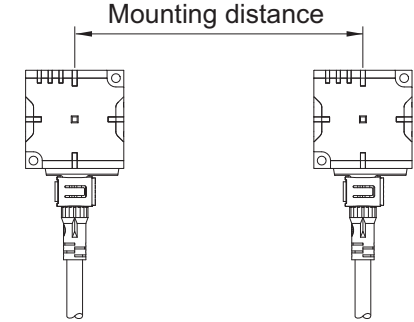


## A-2-2 V680S-HMD64-EIP

### Influence of Surrounding Metal on Reader/Writer

The Reader/Writer can be surface-mounted or it can be embedded in metal to protect it from collisions.

If you embed the Reader/Writer in metal, separate it at least 100 mm from any metallic surface to prevent malfunctions. If the distance between surrounding metal and the Reader/Writer is less than 100 mm, the Reader/Writer communications range will be greatly reduced.

Do not allow the height of the metal to exceed the height of the Reader/Writer.

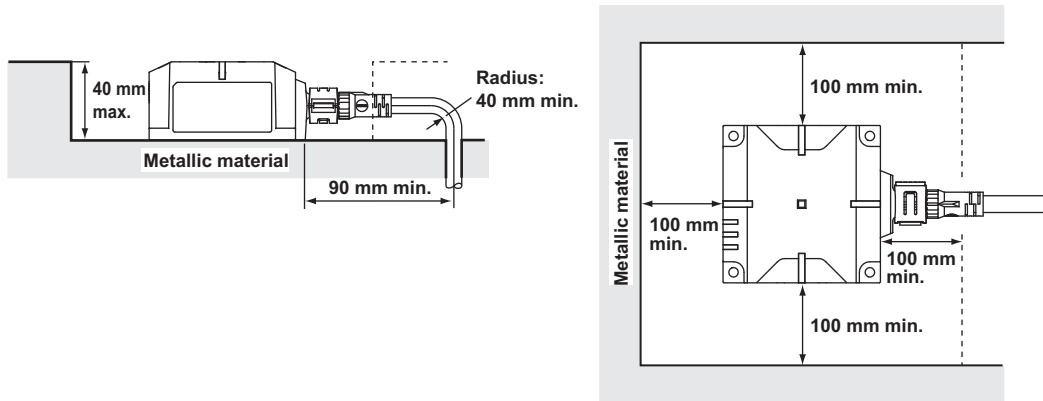

#### Precautions for Correct Use

- Provide a Cable bending radius of 40 mm or more.
- The communications range will be reduced significantly if the Reader/Writer is installed closer than 100 mm to metal surfaces.

### Mutual Interference of Reader/Writers (for Reference Only)

To prevent malfunctioning due to mutual interference when using more than one Reader/Writer, leave sufficient space between them as shown in the following diagrams.


If the distance between the Reader/Writers is too short, read / write distance will be reduced.

RF Tag model	Mounting distance	
	Installing the Reader/Writer facing each other	Installing the Reader/Writer in parallel
V680-D1KP54T	250 mm	125 mm
V680-D1KP66T	350 mm	150 mm
V680-D1KP66MT	250 mm	150 mm
V680-D1KP66T-SP	350 mm	150 mm
V680-D1KP58HTN	450 mm	125 mm
V680S-D2KF67	460 mm	170 mm
V680S-D2KF67M	220 mm	160 mm
V680S-D8KF67	400 mm	170 mm
V680S-D8KF67M	180 mm	160mm
V680S-D2KF68	600 mm	180 mm


**A**

RF Tag model	Mounting distance	
	Installing the Reader/Writer facing each other	Installing the Reader/Writer in parallel
V680S-D2KF68M	380 mm	160 mm
V680S-D8KF68	600 mm	180 mm
V680S-D8KF68M	260 mm	160 mm

Installing the Reader/Writer Facing Each Other

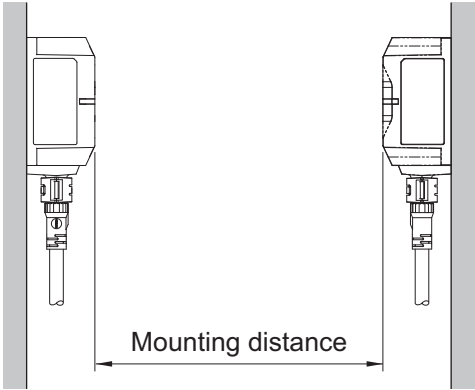

Installing the Reader/Writer in Parallel

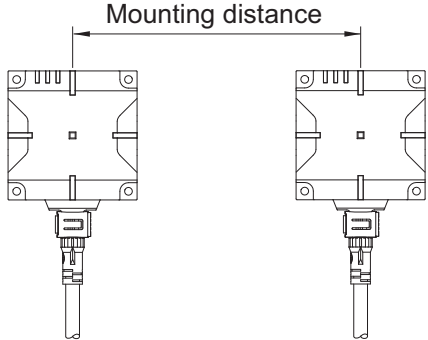


**A-2-3 V680S-HMD66-EIP**

**Influence of Surrounding Metal on Reader/Writer**

The Reader/Writer can be surface-mounted or it can be embedded in metal to protect it from collisions.

If you embed the Reader/Writer in metal, separate it at least 160 mm from any metallic surface to prevent malfunctions. If the distance between surrounding metal and the Reader/Writer is less than 160 mm, the Reader/Writer communications range will be greatly reduced.

Do not allow the height of the metal to exceed the height of the Reader/Writer.

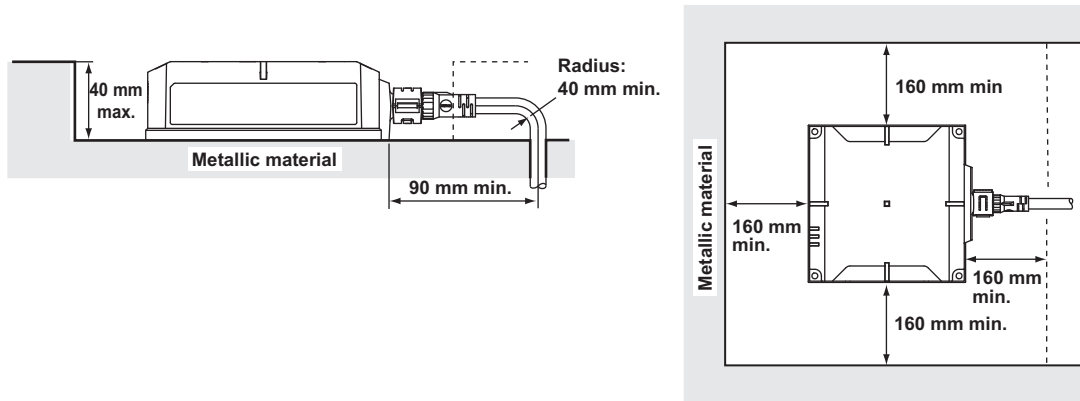

**Precautions for Correct Use**

- Provide a Cable bending radius of 40 mm or more.
- The communications range will be reduced significantly if the Reader/Writer is installed closer than 160 mm to metal surfaces.

**Mutual Interference of Reader/Writers (for Reference Only)**


To prevent malfunctioning due to mutual interference when using more than one Reader/Writer, leave sufficient space between them as shown in the following diagrams.

If the distance between the Reader/Writers is too short, read / write distance will be reduced.


RF Tag model	Mounting distance	
	Installing the Reader/Writer facing each other	Installing the Reader/Writer in parallel
V680-D1KP54T	340 mm	190 mm
V680-D1KP66T	410 mm	190 mm
V680-D1KP66MT	300 mm	180 mm
V680-D1KP66T-SP	410 mm	190 mm
V680-D1KP58HTN	500 mm	170 mm
V680S-D2KF67	460 mm	230 mm
V680S-D2KF67M	300 mm	230 mm
V680S-D8KF67	580 mm	250 mm
V680S-D8KF67M	280 mm	220 mm
V680S-D2KF68	750 mm	220 mm

RF Tag model	Mounting distance	
	Installing the Reader/Writer facing each other	Installing the Reader/Writer in parallel
V680S-D2KF68M	420 mm	220 mm
V680S-D8KF68	600 mm	240 mm
V680S-D8KF68M	360 mm	220 mm

Reader/Writers Installed Facing Each Other

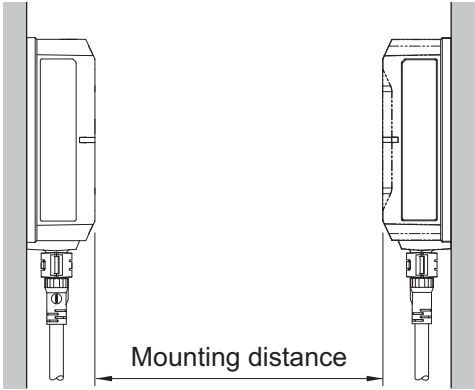

Reader/Writers Installed in Parallel

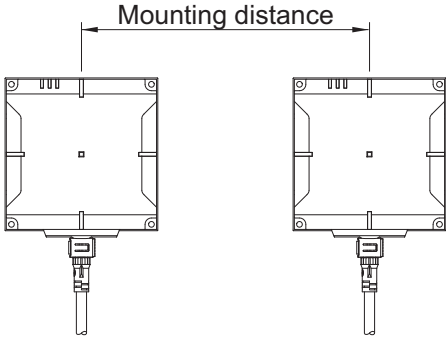



# A-3 RF Tag Installation Precautions

## A-3-1 V680-D1KP54T



### Effect of Metal behind RF Tags

The communications range will decrease if there is metal at the back of the V680-D1KP54T RF Tag. If the RF Tag is mounted on metallic material, use a non-metallic spacer (e.g., plastic or resin). The following graphs show the relationship between the distance from the RF Tag to the metallic surface and the communications range. The V700-A80 Attachment is 8 mm thick.



● V680S-HMD63-EIP and V680-D1KP54T

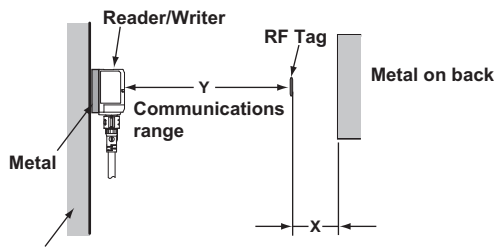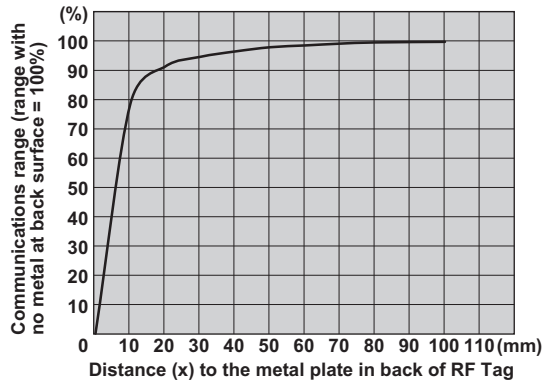

● V680S-HMD64-EIP and V680-D1KP54T

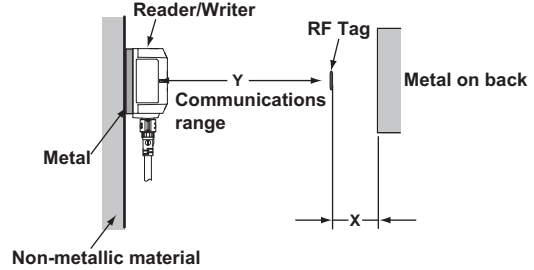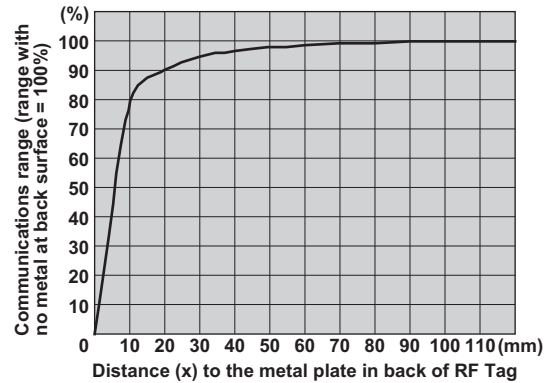

● V680S-HMD66-EIP and V680-D1KP54T

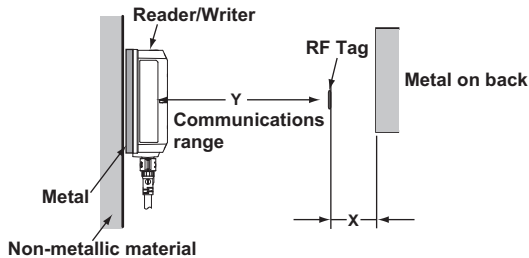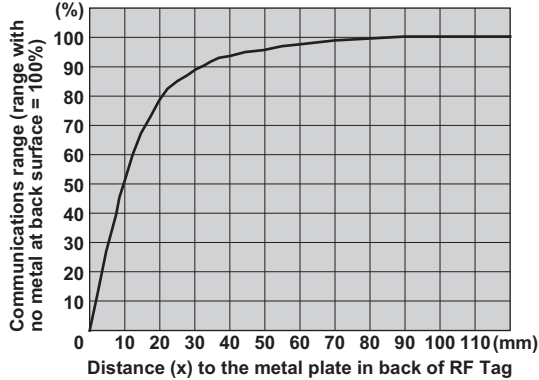


### Mutual Interference of RF Tags


If you use more than one RF Tag, separate them by at least the interval shown below to prevent malfunctions due to mutual interference.

If the distance between the RF tags is too short, read / write distance will be reduced.


- V680S-HMD63-EIP Reader/Writer

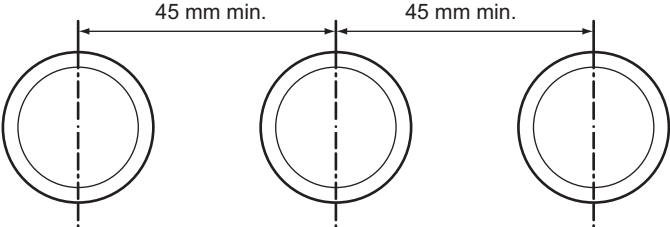

- V680S-HMD64-EIP Reader/Writer

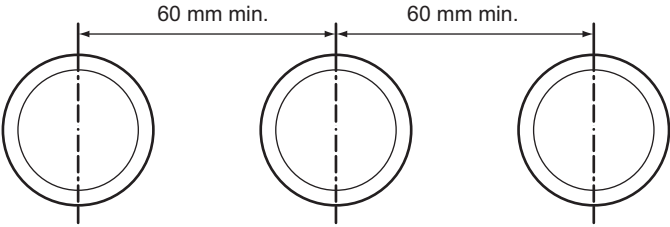

- V680S-HMD66-EIP Reader/Writer

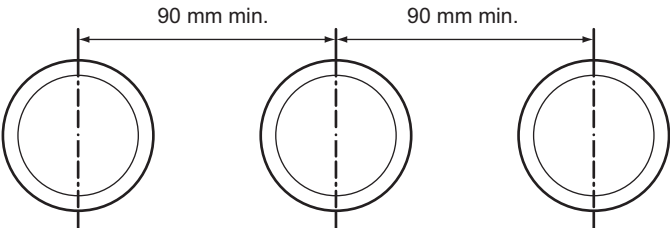

## Influence of Inclination

Install the Reader/Writer and RF Tags so that the Reader/Writer and RF Tags are as parallel to each other as possible.


Communications will be possible even if the Reader/Writer and RF Tags are not parallel to each other; however, the communications range is affected by the inclination between them as shown in the following graphs.

- Rates of Change in Communications Range for Inclination of V680-D1KP54T


	RF Tag inclination ( $\theta^\circ$ )									
	0	10	20	30	40	50	60	70	80	90
V680S-HMD63-EIP and V680-D1KP54T	0%	0%	-2%	-5%	-9%	-14%	-21%	-32%	-49%	---
V680S-HMD64-EIP and V680-D1KP54T	0%	-1%	-3%	-6%	-12%	-19%	-29%	-43%	-70%	---
V680S-HMD66-EIP and V680-D1KP54T	0%	-1%	-3%	-6%	-11%	-18%	-27%	-42%	-67%	---

- Measurement Conditions


- V680S-HMD63-EIP and V680-D1KP54T

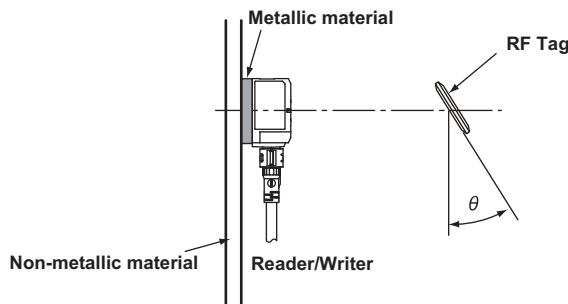

- V680S-HMD64-EIP and V680-D1KP54T

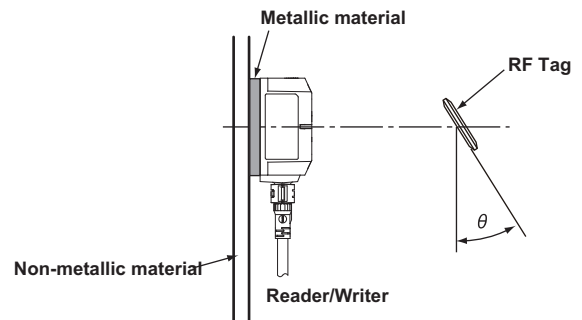

- V680S-HMD66-EIP and V680-D1KP54T

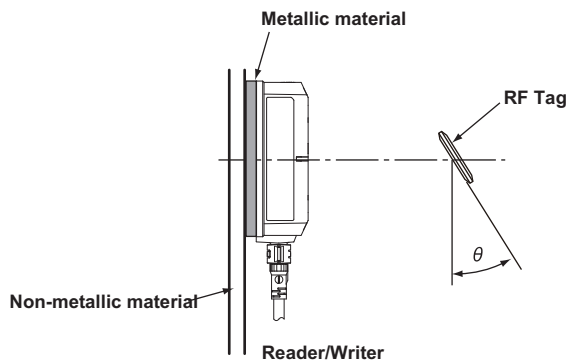


### A-3-2 V680-D1KP66T

## Influence of Metal at Back Surface



The communications range will decrease if there is metal at the back of the V680-D1KP66T RF Tag. If the RF Tag is mounted on metallic material, use the V600-A86 Attachment (sold separately) or insert a non-metallic spacer (e.g., plastic or resin). The following graphs show the relationship between the distance from the RF Tag to the metallic surface and the communications range. You can also use more than one Attachment (10 mm).

### Installation with the V600-A86 Attachment


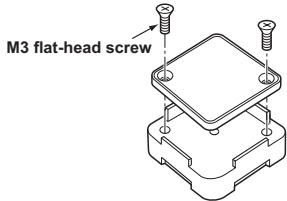


Note: Orient the RF Tag so that the mounting holes are aligned.



### ● V680S-HMD63-EIP and V680-D1KP66T

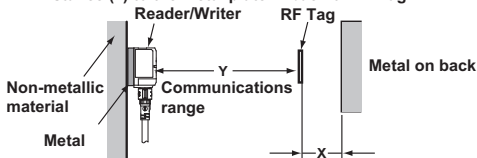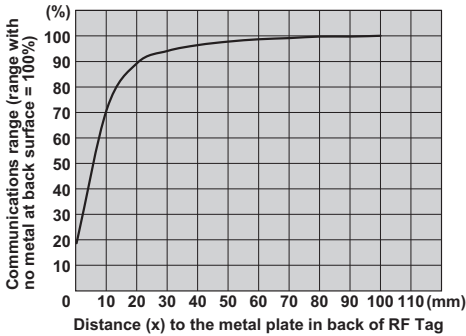

### ● V680S-HMD64-EIP and V680-D1KP66T

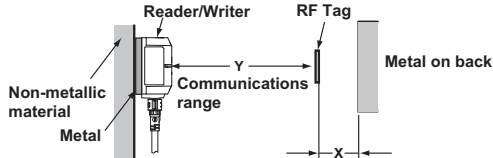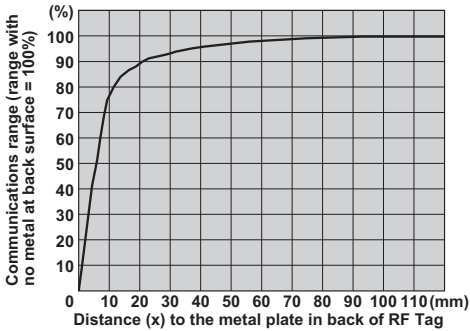

### ● V680S-HMD66-EIP and V680-D1KP66T

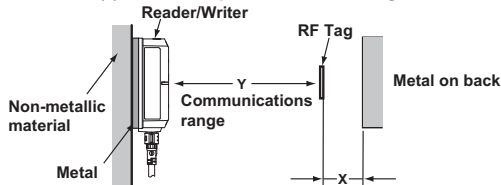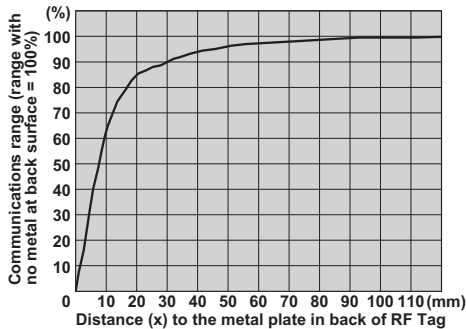


## Mutual Interference of RF Tags


If you use more than one RF Tag, separate them by at least the interval shown below to prevent malfunctions due to mutual interference.

If the distance between the RF tags is too short, read / write distance will be reduced.


- V680S-HMD63-EIP Reader/Writer

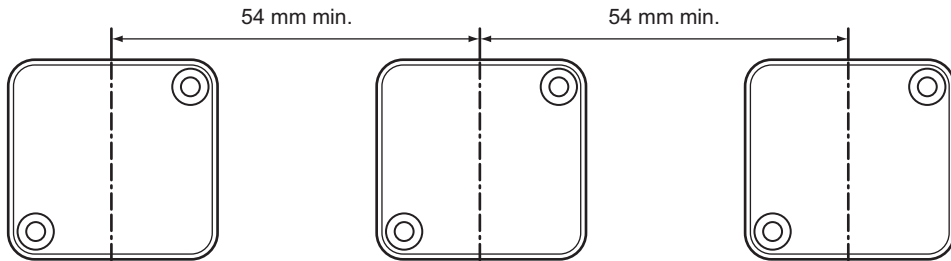

- V680S-HMD64-EIP Reader/Writer

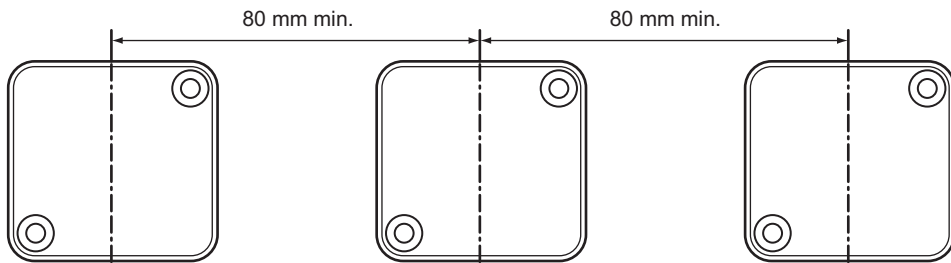

- V680S-HMD66-EIP Reader/Writer

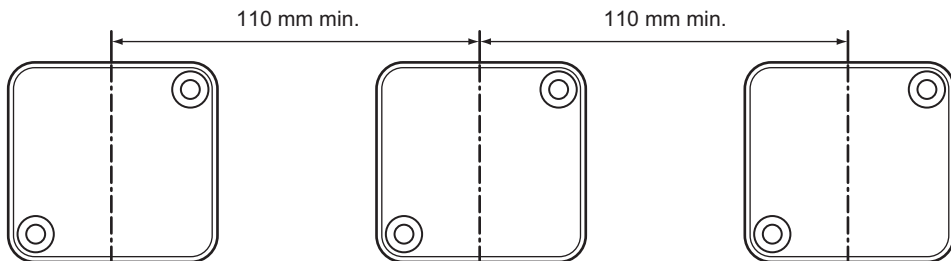

# Influence of Inclinationa

Install the Reader/Writer and RF Tags so that the Reader/Writer and RF Tags are as parallel to each other as possible.


Communications will be possible even if the Reader/Writer and RF Tags are not parallel to each other; however, the communications range is affected by the inclination between them as shown in the following graphs.

- Rates of Change in Communications Range for Inclination of V680-D1KP66T


	RF Tag inclination ( $\theta^\circ$ )									
	0	10	20	30	40	50	60	70	80	90
V680S-HMD63-EIP and V680-D1KP66T	0%	-1%	-2%	-4%	-8%	-13%	-19%	-29%	-44%	---
V680S-HMD64-EIP and V680-D1KP66T	0%	-1%	-3%	-5%	-9%	-14%	-21%	-32%	-48%	---
V680S-HMD66-EIP and V680-D1KP66T	0%	-1%	-3%	-6%	-10%	-17%	-27%	-41%	-62%	---

- Measurement Conditions


- V680S-HMD63-EIP and V680-D1KP66T

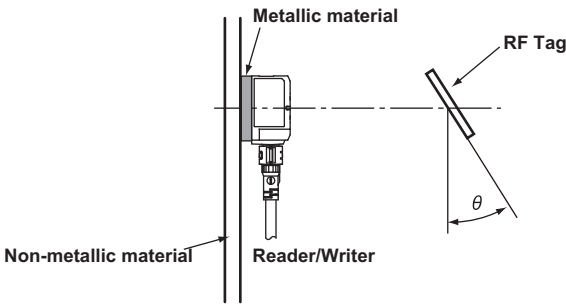

- V680S-HMD64-EIP and V680-D1KP66T

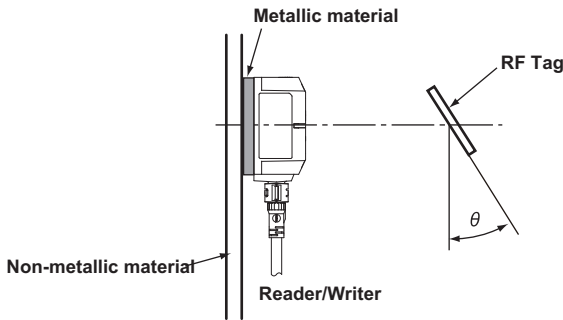


- V680S-HMD66-EIP and V680-D1KP66T

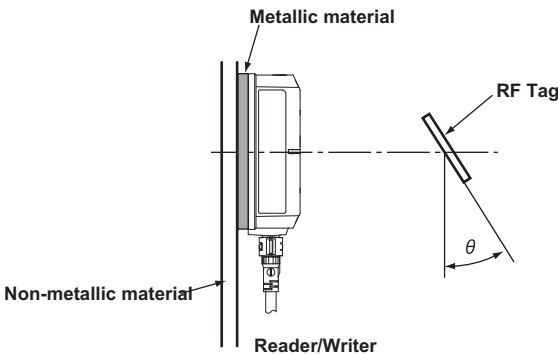


### A-3-3 V680-D1KP66MT

## Influence of Surrounding Metal


The V680-D1KP66MT can be surface-mounted or it can be embedded in metal. However, do not allow the height of the metal to exceed the height of the V680-D1KP66MT.

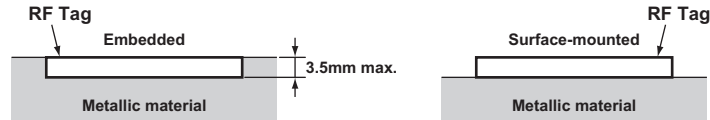



● V680S-HMD63-EIP and V680-D1KP66MT

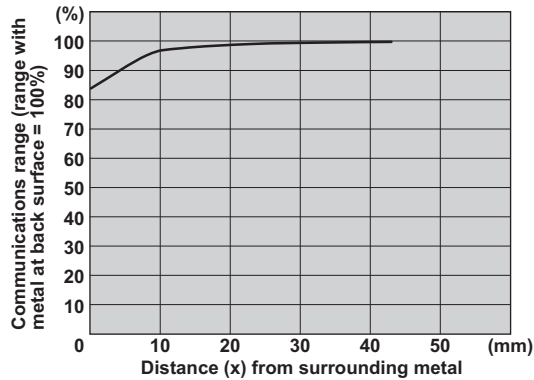

● V680S-HMD64-EIP and V680-D1KP66MT

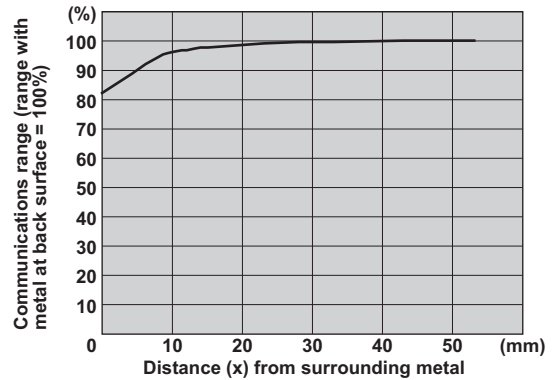

● V680S-HMD66-EIP and V680-D1KP66MT

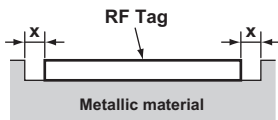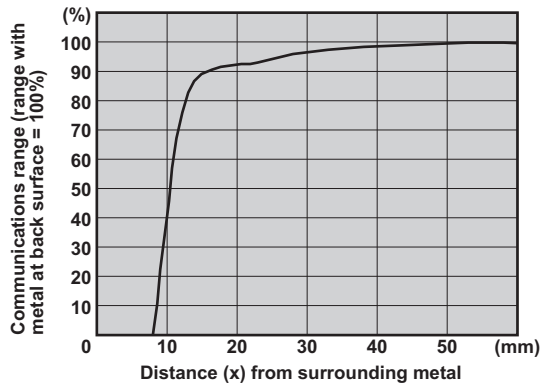


### Mutual Interference of RF Tags


If you use more than one RF Tag, separate them by at least the interval shown below to prevent malfunctions due to mutual interference.

If the distance between the RF tags is too short, read / write distance will be reduced.


- V680S-HMD63-EIP Reader/Writer

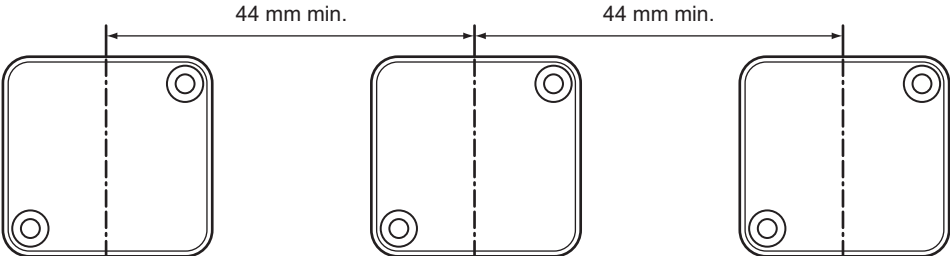

- V680S-HMD64-EIP Reader/Writer

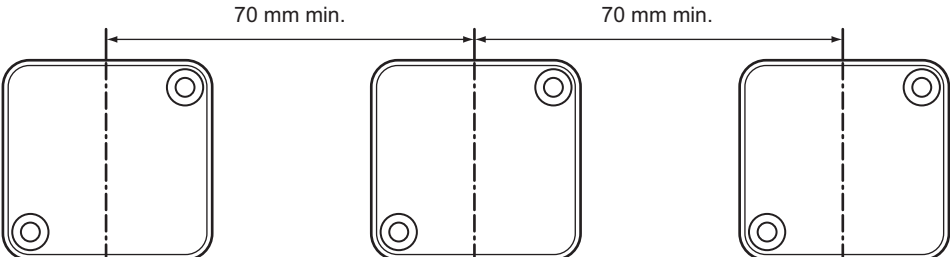

- V680S-HMD66-EIP Reader/Writer

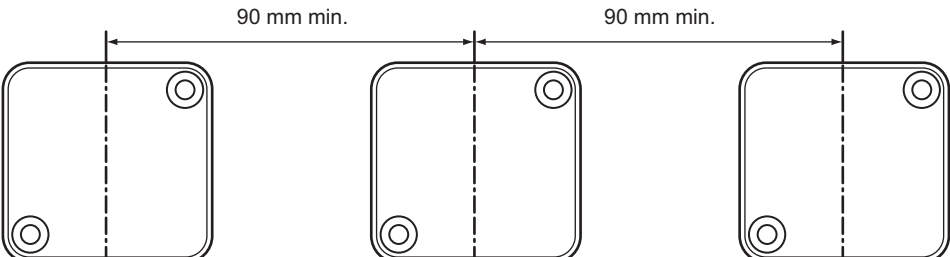

## Influence of Inclination

Install the Reader/Writer and RF Tags so that the Reader/Writer and RF Tags are as parallel to each other as possible.


Communications will be possible even if the Reader/Writer and RF Tags are not parallel to each other; however, the communications range is affected by the inclination between them as shown in the following graphs.

- Rates of Change in Communications Range for Inclination of V680-D1KP66MT


	RF Tag inclination ( $\theta^\circ$ )									
	0	10	20	30	40	50	60	70	80	90
V680S-HMD63-EIP and V680-D1KP66MT (Metal at back surface: Steel)	0%	-1%	-6%	-9%	-15%	-23%	-36%	-67%	---	---
V680S-HMD64-EIP and V680-D1KP66MT (Metal at back surface: Steel)	0%	0%	-2%	-5%	-10%	-18%	-31%	-59%	---	---
V680S-HMD66-EIP and V680-D1KP66MT (Metal at back surface: Steel)	0%	0%	-3%	-7%	-16%	-28%	-49%	---	---	---

- Measurement Conditions


- V680S-HMD63-EIP and V680-D1KP66MT  
(Metal at Back Surface: Steel)

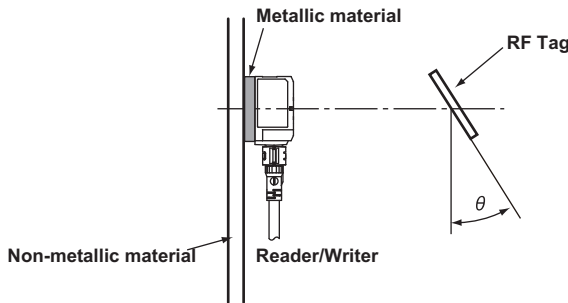

- V680S-HMD64-EIP and V680-D1KP66MT  
(Metal at Back Surface: Steel)

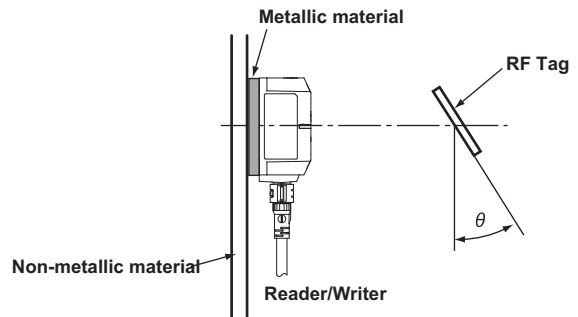

- V680S-HMD66-EIP and V680-D1KP66MT  
(Metal at Back Surface: Steel)


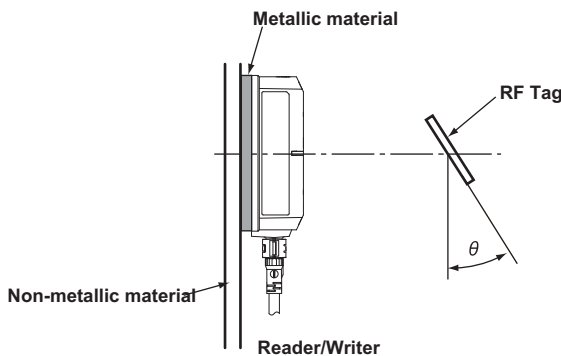


A-3-4 V680-D1KP66T-SP



Influence of Metal at Back Surface

The communications range will decrease if there is metal at the back of the V680-D1KP66T-SP RF Tag. If the RF Tag is mounted on metallic material, use a non-metallic spacer (e.g., plastic or resin). The following graphs show the relationship between the distance from the RF Tag to the metallic surface and the communications range.



● V680S-HMD63-EIP and V680-D1KP66T-SP

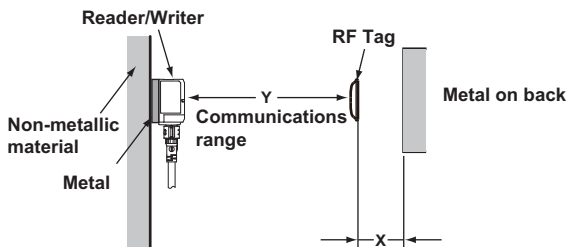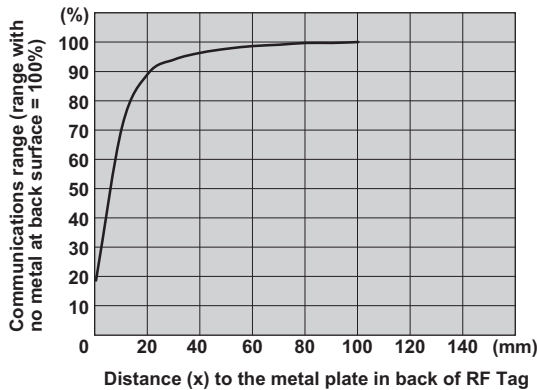

● V680S-HMD64-EIP and V680-D1KP66T-SP

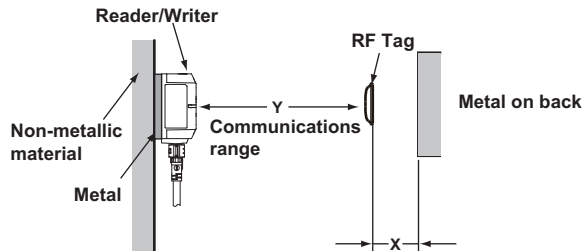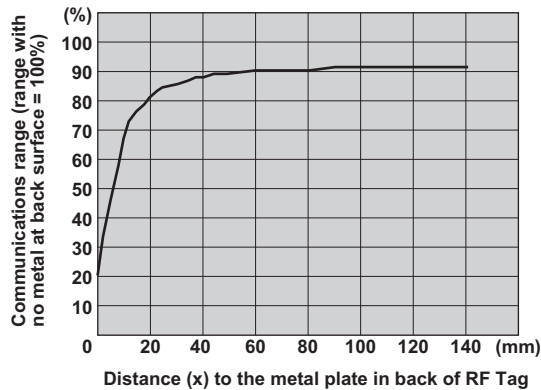

● V680S-HMD66-EIP and V680-D1KP66T-SP

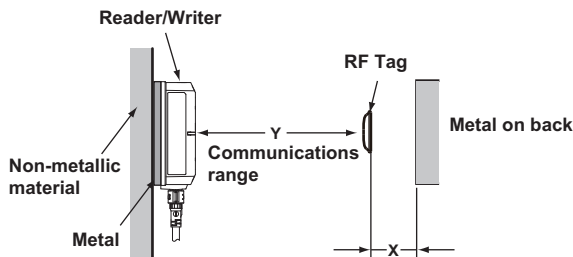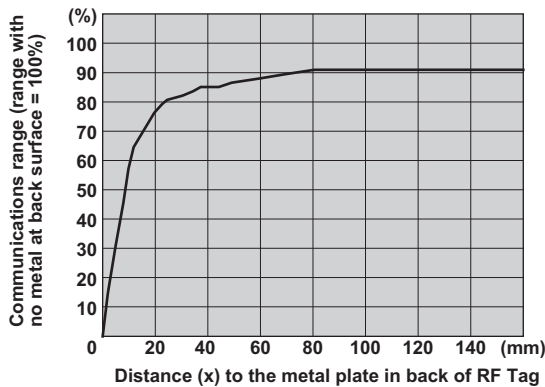


## Mutual Interference of RF Tags

If you use more than one RF Tag, separate them by at least the interval shown below to prevent malfunctions due to mutual interference.


If the distance between the RF tags is too short, read / write distance will be reduced.

- V680S-HMD63-EIP Reader/Writer

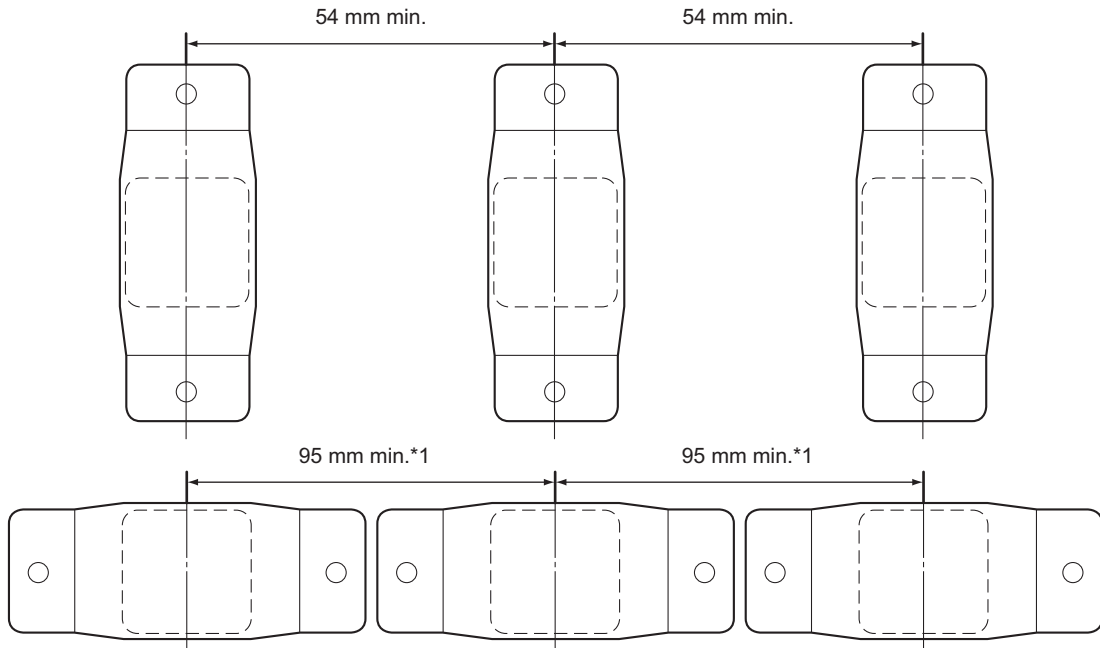


\*1 This is required for the V680-D1KP66T-SP exterior dimension (Length: 95 mm).

- V680S-HMD64-EIP Reader/Writer

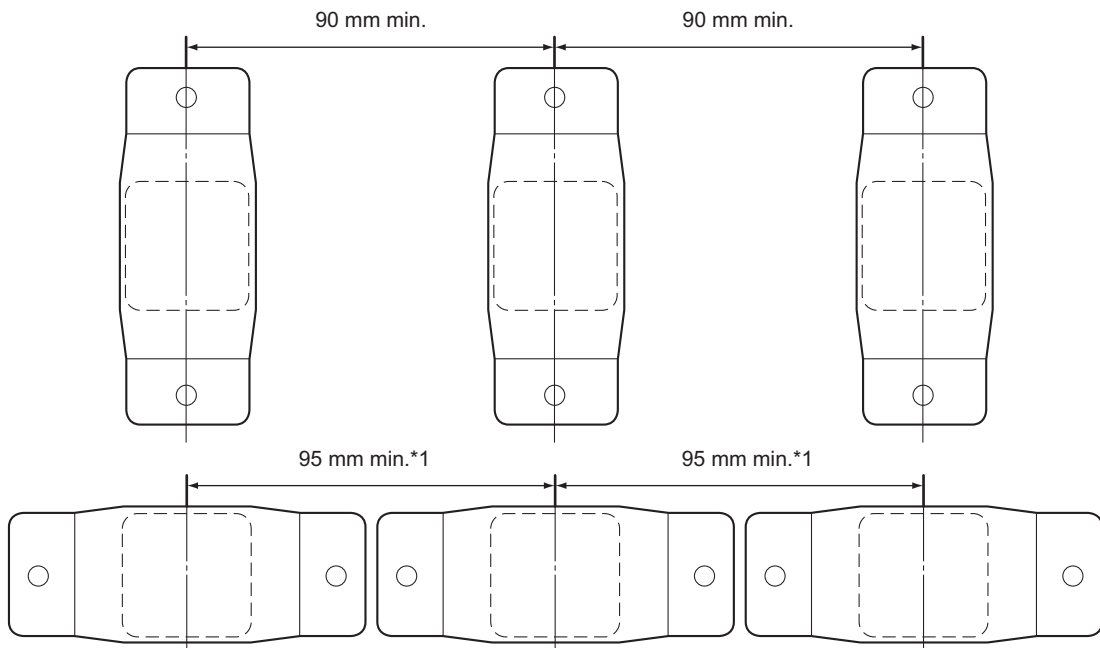

\*1 This is required for the V680-D1KP66T-SP exterior dimension (Length: 95 mm).

- V680S-HMD66-EIP Reader/Writer

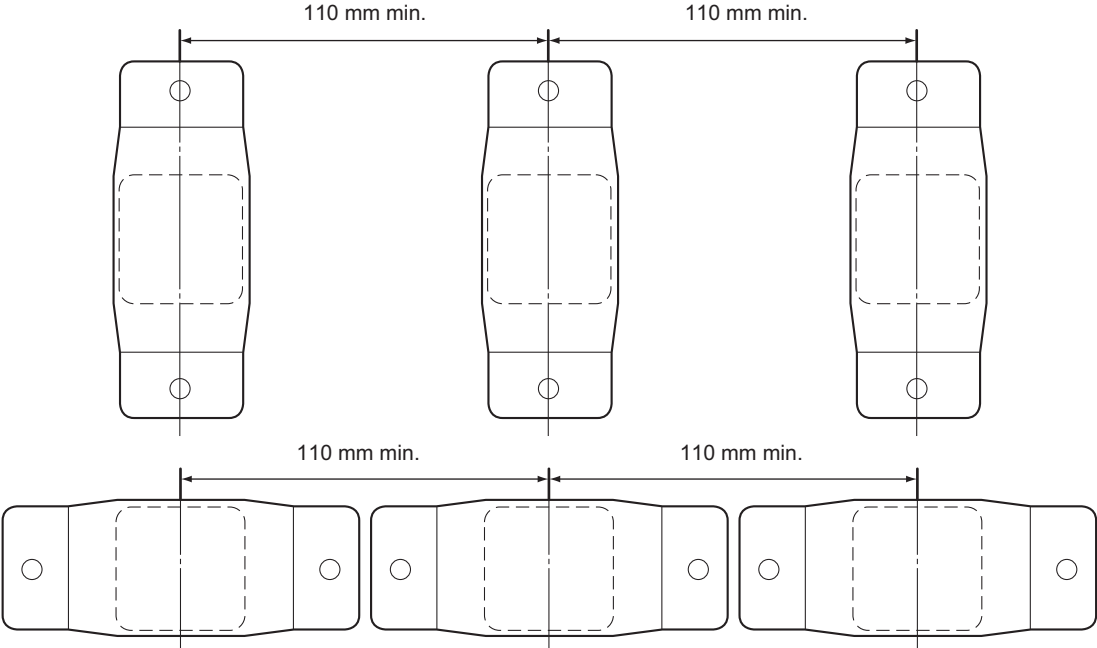

**A**

## Influence of Inclination

Install the Reader/Writer and RF Tags so that the Reader/Writer and RF Tags are as parallel to each other as possible.


Communications will be possible even if the Reader/Writer and RF Tags are not parallel to each other; however, the communications range is affected by the inclination between them as shown in the following graphs.

- Rates of Change in Communications Range for Inclination of V680-D1KP66T-SP


	RF Tag inclination ( $\theta^\circ$ )									
	0	10	20	30	40	50	60	70	80	90
V680S-HMD63-EIP and V680-D1KP66T-SP	0%	-1%	-2%	-4%	-8%	-13%	-19%	-29%	-44%	---
V680S-HMD64-EIP and V680-D1KP66T-SP	0%	-1%	-3%	-5%	-9%	-14%	-21%	-32%	-48%	---
V680S-HMD66-EIP and V680-D1KP66T-SP	0%	-1%	-3%	-6%	-10%	-17%	-27%	-41%	-62%	---

- Measurement Conditions


- V680S-HMD63-EIP and V680-D1KP66T-SP

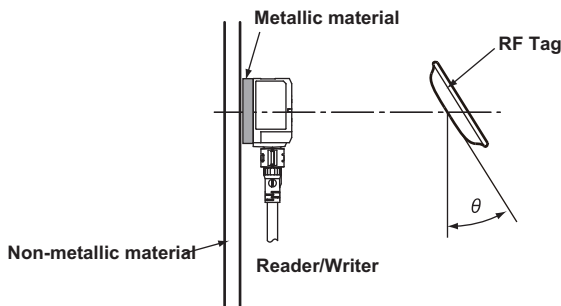

- V680S-HMD64-EIP and V680-D1KP66T-SP

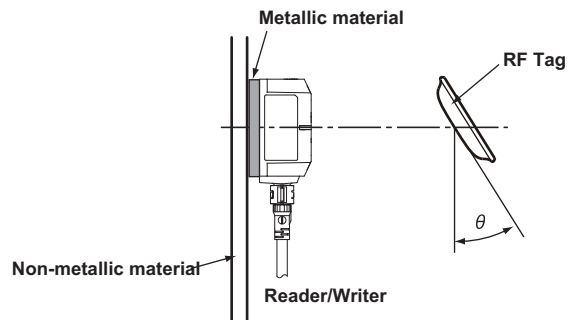

- V680S-HMD66-EIP and V680-D1KP66T-SP

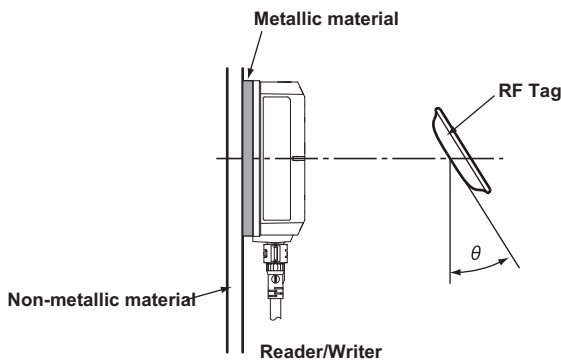

**A-3-5 V680-D1KP58HTN**


**Influence of Metal at Back Surface**

You must consider the influence of the mounting location when mounting RF Tags. The communications range of an RF Tag may be reduced by the influence of the surrounding objects. The amount that the communications range decreases will depend on the materials and shapes of the surrounding objects. As reference data, this section shows the influence of metal at the back surface of an RF Tag.

• Influence of Metal Objects

The following figure shows the percentage of decrease in the communications range when there is a metal object at the back surface of an RF Tag.

The X axis gives the distance between the RF Tag and a metal plate. The Y axis shows the relative communications range taking the communications range with no metal plate as 100% (i.e., it shows the percentage of decrease in the communications range).

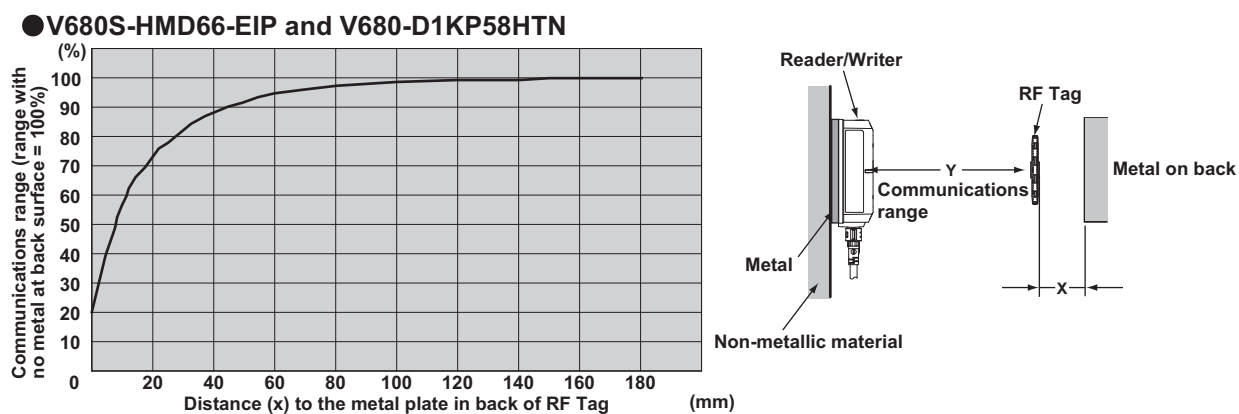

Material: Steel (thickness: 1.5 mm)


Shape: 295 ´ 295 mm

## Mutual Interference of RF Tags


If you use more than one RF Tag, separate them by at least the interval shown below to prevent malfunctions due to mutual interference.

If the distance between the RF tags is too short, read / write distance will be reduced.

- V680S-HMD64-EIP Reader/Writer

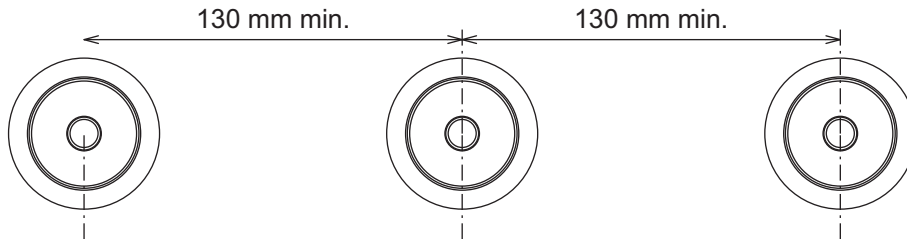

- V680S-HMD66-EIP Reader/Writer

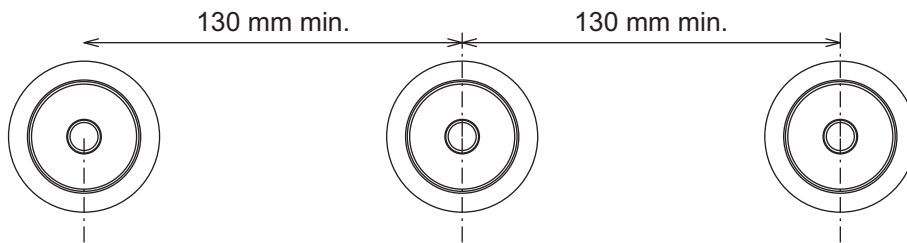

## Influence of Inclination

The maximum communications range is achieved when the RF Tags are mounted so that the surfaces of the RF Tags are parallel with the surface of the Reader/Writer. If the RF Tags are mounted at an angle, the communications range will decrease. You must consider the influence of the inclination of the RF Tags when mounting RF Tags.

As reference data, this section shows the decrease in the communications range due to RF Tag inclination.


The X axis gives the angle with 0° which indicates that the RF Tag and Reader/Writer surfaces are parallel to each other. The Y axis shows the relative communications range taking the communications range at 0° as 100% (i.e., it shows the percentage of decrease in the communications range).

- Rates of Change in Communications Range for Inclination of V680-D1KP58HTN


	RF Tag inclination (θ°)									
	0	10	20	30	40	50	60	70	80	90
V680S-HMD64-EIP and V680-D1KP58HTN	0%	-1%	-3%	-5%	-8%	-14%	-22%	-32%	-35%	---
V680S-HMD66-EIP and V680-D1KP58HTN	0%	-1%	-2%	-4%	-7%	-11%	-17%	-27%	-44%	---

• Measurement Conditions

•V680S-HMD64-EIP and V680-D1KP58HTN

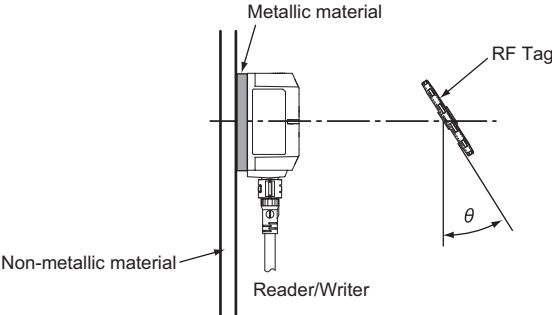

•V680S-HMD66-EIP and V680-D1KP58HTN

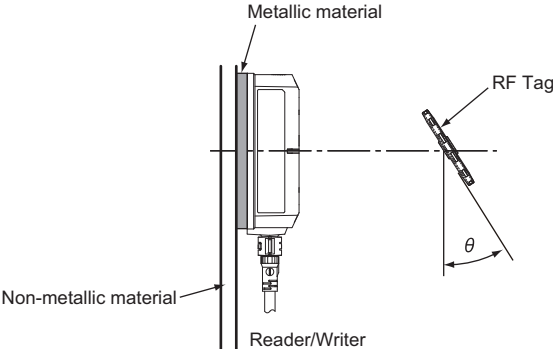



**A**

**A-3-6 V680S-D2KF67**



**Influence of Metal at Back Surface of RF Tags**

The communications range will decrease if there is metal at the back of the V680S-D2KF67 RF Tag. If the RF Tag is mounted on metallic material, use a non-metallic spacer (e.g., plastic or resin). The following graphs show the relationship between the distance from the RF Tag to the metallic surface and the communications range.



● **V680S-HMD63-EIP and V680S-D2KF67**

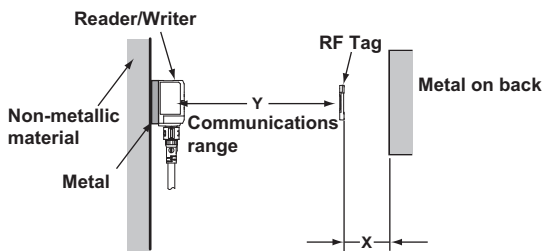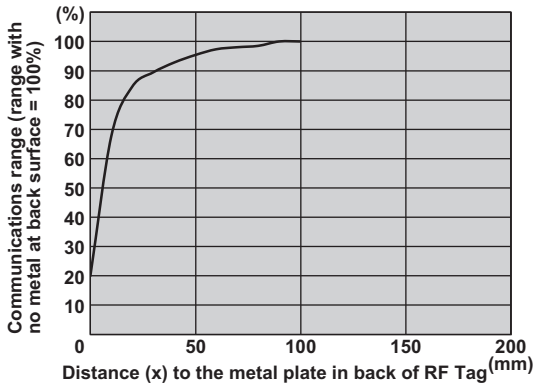

● **V680S-HMD64-EIP and V680S-D2KF67**

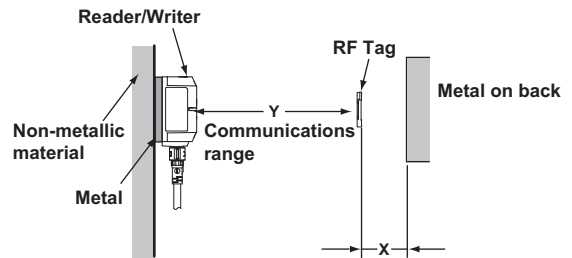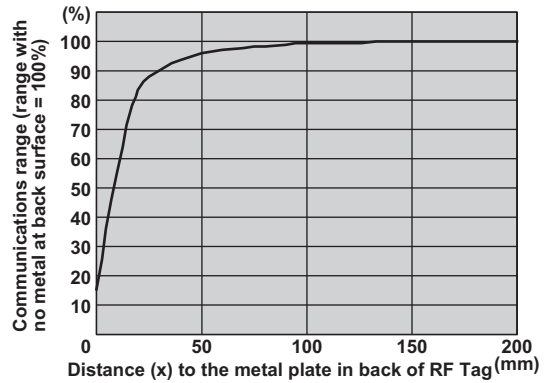

● **V680S-HMD66-EIP and V680S-D2KF67**

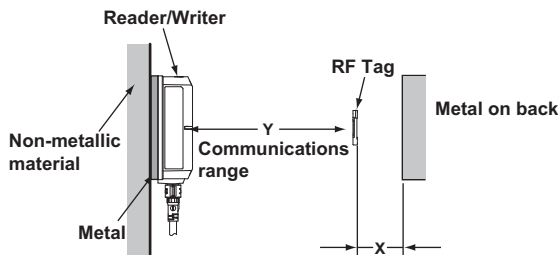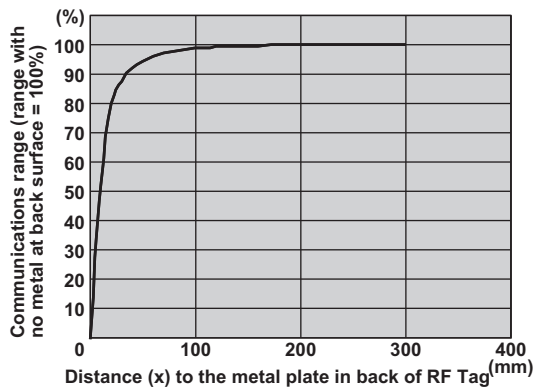


### Mutual Interference of RF Tags


If you use more than one RF Tag, separate them by at least the interval shown below to prevent malfunctions due to mutual interference.

If the distance between the RF tags is too short, read / write distance will be reduced.


- V680S-HMD63-EIP Reader/Writer

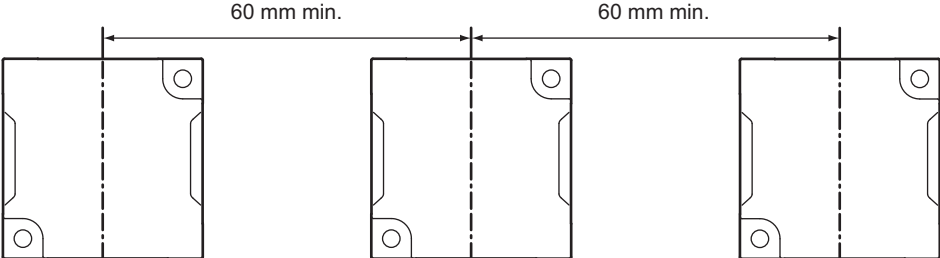

- V680S-HMD64-EIP Reader/Writer

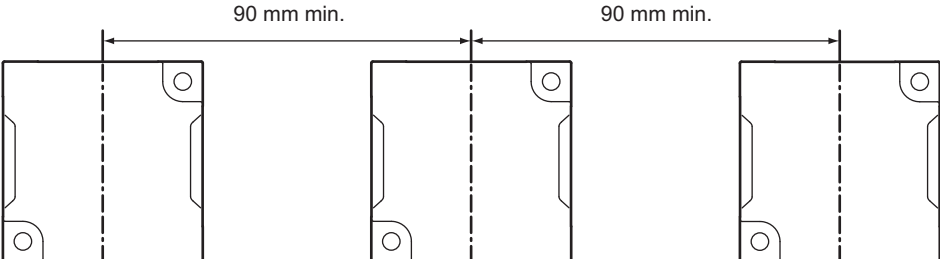

- V680S-HMD66-EIP Reader/Writer

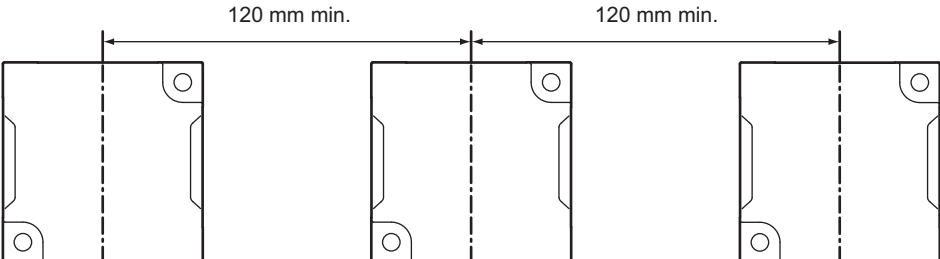

## Influence of Inclination

Install the Reader/Writer and RF Tags so that the Reader/Writer and RF Tags are as parallel to each other as possible.


Communications will be possible even if the Reader/Writer and RF Tags are not parallel to each other; however, the communications range is affected by the inclination between them as shown in the following graphs.

- Rates of Change in Communications Range for Inclination of V680S-D2KF67


	RF Tag inclination ( $\theta^\circ$ )									
	0	10	20	30	40	50	60	70	80	90
V680S-HMD63-EIP and V680S-D2KF67	0%	-1%	-2%	-4%	-8%	-13%	-20%	-29%	-44%	---
V680S-HMD64-EIP and V680S-D2KF67	0%	-1%	-3%	-5%	-8%	-13%	-19%	-27%	-38%	---
V680S-HMD66-EIP and V680S-D2KF67	0%	-1%	-2%	-4%	-8%	-13%	-19%	-29%	-43%	---

- Measurement Conditions


- V680S-HMD63-EIP and V680S-D2KF67

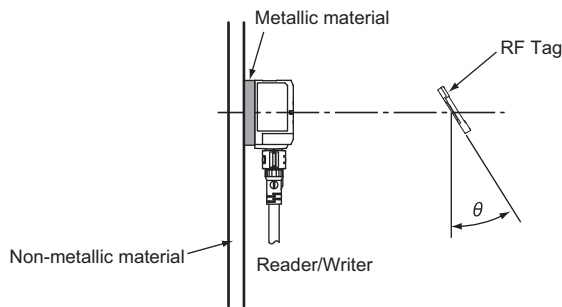

- V680S-HMD64-EIP and V680S-D2KF67

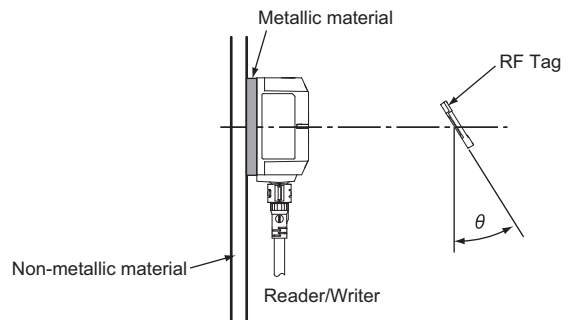


- V680S-HMD66-EIP and V680S-D2KF67

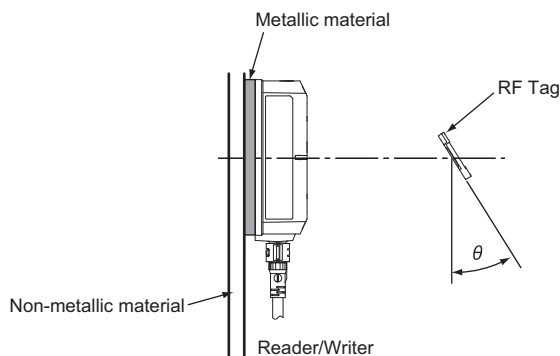


# A-3-7 V680S-D2KF67M

## Influence of Surrounding Metal


The V680S-D2KF67M can be surface-mounted or it can be embedded in metal. However, do not allow the height of the metal to exceed the height of the V680S-D2KF67M.

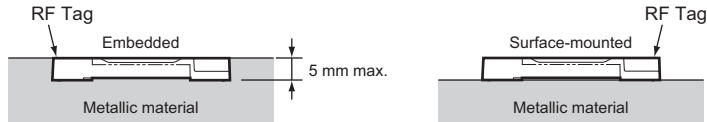



● V680S-HMD63-EIP and V680S-D2KF67M

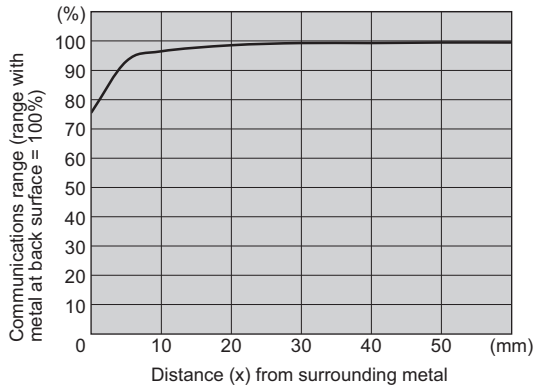

● V680S-HMD64-EIP and V680S-D2KF67M

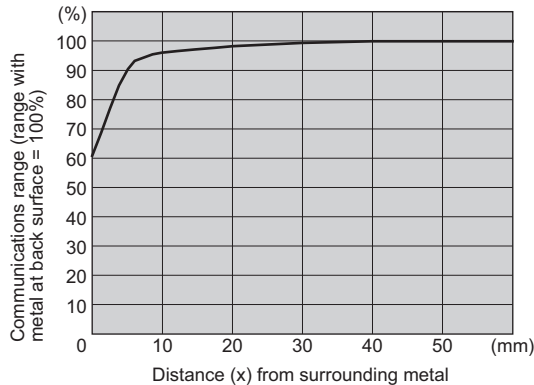

● V680S-HMD66-EIP and V680S-D2KF67M

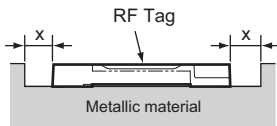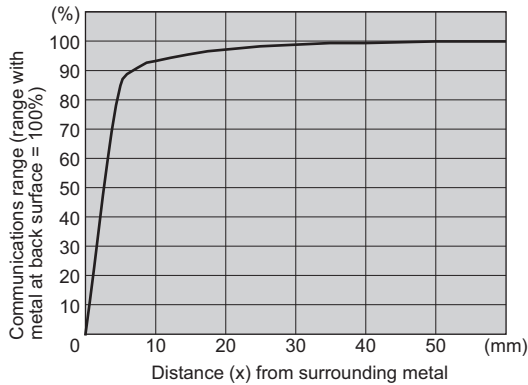


## Mutual Interference of RF Tags


If you use more than one RF Tag, separate them by at least the interval shown below to prevent malfunctions due to mutual interference.

If the distance between the RF tags is too short, read / write distance will be reduced.


- V680S-HMD63-EIP Reader/Writer

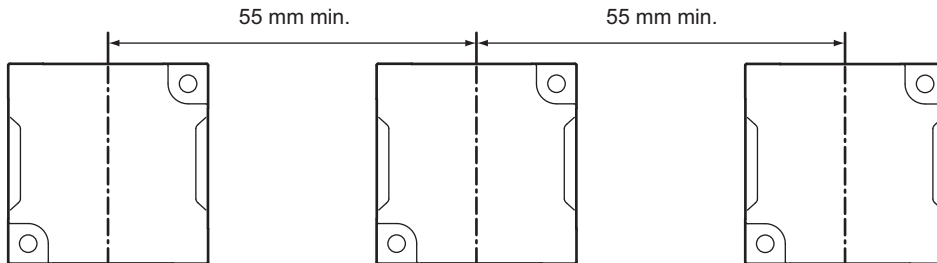

- V680S-HMD64-EIP Reader/Writer

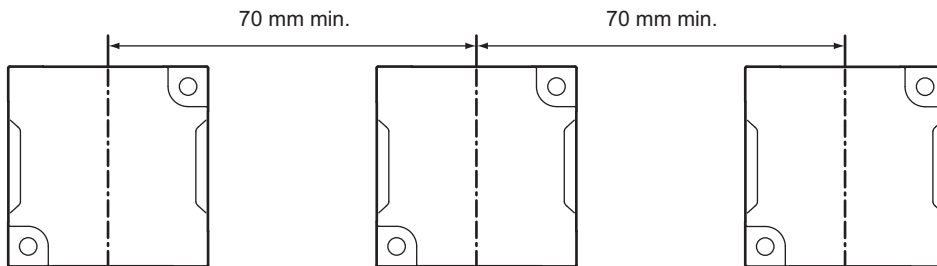

- V680S-HMD66-EIP Reader/Writer

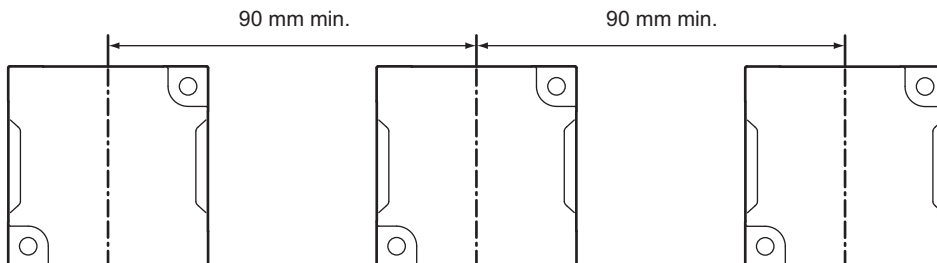

## Influence of Inclination

Install the Reader/Writer and RF Tags so that the Reader/Writer and RF Tags are as parallel to each other as possible.


Communications will be possible even if the Reader/Writer and RF Tags are not parallel to each other; however, the communications range is affected by the inclination between them as shown in the following graphs.

- Rates of Change in Communications Range for Inclination of V680S-D2KF67M


	RF Tag inclination ( $\theta^\circ$ )									
	0	10	20	30	40	50	60	70	80	90
V680S-HMD63-EIP and V680S-D2KF67M (Metal at back surface: Steel)	0%	-1%	-4%	-8%	-15%	-25%	-50%	---	---	---
V680S-HMD64-EIP and V680S-D2KF67M (Metal at back surface: Steel)	0%	-1%	-3%	-7%	-12%	-21%	-37%	---	---	---
V680S-HMD66-EIP and V680S-D2KF67M (Metal at back surface: Steel)	0%	-1%	-4%	-9%	-18%	-33%	---	---	---	---

- Measurement Conditions


- V680S-HMD63-EIP and V680S-D2KF67M  
(Metal at back surface: Steel)

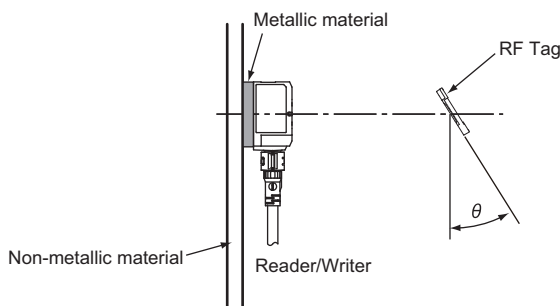

- V680S-HMD64-EIP and V680S-D2KF67M  
(Metal at back surface: Steel)

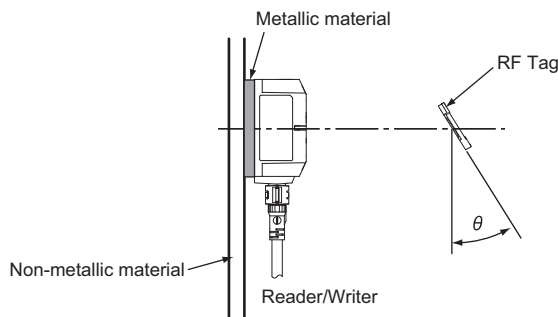

- V680S-HMD66-EIP and V680S-D2KF67M  
(Metal at back surface: Steel)


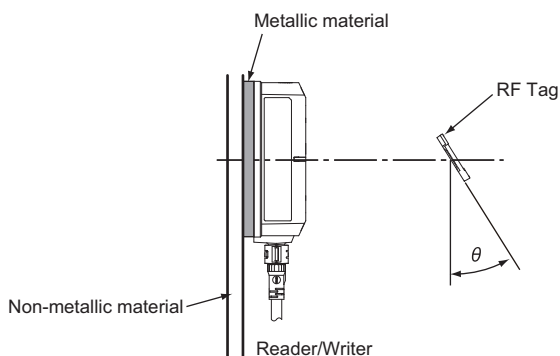


**A-3-8 V680S-D8KF67**



**Influence of Metal at Back Surface of RF Tags**

The communications range will decrease if there is metal at the back of the V680S-D8KF67 RF Tag. If the RF Tag is mounted on metallic material, use a non-metallic spacer (e.g., plastic or resin). The following graphs show the relationship between the distance from the RF Tag to the metallic surface and the communications range.



● V680S-HMD63-EIP and V680S-D8KF67

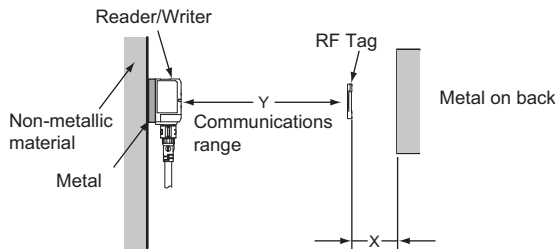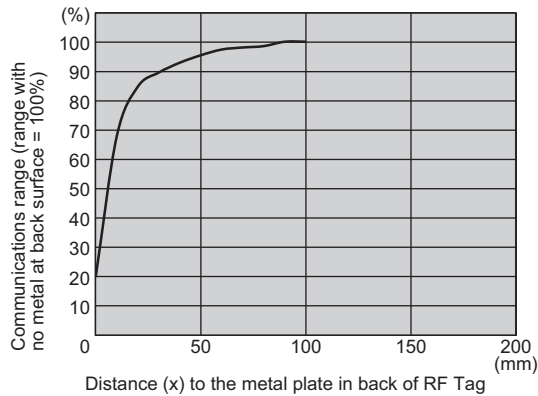

● V680S-HMD64-EIP and V680S-D8KF67

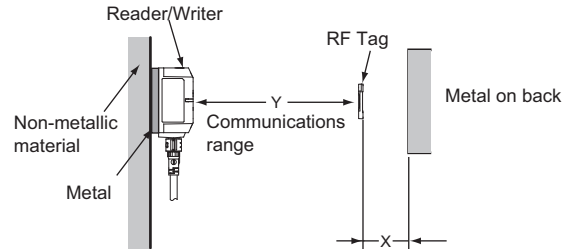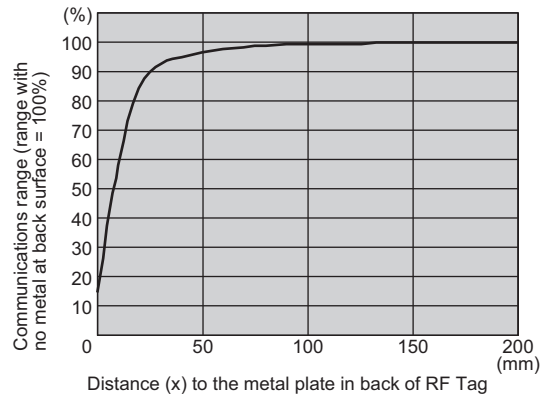

● V680S-HMD66-EIP and V680S-D8KF67

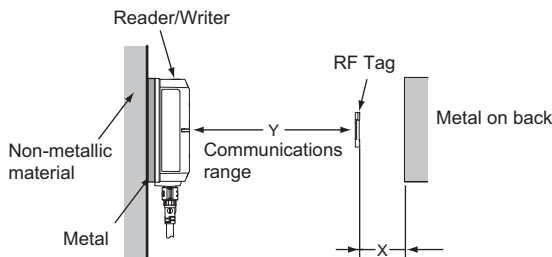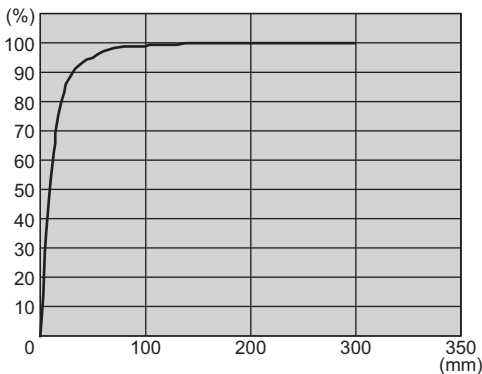


### Mutual Interference of RF Tags


If you use more than one RF Tag, separate them by at least the interval shown below to prevent malfunctions due to mutual interference.

If the distance between the RF tags is too short, read / write distance will be reduced.


- V680S-HMD63-EIP Reader/Writer

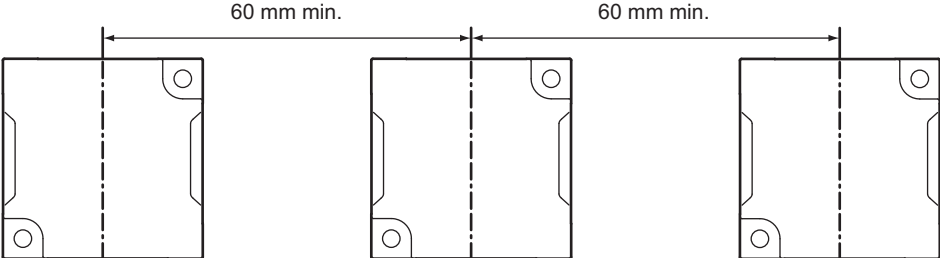

- V680S-HMD64-EIP Reader/Writer

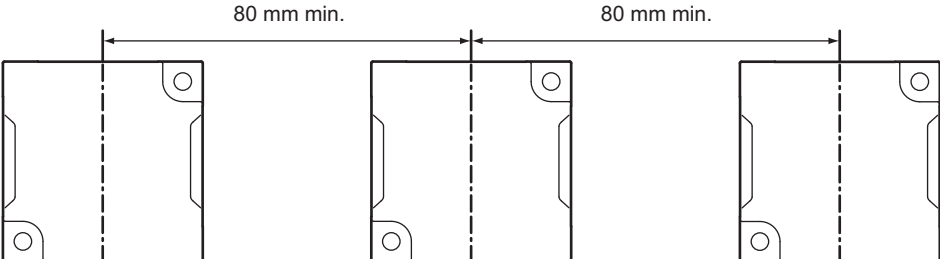

- V680S-HMD66-EIP Reader/Writer

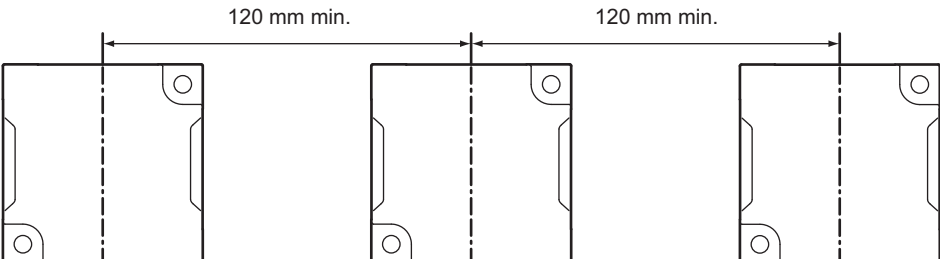

## Influence of Inclination

Install the Reader/Writer and RF Tags so that the Reader/Writer and RF Tags are as parallel to each other as possible.


Communications will be possible even if the Reader/Writer and RF Tags are not parallel to each other; however, the communications range is affected by the inclination between them as shown in the following graphs.

- Rates of Change in Communications Range for Inclination of V680S-D2KF67


	RF Tag inclination ( $\theta^\circ$ )									
	0	10	20	30	40	50	60	70	80	90
V680S-HMD63-EIP and V680S-D8KF67	0%	-1%	-2%	-5%	-8%	-13%	-20%	-30%	-45%	---
V680S-HMD64-EIP and V680S-D8KF67	0%	-1%	-2%	-4%	-6%	-10%	-17%	-24%	-36%	---
V680S-HMD66-EIP and V680S-D8KF67	0%	-1%	-2%	-4%	-7%	-12%	-19%	-28%	-42%	---

- Measurement Conditions


- V680S-HMD63-EIP and V680S-D8KF67

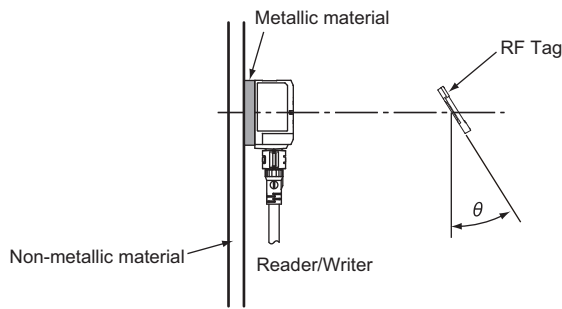

- V680S-HMD64-EIP and V680S-D8KF67

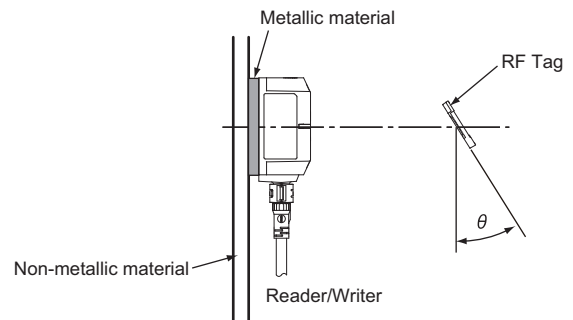


- V680S-HMD66-EIP and V680S-D8KF67

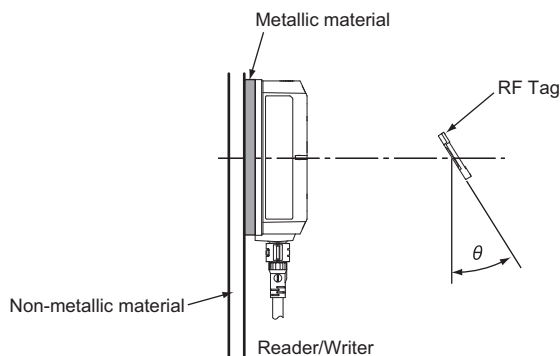


# A-3-9 V680S-D8KF67M

## Influence of Surrounding Metal


The V680S-D8KF67M can be surface-mounted or it can be embedded in metal. However, do not allow the height of the metal to exceed the height of the V680S-D8KF67M.

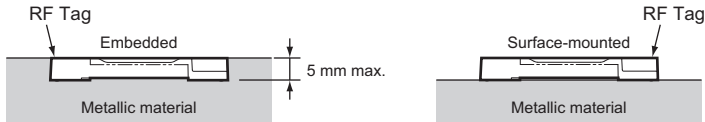



● V680S-HMD63-EIP and V680S-D8KF67M

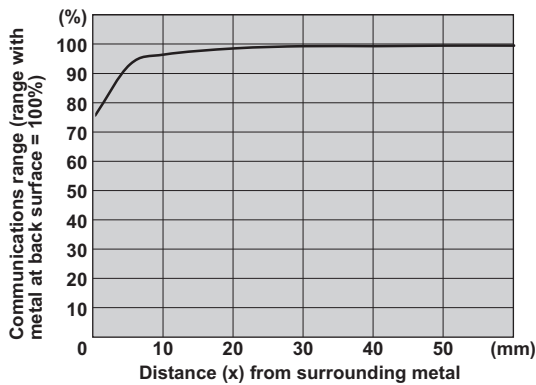

● V680S-HMD64-EIP and V680S-D8KF67M

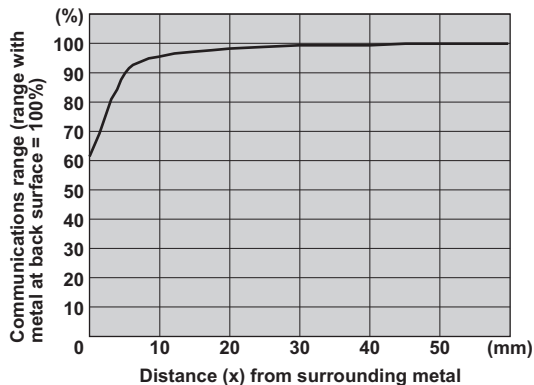

● V680S-HMD66-EIP and V680S-D8KF67M

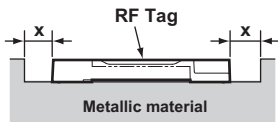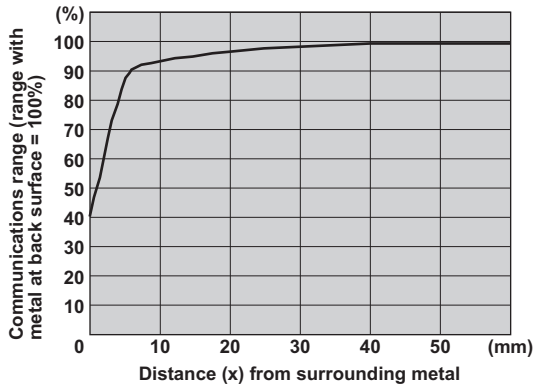


## Mutual Interference of RF Tags


If you use more than one RF Tag, separate them by at least the interval shown below to prevent malfunctions due to mutual interference.

If the distance between the RF tags is too short, read / write distance will be reduced.


- V680S-HMD63-EIP Reader/Writer

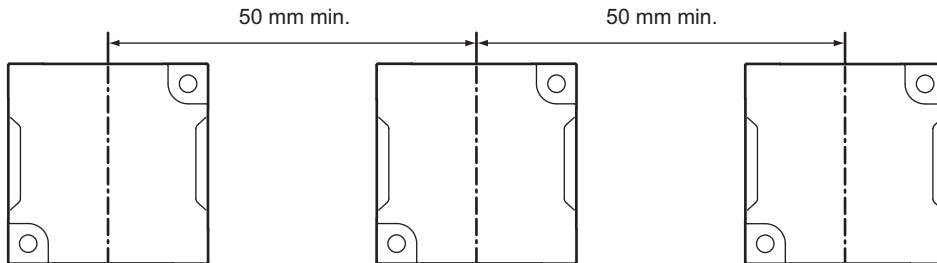

- V680S-HMD64-EIP Reader/Writer

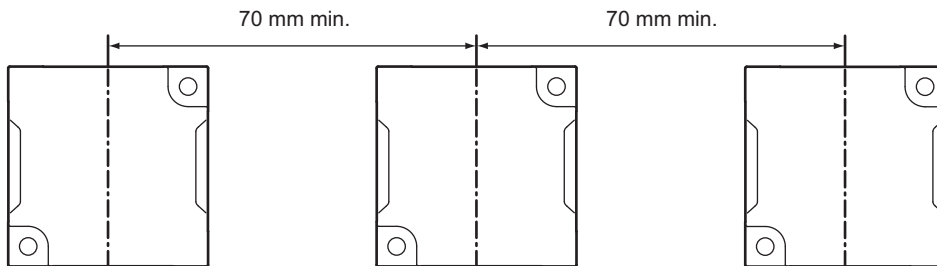

- V680S-HMD66-EIP Reader/Writer

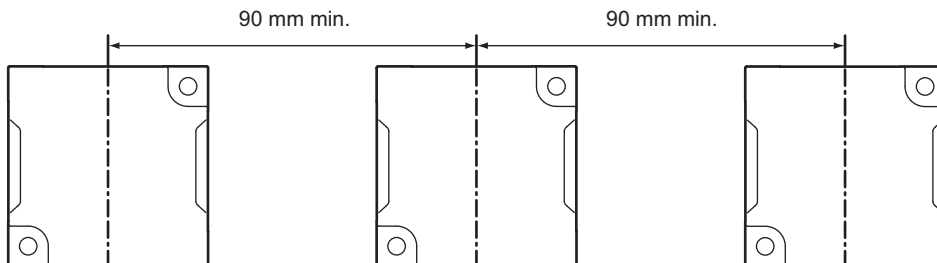

## Influence of Inclination

Install the Reader/Writer and RF Tags so that the Reader/Writer and RF Tags are as parallel to each other as possible.


Communications will be possible even if the Reader/Writer and RF Tags are not parallel to each other; however, the communications range is affected by the inclination between them as shown in the following graphs.

- Rates of Change in Communications Range for Inclination of V680S-D8KF67M


	RF Tag inclination ( $\theta^\circ$ )									
	0	10	20	30	40	50	60	70	80	90
V680S-HMD63-EIP and V680S-D8KF67M (Metal at back surface: Steel)	0%	-1%	-3%	-7%	-13%	-24%	-47%	---	---	---
V680S-HMD64-EIP and V680S-D8KF67M (Metal at back surface: Steel)	0%	-1%	-3%	-7%	-13%	-22%	-38%	---	---	---
V680S-HMD66-EIP and V680S-D8KF67M (Metal at back surface: Steel)	0%	-1%	-4%	-10%	-20%	-39%	---	---	---	---

- Measurement Conditions


- V680S-HMD63-EIP and V680S-D8KF67M  
(Metal at back surface: Steel)

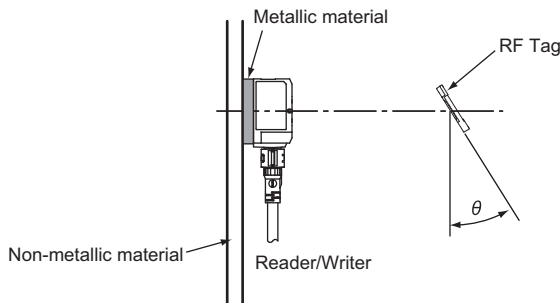

- V680S-HMD64-EIP and V680S-D8KF67M  
(Metal at back surface: Steel)

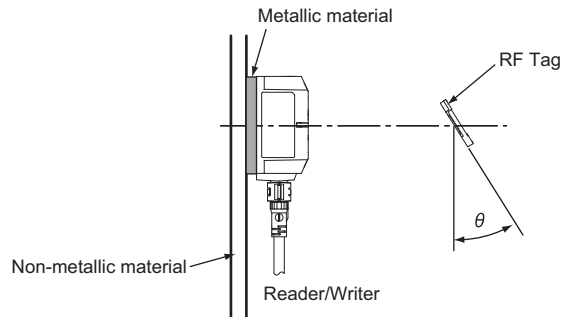

- V680S-HMD66-EIP and V680S-D8KF67M  
(Metal at back surface: Steel)


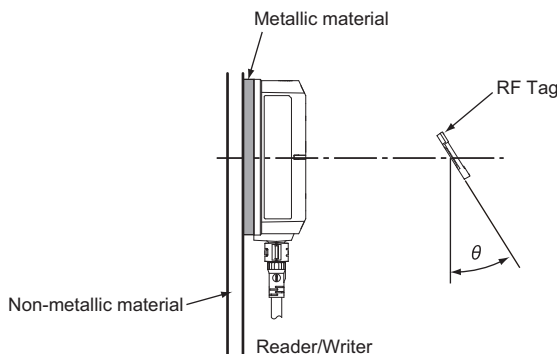


**A-3-10 V680S-D2KF68**



**Influence of Metal at Back Surface of RF Tags**

The communications range will decrease if there is metal at the back of the V680S-D2KF68 RF Tag. If the RF Tag is mounted on metallic material, use a non-metallic spacer (e.g., plastic or resin). The following graphs show the relationship between the distance from the RF Tag to the metallic surface and the communications range.

● **V680S-HMD64-EIP and V680S-D2KF68**

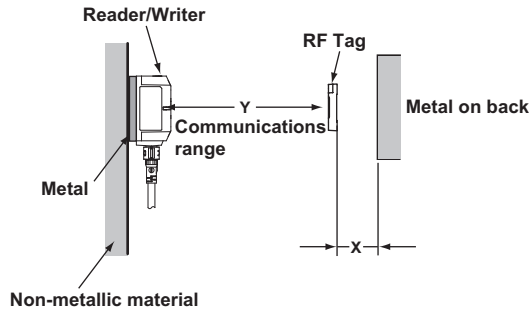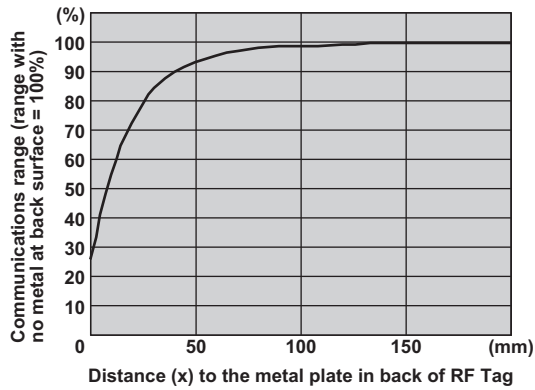

● **V680S-HMD66-EIP and V680S-D2KF68**

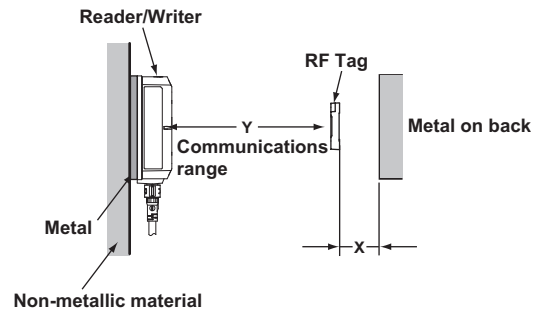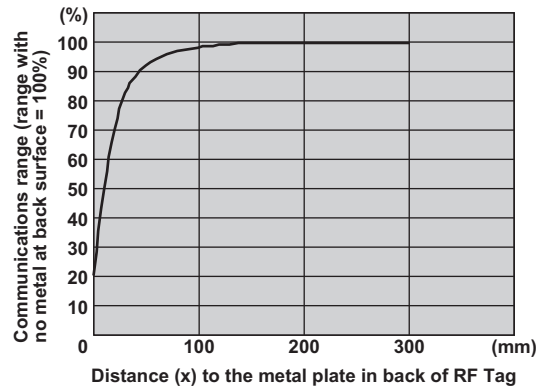


### Mutual Interference of RF Tags


If you use more than one RF Tag, separate them by at least the interval shown below to prevent malfunctions due to mutual interference.

If the distance between the RF tags is too short, read / write distance will be reduced.

- V680S-HMD64-EIP Reader/Writer

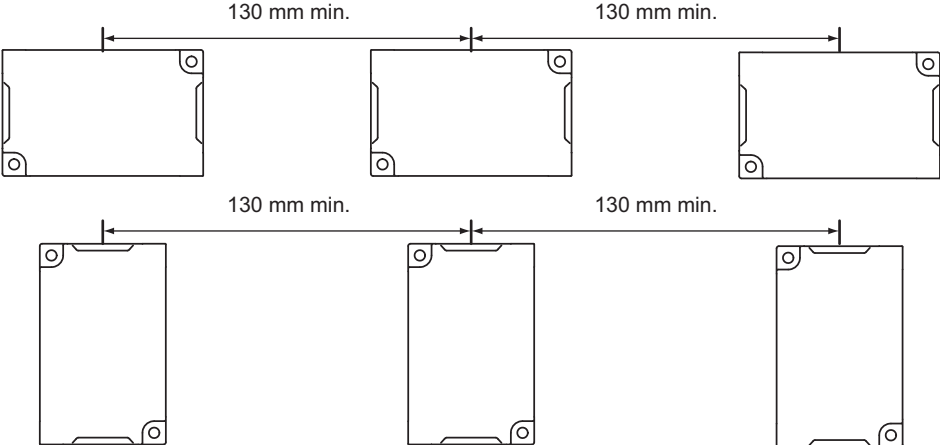

- V680S-HMD66-EIP Reader/Writer

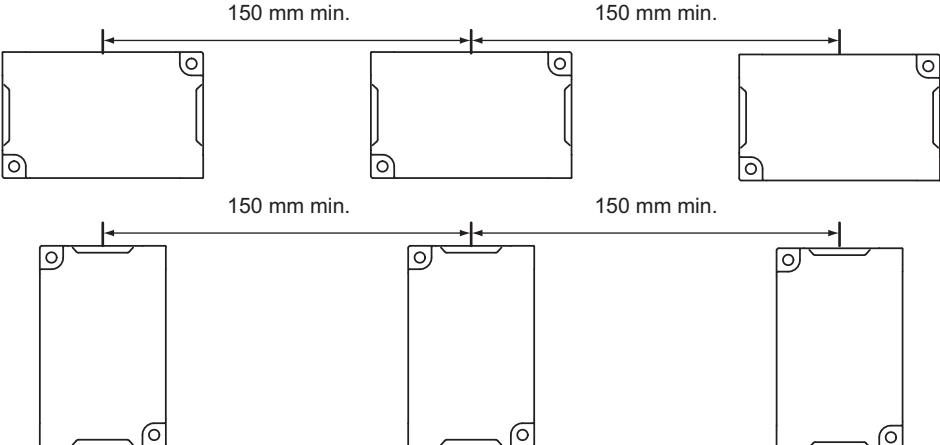

## Influence of Inclination

Install the Reader/Writer and RF Tags so that the Reader/Writer and RF Tags are as parallel to each other as possible.

Communications will be possible even if the Reader/Writer and RF Tags are not parallel to each other; however, the communications range is affected by the inclination between them as shown in the following graphs.


- Rates of Change in Communications Range for Inclination of V680S-D2KF68

	RF Tag inclination ( $\theta^\circ$ )									
	0	10	20	30	40	50	60	70	80	90
V680S-HMD64-EIP and V680S-D2KF68 horizontally	-0%	-1%	-2%	-3%	-6%	-9%	-14%	-21%	-33%	-59%
V680S-HMD64-EIP and V680S-D2KF68 vertically	-0%	-1%	-3%	-5	-8%	-13%	-20%	-28%	-41%	-66%
V680S-HMD66-EIP and V680S-D2KF68 horizontally	-0%	-1%	-2%	-3%	-6%	-11%	-16%	-25%	-39%	-65%
V680S-HMD66-EIP and V680S-D2KF68 vertically	-0%	-1%	-2%	-5%	-8%	-13%	-20%	-29%	-42%	-68%

- Measurement Conditions


- V680S-HMD64-EIP and V680S-D2KF68

horizontally

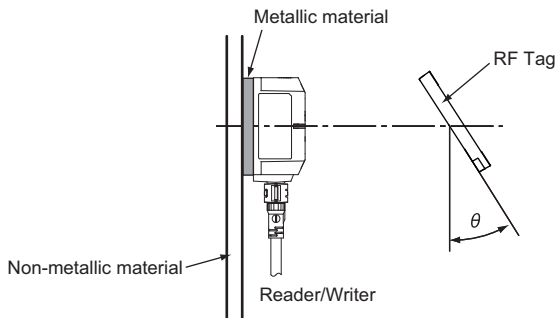


- V680S-HMD64-EIP and V680S-D2KF68

vertically

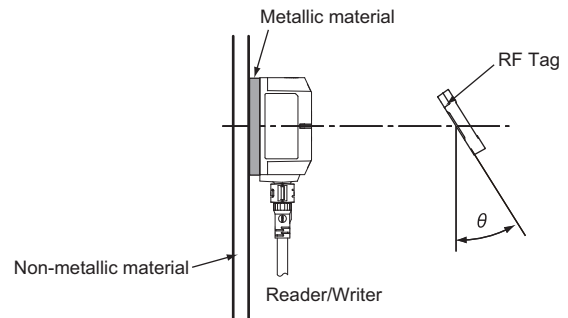


- V680S-HMD66-EIP and V680S-D2KF68

horizontally

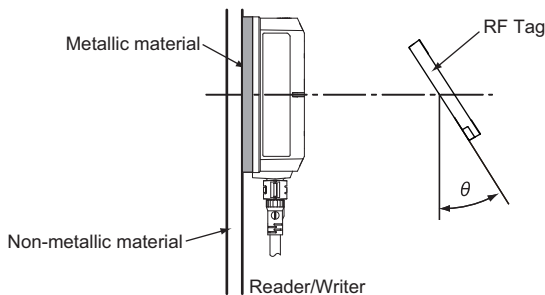

- V680S-HMD66-EIP and V680S-D2KF68


vertically

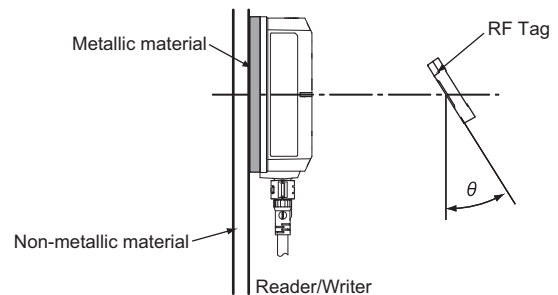



# A-3-11 V680S-D2KF68M

## Influence of Surrounding Metal


The V680S-D2KF68M can be surface-mounted or it can be embedded in metal. However, do not allow the height of the metal to exceed the height of the V680S-D2KF68M.

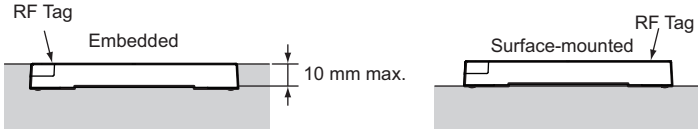

● V680S-HMD64-EIP and V680S-D2KF68M

 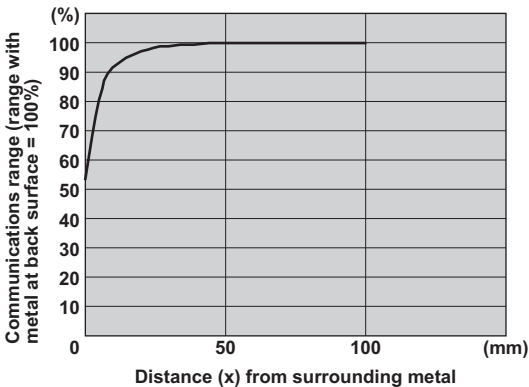

● V680S-HMD66-EIP and V680S-D2KF68M

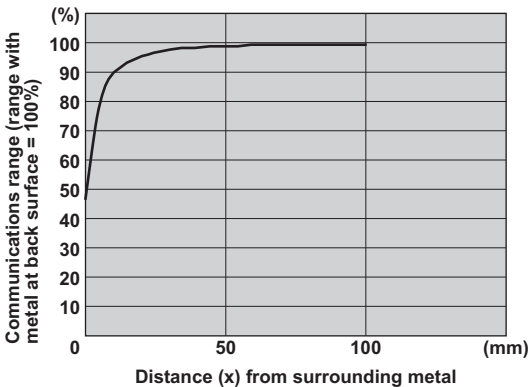


## Mutual Interference of RF Tags


If you use more than one RF Tag, separate them by at least the interval shown below to prevent malfunctions due to mutual interference.

If the distance between the RF tags is too short, read / write distance will be reduced.

- V680S-HMD64-EIP Reader/Writer

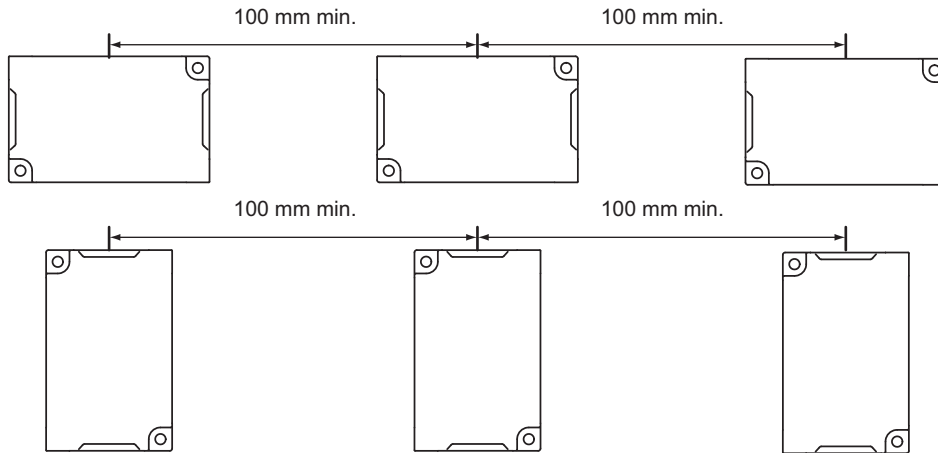

- V680S-HMD66-EIP Reader/Writer

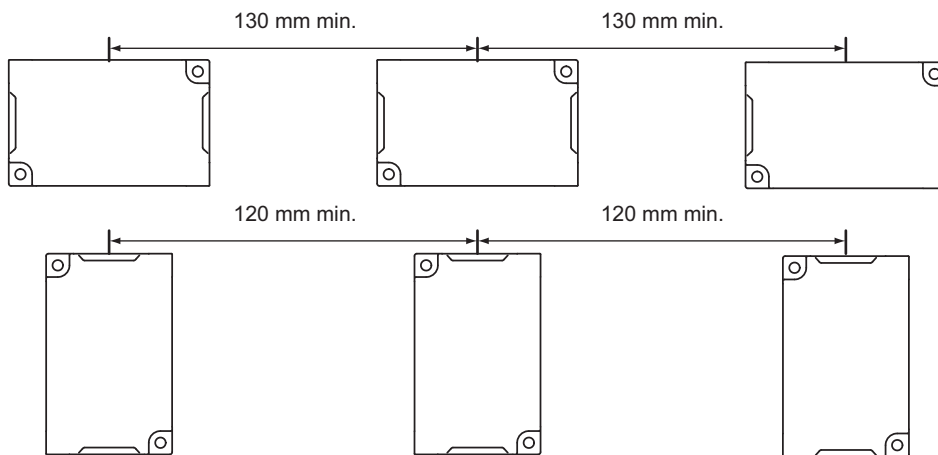

## Influence of Inclination

Install the Reader/Writer and RF Tags so that the Reader/Writer and RF Tags are as parallel to each other as possible.

Communications will be possible even if the Reader/Writer and RF Tags are not parallel to each other; however, the communications range is affected by the inclination between them as shown in the following graphs.


- Rates of Change in Communications Range for Inclination of V680S-D2KF68M

	RF Tag inclination ( $\theta^\circ$ )									
	0	10	20	30	40	50	60	70	80	90
V680S-HMD64-EIP and V680S-D2KF68M horizontally	0%	0%	-1%	-3%	-5%	-9%	-17%	-32%	---	---
V680S-HMD64-EIP and V680S-D2KF68M vertically	0%	-2%	-4%	-7%	-12%	-19%	-31%	-51%	---	---
V680S-HMD66-EIP and V680S-D2KF68M horizontally	0%	-1%	-2%	-4%	-8%	-13%	-23%	-43%	---	---
V680S-HMD66-EIP and V680S-D2KF68M vertically	0%	-1%	-4%	-7%	-12%	-21%	-33%	-58%	---	---

- Measurement Conditions


- V680S-HMD64-EIP and V680S-D2KF68M

horizontally

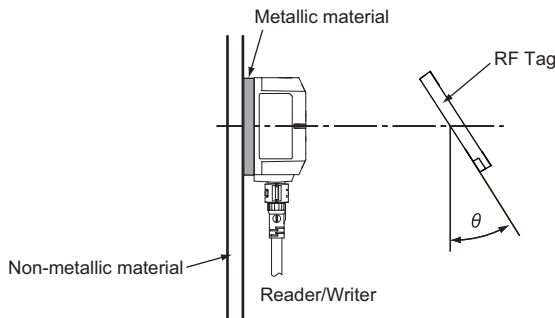


- V680S-HMD64-EIP and V680S-D2KF68M

vertically

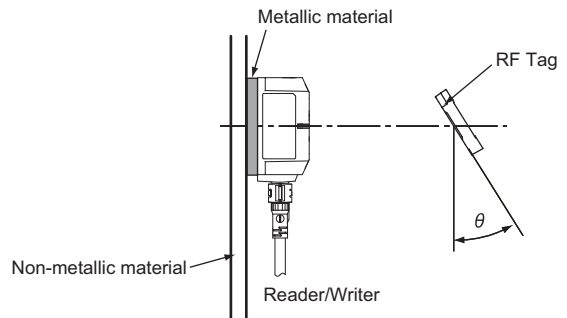


- V680S-HMD66-EIP and V680S-D2KF68M

horizontally

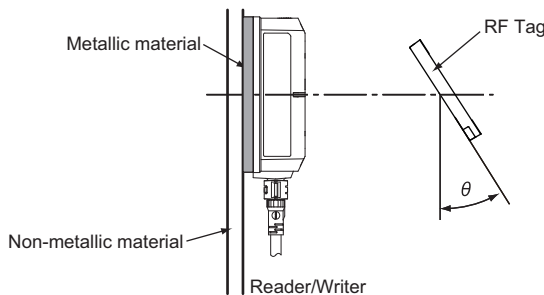

- V680S-HMD66-EIP and V680S-D2KF68M

vertically


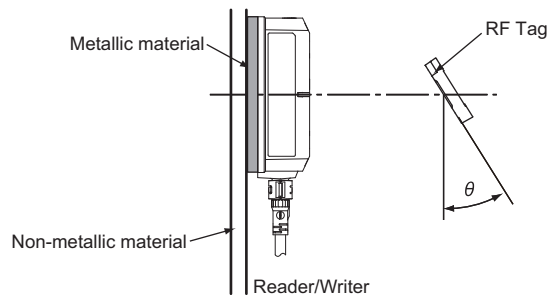


**A-3-12 V680S-D8KF68**



**Influence of Metal at Back Surface of RF Tags**

The communications range will decrease if there is metal at the back of the V680S-D8KF68 RF Tag. If the RF Tag is mounted on metallic material, use a non-metallic spacer (e.g., plastic or resin). The following graphs show the relationship between the distance from the RF Tag to the metallic surface and the communications range.

● **V680S-HMD64-EIP and V680S-D8KF68**

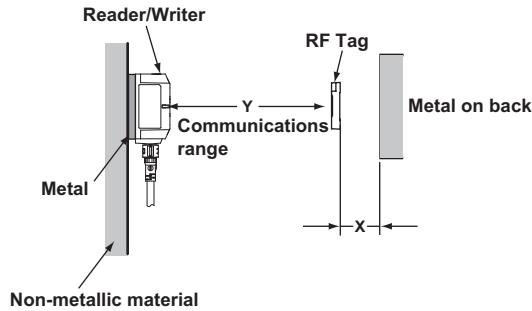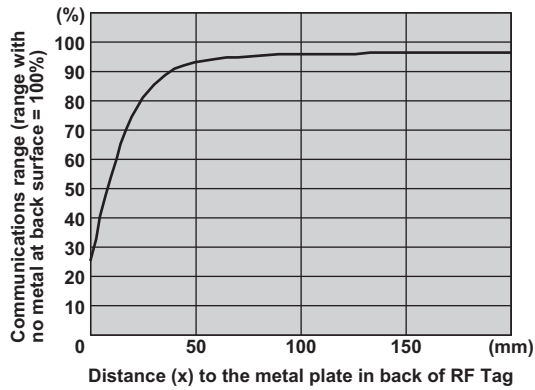

● **V680S-HMD66-EIP and V680S-D8KF68**

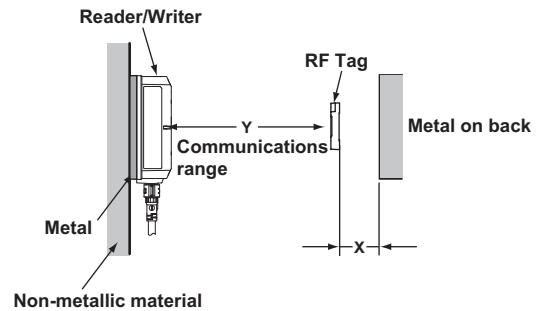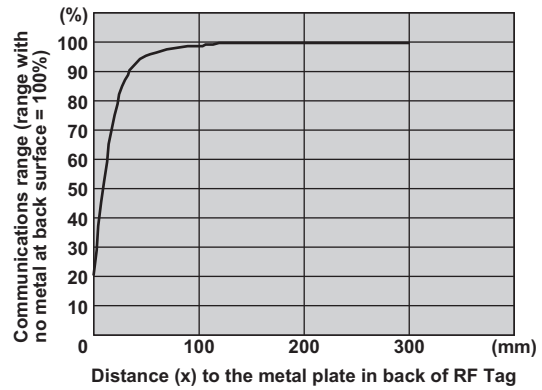


### Mutual Interference of RF Tags


If you use more than one RF Tag, separate them by at least the interval shown below to prevent malfunctions due to mutual interference.

If the distance between the RF tags is too short, read / write distance will be reduced.

- V680S-HMD64-EIP Reader/Writer

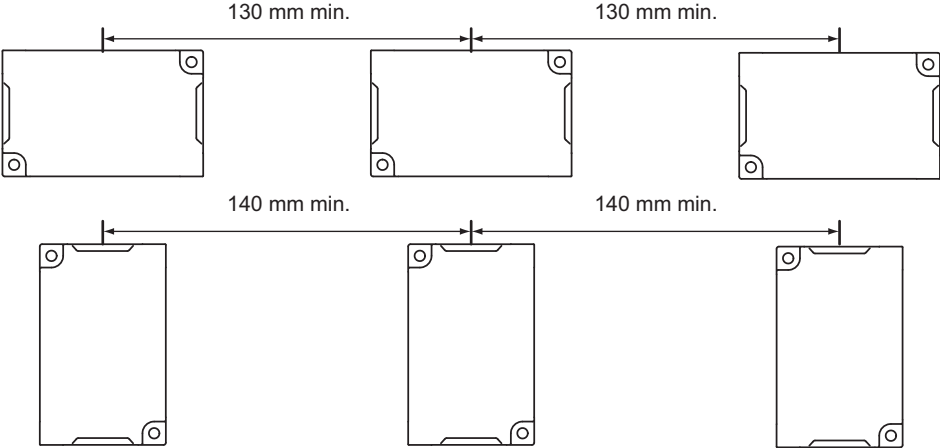

- V680S-HMD66-EIP Reader/Writer

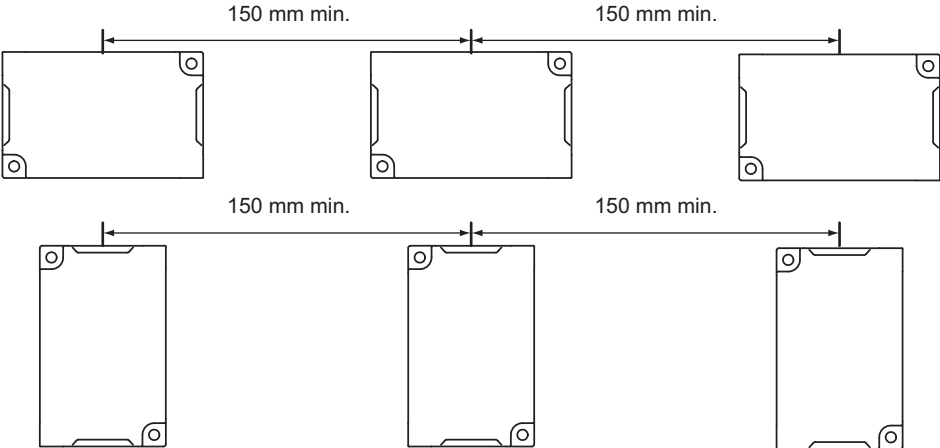

## Influence of Inclination

Install the Reader/Writer and RF Tags so that the Reader/Writer and RF Tags are as parallel to each other as possible.

Communications will be possible even if the Reader/Writer and RF Tags are not parallel to each other; however, the communications range is affected by the inclination between them as shown in the following graphs.


- Rates of Change in Communications Range for Inclination of V680S-D8KF68

	RF Tag inclination ( $\theta^\circ$ )									
	0	10	20	30	40	50	60	70	80	90
V680S-HMD64-EIP and V680S-D8KF68 horizontally	0%	-1%	-2%	-3%	-5%	-9%	-14%	-21%	-32%	-58%
V680S-HMD64-EIP and V680S-D8KF68 vertically	0%	-1%	-3%	-5%	-8%	-13%	-19%	-28%	-41%	-65%
V680S-HMD66-EIP and V680S-D8KF68 horizontally	0%	-1%	-2%	-3%	-6%	-11%	-16%	-25%	-39%	---
V680S-HMD66-EIP and V680S-D8KF68 vertically	0%	-1%	-2%	-5%	-8%	-14%	-20%	-29%	-43%	-69%

- Measurement Conditions


- V680S-HMD64-EIP and V680S-D8KF68

horizontally

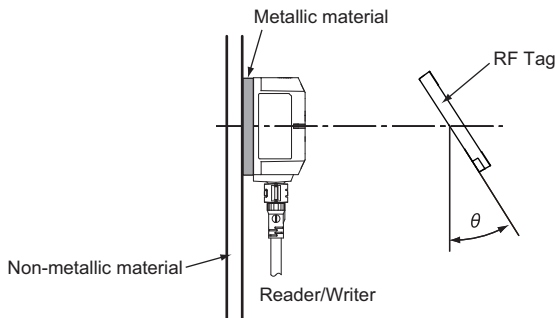


- V680S-HMD64-EIP and V680S-D8KF68

vertically

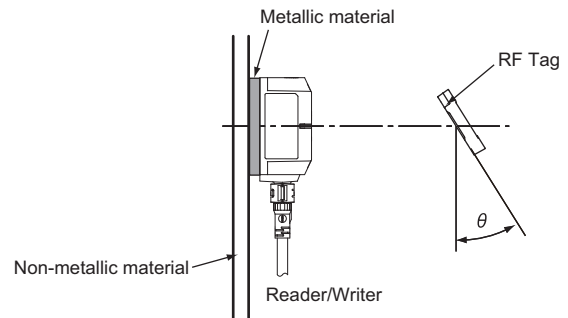


- V680S-HMD66-EIP and V680S-D8KF68

horizontally

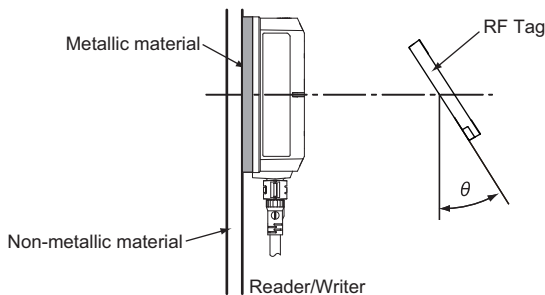

- V680S-HMD66-EIP and V680S-D8KF68


vertically

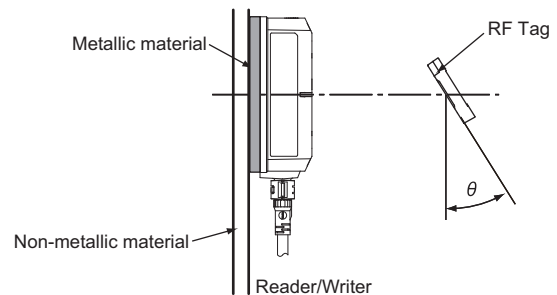



# A-3-13 V680S-D8KF68M

## Influence of Surrounding Metal


The V680S-D8KF68M can be surface-mounted or it can be embedded in metal. However, do not allow the height of the metal to exceed the height of the V680S-D8KF68M.

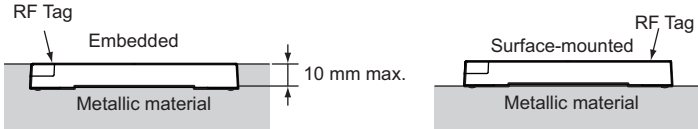

● V680S-HMD64-EIP and V680S-D8KF68M

 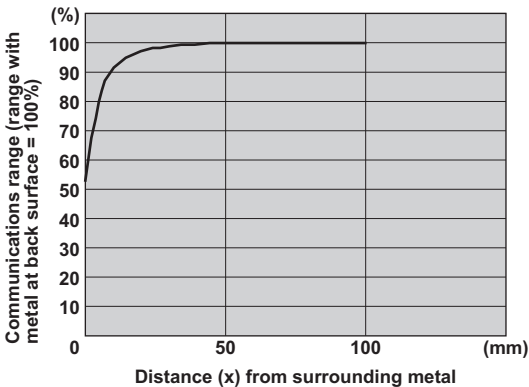

● V680S-HMD66-EIP and V680S-D8KF68M

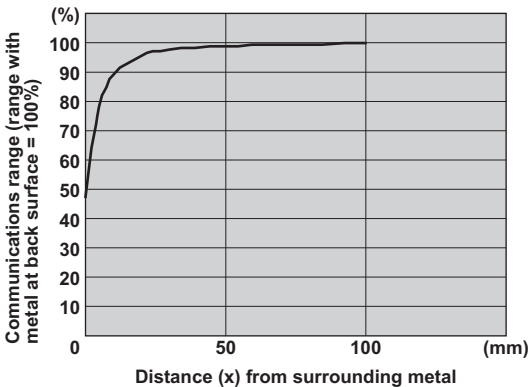


## Mutual Interference of RF Tags


If you use more than one RF Tag, separate them by at least the interval shown below to prevent malfunctions due to mutual interference.

If the distance between the RF tags is too short, read / write distance will be reduced.

- V680S-HMD64-EIP Reader/Writer

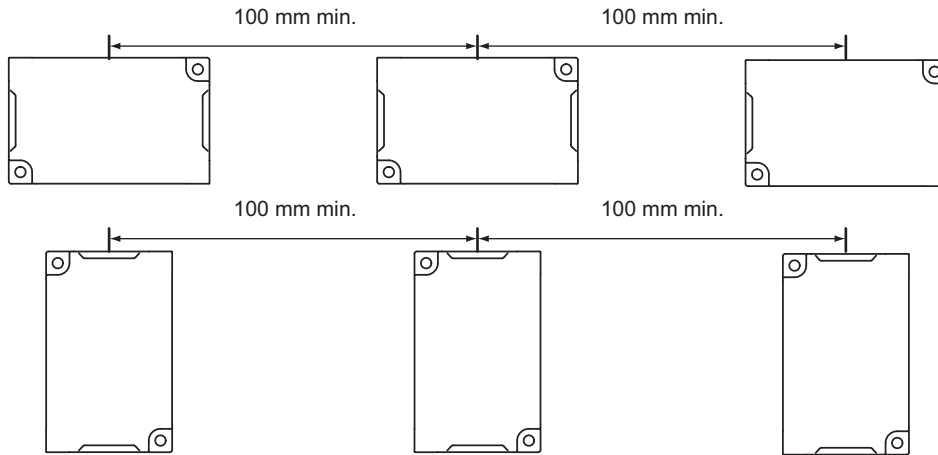

- V680S-HMD66-EIP Reader/Writer

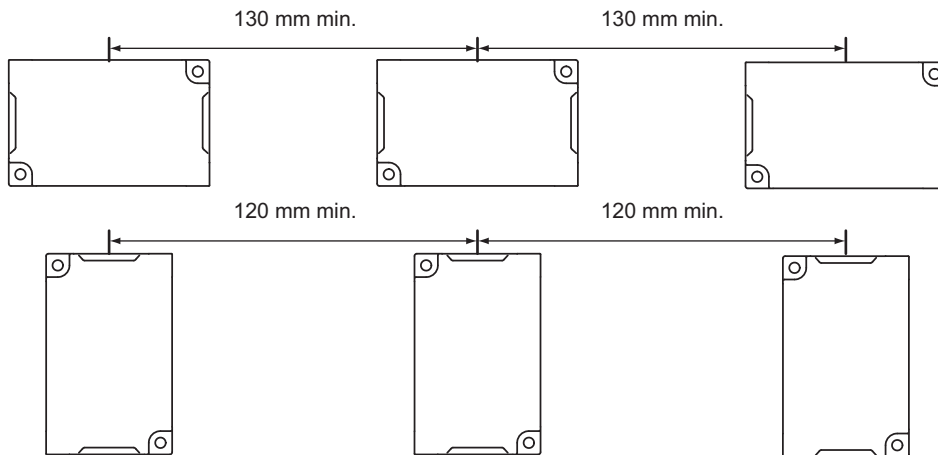

## Influence of Inclination

Install the Reader/Writer and RF Tags so that the Reader/Writer and RF Tags are as parallel to each other as possible.

Communications will be possible even if the Reader/Writer and RF Tags are not parallel to each other; however, the communications range is affected by the inclination between them as shown in the following graphs.


- Rates of Change in Communications Range for Inclination of V680S-D8KF68M

	RF Tag inclination ( $\theta^\circ$ )									
	0	10	20	30	40	50	60	70	80	90
V680S-HMD64-EIP and V680S-D8KF68M horizontally	0%	-1%	-1%	-3%	-5%	-9%	-16%	-29%	---	---
V680S-HMD64-EIP and V680S-D8KF68M vertically	0%	-1%	-3%	-7%	-12%	-19%	-30%	-52%	-56%	---
V680S-HMD66-EIP and V680S-D8KF68M horizontally	0%	-1%	-2%	-4%	-8%	-13%	-24%	-50%	---	---
V680S-HMD66-EIP and V680S-D8KF68M vertically	0%	-1%	-4%	-8%	-13%	-22%	-35%	-67%	---	---

- Measurement Conditions


- V680S-HMD64-EIP and V680S-D8KF68M

horizontally

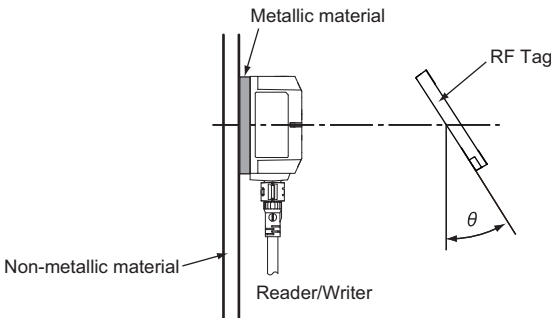


- V680S-HMD64-EIP and V680S-D8KF68M

vertically

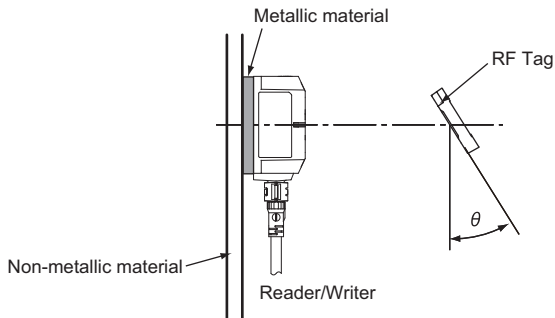


- V680S-HMD66-EIP and V680S-D8KF68M

horizontally

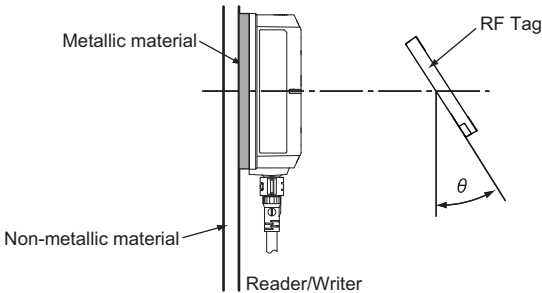

- V680S-HMD66-EIP and V680S-D8KF68M

vertically

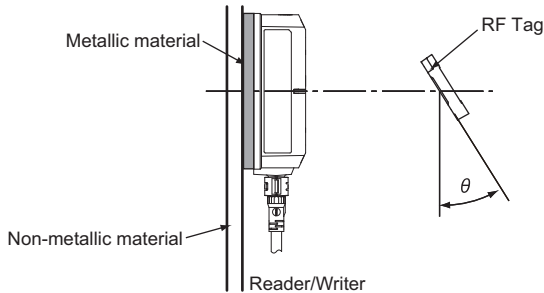

# A-4 RF Tag Memory Capacities and Memory Types


(As of July 2019)

Model	Memory capacity (user memory)	Memory type	Life expectancy
V680-D1KP54T V680-D1KP66T V680-D1KP66MT V680-D1KP66T-SP V680-D1KP58HTN	1,000 bytes	EEPROM	<ul style="list-style-type: none"> <li>• Write endurance: 100,000 times per block (25°C)</li> <li>• Data retention: 10 years after writing (85°C or less)</li> </ul> <hr/> <ul style="list-style-type: none"> <li>• Write endurance: 100,000 times per block (25°C)</li> <li>• Data retention: 10 years after writing (85°C or less)</li> <li>* Total data retention at high temperatures exceeding 125°C is 10 hours</li> </ul>
V680S-D2KF67 V680S-D2KF67M V680S-D2KF68 V680S-D2KF68M	2,000 bytes	FRAM	<ul style="list-style-type: none"> <li>• Access frequency: One trillion times</li> <li>• Data retention: 10 years after writing (85°C or less)</li> </ul>
V680S-D8KF67 V680S-D8KF67M V680S-D8KF68 V680S-D8KF68M	8,192 bytes		

# A-5 RF Tag Memory Map


## A-5-1 V680-D1KP RF Tags

EEPROM is used as the memory in the RF Tag. The user-accessible capacity is 1,000 bytes.

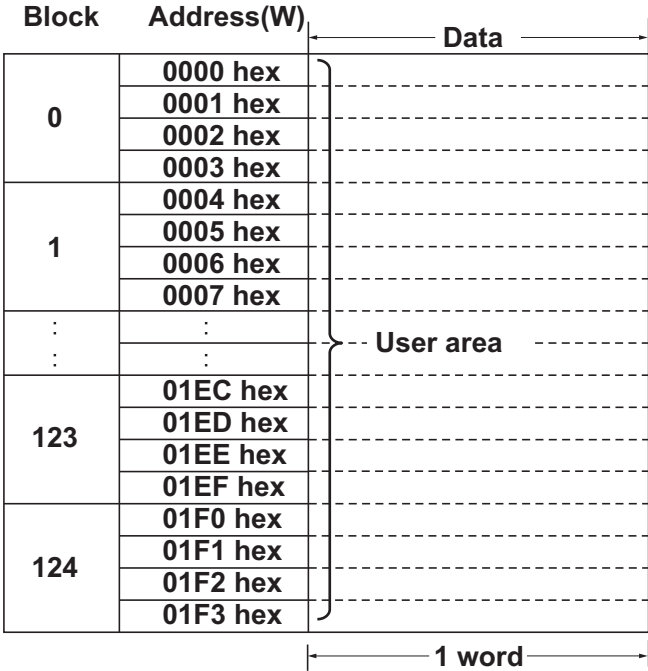


### A-5-2 V680S-D2KF6□ RF Tags

FRAM is used as the memory in the RF Tag. The user-accessible capacity is 2,000 bytes.

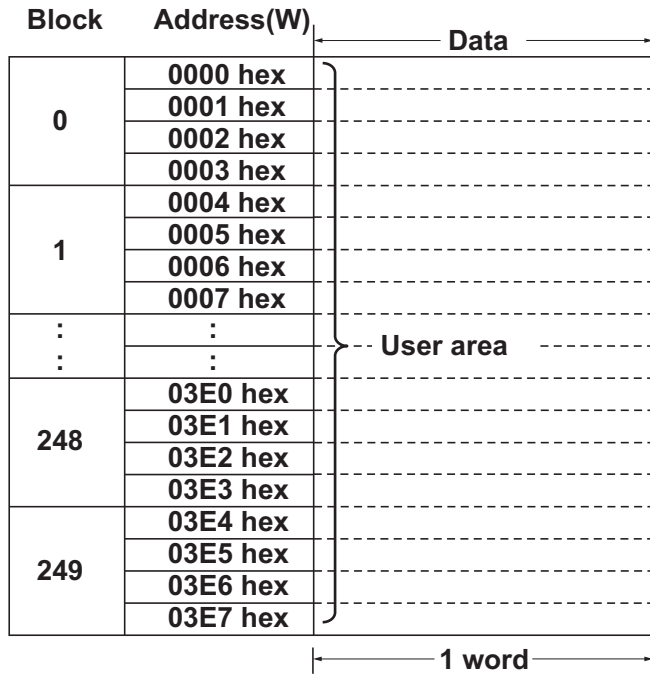

**A-5-3 V680S-D8KF6 RF Tags**

FRAM is used as the memory in the RF Tag. The user-accessible capacity is 8,192 bytes.

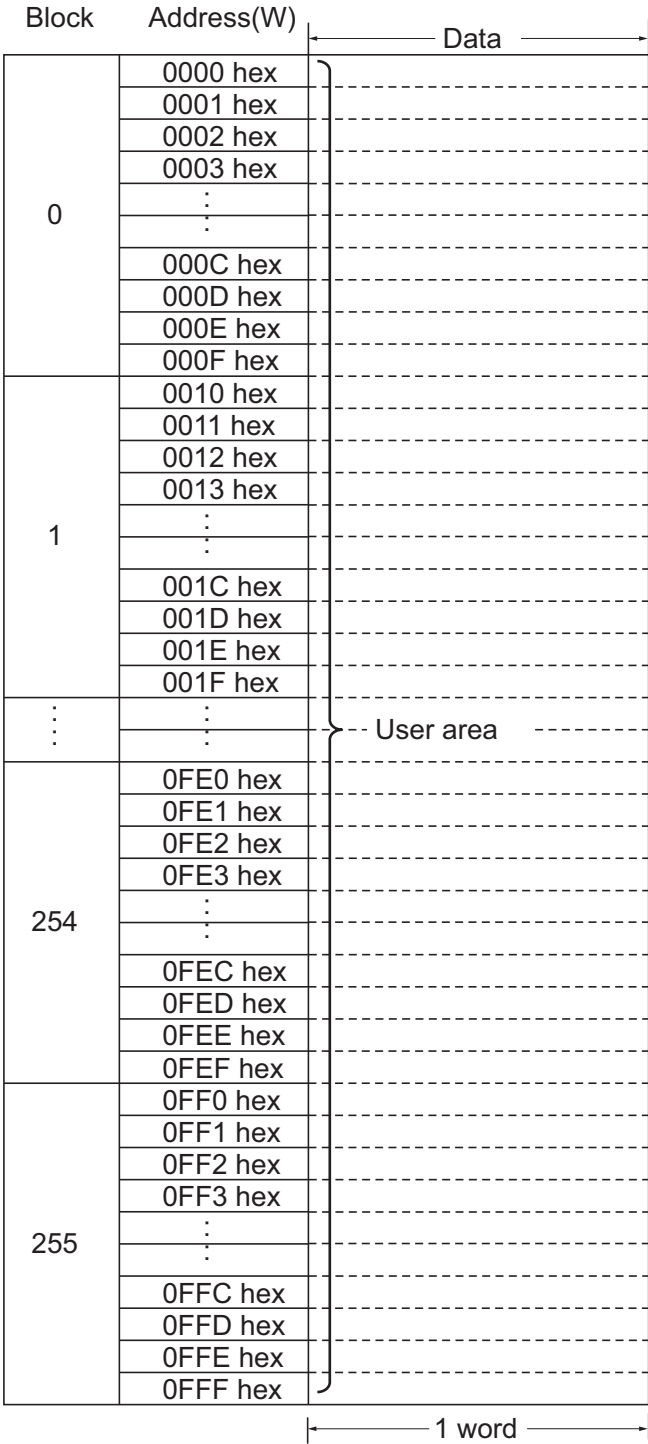

# A-6 Chemical Resistance of the Reader/Writers and RF Tags

## A-6-1 Chemical Resistance of the Reader/Writers

### Applicable Models

V680S-HMD63-EIP/-HMD64-EIP/-HMD66-EIP

The chemicals that affect the Reader/Writer are listed below.

PBT (polybutylene terephthalate) is used as the case material and a urethane resin is used as the filling. Refer to the following lists and do not use chemicals that affect PBT and urethane resins.

Reader/Writers cannot be used in applications with explosion-proof specifications.

- Chemicals That Cause Deformations, Cracks, Etc.

Chemical name
Acetone, trichloroethylene, ethylene dichloride, sodium hydroxide, and other alkaline substances, hydrochloric acid (35% or more), nitric acid (70% or more)

- Chemicals That May Cause Discoloration, Swelling, Etc.

Chemical name
Hydrochloric acid (10% RT), acetic acid (5% RT), benzene, nitric acid (20% or more)



### Precautions for Correct Use

The above results are from tests conducted at room temperature (23°C). Even if the chemicals do not affect the PPS or epoxy resins at room temperature, they may affect the resins at higher or lower temperatures. Check the chemicals carefully in advance.

## A-6-2 Chemical Resistance of RF Tags

### Applicable Models

V680-D1KP54T/-D1KP66T/-D1KP66MT/-D1KP58HTN, V680S-D□KF6□

PPS resin is used for case material. Refer to the following lists and do not use chemicals that affect PPS and epoxy resin.

RF Tags cannot be used in applications with explosion-proof specifications.

A: Has no adverse effect, B: May cause discoloration, swelling, etc., C: Causes deformation, cracks, etc.

Chemical		At room temperature	At 90°C
Hydrochloric acid	37%	A	A
	10%	A	A
Sulfuric acid	98%	A	B
	50%	A	A
	30%	A	A
Nitric acid	3%	A	A
	60%	B	C
	40%	A	B
	10%	A	A
Hydrogen fluoride solution	40%	B	B
Chromic acid	40%	A	A
Hydrogen peroxide solution	28%	A	B
	3%	A	A
Sodium hydroxide solution	60%	A	A
	10%	A	A
	1%	A	A
Ammonia solution	28%	A	B
	10%	A	B
Sodium chloride	10%	A	A
Sodium carbonate	20%	A	A
	2%	A	A

Chemical		At room temperature	At 90°C
Sodium hypochlorite		A	A
Phenol solution	5%	A	A
Glacial acetic acid		A	A
Acetic acid		A	A
Oleic acid		A	A
Methyl alcohol	95%	A	A
Ethyl alcohol	95%	A	A
Ethyl acetate		A	A
Sebacic acid diethylhexyl		A	A
Acetone		A	A
Diethyl ether		A	A
n-heptane		A	A
2-2-4 trimethylpentane		A	A
Benzene		A	A
Toluene		A	A
Aniline		A	A
Mineral oil		A	A
Gasoline		A	A
Insulating oil		A	A
Dichloroethylene		A	A
Carbon tetrachloride		A	A



#### Precautions for Correct Use

The above table shows the extent of changes in PPS resin exposed to each chemical at room temperature and at 90°C. If actual chemicals, concentrations, and temperatures are different from those shown in the tables, always conduct tests under the actual conditions in which the RF Tags are to be used.

## Applicable Models

V680-D1KP66T-SP

PFA resin is used for exterior case material.

Refer to the following lists and do not use chemicals that affect PFA resin.

RF Tags cannot be used in applications with explosion-proof specifications.

- Chemical Resistance of Fluoroplastic PFA (Reference)

PFA: Tetrafluoroethylene-Perfluoroalkylvinylether copolymer

Fluoroplastic PFA does not react with most chemicals

except molten alkali metal, hot pressurized fluorine (F<sub>2</sub>), and some halogen derivatives.

The following tables show the results of tests in which PFA was soaked in or exposed to commonly used organic and inorganic chemicals. In these tests, a compression-molded test piece (1.3 mm thick) was soaked in the chemical at a specified temperature for a week (168 hours) and taken out of the chemical, then the weight change, tensile strength, and elongation of the test piece were immediately measured. If the change in the tensile strength is 15 % or less, the range in the elongation is 10 % or less, and the increase in the weight is less than 0.5 %, the results of the test can be considered normal.

If PFA is exposed to trichloroacetic acid, tri-n-butyl phosphate, perchloroethylene, carbon tetrachloride, and other liquids (which easily make resin surfaces wet) at a high temperature, it tends to increase its weight due to absorption and reduce its tensile strength. Even when PFA absorbs chemicals and solvents, its molecular structure will not change. If, however, PFA is subject to temperature or pressure changes or mechanical damage when it has absorbed chemicals, the chemicals will repeatedly expand and contract inside pfa, causing mechanical problems such as cracks and bulging. In fact, this problem occurs with any kind of plastic.

- Inorganic Chemicals

Chemical name	Test temperature (°C)	Resulting characteristics (%)		Weight increase rate
		Tensile strength	Elongation	(%)
Concentrated hydrochloric acid	120	98	100	0.0
Concentrated sulfuric acid	120	95	98	0.0
Hydrofluoric acid (60%)	23	99	99	0.0
Fuming sulfuric acid	23	95	96	0.0
Aqua regia	120	99	100	0.0
Chromic acid (50%)	120	93	97	0.0
Concentrated nitric acid	120	95	98	0.0
Fuming nitric acid	23	99	99	0.0
Concentrated ammonia solution	66	98	100	0.0
Caustic soda (50%)	120	93	99	0.4
Hydrogen peroxide solution (30%)	23	93	95	0.0
Bromine	23	99	100	0.0
Chlorine	120	92	100	0.5
Ferrous chloride (25%)	100	93	98	0.0
Zinc chloride (25%)	100	96	100	0.0
Sulfuryl chloride	69	83	100	2.7
Chlorosulfonic acid	151	91	100	0.0
Concentrated phosphoric acid	100	93	100	0.0

- Organic Chemicals

Chemical name	Test temperature (°C)	Resulting characteristics (%)		Weight increase rate (%)
		Tensile strength	Elongation	
Glacial acetic acid	118	95	100	0.4
Acetic anhydride	139	91	99	0.3
Trichloroacetic acid	196	90	100	2.2
Isooctane	99	94	100	0.7
Naphtha	100	91	100	0.5
Mineral oil	180	87	95	0.0
Toluene	110	88	100	0.7
o-cresol	191	92	96	0.2
Nitrobenzene	210	90	100	0.7
Benzyl alcohol	205	93	99	0.3
Aniline	185	94	100	0.3
n-butylamine	78	86	97	0.4
Ethylenediamine	117	96	100	0.1
Tetrahydrofuran	66	88	100	0.7
Benzaldehyde	179	90	99	0.5
Cyclohexane	156	92	100	0.4
Methyl ethyl ketone	80	90	100	0.6
Acetophenone	202	90	100	0.6
Dimethylphtalate	200	98	100	0.3
n-butyl acetate	125	93	100	0.5
Tri-n-butyl phosphate	200	91	100	2.0
Methylene chloride	40	94	100	0.8
Perchloroethylene	121	86	100	2.0
Carbon tetrachloride	77	87	100	2.3
Dimethyl formamide	154	96	100	0.2
Dimethyl sulfoxide	189	95	100	0.1
Dioxane	101	92	100	0.6


Reference: Fluoroplastics Handbook, The Nikkan Kogyo Shimibun Ltd. (Takaomi Satogawa)

# A-7 Degree of Protection

Ingress protection degrees (IP-□□) are determined by the following tests. Be sure to check the sealing capability under the actual operating environment and conditions before actual use.

IP stands for International Protection.

## A-7-1 IEC (International Electrotechnical Commission) IEC 60529





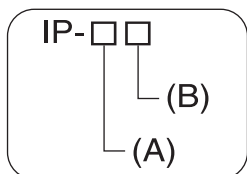

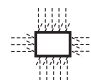
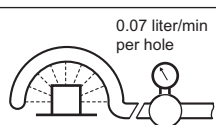
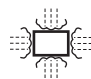
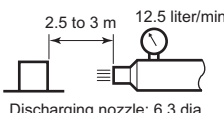
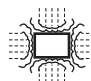
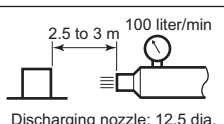

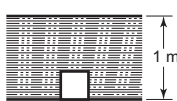



(A) First Digit: Degree of Protection from Solid Materials

Degree		Protection
0		No protection
1		Protects against penetration of any solid object such as a hand that is 50 mm or more in diameter.
2		Protects against penetration of any solid object, that is 12.5 mm or more in diameter. Even if finger or other object 12 mm in diameter penetrates, it will not reach a hazardous part.
3		Protects against penetration of any solid object, such as a wire, that is 2.5 mm or more in diameter.
4		Protects against penetration of any solid object, such as a wire, that is 1 mm or more in diameter.
5		Protects against penetration of dust of a quantity that may cause malfunction or obstruct the safe operation of the product.
6		Protects against penetration of all dust.

(B) Second Digit: Degree of Protection Against Water

De-gree	Protection		Test method (with pure water)
0	No protection	Not protected against water.	No test

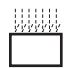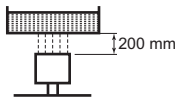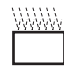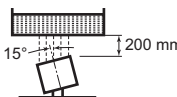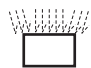De-gree	Protection		Test method (with pure water)
1	Protection against water drops 	Protects against vertical drops of water towards the product.	Water is dropped vertically towards the product from the test machine for 10 min. 
2	Protection against water drop 	Protects against drops of water approaching at a maximum angle of 15° to the left, right, back, and front from vertical towards the product.	Water is dropped for 25 min each (i.e., 10 min in total) towards the product inclined 15° to the left, right, back, and front from the test machine. 
3	Protection against sprinkled water 	Protects against sprinkled water approaching at a maximum angle of 60° from vertical towards the product.	Water is sprinkled for 10 min at a maximum angle of 60° to the left and right from vertical from the test machine. 
4	Protection against water spray 	Protects against water spray approaching at any angle towards the product.	Water is sprayed at any angle towards the product for 10 min from the test machine. 
5	Protection against water jet spray 	Protects against water jet spray approaching at any angle towards the product.	Water is jet sprayed at any angle towards the product for 1 min per square meter for at least 3 min in total from the test machine. 
6	Protection against high pressure water jet spray 	Protects against high-pressure water jet spray approaching at any angle towards the product.	Water is jet sprayed at any angle towards the product for 1 min per square meter for at least 3 min in total from the test machine. 
7	Protection against limited immersion in water 	Resists the penetration of water when the product is placed underwater at specified pressure for a specified time.	The product is placed 1 m deep in water (if the product is 850 mm max. in height) for 30 min. 
8 (See note.)	Protection against long-term immersion in water 	Can be used continuously underwater.	The test method is determined by the manufacturer and user.

Note: OMRON Test Method

Usage condition: 10 m or less under water in natural conditions

1. No water ingress after 1 hour under water at 2 atmospheres of pressure.
2. Sensing distance and insulation resistance specifications must be met after 100 repetitions of half hour in 5°C water and half hour in 85°C water.

**About IPX9K**


IPX9K is a protection standard regarding high temperature and high-pressure water which is defined by the German standard (DIN 40050 PART9).

Water is sprayed on 80 °C hot water with the water pressure of 80 to 100BAR from a nozzle to the test piece.

Amount of water is 14 to 16 liters/minute.

The distance between the test piece and a nozzle is 10 to 15 cm, and the directions of water-drainage are 0 degrees, 30 degrees, 60 degrees, and 90 degrees horizontally.

They are evaluated with the test piece is rotating on a horizontal plane by 30 seconds in each direction.

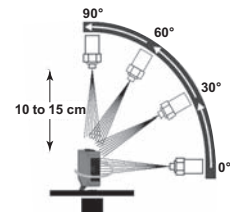

**A-7-2 Oil Resistance (OMRON in-house standard)**

Protection	
Oil-resistant	No adverse affect from oil drops or oil spray approaching from any direction.
Oil-proof	Protects against penetration of oil drops or oil spray approaching from any direction.

Note. Oil resistance has been tested using a specific oil as defined in the OMRON test method. (JIS C 0920:2003, Appendix 1)

## A-8 Differences in Address and Size Specifications between V680 and V680S Reader/Writers

RF Tag access for V680S-series Reader/Writers is performed in words (1 word = 2 bytes). RF Tag access for V680-series Controllers is performed in bytes. Be sure to access data in the correct units. The word and byte addresses for the memory map of a V680-D1KP□□ RF Tag are given below as a concrete example.

Word address	Byte address	Data
0000 hex	0000 hex	.....
	0001 hex	
0001 hex	0002 hex	.....
	0003 hex	
0002 hex	0004 hex	.....
	0005 hex	
0003 hex	0006 hex	.....
	0007 hex	
⋮	⋮	.....
	⋮	
01F2 hex	03E4 hex	.....
	03E5 hex	
01F3 hex	03E6 hex	.....
	03E7 hex	
		← 1 byte →

Because you cannot access data in bytes for a V680S-series Reader/Writer, you cannot, for example, read six bytes of data starting from address (byte address) 0001 hex. In this case, you would have to read four words from address (word address) 0000 hex and discard the first and last bytes at the host device.



### Precautions for Correct Use

Data is accessed in words for a V680S-series Reader/Writer. The smallest accessible unit is therefore one word (two bytes).

# A-9 For Customers Using Reader/Writer Earlier Than Firmware Ver.5.00.

Reader/Writers with firmware version "5.00" or higher comply with security functions. Therefore, there are some differences in the Web browser windows and operating procedures compared to Reader/Writers earlier than firmware version "5.00".

The main text of this manual mainly describes specifications for firmware version "5.00" or higher. This section describes windows and operating procedures for firmware versions earlier than "5.00" where there are major differences in specifications.

## A-9-1 Web Browser Operation Window


Connect the Ethernet cable and start a Web browser on the computer.

Enter the IP address of the Reader/Writer in the address field of the Web browser to display the Web browser operation window.

Enter `http://192.168.1.200` if you are using the default IP address.

If a Web password is not set in the Reader/Writer, the Status View will be displayed first.

To display another view, click the specified menu button.

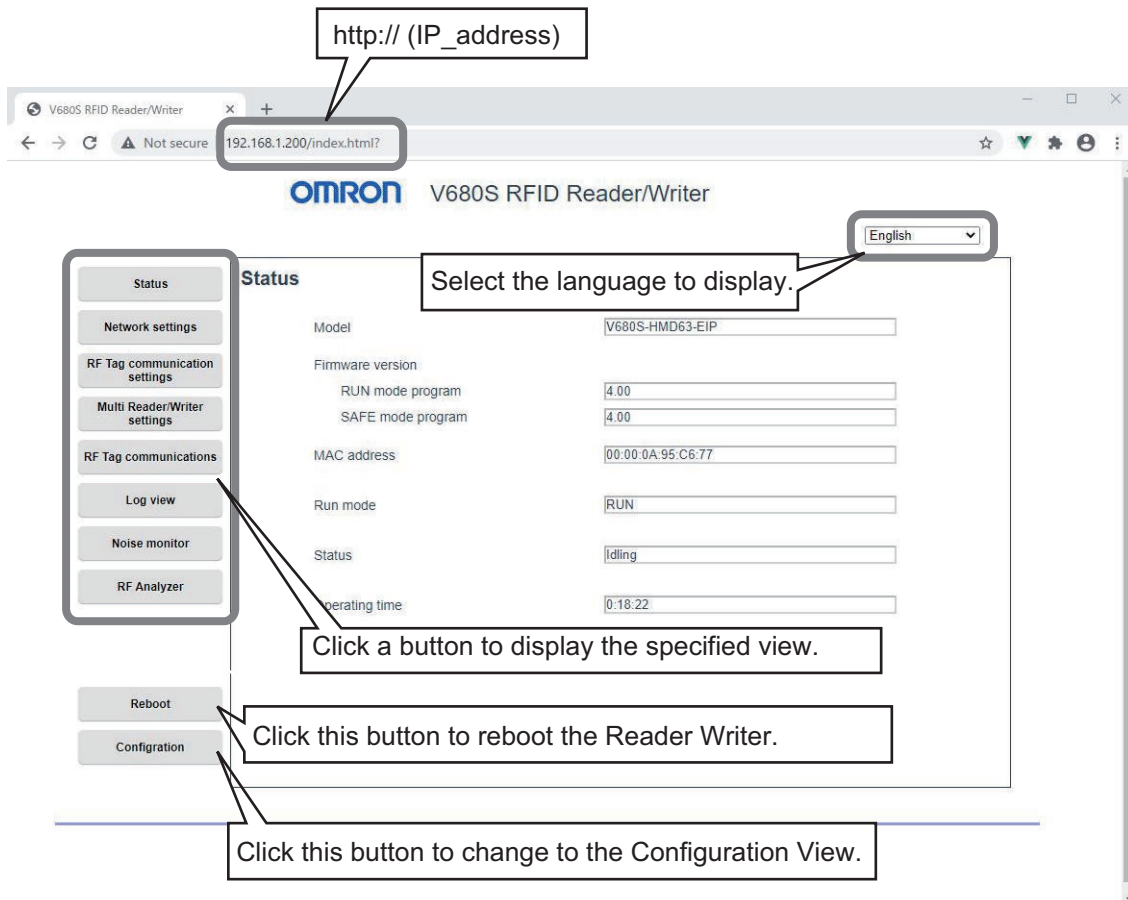



### Precautions for Correct Use

---

- Do not connect multiple Web browsers to one reader / writer.  
If you operate with multiple Web browsers at the same time, it may not be displayed correctly or you may not be able to perform the correct operation.
  - If the characters on the Web browser screen are difficult to see, use the zoom function provided by the Web browser.
  - The operating indicator (Green) may flash because the Web browser communicates with the Reader/Writer at fixed interval.
- 

The Web browser interface can be used in the following operating environments.

- OS: Windows 8.1/Windows 10
- Web Browser: Internet Explorer 11  
Microsoft Edge  
Google Chrome

No Java plug-in is required to use the Web browser interface.

OS	Web Browser	Propriety of use
Windows XP	IE7 to IE8	Not available
Windows 7	IE8 to IE10	Not available
Windows 8.1	IE11	Available
Windows 10	IE11	Available
Windows 10	Edge	Available
Windows 10	Chrome	Available



### Precautions for Correct Use

---

- Depending on the combination of OS and Web browser, you may not be able to use the Web browser.  
Please refer to the above figure and use the Web browser suitable for your OS.  
If you want to use it in the conventional PC operating environment, please contact our sales staff.
  - The operating environment when using Reader/Writer earlier than firmware Ver.4.00, please refer to *A-10 For Customers Using Reader/Writer Earlier Than Firmware Ver.4.00.* on page A-83.
-

## A-9-2 Password Entry View

If a Web password is set in the Reader/Writer, the Password Entry View will be displayed first. By default, this view is not displayed because there is no setting.



Item name	Description
Password	If a Web password is set in the Reader/Writer, enter the password.



### Precautions for Correct Use

- If an error message appears after pressing the OK button, confirm the password.
- If the Reader/Writer is running in Safe mode, the password entry screen does not appear even if you set the password.


### A-9-3 Configuration

You can save a configuration file (INI file) that contains the configuration information from the Reader/Writer in the computer. You can also send a configuration file to the Reader/Writer to change all of the configuration information in the Reader/Writer. Or, you can click the **Default** Button to return all of the configuration information in the Reader/Writer to the default settings.

To display the **Configuration** View, click the Configuration Button at the bottom of the Web browser operation window.



Click the **Configuration** Button at the bottom of the Web browser operation window to display the Configuration View.

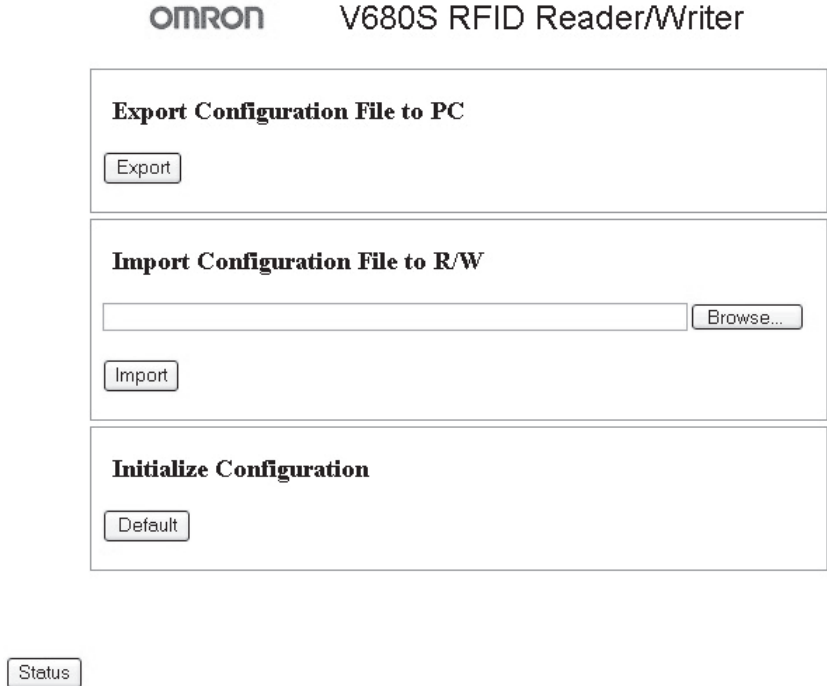


Item name	Description
Export Configuration File to PC	Saves a configuration file that contains the Reader/Writer settings on the computer.
Import Configuration File to R/W	Updates the settings in the Reader/Writer with the settings in a configuration file that you select on the computer.
Initialize Configuration	Returns all of the settings in the Reader/Writer to the default settings.

## Saving a Configuration File on the Computer


You can click the **Export** Button in the **Export Configuration File to PC** Area to save a configuration file (file name: conf.ini) that contains the configuration information from the Reader/Writer on the computer. The configuration file uses a normal INI file format.



Click the **Export** Button. The following dialog box will be displayed. Click the **Save** Button.

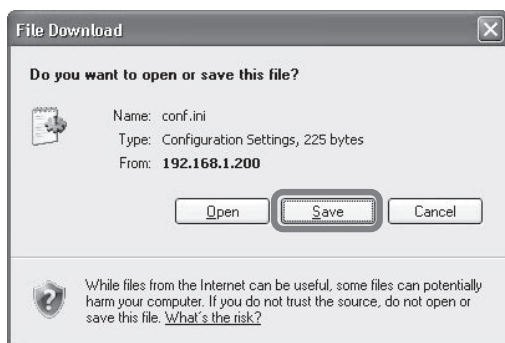


Specify where to save the file and click the **Save** Button. The configuration information from the Reader/Writer will be saved in the configuration file.

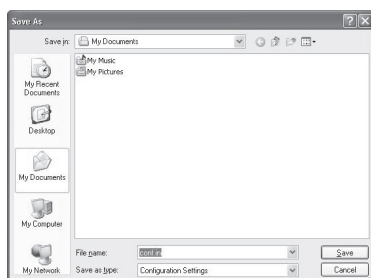


```
[NetworkSetting]
IPAddress=192.168.1.200
SubnetMask=255.255.255.0
GatewayAddress=192.168.1.254
BOOTPOption=0000
DeviceName=
WebPassword=
WebPortNo=7090
[RFTagCommunicationSetting]
CommunicationSpeed=0
WriteVerify=1
CommunicationOption=0
CommunicationDiagnostics=0
[MultiReaderWriterSetting]
MultiReaderWriterMode=0
SlaveNum=0
SlaveNo1IPAddress=0.0.0.0
SlaveNo2IPAddress=0.0.0.0
SlaveNo3IPAddress=0.0.0.0
SlaveNo4IPAddress=0.0.0.0
SlaveNo5IPAddress=0.0.0.0
SlaveNo6IPAddress=0.0.0.0
SlaveNo7IPAddress=0.0.0.0
```

## Sending a Configuration File to the Reader/Writer


You can change all of the configuration information in the Reader/Writer with the following procedure: Click the **Browse** Button in the **Import Configuration File to R/W** Area, select the configuration file to use to set up the Reader/Writer, and then click the **Import** Button.

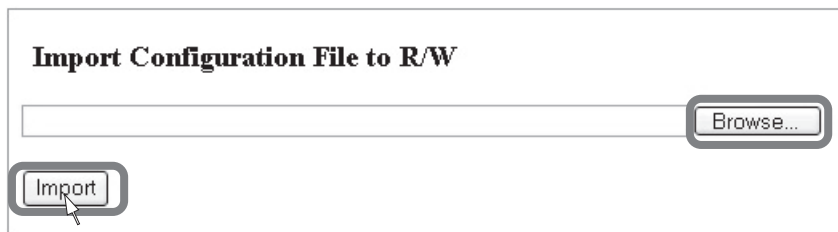

Click the **Browse** Button. A dialog box to select the configuration file will be displayed. Select the configuration file and then click the **Open** Button.

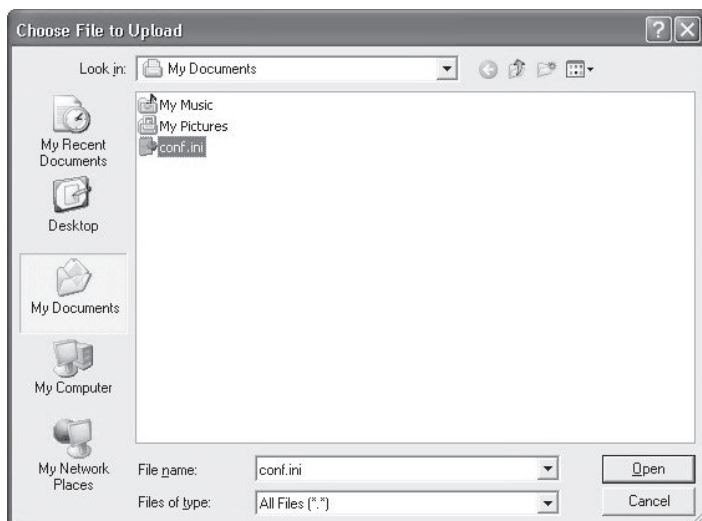

Click the **Import** Button. All of the configuration information in the Reader/Writer will be changed.

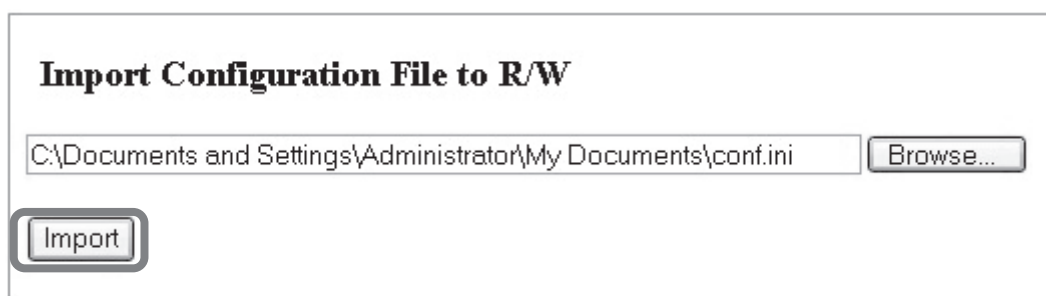

The following information is displayed after setting is completed. The network settings (NetworkSetting) are applied when the Reader/Writer is restarted. The RF Tag communications settings (RFTagCommunicationSetting) are applied immediately.

```

[NetworkSetting]
  IPAddress = 192.168.1.200 Check OK
  SubnetMask = 255.255.255.0 Check OK
  GatewayAddress = 192.168.1.254 Check OK
  BOOTPOption = 0000 Check OK
  DeviceName = Check OK
  WebPassword = Check OK
  WebPortNo = 7090 Check OK
[RFTagCommunicationSetting]
  CommunicationSpeed = 0 Check OK
  WriteVerify = 1 Check OK
  CommunicationOption = 0 Check OK
  CommunicationDiagnostics = 0 Check OK
[MultiReaderWriterSetting]
  MultiReaderWriterMode = 0 Check OK
  SlaveNum = 0 Check OK
  SlaveNo1IPAddress = 0.0.0.0 Check OK
  SlaveNo2IPAddress = 0.0.0.0 Check OK
  SlaveNo3IPAddress = 0.0.0.0 Check OK
  SlaveNo4IPAddress = 0.0.0.0 Check OK
  SlaveNo5IPAddress = 0.0.0.0 Check OK
  SlaveNo6IPAddress = 0.0.0.0 Check OK
  SlaveNo7IPAddress = 0.0.0.0 Check OK

```


Configuration-Update Completed !!

## Initializing the Settings

Click the **Default** Button in the **Initialize Configuration** Area to return all of the settings in the Reader/Writer to the default settings. After you initialize the settings, cycle the power supply to the Reader/Writer to enable the new settings.



Click the **Default** Button in the **Initialize Configuration** Area. The following dialog box will be displayed. Click the **OK** Button.

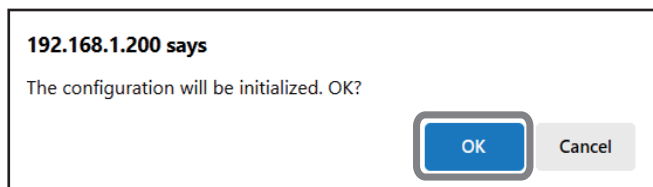

The following information is displayed after setting is completed. The network settings (NetworkSetting) are applied when the Reader/Writer is restarted. The RF Tag communications settings (RFTagCommunicationSetting) are applied immediately.

```

      [NetworkSetting]
      IPAddress = 192.168.1.200 Check OK
      SubnetMask = 255.255.255.0 Check OK
      GatewayAddress = 192.168.1.254 Check OK
      BOOTOption = 0000 Check OK
      DeviceName = Check OK
      WebPassword = Check OK
      WebPortNo = 7090 Check OK
      [RFTagCommunicationSetting]
      CommunicationSpeed = 0 Check OK
      WriteVerify = 1 Check OK
      CommunicationOption = 0 Check OK
      CommunicationDiagnostics = 0 Check OK
      [MultiReaderWriterSetting]
      MultiReaderWriterMode = 0 Check OK
      SlaveNum = 0 Check OK
      SlaveNo1IPAddress = 0.0.0.0 Check OK
      SlaveNo2IPAddress = 0.0.0.0 Check OK
      SlaveNo3IPAddress = 0.0.0.0 Check OK
      SlaveNo4IPAddress = 0.0.0.0 Check OK
      SlaveNo5IPAddress = 0.0.0.0 Check OK
      SlaveNo6IPAddress = 0.0.0.0 Check OK
      SlaveNo7IPAddress = 0.0.0.0 Check OK

```

Configuration-Update Completed !!

## A-9-4 Configuration File

This section describes the format of the configuration file. The configuration file uses a normal INI file format.

- Any line that starts with a semicolon (;) is treated as a comment.
- Any line that starts with an opening bracket ([) is treated as a section declaration row. The row must also end in a closing bracket (]).
- Any row that does not start with either of the above two characters is an entry row.

### Section and Entry Table

Section name	IPAddress	Description	Default
NetworkSetting	IPAddress	Gives the setting of the IP address of the Reader/Writer. Specify four decimal numbers separated by periods.	192.168.1.200
	SubnetMask	Gives the setting of the subnet mask of the Reader/Writer. Specify four decimal numbers separated by periods.	255.255.255.0
	GatewayAddress	Gives the setting of the default gateway of the Reader/Writer. Specify four decimal numbers separated by periods.	192.168.1.254
	BOOTPOption	Gives the setting of the Reader/Writer BOOTP option. Specify a decimal value. 0: Fixed settings 1: Get from BOOTP server 2: Get from BOOTP server as fixed settings	0
	Devicename	Gives the name of the Reader/Writer. Specify up to 63 ASCII characters.	---
	WebPassword	Gives the login password for the Web browser interface. Specify up to 15 ASCII characters. Specify "" (blank) for no password.	---
	WebPortNo	Gives the Ethernet communications port number for the Web browser interface. Specify 1024 to 65535 decimal.	7090
RFTagCommunicationSetting	CommunicationSpeed	Gives the communications speed between the Reader/Writer and RF Tags. Set a decimal number. 0: High speed 1: Normal speed	0
	WriteVerify	Gives the setting for write verification for write communications. Set a decimal number. 0: No verification 1: Verification	1
	CommunicationOption	Gives the setting of the RF Tag communications option. Set a decimal number. 0: Once 1: Repeat 2: FIFO Repeat (Without ID code check) 3: Auto 18: FIFO Repeat (With ID code check)	0
MultiReaderWriterSetting	MultiReaderWriterMode	Gives the Reader/Writer Extended Mode settings. Specify a decimal value. 0: Disabled 1: Field Extension Mode 2: High-speed Traveling Mode	0
	SlaveNum	Gives the number of slaves in Field Extension Mode. Set a value between 0 and 7.	0
	SlaveNo1IPAddress	Give the IP Addresses in Reader/Writer Extended Mode. Specify four decimal numbers separated by periods.	0.0.0.0
	---		
	SlaveNo7IPAddress		

## A-10 For Customers Using Reader/Writer Earlier Than Firmware Ver.4.00.

### A-10-1 Operating environment when using a web browser.

The WEB browser interface can be used in the following operating environments.

- Windows 7, Windows 8.1, or Windows 10 with Internet Explorer 8 or higher
- The combination of the firmware version and the JRE version

Reader/Writers firm-ware version	JRE version				
	Java 6	Java 7	Java 8		
			Up to Up-date73	Update74 to Up-date201	Update211 or later <sup>*1</sup>
Ver1.01	Available	Available	Not available	Not available	Not available
Ver2.00	Available	Available	Not available	Not available	Not available
Ver3.00	Not available	Available	Available	Not available <sup>*2</sup>	Not available <sup>*2</sup>
Ver3.01/Ver3.02	Not available	Available	Available	Available	Available

\*1. Commercial license is required for Java 8 Update 211(April 16, 2019).

\*2. Java 8 Update74(February 5, 2016) or later can not be connected.



#### Precautions for Correct Use

There is case where WEB browser can not be used in a combination of the firmware version of Reader/Writer and the JRE version.

Refer to the table above, please use the JRE version that was appropriate for your Reader/Writer.

\* Java software can be downloaded from the following.

URL: <https://www.oracle.com/technetwork/java/archive-139210.html>

(\*URL is as of April 2019 and may change in the future.)

## A-10-2 Cannot Display the Web Browser Operation Window

This section describes countermeasures when you cannot access the Reader/Writer Web browser interface (i.e., when you cannot display the operation window).

Only countermeasures that have been confirmed by OMRON are provided. They may not solve all possible problems. Contact your OMRON representative if you have problems that cannot be solved.




### Precautions for Correct Use

- The problems described in this section have been solved for firmware version 3.00 or higher.
- The screen layout may be broken if you configure display magnification to other than 100%. It is recommended to set the display magnification to 100%.

## Problem

When the Web browser Reader/Writer interface is used to display the Web operation window, the OMRON logo is displayed and an error message is displayed instead of the operation menu.

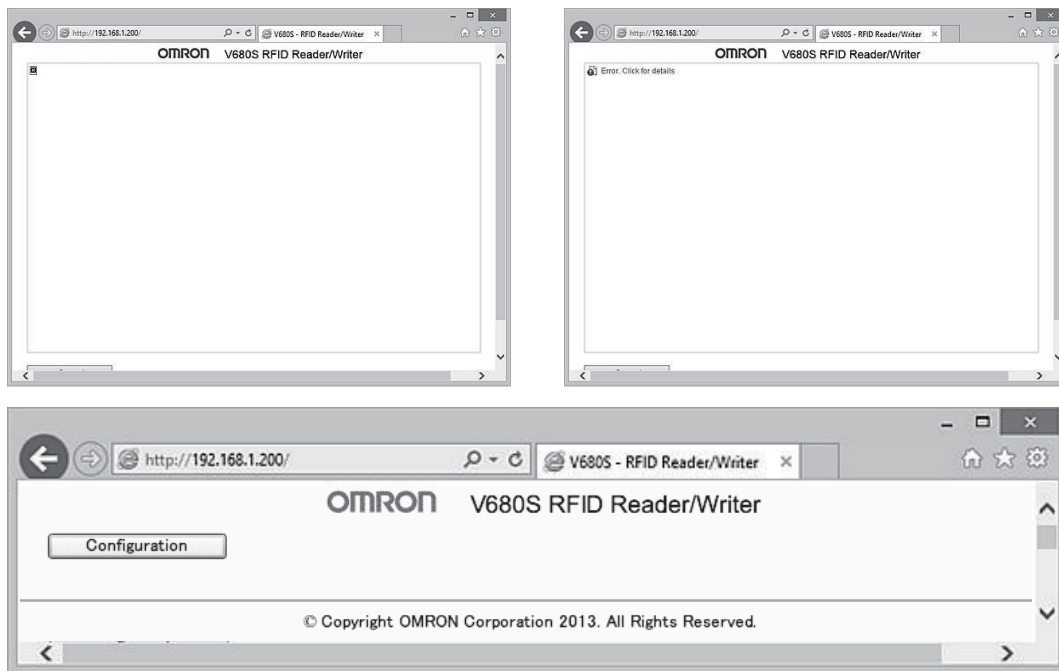

# Solution

Check the message that appears when you try to start the Web browser interface, and then perform the corresponding procedure.

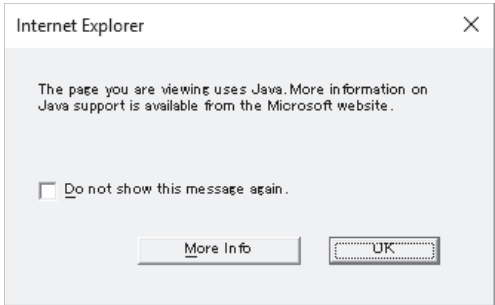
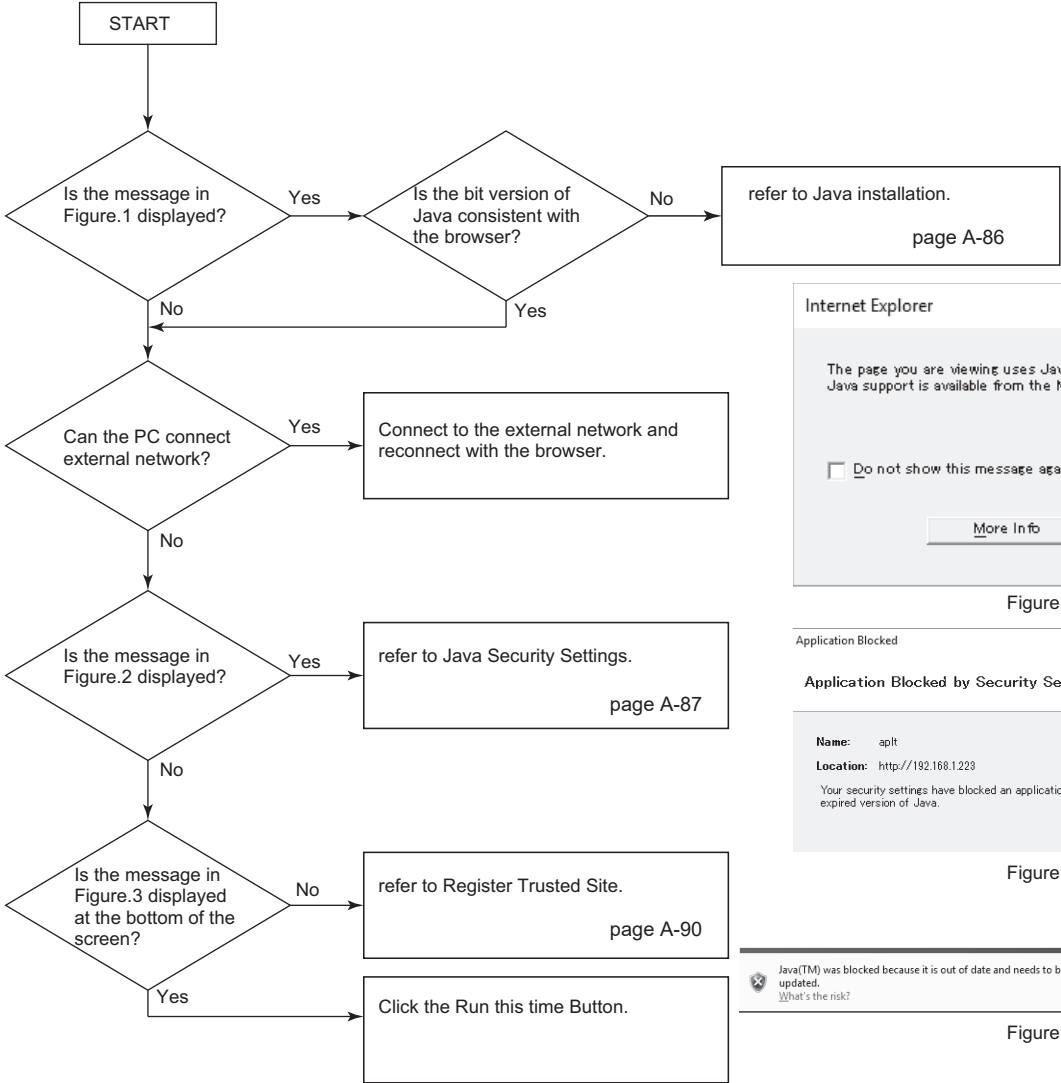


Figure.1

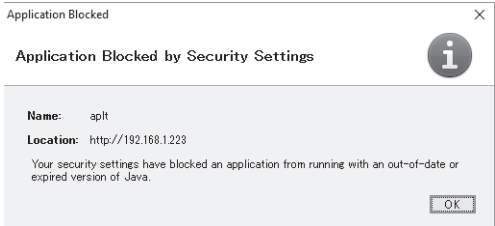


Figure.2


 


Figure.3


## Java installation

Install Java bit version (64-bit or 32-bit) decided by the following flow.

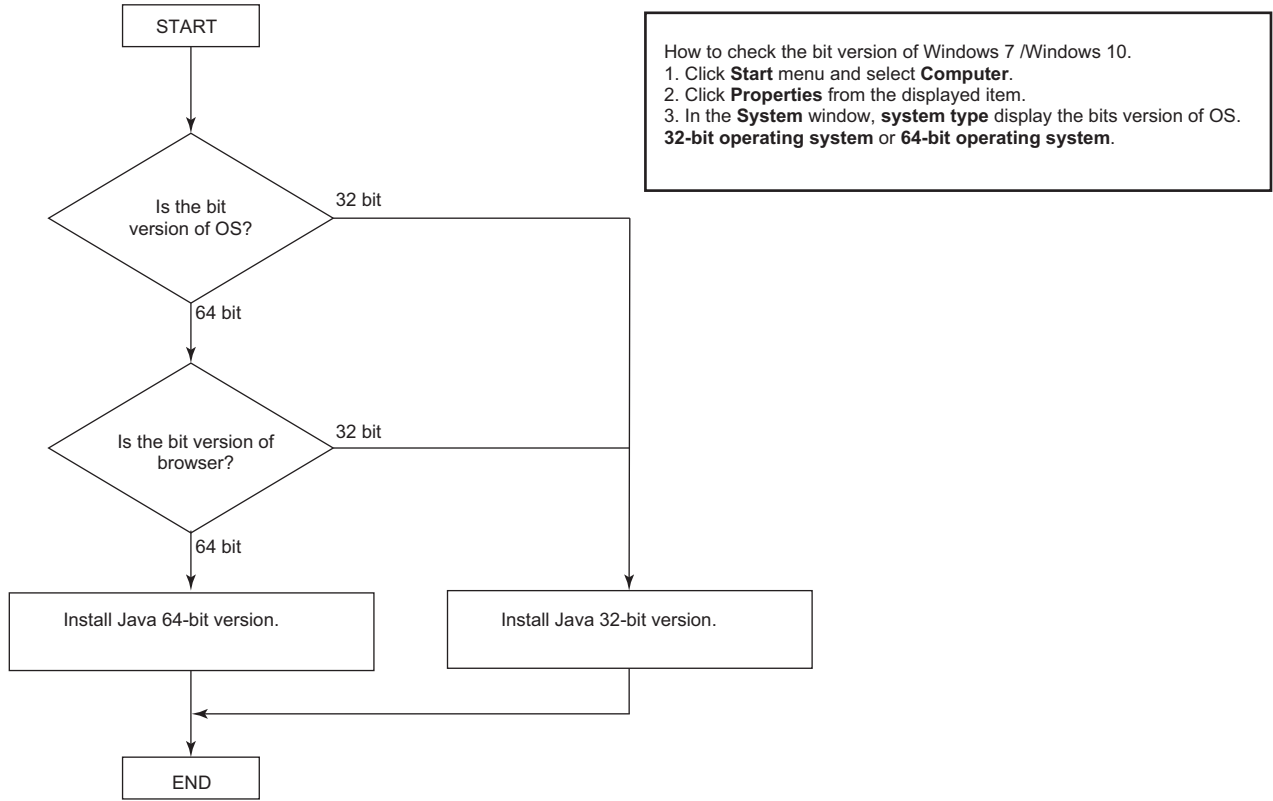


## Java Security Settings

- 1 Open the Control Panel and click the **Java** icon.

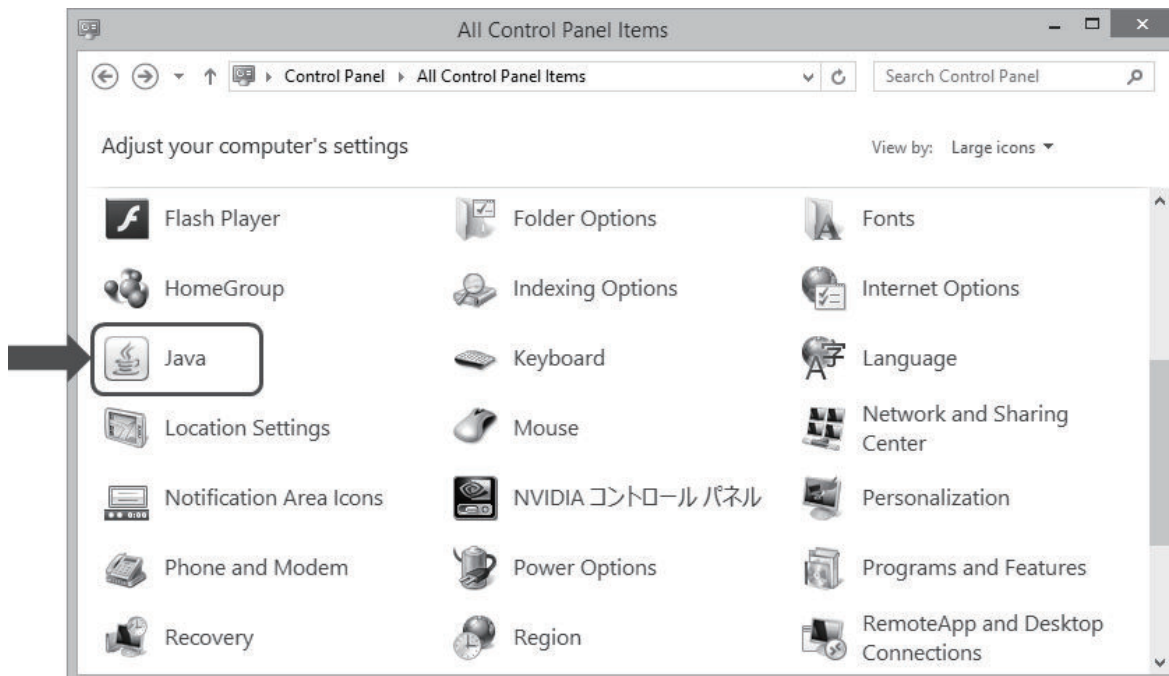

- 2 Click the **Security** Tab and change the security level from **high** to **medium**.


\* If the security settings are not displayed, refer to *Java Security Settings Are Not Displayed* on page A-89.

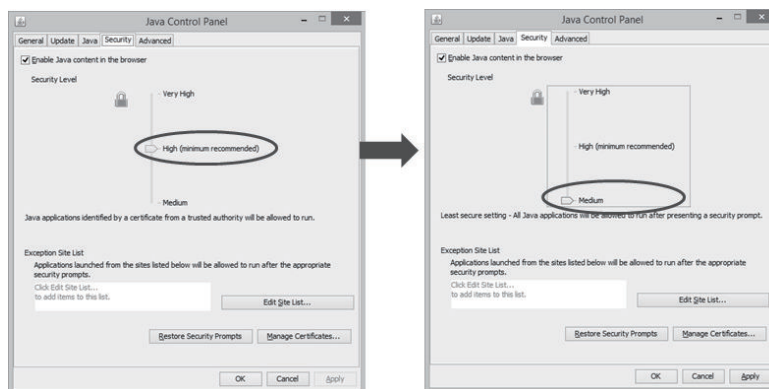

### Precautions for Correct Use

This procedure will reduce the security verification performed for execution of Java applications and therefore it may affect the execution of other Java applications.

- 3** Restart the Web browser and access the IP address of the Reader/Writer again.  
\* The first time you access the IP address, the following message will be displayed. Click the **Execute** Button to display the window.

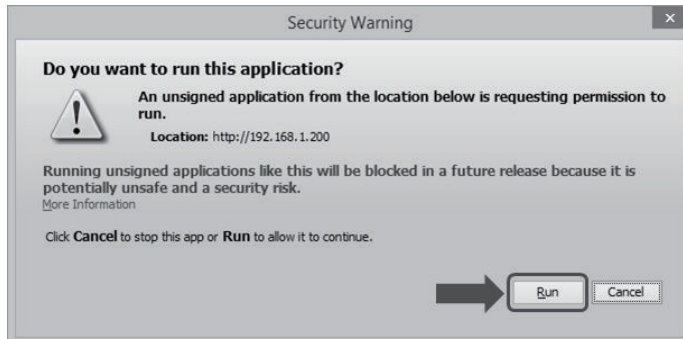

## Java Security Settings Are Not Displayed

---

This section describes the countermeasure when the exception site list is not displayed and operation is not possible. If the tab page to change Java security settings does not appear and you cannot change the settings when you select the **Security** Tab in step 2 of the procedure in **Countermeasure for Security Settings**, use the following procedure.

- 1 Open the Control Panel and uninstall all Java programs.
- 2 After you uninstall all of the programs, go to the following website and install Java.  
<https://www.oracle.com/technetwork/java/archive-139210.html>  
(\*URL is as of April 2019 and may change in the future.)

Refer to *A-10-1 Operating environment when using a web browser.* on page A-83 for Java versions that can be used.



### Precautions for Correct Use


---

Java security features have been improved for the most recent version of Java, so the same problem may occur.


---

## Register Trusted Site

- 1 Open the Web browser, click the **Tools** menu and select **Internet Options**.
- 2 Click the **Security** Tab, select **Trusted sites** and click **Sites** button.

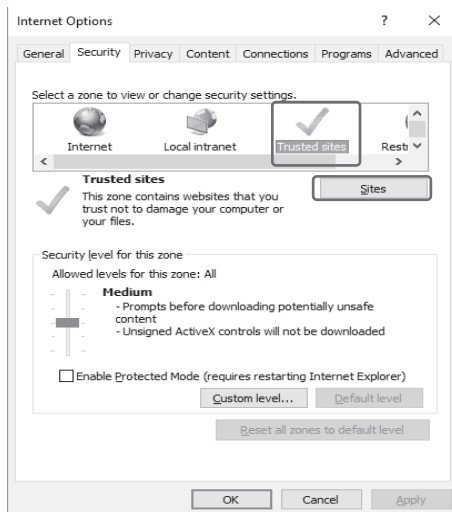


- 3 In the **Add this Web site to the zone** box, enter the IP address of the target Reader/Writer, and then click **Add** button.  
 http://"IP address of target device"  
 ex) <http://192.168.1.200/>

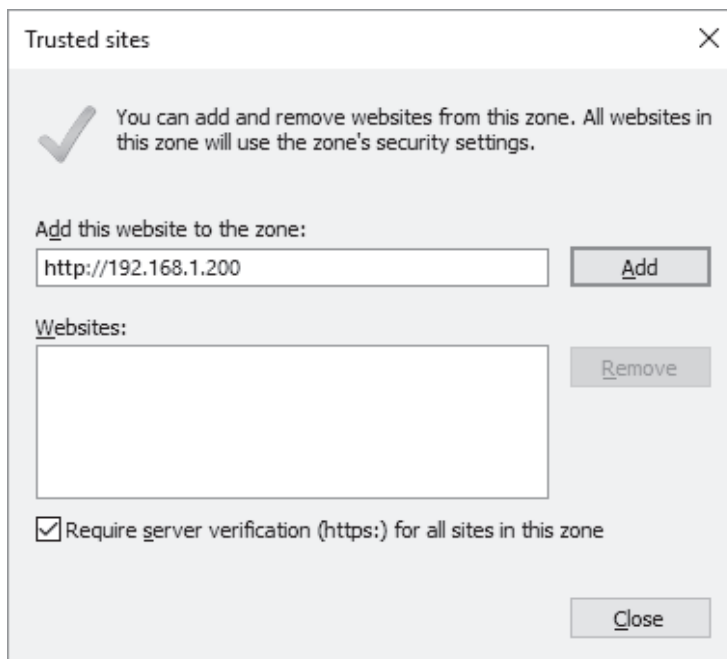


# Countermeasures for Other Problems


1 Open the Control Panel and click the **Java** icon.

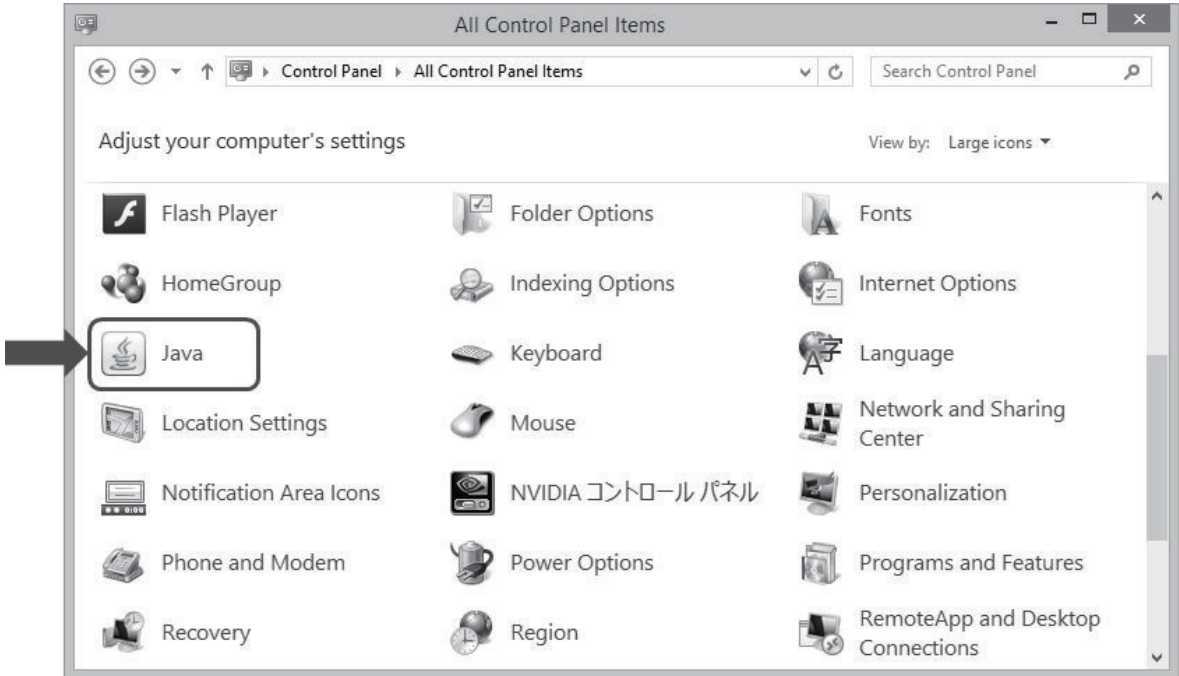


2 Click the **Settings** Button in the **Temporary Internet Files** Area on the **General** Tab Page.

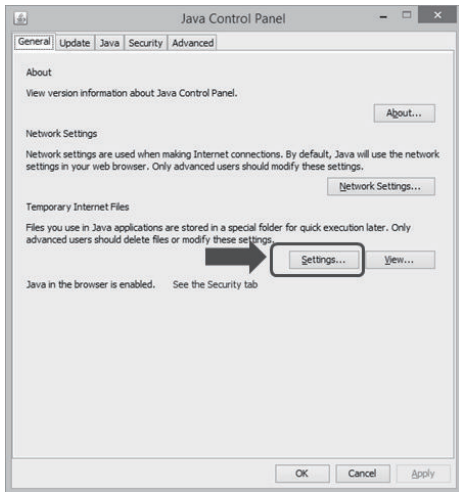

- 3 Select the **Keep temporary files on my computer** Check Box and click the **Delete Files** Button.

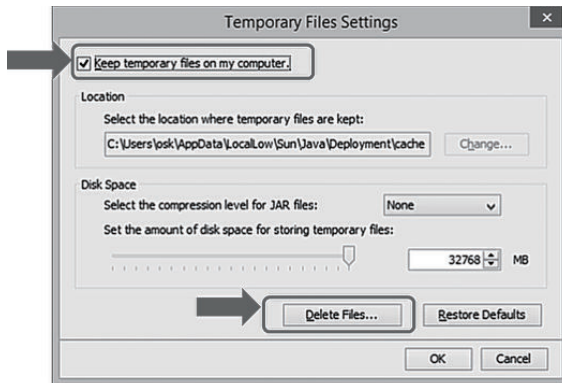

- 4 Click the **OK** Button.

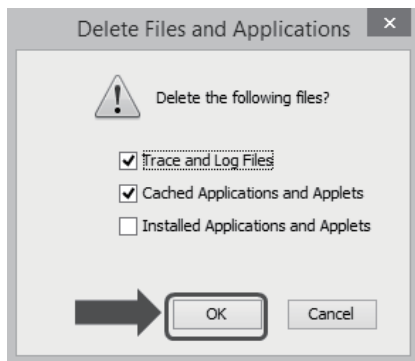

- 5 When the files have been deleted, click the **OK** Button and close all windows. Then, restart the Web browser and connect to the Reader/Writer again.

# A-11 Use of Open Source Software (OSS)

This product includes the following Open Source Software (OSS).

Each component is provided under its respective license terms.

- **MIT License:**
  - Vue.js / Vite / Axios / Vue I18n / Vuex
- **STMicroelectronics License:**
  - STM32H7 HAL Driver
- **Apache License 2.0:**
  - NXP LPCOpen (LPC18xx Software Library)
  - embdTLS (Mbed TLS)

\*1. Mbed TLS is distributed under a dual license of the Apache License, Version 2.0, or the GNU General Public License version 2.0 or later (GPL-2.0-or-later). In this product, Mbed TLS is used under the terms of the Apache License, Version 2.0.

The copyright notices and full license texts are provided below.

## A-11-1 Copyright Notices

### MIT License

- Vue.js  
Copyright © 2013-present Yuxi (Evan) You
- Vite  
Copyright © 2019-present VoidZero Inc. and Vite contributors
- Axios  
Copyright © 2014-present Matt Zabriskie & Collaborators
- Vue I18n  
Copyright © 2016-present kazuya kawaguchi and contributors
- Vuex  
Copyright © 2015-present Evan You

### STMicroelectronics License

- STM32H7 HAL Driver © 2017 STMicroelectronics

### Apache License 2.0

- NXP LPCOpen © NXP Semiconductors
- embdTLS © 2006-2024 ARM Limited, Mbed TLS contributors

## MIT License

---

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

## STMicroelectronics Software License (STM32H7 HAL Driver)

---

Copyright 2017 STMicroelectronics. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the copyright holder nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

## Apache License 2.0

### Apache License

Version 2.0, January 2004

<http://www.apache.org/licenses/>

#### TERMS AND CONDITIONS FOR USE, REPRODUCTION, AND DISTRIBUTION

##### 1. Definitions.

"**License**" shall mean the terms and conditions for use, reproduction, and distribution as defined by Sections 1 through 9 of this document.

"**Licensor**" shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

"**Legal Entity**" shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition, "**control**" means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

"**You**" (or "**Your**") shall mean an individual or Legal Entity exercising permissions granted by this License.

"**Source**" form shall mean the preferred form for making modifications, including but not limited to software source code, documentation source, and configuration files.

"**Object**" form shall mean any form resulting from mechanical transformation or translation of a Source form, including but not limited to compiled object code, generated documentation, and conversions to other media types.

"**Work**" shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

"**Derivative Works**" shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

"**Contribution**" shall mean any work of authorship, including the original version of the Work and any modifications or additions to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, "**submitted**" means any form of electronic, verbal, or written communication sent to the Licensor or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as "**Not a Contribution**."

"**Contributor**" shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

**2. Grant of Copyright License.** Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sublicense, and distribute the Work and such Derivative Works in Source or Object form.

**3. Grant of Patent License.** Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted. If You institute patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Work or a Contribution incorporated within the Work constitutes direct or contributory patent infringement, then any patent licenses granted to You under this License for that Work shall terminate as of the date such litigation is filed.

**4. Redistribution.** You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:

- a. You must give any other recipients of the Work or Derivative Works a copy of this License; and
- b. You must cause any modified files to carry prominent notices stating that You changed the files; and
- c. You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works; and
- d. If the Work includes a "**NOTICE**" text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or, within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents of the NOTICE file are for informational purposes only and do not modify the License. You may add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License.

You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this License.

**5. Submission of Contributions.** Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of this License, without any additional terms or conditions. Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with Licensor regarding such Contributions.

**6. Trademarks.** This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.

**7. Disclaimer of Warranty.** Unless required by applicable law or agreed to in writing, Licensor provides the Work (and each Contributor provides its Contributions) on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.

**8. Limitation of Liability.** In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts) or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.

**9. Accepting Warranty or Additional Liability.** While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this License. However, in accepting such obligations, You may act only on Your own behalf and on Your sole responsibility, not on behalf of any other Contributor, and only if You agree to indemnify, defend, and hold each Contributor harmless for any liability incurred by, or claims asserted against, such Contributor by reason of your accepting any such warranty or additional liability.

## A-12 Firmware Version Update History

---

V680S Reader/Writers: The following table gives an update history of the firmware version of the V680S-HMD6□-EIP Series.

Firmware version	Revised contents
3.00	Original production
3.01	Web browser interface can be used in the Java8 update74 or later.
3.02	Addition of communication option "Auto" and "FIFO Repeat (With ID code check)" The layout change of Web browser.
4.00	Change of recommended operating environment of Web browser Changes in the appearance and layout of the Web browser interface
5.00	Security compliant



# Index



# Index

<b>A</b>	
Auto.....	6-16
<b>C</b>	
Command Error Log.....	6-37
Communication Diagnostic.....	6-56
Communications Diagnostic.....	6-28
Communications Option Setting.....	6-27
Communications Options.....	6-15
Communications Range Specifications.....	1-31
Component Names.....	3-2
Configuration.....	A-77
Configuration File.....	A-82
Configuration Window.....	8-32
Connections and Wiring.....	4-14
Connector Cover (Slim Type).....	1-16
Convenient Functions.....	6-55
COPY DATA.....	7-20
<b>D</b>	
Data Characteristics.....	1-31
DATA FILL.....	7-17
Default Gateway.....	6-29
Degree of Protection.....	A-70
<b>E</b>	
Error Codes.....	7-10
Error Descriptions.....	9-2
Error Logs.....	6-37
EtherNet/IP Communications Protocol.....	7-2
<b>F</b>	
Fatal Errors.....	9-2, 9-4
Field Extension Mode.....	6-63
FIFO Repeat.....	6-18
<b>G</b>	
GET COMMAND ERROR LOG.....	7-28
GET FIRMWARE VERSION.....	7-26
GET MODEL INFORMATION.....	7-25
GET MULTI-READER/WRITER SETTINGS.....	7-36
GET MULTI-READER/WRITER STATUS.....	7-38
GET OPERATING TIME.....	7-27
GET RESTORE INFORMATION.....	7-30
GET RF TAG COMMUNICATIONS SETTINGS.....	7-24
<b>H</b>	
High-speed Traveling Mode.....	6-64
<b>I</b>	
IEC (International Electrotechnical Commission) IEC 60529.....	A-70
Initialization.....	6-25
INITIALIZE.....	7-22
Installation.....	4-2
IP Address.....	6-29
IP Address Duplication Error.....	9-6
<b>L</b>	
LOCK.....	7-16
Log View Window.....	8-21
<b>M</b>	
Maintenance.....	6-23
Maintenance and Inspection.....	10-2
MEASURE NOISE.....	7-32
Memory Assignments.....	7-7
Multi Reader/Writer Settings Window.....	8-18
Multi-Reader/Writer Operation.....	6-61
<b>N</b>	
Network Settings.....	6-29
Network Settings Window.....	8-11
Noise Measurement.....	6-23
Noise Monitor Window.....	8-26
Nonfatal Errors.....	9-3, 9-5
Normal RF Tag Communications.....	6-20
<b>O</b>	
Oil Resistance (OMRON in-house standard).....	A-72
Once.....	6-16
Operation Mode.....	6-14
<b>P</b>	
Password Entry View.....	A-76
Password Window.....	8-8
Product Specifications.....	1-12
<b>R</b>	
READ DATA.....	7-14
READ ID.....	7-13
Reader/Writer.....	1-12, 3-2
Reader/Writer Controls.....	6-22
Reader/Writer Installation Precautions.....	A-16
Reader/Writer Operation Errors.....	9-6
Reading Device Information.....	6-23
Reboot.....	8-31
Repeat.....	6-17

RESET.....	6-22, 7-33
RESTORE DATA.....	7-19
RF Analyzer.....	6-59
RF Analyzer Window.....	8-27
RF Tag.....	1-17, 3-7
RF Tag Communications Errors.....	9-9
RF Tag Communications Range (for Reference Only).....	A-3
RF Tag Communications Settings Window.....	8-17
RF Tag Communications Speed Setting.....	6-28
RF Tag Communications Time (for Reference Only).....	A-11
RF Tag Communications Window.....	8-19
RF Tag Installation Precautions.....	A-22
RF TAG OVERWRITE COUNT CONTROL.....	7-18
RFID System Maintenance.....	6-56
Root Certificate Installation Procedure.....	8-35
Run Mode.....	6-14

## S

---

Safe Mode.....	6-14, 9-22
SET MULTI-READER/WRITER OPERATION.....	7-34
SET RF TAG COMMUNICATIONS.....	7-23
Setting Communications Conditions.....	6-27
Setting Functions.....	6-25
Setting the Web Password.....	6-36
Status Window.....	8-10
Subnet Mask.....	6-29
System Configuration.....	2-2
System Error Log.....	6-38
System Errors.....	9-7

## T

---

Tag Data Link Error.....	9-5
Tag Memory Management.....	6-20
Time Charts.....	7-40
Troubleshooting Flowcharts.....	9-10

## V

---

V680S Command Details.....	7-13
V680S Command Errors.....	9-8
V680S Commands.....	7-9

## W

---

Web Browser Operation Window.....	A-74
Web Server.....	6-47
Window Configuration.....	8-7
WRITE DATA.....	7-15
Write Verification.....	6-28





**OMRON Corporation Industrial Automation Company**

**Kyoto, JAPAN**

**Contact : [www.ia.omron.com](http://www.ia.omron.com)**

**Regional Headquarters**

**OMRON EUROPE B.V.**

Wegalaan 67-69, 2132 JD Hoofddorp  
The Netherlands  
Tel: (31) 2356-81-300 Fax: (31) 2356-81-388

**OMRON ELECTRONICS LLC**

2895 Greenspoint Parkway, Suite 200  
Hoffman Estates, IL 60169 U.S.A.  
Tel: (1) 847-843-7900 Fax: (1) 847-843-7787

**OMRON ASIA PACIFIC PTE. LTD.**

438B Alexandra Road, #08-01/02 Alexandra  
Technopark, Singapore 119968  
Tel: (65) 6835-3011 Fax: (65) 6835-3011

**OMRON (CHINA) CO., LTD.**

Room 2211, Bank of China Tower,  
200 Yin Cheng Zhong Road,  
PuDong New Area, Shanghai, 200120, China  
Tel: (86) 21-6023-0333 Fax: (86) 21-5037-2388

**Authorized Distributor:**

©OMRON Corporation 2015-2026 All Rights Reserved.  
In the interest of product improvement,  
specifications are subject to change without notice.

**Cat. No. Z353-E1-17 0426**